

DOCUMENT RESUME

ED 203 163

CE 029 321

AUTHOR Gallant, Thomas E.; Hawley, John F.
 TITLE Electrician's Mate 3 & 2, Rate Training Manual and Nonresident Career Course.
 INSTITUTION Naval Education and Training Command, Washington, D.C.
 REPORT NO NAVEDTRA-10546-E
 PUB DATE 81
 NOTE 614p.; Photographs and some charts will not reproduce well. For a related document see ED 110 703.


EDRS PRICE MF03/PC25 Plus Postage.
 DESCRIPTORS Behavioral Objectives; Correspondence Study; Electrical Occupations; *Electrical Systems; *Electric Circuits; *Electricians; *Electricity; Electric Motors; *Equipment Maintenance; Independent Study; Instructional Materials; Learning Activities; Lighting; Postsecondary Education; Repair; Textbooks; *Trade and Industrial Education
 IDENTIFIERS Navy

ABSTRACT

This Rate Training Manual (Textbook) and Nonresident Career Course form a correspondence, self-study package to provide information related to tasks assigned to the electrician's Mate Third and Second Class. Focus is on operating and maintaining power and lighting systems and associated equipment. The 16 chapters in the text are (1) The Electrician's Mate, (2) Safety Precautions, (3) Test Equipment, (4) Electrical Installations, (5) A-C Power Distribution Systems, (6) D-C Power Distribution Systems, (7) Motor Controllers, (8) Maintenance and Repair of Motors and Generators, (9) Shipboard Lighting, (10) Degaussing, (11) Electrical Propulsion and Controls, (12) Central Operations System, (13) Basic Electronic Components and Circuits, (14) Logic Systems, (15) Electrical Auxiliaries, and (16) Sound Motion Picture Systems. Appendixes include a glossary: information on workbenches, ground requirements, and safety matting; and a chart of electronic symbols. The Nonresident Career Course follows the index. It contains 11 assignments that are organized in this format: textbook assignment and learning objective with related sets of teaching items to be answered. Learning objectives and items are based on subject matter or study material in the textbook.
 (YLB)

 * Reproductions supplied by EDRS are the best that can be made *
 * from the original document. *

ED 203163

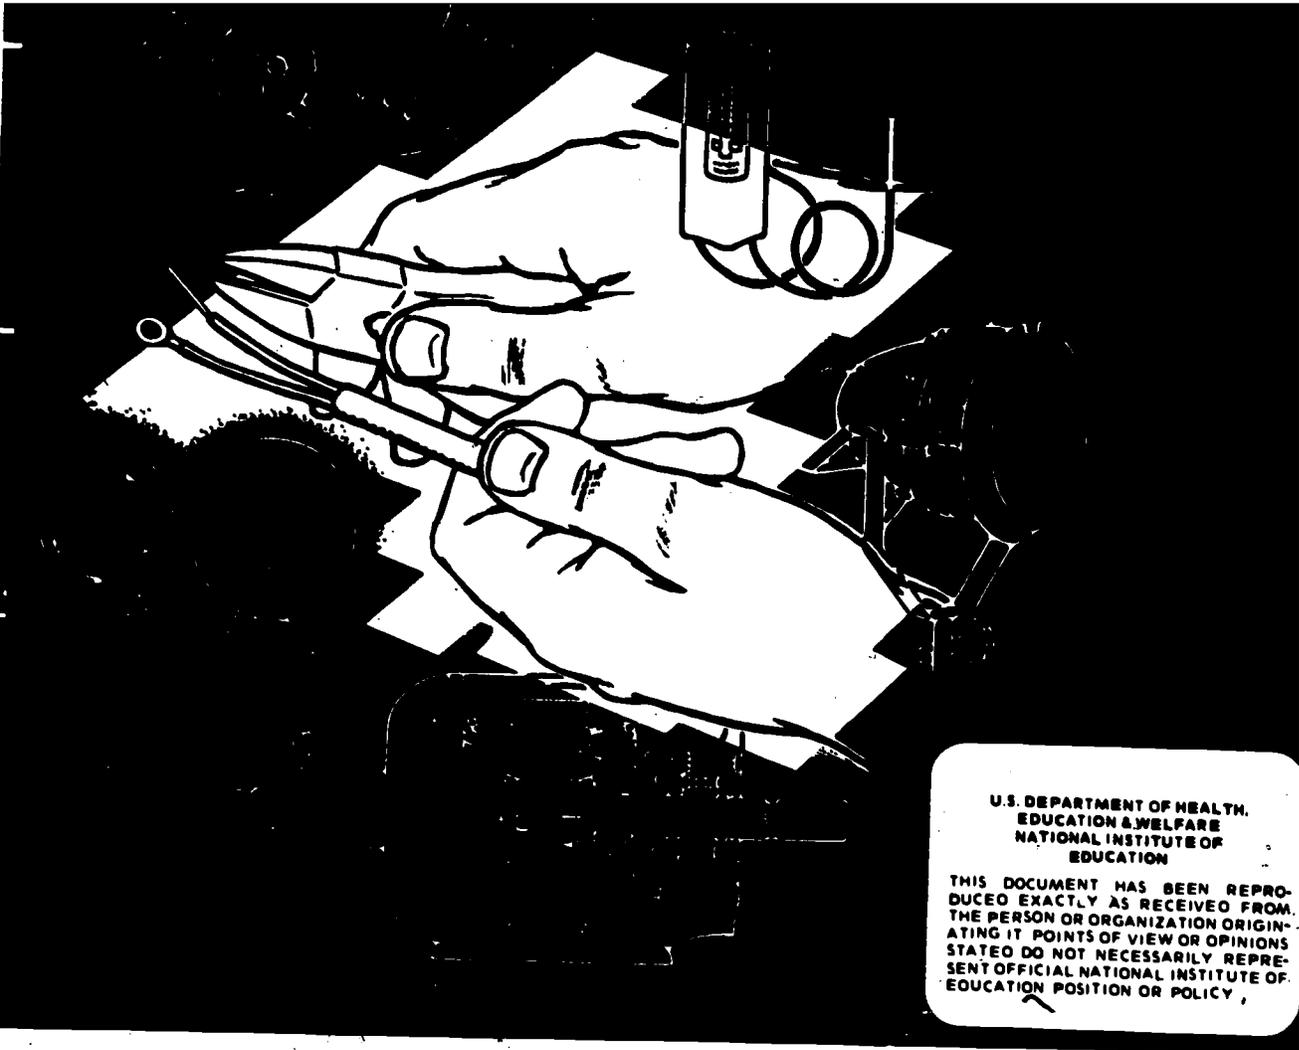

U.S. DEPARTMENT OF HEALTH,
EDUCATION & WELFARE
NATIONAL INSTITUTE OF
EDUCATION

THIS DOCUMENT HAS BEEN REPRODUCED EXACTLY AS RECEIVED FROM THE PERSON OR ORGANIZATION ORIGINATING IT. POINTS OF VIEW OR OPINIONS STATED DO NOT NECESSARILY REPRESENT OFFICIAL NATIONAL INSTITUTE OF EDUCATION POSITION OR POLICY.


ELECTRICIAN'S MATE 3 & 2

NAVAL EDUCATION AND TRAINING COMMAND
RATE TRAINING MANUAL AND NONRESIDENT CAREER COURSE

NAVEDTRA 10546-E

029321


Although the words "he," "his," "him" appear in this manual for economy in communication, they are not intended to indicate gender nor to affront nor to discriminate against anyone reading *Electrician's Mate 3 & 2*, NAVEDTRA 10546-E.

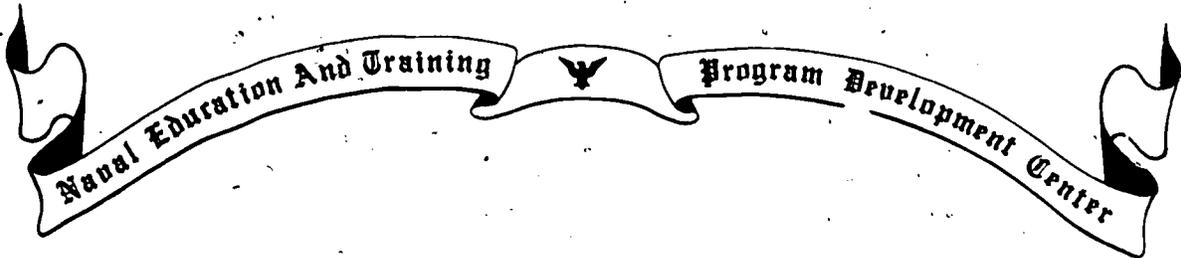

ELECTRICIAN'S MATE

3 & 2

NAVEDTRA 10546-E

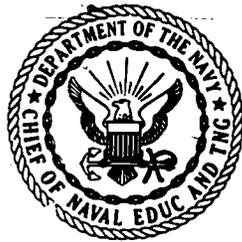

*1981 Edition Prepared by
EMCM Thomas E. Gallant and EMC John F. Hawley*



PREFACE

The primary purpose of training is to produce a combat Navy which can maintain control of the sea and guarantee victory. Victory at sea depends upon the state of readiness of shipboard personnel to perform tasks assigned to them in accordance with the needs of the ship. This Rate Training Manual provides information related to the tasks assigned to the Electrician's Mate Third and Second Class who operate and maintain the power and lighting systems and associated equipment. It is only when shipboard personnel can and do perform their tasks efficiently that each ship will be operating at a high state of readiness essential to guarantee victory at sea. As an EM3 or EM2, you will be expected to know the information in this manual and to perform your assigned tasks. The degree of success of the Navy will depend in part on your ability and the manner in which you perform your duties.

This manual was prepared by the Naval Education and Training Program Development Center, Pensacola, Florida, for the Chief of Naval Education and Training.

Revised 1981

Stock Ordering No.
0502-LP-052-7320

Published by
NAVAL EDUCATION AND TRAINING PROGRAM
DEVELOPMENT CENTER

UNITED STATES
GOVERNMENT PRINTING OFFICE
WASHINGTON, D.C.: 1981

THE UNITED STATES NAVY

GUARDIAN OF OUR COUNTRY

The United States Navy is responsible for maintaining control of the sea and is a ready force on watch at home and overseas, capable of strong action to preserve the peace or of instant offensive action to win in war.

It is upon the maintenance of this control that our country's glorious future depends; the United States Navy exists to make it so.

WE SERVE WITH HONOR

Tradition, valor, and victory are the Navy's heritage from the past. To these may be added dedication, discipline, and vigilance as the watchwords of the present and the future.

At home or on distant stations we serve with pride, confident in the respect of our country, our shipmates, and our families.

Our responsibilities sober us; our adversities strengthen us.

Service to God and Country is our special privilege. We serve with honor.

THE FUTURE OF THE NAVY

The Navy will always employ new weapons, new techniques, and greater power to protect and defend the United States on the sea, under the sea, and in the air.

Now and in the future, control of the sea gives the United States her greatest advantage for the maintenance of peace and for victory in war.

Mobility, surprise, dispersal, and offensive power are the keynotes of the new Navy. The roots of the Navy lie in a strong belief in the future, in continued dedication to our tasks, and in reflection on our heritage from the past.

Never have our opportunities and our responsibilities been greater.

CONTENTS

CHAPTER	Page
1. The Electrician's Mate	1-1
2. Safety Precautions	2-1
3. Test Equipment	3-1
4. Electrical Installations	4-1
5. A-C Power Distribution Systems	5-1
6. D-C Power Distribution Systems	6-1
7. Motor Controllers	7-1
8. Maintenance and Repair of Motors and Generators	8-1
9. Shipboard Lighting	9-1
10. Degaussing	10-1
11. Electrical Propulsion and Controls	11-1
12. Central Operations System	12-1
13. Basic Electronic Components and Circuits	13-1
14. Logic Systems	14-1
15. Electrical Auxiliaries	15-1
16. Sound Motion Picture Systems	16-1
APPENDIX	
I. Glossary	AI-1
II. Workbenches, Ground Requirements and Safety Matting	AII-1
III. Electronics Symbols	AIII-1
INDEX	I-1
Nonresident Career Course follows Index	

CREDITS

The illustrations listed below are included in this edition of *Electrician's Mate 3 & 2*, through the courtesy of the designated sources. Permission to use these illustrations is greatly acknowledged. Permission to reproduce illustrations and other materials in this publication must be obtained from the source.

Source	Figure
Bell & Howell Company	16-11A 16-11B 16-14

CHAPTER 1

THE ELECTRICIAN'S MATE

This rate training manual is intended to help you develop your technical skills. The knowledge and skill of personnel like you make our modern Navy possible. By learning the information in this manual and gaining practical experience on the job, you will prepare yourself for a successful and rewarding Navy career. The Navy has developed a training system to help you learn the duties of the next higher grade in your rating. When you can demonstrate by your performance on the job, by your mastery of the required skills, and by written examination that you are well qualified to perform these duties, when an opening exists, you will be advanced to the next higher grade. Even as you are working toward advancement, the extra effort and study that you devote toward learning your rating will reward you in self-satisfaction and the capability to work on more complex equipment.

As an Electrician's Mate you will be working with motors, generators, power and lighting distribution systems and a wide variety of test equipment. All of these systems were designed using theories developed many years before their value was realized. Among the notables were German-born physicist George Ohm and Alessandro Volta, an Italian physicist. A. M. Ampere, a French physicist, was noted for his theories in the field of electrical energy. James Watt, also a physicist and inventor from Scotland, was an important contributor to a fundamental theory we use every day in the field of electricity.

With the expansion of the Navy and the establishment of a two-ocean Navy in July 1940, many more senior petty officers were needed. Electrician's Mate "A" schools were established in colleges all over the country, and a class "B" school was established at Camp Perry, Virginia.

This school was moved to Great Lakes, Illinois, in 1944.

Your training for the Electrician's Mate rates will include electronics and electrical theory, fundamentals of operation of motors and generators, alarms, sensors and a wide variety of other electrical equipment. You must become proficient in the use of handtools and electrical measuring equipment in order to troubleshoot electrical systems. You must also be able to read and analyze blueprints and schematic diagrams to understand the performance of an electrical circuit. The Electrician's Mate rating is a general rating and is not divided into service ratings. (An example of a rating divided into service ratings is the ET: its service ratings are the ETN and the ETR. The ETN specializes in communications equipment; the ETR specializes in radar.)

The qualifications of the Electrician's Mate are oriented toward shipboard duties; EMs are found on almost all naval vessels. Ashore, they may work in their rating in a repair facility or as an instructor, but are just as likely to be working outside their rating in a duty, such as shore patrol or recruiting.

The requirements for advancement outlined by the *Manual of Navy Enlisted Manpower and Personnel Classifications and Occupational Standards*, NAVPERS 18068-D, with changes, are designed to ensure that the Electrician's Mate assigned to any ship in the fleet will have the general qualifications to perform all assigned duties. Since some ships, particularly the more modern ones, have specialty equipment, such as minesweepers with the acoustic and special degaussing systems, an EM must have special training. A Navy Enlisted Classification (NEC) coding system helps identify the personnel who have this special training.

ELECTRICIAN'S MATE 3 & 2

NAVY ENLISTED CLASSIFICATION CODES

Though your rate shows what you are qualified to do, it does not by itself show any of your special qualifications or skills, either within or outside your rate. NECs are used to show significant qualifications not shown by the rate designation. The NEC coding system identifies special qualifications through a four-digit number. Not everyone in the Navy has a special code number, but some individuals have more than one, depending on their qualifications. The qualification considered to be the most important is identified by the first code number; the one considered to be of secondary importance by the second code number. These code numbers can be obtained by completing special training or class "C" schools.

QUALIFICATIONS FOR ADVANCEMENT

As an Electrician's Mate you will perform both military and professional duties. The military requirements and professional qualifications for all ratings of the Navy are listed in NAVPERS 18068-D which is periodically revised to reflect organizational and procedural changes in the Navy that affect the ratings and to incorporate additional skills and techniques required by the development and installation of new equipment.

The military duties for Electrician's Mates are the same as those for other petty officers. This rate training manual primarily concerns the professional duties of an Electrician's Mate and does not attempt any detailed consideration of the military duties. The military requirements are discussed in *Military Requirements for Petty Officer 3 & 2*.

The professional or technical duties performed by an Electrician's Mate include a variety of tasks which require many specialized skills and techniques necessary to perform properly the occupational duties of the rate. The professional qualifications for the EM rating have been used as a guide in preparing this rate training manual and will be used in constructing the servicewide competitive examinations. In

preparing to take these examinations, you should consult the latest revision of NAVPERS 18068-D for changes distributed after the publication of this rate training manual.

SOURCES OF INFORMATION

No single publication can give you all the information you need to perform the duties of your rating. You should learn where to look for accurate, authoritative, up-to-date information on all subjects related to the military requirements for advancement and the professional qualifications of your rating. Information related to requisitioning materials, required maintenance forms, leadership and supervision should be obtained from *Military Requirements for Petty Officer 3 & 2*.

Some of the publications described here are subject to change or revision from time to time—some at regular intervals, others as the need arises. When using any publication that is subject to change or revision, be sure that you have the latest edition. When using any publication that is kept current by means of changes, be sure you have a copy in which all official changes have been made. Studying canceled or obsolete information will not help you to do your work or to advance; it is likely to be a waste of time, and may even be seriously misleading.

You must bear in mind, however, that you cannot depend on the printed word alone; you must supplement the information you obtain from books with actual practice, and with the knowledge acquired from observing experienced personnel at work.

NAVAL EDUCATION AND TRAINING PUBLICATIONS

Since 15 January 1972, the Naval Training Support Command and its field activities have been directly under the command of the Chief of Naval Education and Training instead of the Chief of Naval Personnel. Training materials published by the Naval Education and Training Command are designated NAVEDTRA in lieu of NAVTRA and NAVPERS; in most cases, the

Chapter 1—THE ELECTRICIAN'S MATE

numbers remain as originally assigned. The designators of publications printed before the above date will be changed as each publication is revised.

The naval training publications described herein include some that are absolutely essential for meeting your job requirements and some that are extremely helpful, although not essential.

BIBLIOGRAPHY FOR ADVANCEMENT STUDY, NAVEDTRA 10052 (current series)

This publication provides a working list of material for enlisted personnel who are studying for their advancement examinations. It is revised and issued annually by the Naval Education and Training Command. Each revised edition is identified by a letter following the NAVEDTRA number. When using the bibliography, be sure you have the most recent edition:

The working list contains required and recommended rate training manuals and other references. A rate training manual marked with an asterisk (*) in NAVEDTRA 10052 is MANDATORY at the indicated rate level. Remember, however, that you are responsible for all references at lower levels, as well as those listed for the rate to which you are seeking advancement. A mandatory rate training manual may be completed by (1) passing the appropriate nonresident career course, based on the manual, (2) passing locally prepared tests based on the mandatory training manual, or (3) in some cases, successfully completing an appropriate Navy school.

All references, whether mandatory or recommended, listed in NAVEDTRA 10052 may be used as source material for the written advancement examinations, at the appropriate levels.

RATE TRAINING MANUALS

These manuals help enlisted personnel fulfill the job requirements they must acquire for advancement. Some manuals share general information and are intended for more than one rating; others, such as this one, are specific to the particular rating.

Rate training manuals are revised from time to time to bring them up to date. The revision of a rate training manual is identified by a letter following the NAVEDTRA number. You can tell whether a rate training manual is the latest edition by checking the NAVEDTRA number and the letter following the number in the most recent edition of the *List of Training Manuals and Correspondence Courses*, NAVEDTRA 10061 (revised), and *TIPS*, NAVEDTRA 38016, a quarterly bulletin published by NAVEDTRAPRODEVGEN that amplifies the information in NAVEDTRA 10061.

DEPARTMENT OF THE NAVY INFORMATION PROGRAM REGULATION

This regulation, OPNAVINST 5510.1E, is the basic directive for administering the Information Security Program throughout the Department of the Navy. It ensures the protection of official Department of the Navy information relating to national security. It also provides the necessary instructions and policy guidance for the Department of the Navy. The ship SORUM also contains basic information of ship's security practices.

TECHNICAL MANUALS

Although much of your work will be routine, you will always face new problems, and have to look up information to solve them. The log room of your ship will contain a comprehensive technical library. The books in this library are primarily designed for the engineer officer to use, but you will have occasion to use them. Manufacturers' technical manuals for most of the equipment in the ship will be found in the log room library. They are valuable sources of information on operation, maintenance, and repair.

The "encyclopedia" of Navy engineering, *Naval Ships' Technical Manual*, contains the latest accepted engineering practices; these NAVSEA manuals are, in most cases, the final authority. Chapter 300, Electric Plant General, is widely used by Electrician's Mates.

PERIODICALS

Deckplate is a periodical published by the Naval Sea Systems Command with useful articles on all aspects of shipboard engineering. It supplements and clarifies information contained in the *NAVSHIPS' Technical Manual* and also presents information on new developments.

Fathom (surface ship and submarine safety review), published quarterly by the Naval Safety Center, provides accurate and current information on nautical accident prevention.

The Electronics Information Bulletin (EIB) is published biweekly by the Naval Ship Engineering Center. EIB articles contain advance information on field changes, installation techniques, maintenance notes, beneficial suggestions, and technical manual distribution. Articles of lasting interest are transcribed into the *Electronics Installation and Maintenance Book* (EIMB). The EIMB is a single-source reference document of maintenance and repair policies, installation practices, and overall electronics equipment and material handling procedures for implementing the major policies set forth in chapter 400 of *NAVSHIPS' Technical Manual*.

PURPOSES, BENEFITS, AND LIMITATIONS OF THE PLANNED MAINTENANCE SYSTEM

The following material contains a brief discussion on the purposes, benefits, and limitations of the Planned Maintenance System.

PURPOSES

The Planned Maintenance System (PMS) was established for several purposes:

1. To reduce complex maintenance to simplified procedures that are easily identified and managed at all levels.

2. To define the minimum planned maintenance required to schedule and control PMS performance.

3. To describe the methods and tools to be used.

4. To provide for the detection and prevention of impending casualties.

5. To forecast and plan manpower and material requirements.

6. To plan and schedule maintenance tasks.

7. To estimate and evaluate material readiness.

8. To detect areas that require additional or improved personnel training and/or improved maintenance techniques or attention.

9. To provide increased readiness of the ship.

BENEFITS

PMS is a tool of command. By using PMS, the commanding officer can readily determine whether the ship is being properly maintained. Reliability is intensified. Preventive maintenance reduces the need for major corrective maintenance, increases economy, and saves the cost of repairs.

PMS assures better records, containing more data that can be useful to the shipboard maintenance manager. The flexibility of the system allows for programming of inevitable changes in employment schedules, thereby helping to better plan preventive maintenance.

Better leadership and management can be realized by reducing frustrating breakdowns and irregular hours of work. PMS offers a means of improving morale and thus enhances the effectiveness of both enlisted personnel and officers.

LIMITATIONS OF PMS

The Planned Maintenance System is not self-starting; it will not automatically produce good results. Considerable professional guidance is required. Continuous direction at each echelon must be maintained, and one individual must be assigned both the authority and the

Chapter 1—THE ELECTRICIAN'S MATE

responsibility at each level of the system's operation.

Training in the maintenance steps as well as in the system will be necessary. No system is a substitute for the actual technical ability required of the officers and enlisted personnel who direct and perform the upkeep of the equipment.

HOW TO STUDY

The general methods of study are the same for everyone, but the real art entails discovery of the methods that are best for you. It is always best to study a particular piece of equipment while working on it. With a piece of equipment available, study the technical manual and relate the physical location and size of the component with it. When on the job, learn by doing.

When studying theory or fundamentals of operation, always set up some plan of study. Study is a habit. It is best done under conditions and surroundings that do not distract. Learn in an orderly fashion so that the acquired bits of knowledge will serve as stepping stones in the process of learning. Read and study the material at hand with as much concentration as possible. Remember that electricity cannot be learned in a hurry. A consistent application of effort, however, brings a person to the desired goal sooner than is normally realized.

Appendix I contains a glossary of terms peculiar to the EM rating. Use it whenever you are not sure of the meaning of a word.

Appendix II contains information on the work bench.

Appendix III contains electronic symbols.

BASIC RULES FOR STUDYING

The following rules of study will help if you find it difficult to learn and retain what you have read.

Choose a comfortable, quiet, and well-lighted location. Read with a pencil and

some paper handy to record main points as you proceed.

Decide on a portion of a chapter and the number of pages to be read.

Read quickly to get the main point of the subject material.

Reread carefully; then put the study material aside.

List the main points, then check them with the manual open.

Reread the material more slowly. Try to remember the details and connections of each part.

Write a detailed summary, using the manual only if necessary.

STUDYING THIS RATE TRAINING MANUAL

Before proceeding further in this rate training manual, you should know its scope and purpose. Go over the table of contents and note the arrangement of topics. Subject matter can be organized and presented in many different ways. You will find it helpful to get an overall view of this manual's organization before starting to study. Here are some points of interest concerning this manual:

- You must satisfactorily complete it before you can advance to EM3 or EM2, whether you are in the Regular Navy or in the Navy Reserve.

- It is designed to provide information on the occupational qualifications for advancement to EM3 and EM2.

- The occupational standards that were used as a guide in the preparation of this manual were promulgated in change 8 of NAVPERS 18068-D. Changes in Electrician's Mate standards occurring after this edition of

ELECTRICIAN'S MATE 3 & 2

NAVPERS 18068-D became effective may not be reflected in the topics of this training manual.

- It includes subject matter that is related to Personnel Advancement Requirements (PAR) for the occupational standards for advancement to EM3 and EM2. No rate training manual, however, can take the place of on-the-job experience for developing skill in practical

factors. When possible, this manual should be used in conjunction with (PAR) NAVPERS 1414/4.

- It is NOT designed to provide information on the military requirements for petty officers. This information, as previously stated is covered in *Military Requirements for Petty Officer 3 & 2*.

CHAPTER 2

SAFETY PRECAUTIONS

Accidents are preventable. It is your job to recognize unsafe conditions and see that they are corrected. Observance of safety precautions will help keep your equipment operating, help your career in the Navy, and possibly determine whether you survive.

Think safety. No person is safer than the most careless act performed. You will find that safety is stressed throughout this rate training manual. For a more complete reference to electrical safety see *NAVSHIPS' Technical Manual*, Chapters 300 and 400; OPNAVINST 3120.32 (SORM) and OPNAVINST 5100.19, Safety Precautions for Forces Afloat.

ELECTRICAL HAZARDS AND PRECAUTIONS

It is important that you recognize a hazardous condition and take immediate steps to correct it. Safety posters (fig. 2-1 and 2-2) help warn of dangers in working areas or remind personnel to be safety conscious. Warning signs (red) and caution signs (yellow) should be located where hazardous conditions exist. Be aware of areas that are wet or oily or have stumbling hazards. Wear rubber gloves and protective clothing wherever working conditions warrant it. Make it a habit to look for and to correct defective tools and equipment, improper grounding, and rotating machinery hazards.

HANDTOOLS

Normally, you should have no problems when working with handtools. In all likelihood, however, you have seen some dangerous practices in the use of handtools that should

have been avoided. One unsafe practice involves the use of tools with plastic or wooden handles that are cracked, chipped, splintered, broken, or otherwise unserviceable. This practice is sure to result in accidents and personal injuries, such as cuts, bruises, and foreign objects being thrown in the eyes. If these unserviceable handtools are not repairable, they should be discarded and replaced.

When necessary (in an emergency only) to improvise an insulated handtool, use the following approved method which will protect the user against the effects of electric shock: First, apply several layers of approved rubber insulating tape on the metallic handle. Next, apply a layer or two of friction tape over the insulating tape. Friction tape when used alone does not provide adequate protection from electrical shock. It should be used only for gripping purposes and to protect the insulating tape. For other instructions on the safe use of handtools, consult *Tools and Their Uses*, NAVPERS 10085-B.

PORTABLE ELECTRIC POWER TOOLS

Portable power tools should be clean, properly oiled, and in good repair. Before they are used, inspect them to see that they are properly grounded. The newer, double insulated plastic framed tools do NOT have ground wires and have only a 2-prong plug.

If a tool is equipped with a 3-prong plug, it should be plugged into a 3-hole electrical receptacle.

Never remove the third prong. Make absolutely sure the tool is equipped with a

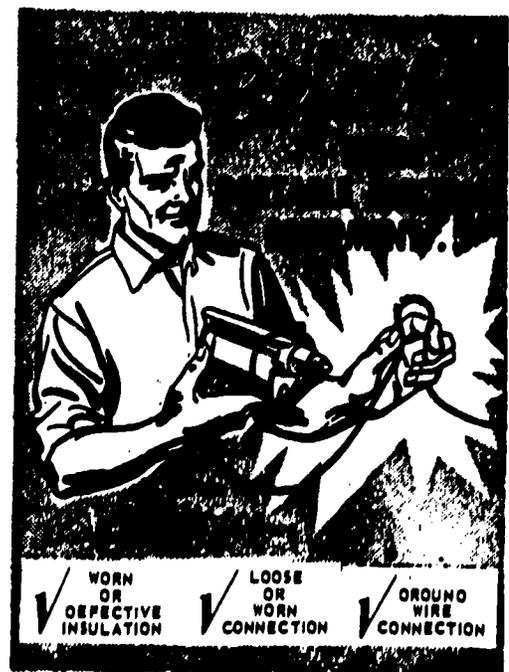
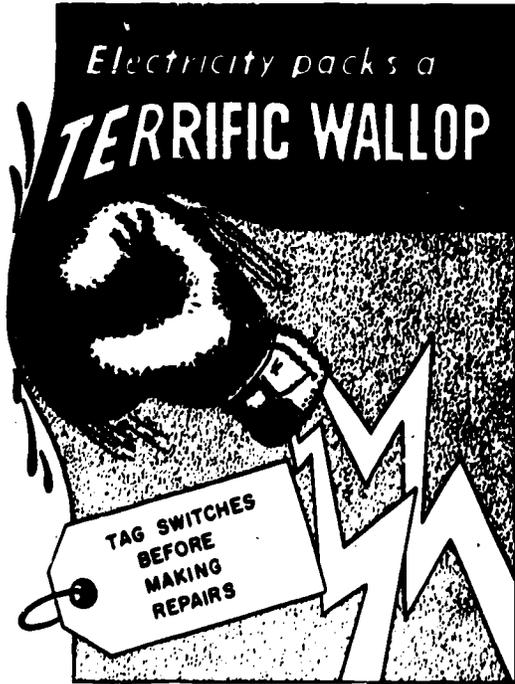
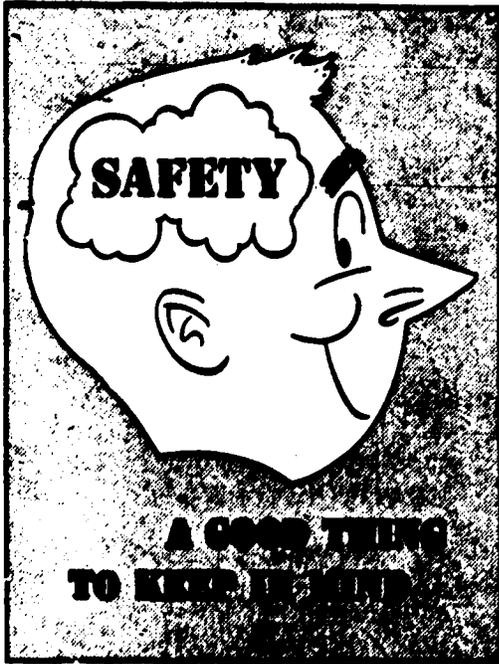


Figure 2-1.—Safety posters.

40.67(77C)A

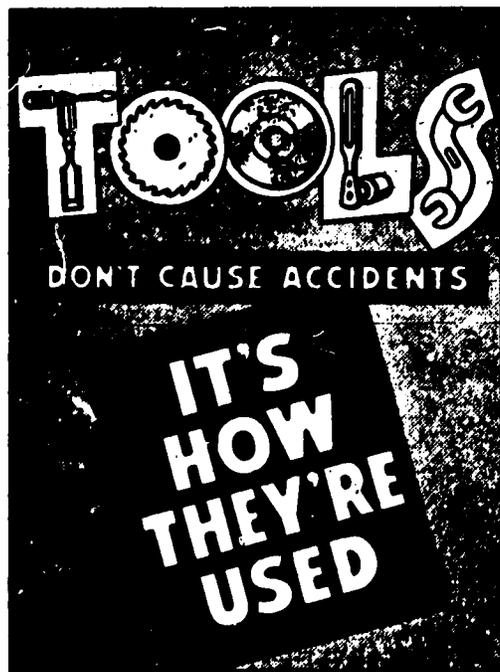


Figure 2-2.—Safety posters—continued.

40.67(77C)B

properly grounded conductor. If the tool has a metal case, be sure to ground it according to Chapter 300 of *NAVSHIPS' Technical Manual*. Observe safety precautions and wear rubber gloves whenever plugging into any 110-volt circuits, when operating any portable electric equipment under particularly hazardous conditions, in environments such as wet decks, bilge areas, or when working over the side in rafts or small boats.

Prior to issuance of any portable electrical equipment, the attached cable with plug (including extension cords, when used) should be examined visually to assure it is in satisfactory condition. (Leads, chafing, exposed insulated conductors, and damaged plugs are causes for cable or plug replacement.) Any portable electrical equipment with its associated extension cords connected, should be tested prior to issue with an approved tool tester or plugged into a dummy (or deenergized) receptacle and tested for resistance from equipment housing to ship's structure with an ohmmeter (the resistance must be less than 1 ohm). Move or work cable with a bending or twisting motion. A change in resistance will indicate broken strands in the grounding conductor. If this is found, the cable must be replaced. It is further suggested that, at the discretion of the Commanding Officer, a list be established of portable equipment requiring testing more or less often than once a month depending on conditions in the ship. Where PMS is installed, tests should be conducted in accordance with the Maintenance Requirement Cards.

Other safe practices in the use of portable electric power tools include the following:

- Inspect the tool cord and plug before using the tool. Do not use the tool if its cord is frayed or its plug is damaged or broken. Do not use spliced cables except in an emergency that warrants the risk involved.
- Before using the tool, lay all portable cables so you and others cannot trip over them. The length of extension cords used with portable tools should not exceed 25 ft. Extension cords of 100 ft are authorized on flight and hangar decks. Extension cords of

100 ft are also found in damage control lockers, but are labeled for Emergency Use Only.

- Do not use jury-rigged extension cords that have metal "handy boxes" for receptacle ends of the cord. All extension cords must have nonconductive plugs and receptacle housings.
- Connect the tool cord into the extension cord (when required) before inserting the extension cord into a live receptacle.
- After using the tool, first unplug the extension cord (if any) from the live receptacle before unplugging the tool cord from the extension cord. Do not unplug the cords by yanking on them.
- Stow the tool in its assigned place after you are through using it.

GROUNDING OF SHOCK-MOUNTED EQUIPMENT

Normally, on steel hull vessels, grounds are inherently provided because the metal cases or frames of the equipment are in contact with one another and with the metal structure of the vessel. In some instances where such inherent grounding is not provided by the mounting arrangements, such as equipment supported on shock mounts, suitable ground connections must be provided.

CAUTION

Before disconnecting a ground strap on equipment supported by shock mounts, be sure the equipment is **DEENERGIZED** and **RED** tagged (as discussed later in this chapter).

If the grounding strap is broken and the equipment cannot be deenergized, check by using a voltmeter from the equipment to ground to ensure that no voltage is present.

Chapter 2--SAFETY PRECAUTIONS

Maintenance of ground conductors and connectors consists primarily of corrective and preventive maintenance. In general, you must ensure that all bonding surfaces (connection points or metallic junctions) are securely fastened and free of paint, grease, or other foreign matter that could interfere with the positive metal-to-metal contact at the ground connection point. As a matter of practice, always do the following:

- Periodically clean all strap-and-clamp type connectors to ensure that all direct metal-to-metal contacts are free from foreign matter.
- Check all mounting hardware for mechanical derangement or loose connection.
- Replace any faulty, rusted, or otherwise unfit grounding straps, clamps, connections, or components between the equipment and the ground to the ship's hull.
- When replacing a grounding strap, clean the metallic contact surfaces and establish electrical continuity between the equipment and the ship's hull. Check continuity with an ohmmeter.
- Recheck to be sure that the connection is securely fastened with the correct mounting hardware, and paint the ground strap and hardware in accordance with currently accepted procedures.
- If a voltage is present, wear electrical grade gloves while replacing the grounding strap.

SAFETY SHORTING PROBE

Before starting to work on deenergized circuits that have large capacitors, maintenance personnel must discharge them with a safety shorting probe.

When using the safety shorting probe, always be sure first to connect the test clip to a good ground (if necessary, scrape the paint off of the grounding metal to make a good contact). Then hold the safety shorting probe by the handle and touch the probe end of the shorting rod to the

points to be shorted out. The probe end can be hooked over the part or terminal to provide a constant connection by the weight of the handle alone. Always be careful not to touch any of the metal parts of the safety shorting probe while touching the probe to the exposed "hot" terminals. It pays to be safe; use the safety shorting probe with care.

STEEL WOOL AND EMERY CLOTH/PAPER

Steel wool, emery cloth, or emery paper is harmful to the normal operation of electric and electronic equipment. The *NAVSHIPS' Technical Manual* and other technical publications warn against the use of steel wool and emery cloth on or near this equipment because of their harmful effects. Scattered as they are by ventilation currents and attracted by the magnetic devices in this equipment, particles of steel wool and emery may cause short circuits, grounds, and excessive equipment wear. Therefore, emery cloth and steel wool are NEVER to be used for cleaning contacts. Clean the contacts with silver polish, sandpaper, or burnishing tools. After cleaning, use a vacuum to remove dust.

ELECTRIC SOLDERING IRONS

In using and handling an electric soldering iron, you can avoid getting burned or shocked by adopting the following practices:

- Grasp and hold the iron by its handle. Always assume a soldering iron is hot, whether plugged in or not. Never use an iron that has a frayed cord or damaged plug.
- Hold small soldering workpieces with pliers or suitable clamps. Never hold the work in your hand.
- In resting a heated iron, lay it on a metal surface or its own resting stand. Besides preventing burns, this practice will help prevent fire and equipment damage.

ELECTRICIAN'S MATE 3 & 2

- Clean the iron by wiping it across a canvas cloth placed on a suitable surface. Do not hold the cleaning cloth in your hand.

- Avoid using too much solder. Use a canvas to wipe away excess solder. Swinging the solder iron to remove excess hot solder, could cause a fire in combustible materials or burn the skin and eyes.

- Before soldering electronic equipment, disconnect it from the power supply. Do not risk coming in contact with RF circuits or high voltages.

- After soldering, disconnect the iron from its power supply; let the iron cool off before returning it to its designated storage place.

AEROSOL DISPENSERS

By deviating or ignoring procedures prescribed for selecting, applying, storing, or disposing of aerosol dispensers, personnel have been poisoned or burned or have suffered other physical injury. It is difficult to compile a list of specific precautions and safe practices for handling aerosol dispensers due to the variety of industrial sprays that are available in this kind of container. However, users of aerosol dispensers can guard against poisoning, fire, explosion, pressure, and other hazards by reading and complying with the instructions printed on each dispenser. By following basic rules, you can prevent the injury or hazards indicated:

Poisoning—Adequately ventilate closed spaces where poisonous (toxic) substances are sprayed. Use exhaust fans or portable blowers to supply these spaces with fresh outside air. Where ventilation is inadequate, either do not spray at all or provide an air respirator or self-contained breathing apparatus.

Burns—Avoid spraying your hands, arms, face, or other exposed parts of the body. Some liquid sprays are strong enough to burn the skin; milder sprays may cause rashes.

Fire—Keep aerosol dispensers away from direct sunlight, heaters, and other sources of heat. Do not store any dispenser in an area where the temperature can exceed the limit printed on the container. Do not spray volatile substances on warm or energized equipment.

Explosion—Do not puncture an aerosol dispenser. Discard used dispensers in approved waste receptacles which will not be emptied into an incinerator.

CLEANING SOLVENTS

Do not use alcohol for cleaning electrical equipment, and never use it on energized equipment or near equipment where a spark is possible.

Cleaning electrical and electronic equipment with water-based and nonvolatile solvents is an approved practice. These solvents do not vaporize readily. When it is not feasible to clean with a water-based solvent, use inhibited methyl chloroform (1,1,1 trichloroethane). Methyl chloroform is a safe, effective cleaner IF used in an adequately ventilated area, IF not inhaled directly, IF not applied to warm or hot equipment, and IF fire precautions are taken. Do not wear a gas mask when cleaning with methyl chloroform; its vapors displace oxygen in the air.

NEVER USE CARBON TETRACHLORIDE as a cleaning agent. It is a highly toxic (poisonous) compound. Its threshold is 20 times lower than that of methyl chloroform; that is, more dangerous. (Threshold is the point above which the concentration of vapor in the air becomes dangerous.)

Do not clean with **VOLATILE** substances, such as gasoline, benzene, alcohol, or ether. Besides being fire hazards, they readily give off vapors that injure the human respiratory system if they are inhaled directly for too long a time.

When using cleaning solvents in a compartment, make it a practice to blow air into the compartment, using a blower or canvas wind chute. Open all usable portholes; place wind scoops in them. Also, keep a ready-to-use fire extinguisher close by. Never work alone in a compartment.

Chapter 2—SAFETY PRECAUTIONS

You should avoid coming in contact with cleaning solvents. Wear gloves and goggles, especially when equipment is being sprayed. In spraying, it helps to hold the nozzle close to the equipment. Do not spray cleaning solvents on electrical windings or insulation.

RADIOACTIVE ELECTRON TUBES

Electron tubes containing radioactive material are now commonly used. These tubes are known as TR, ATR, PRE-TR, spark-gap, voltage-regulator, gas-switching, and cold-cathode gas-rectifier tubes. Some of these tubes contain radioactive material and have intensity levels which are dangerous; they are so marked in accordance with Military Specifications. The majority of these tubes contain radioactive cobalt (Co-60), radium (Ra-226), or carbon (C-114); several contain nickel (Ni-63); and a relative few contain cesium-barium (CsBa-137).

As long as the electron tube containing radioactive material remains intact and is not broken, no great hazard exists. However, if the tube is broken and the radioactive material is exposed or escapes from the confines of the electron tube, the radioactive material becomes a potential hazard. The concentration of radioactivity in a normal collection of electron tubes at a maintenance shop does not approach a dangerous level, and the hazards of injury from exposure are slight. However, at major supply points, the storage of large quantities of radioactive electron tubes in a relatively small area may create a hazard. For this reason, personnel working with equipment that has electron tubes containing radioactive material, or in areas where a large quantity of radioactive tubes is stored, should read and become thoroughly familiar with the safety practices promulgated in shipboard instruction.

CATHODE-RAY TUBES


Cathode-ray tubes should always be handled with extreme caution. The glass envelope encloses a high vacuum and, because of its large surface area is subject to considerable force caused by atmospheric pressure. (The total force on the surface of a 10-inch CRT is 3750 pounds,

or nearly two tons; over 1000 pounds is exerted on its face alone.)

The chemical phosphor coating of the CRT face is extremely toxic. When disposing of a broken tube, be careful not to come into contact with this compound. Certain hazardous materials may be released if the glass envelope of a cathode ray tube (CRT) is broken. These are: thorium oxide and thorium daughter products, considered carcinogenic; barium acetate—small residual remains after manufacture, TLV 0.5 mg/m³; barium getters—composition unknown, 10-12 gms. Several manufacturers will dispose of returned tubes. Instructions for return of tubes are available from the manufacturer. If the CRT is not returned to the manufacturer for disposal, it must be rendered harmless by breaking the vacuum glass seal. The safest method of rendering a CRT harmless is to place the tube that is to be discarded in an empty carton, with its face down. Then, carefully break off the locating pin from its base (fig. 2-3). Complete disposal instructions are contained in *Navy Electricity and Electronics Training Series (NEETS)*, NAVEDTRA 172-06-00-81, Module No. 6.

PAINTS AND VARNISHES

You must take special precautions when removing paint or repainting electrical equipment. In general, the removal of paint from electrical equipment should be avoided. The use of scraping or chipping tools on such

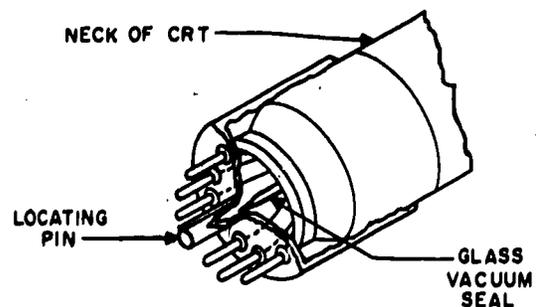

20.320(40)

Figure 2-3.—Cathode-ray tube base structure.

equipment is liable to injure the insulation or damage relatively delicate parts. Furthermore, paint dust is composed of abrasive and semiconducting materials which impair the insulation. All electrical equipment, such as generators, switchboards, motors and controllers, should be covered to prevent entrance of the paint dust when paint is being scraped in the vicinity. After the paint is removed, the electrical equipment should be thoroughly cleaned, preferably with a vacuum cleaner.

Electrical equipment should be repainted only when necessary to ward off corrosion due to lack of paint. The painting should then be confined to the areas affected. General repainting of electrical equipment or enclosures for electrical equipment for the sole purpose of improving their appearance is not desirable. Paint should never be applied to any insulating surfaces in electrical equipment. **DO NOT PAINT OVER IDENTIFICATION PLATES.**

Electrical insulating varnish should be applied to equipment only as necessary. Frequent applications of insulating varnish builds up a heavy coating which may interfere with heat dissipation and develop surface cracks. Do not apply insulating varnish to dirty or moist insulation, as the varnish will seal in the dirt and moisture and make future cleaning impossible.

Shellac and lacquer are forms of varnish but must not be used for insulating purposes. The two types of insulating varnishes commonly used in the Navy are clear baking varnish (grade CB), and clear air-drying varnish (grade CA). Grade CB is the preferred grade, however, if it is not possible to bake the part to be insulated, grade CA is used.

ELECTRICAL FIRES

Fire aboard a Navy vessel at sea sometimes is more fatal and damaging to both personnel and the ship itself than that resulting from battle. It is important that all personnel know and understand the danger of fires. Part of this knowledge is to know the type and location of firefighting equipment and apparatus in the immediate working and berthing spaces and throughout the ship. It is too late to get this

knowledge after a fire has started; the time is now.

Fire Extinguishers

Table 2-1 lists the types of fire extinguishers that are normally available for use. Fire extinguishers of the proper type must be conveniently located near all equipment that is exposed to constant fire danger, especially high-voltage equipment. Be extremely careful when using fire extinguishing agents around electrical circuits. A stream of salt water or foam directed against an energized circuit can conduct current and shock the firefighters. The same danger is present though to a lesser degree when fresh water is used. Avoid prolonged exposure to high concentrations of carbon dioxide in confined spaces since there is danger of suffocation unless oxygen breathing apparatus is used.

Table 2-1.—Types of Fire Extinguishers

EXTINGUISHER	USE
CO ₂ Gas	Effective on any type fire particularly electrical fires.
Potassium Bicarbonate (PKP)	Very effective on Class B fires. Not recommended for electrical fires because it fouls electrical and electronic equipment.
Soda-Acid	Effective only on Class A fires. Not recommended for electrical fires as compound is good conductor of electricity. Not effective on burning compounds, such as oil and the like.
Foam	Very effective on burning compounds, such as oil and similar materials. Not satisfactory for electrical fires, as compound is a good conductor of electricity.

Chapter 2—SAFETY PRECAUTIONS

Fighting an Electrical Fire

The following general procedure is used for fighting an electrical fire:

1. Promptly deenergize the circuit or equipment affected. Shift the operation to standby circuit or equipment, if possible.
2. Sound an alarm in accordance with station regulations or the ship's fire bill. When ashore, notify the fire department; if afloat, notify the Officer of the Deck. Give the fire's location and state what is burning. If possible, report the extent of the fire, that is, what its effects are upon the surrounding area.
3. Secure ventilation by closing compartment air vents or windows.
4. Attack the fire with portable CO₂ extinguishers (or a CO₂ hose reel system, if available) as follows:
 - a. Remove the locking pin from the release valve.
 - b. Grasp the horn handle by the insulation (thermal) grip; the grip is insulated against possible hand frostbite.
 - c. Squeeze the release lever (or turn the wheel) to open the valve and thus release the carbon dioxide; at the same time, direct the discharge flow of the carbon dioxide toward the base of the fire.
 - d. Aim and move the horn of the extinguisher slowly from side to side.
 - e. Do not stop the discharge from the extinguisher too soon. When the fire has been extinguished, coat the critical surface areas involved with carbon dioxide "snow" in order to cool the substances (fuels) involved and prevent a rekindling of the fire.

CAUTION TAG

A CAUTION tag (fig. 2-4) is a YELLOW tag used as a precautionary measure to provide temporary special instructions or to indicate that unusual caution must be exercised to operate equipment. These instructions must state the specific reason that the tag is installed. Use of phrases such as, DO NOT OPERATE

WITHOUT EOOW PERMISSION, is not appropriate since equipment or systems are not operated unless permission from the responsible supervisor has been obtained. A CAUTION tag is not used if personnel or equipment can be endangered while performing evolutions using normal operating procedures; a DANGER tag is used in this case.

DANGER TAG

Safety must always be practiced by persons working around electric circuits and equipment to prevent injury from electric shock and from short circuits caused by accidentally placing or dropping a metal, metal flashlight case, or other conductor of electricity across an energized line. The arc and fire started by these short circuits, even where the voltage is relatively low, may cause extensive damage to equipment and serious injury to personnel.

No work is done on electrical circuits or equipment without permission from proper authority, and until all safety precautions are taken. One of the most important precautions is the proper use of Danger tags, commonly called Red tags (fig. 2-5).

Danger tags are used to prevent the operation of equipment which could jeopardize the safety of personnel or endanger equipment systems or components. When equipment is Red tagged, under no circumstances will it be operated. When a major system is being repaired or when PMS is being performed, if two or more groups or parties, such as Enginemen and Electricians, are working on the same system, both parties hang their own tags; this prevents one group from operating or testing circuits that could jeopardize the safety of personnel from the other group.

No work is done on energized or deenergized switchboards without prior approval of the commanding officer, engineering officer, and the electrical officer.

All supply switches or cutout switches from which power could possibly be fed should be secured in the off or open (safety) position, and

SYSTEM/COMPONENT/IDENTIFICATION		DATE/TIME
SIGNATURE OF PERSON ATTACHING TAG	SIGNATURE OF PERSON CHECKING TAG	
<h1>CAUTION</h1>		
D DO NOT OPERATE THIS EQUIPMENT UNTIL SPECIAL INSTRUCTIONS ON REVERSE SIDE ARE THOROUGHLY UNDERSTOOD.		
SIGNATURE OF AUTHORIZING OFFICER		SIGNATURE OF REPAIR ACTIVITY REPRESENTATIVE
NAVSHIPS 9890/5 (REV.) (FRONT) (FORMERLY NAVSHIPS 9890)		

SERIAL No.

BLACK LETTERING ON YELLOW TAG

<h1>CAUTION</h1>	DO NOT OPERATE THIS EQUIPMENT UNTIL SPECIAL INSTRUCTIONS BELOW ARE THOROUGHLY UNDERSTOOD.	<small>NAVSHIPS 9890/5 (REV.) (BACK)</small>
------------------	--	---

Figure 2-4.—CAUTION Tag (colored YELLOW).

67.329

Chapte. 2-SAFETY PRECAUTIONS

SERIAL NO.	SYSTEM/COMPONENT/IDENTIFICATION	DATE/TIME
	POSITION OR CONDITION OF ITEM TAGGED	
	DANGER DO NOT OPERATE	
	SIGNATURE OF PERSON ATTACHING TAG	SIGNATURES OF PERSONS CHECKING TAG
	SIGNATURE OF AUTHORIZING OFFICER	SIGNATURE OF REPAIR ACTIVITY REPRESENTATIVE
NAVSHIPS 9990/8 (REV.) (FRONT) (FORMERLY NAVSHIPS 5099) S/N 0105-641-8999		

BLACK LETTERING ON RED TAG

DANGER DO NOT OPERATE OPERATION OF THIS EQUIPMENT WILL ENDANGER PERSONNEL OR HARM THE EQUIPMENT. THIS EQUIPMENT SHALL NOT BE OPERATED UNTIL THIS TAG HAS BEEN REMOVED BY AN AUTHOR- IZED PERSON.
NAVSHIPS 9990/8 (REV.)(BACK)

Figure 2-5.-DANGER Tag (colored RED).

67.330

2511

ELECTRICIAN'S MATE 3 & 2

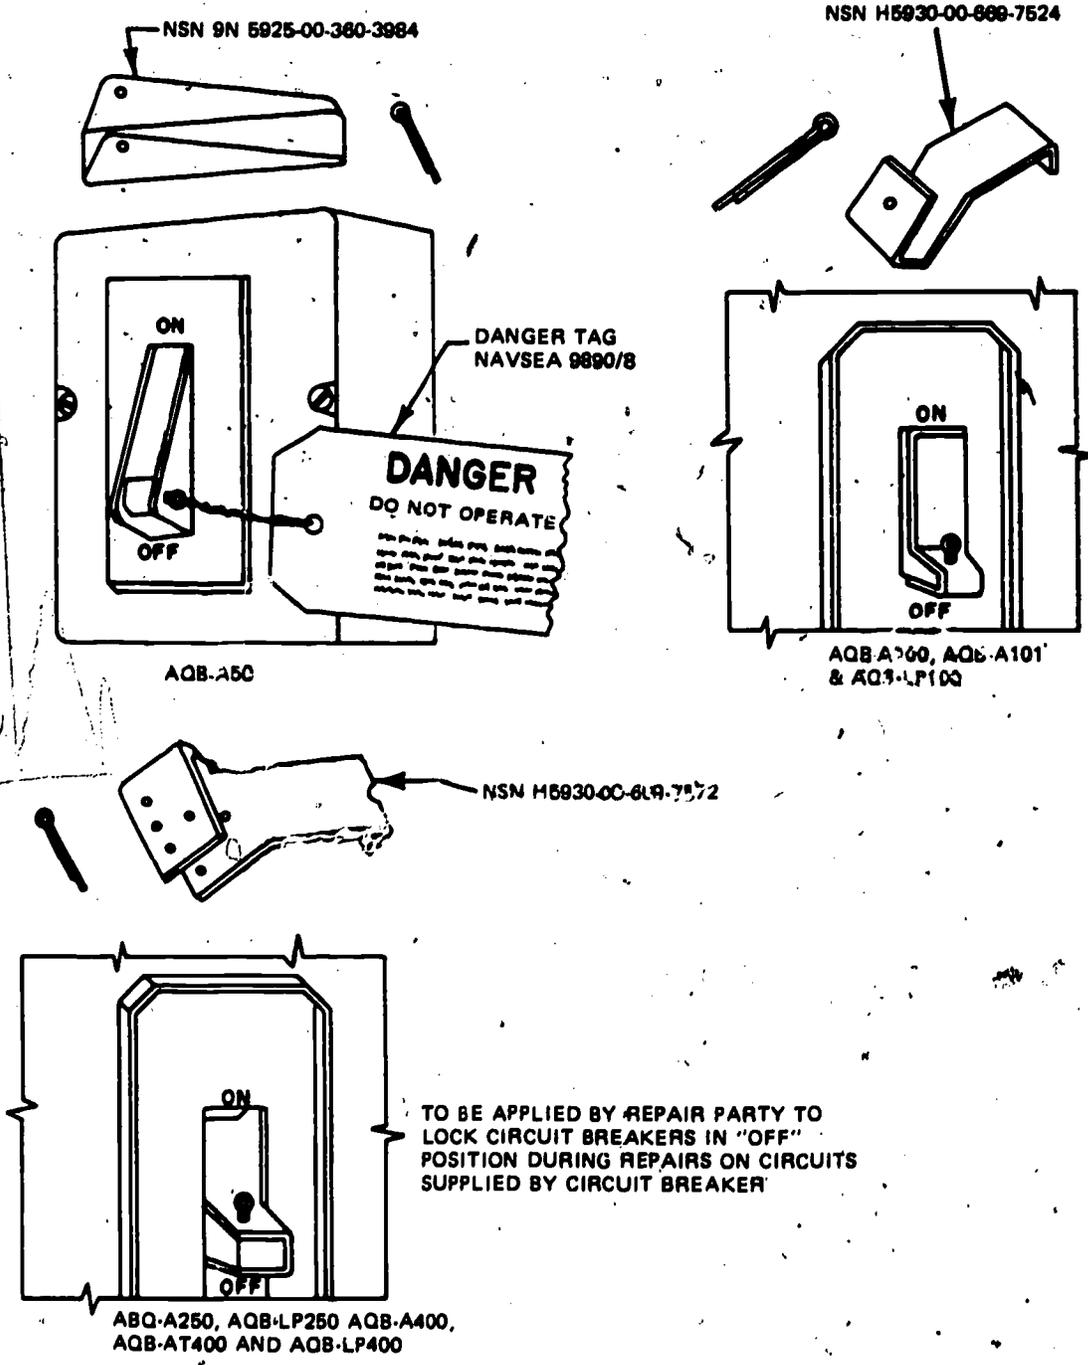


Figure 2-6.—Handle locking devices for circuit breakers.

67.330A

Red tagged. (See fig. 2-6.) The proper use of Red tags cannot be overstressed. When possible, double Red tags should be used, such as tagging open the main power supply breaker and removing and tagging the removal of fuses of the same power supply.

LIVE CIRCUITS

Safe practice in most electrical or electronic maintenance and repair work requires that all applicable circuits or power inputs be deenergized. However, there are times when deenergizing the circuits is neither desirable nor feasible, such as under emergency (damage control) conditions or when deenergizing one or more circuits would seriously affect the operation of vital equipment or jeopardize the safety of personnel. No work is done on energized circuits without prior approval of the commanding officer. Workers must be closely supervised and fully aware of the dangers involved in working on live or "hot" circuits. At these times, the precautions they must take to insulate themselves from ground and to ensure their safety include the following:

- Insofar as practicable, provide insulating barriers between the work and adjacent live metal parts. Also provide ample lighting.
- Cover adjacent grounded metal with a dry insulating material, such as wood, rubber matting, canvas, or phenolics. This material must be dry, free of holes and imbedded conductors of electricity, and plentiful enough to give the workers room to move around in.
- Coat metallic handtools with plastisol or cover them with two layers of rubber or vinyl plastic tape, half-lapped. Insulate the tool handle and as much of its other exposed parts as practicable. See *NAVSHIPS' Technical Manual* for instructions on the use of plastisol. In case there is not enough time to apply plastisol or tape, cover the tool handles and their exposed parts with cambric sleeving, synthetic resin flexible tubing, or suitable insulation taken from scraps of electric cables; however, this is done only in an emergency situation.

- Do not wear a wristwatch, rings, other metal objects, or loose clothing that could contact or become caught in live parts. Wear shoes and clothes that are as dry as possible.

- Tighten the connections of removable test leads on portable meters. In checking live circuits, do not allow the free end of an energized test lead to come adrift from its meter.

- Have immediately available a person who is qualified to administer mouth-to-mouth resuscitation and cardiac massage for electric shock.

- Have a person standing by to deenergize the equipment. Tie a rope to the worker's waist to pull him free if necessary.

- If practicable, work with one hand only; wear a rubber glove on the other hand. Where the work permits, wear gloves on both hands, and always wear a face shield.

RUBBER GLOVES

There are four classes of rubber insulating gloves. They are marked by class. The maximum safe voltages on which the gloves can be used are given in table 2-2.

Rubber gloves should be carefully inspected for damage or deterioration before use. To inspect rubber gloves for tears, snags, punctures, or leaks that are not obvious, hold the glove downward, grasp the glove cuff, and flip the glove upward to trap air inside the glove. Roll or fold the cuff to seal the trapped air inside. Then, squeeze the inflated glove and inspect it for

Table 2-2.—Rubber Gloves

Class	Maximum Safe Voltage
0	750 volts
I	3000 volts
II	4000 volts
III	5000-volts

damage. Full information on the types and causes of damage to rubber gloves is in *NAVSHIPS' Technical Manual*, Chapter 300.

LEAKAGE CURRENTS

The ungrounded electrical distribution system used aboard ship differs from the grounded system used in shore installations. But because the shipboard system is designed to be ungrounded, never think that it is safe to touch one conductor since no electrical current would flow. It is not safe to touch one conductor of the ungrounded shipboard system because each conductor and all electrical equipment connected to the system have an effective capacitance to ground which provides an electrical current path between the conductors and the ship's hull. The higher the capacitance, the greater the current flow is for a fixed body resistance when one conductor of the ungrounded system is touched while the body is in contact with the ship's hull or other metal enclosures. When body resistance is low due to wet or sweaty hands, for example, the inherent capacitance is sufficient to cause a FATAL electrical current to pass through the body.

A perfect ungrounded system (fig. 2-7A) is one in which the insulation is perfect on all cables, switchboards, circuit breakers, generators, and load equipment; there are no filter capacitors connected from ground to any of the conductors; and none of the system equipment or cables have any inherent capacitance-to-ground. If all these conditions were met, there would be no path for electrical current to flow to ground from any of the system conductors.

You can see in figure 2-7A that if a person touches a live conductor while standing on the deck, there would be no completed path for current to flow from the conductor through the person's body, and thus, no electrical shock. However, shipboard electrical power distribution systems DO NOT and CANNOT meet the above definition of a PERFECT ungrounded system.

In a representative shipboard "real" ungrounded system, as shown in figure 2-7B,


there are additional factors (resistances R and capacitances C) which must be considered, some of which are not visible.

The resistances, when combined in parallel, form the insulation resistance of the system which is periodically measured with a 500-volt d-c megger. In figure 2-7B, there is a generator insulation resistance, an electric cable insulation resistance, and a load insulation resistance. The resistors cannot be seen as physical components, but are representative of small current paths through equipment and cable electrical insulation. The higher the resistance, the better the system is insulated; therefore, less current will flow between conductor and ground. Representative values of a large operating system can vary widely depending on the size of the ship and the number of electrical circuits connected together.

Figure 2-7B also shows the capacitance of the generator to ground, the capacitance of the distribution cable to ground, and the capacitance of the load equipment to ground. As before, these capacitances cannot be seen, since they are not actually physical components, but are inherent in the design of electrical equipment and cable.

The value of the capacitance generated between the conductor and ground is determined by the radius of the conductor, the distance between the conductor and the bulkhead, the dielectric constant of the material between the two, and the length of the cable. Similar capacitance exists between the generator winding and ground and between various load equipment and ground. Since capacitors ideally have an infinite impedance to direct current, their presence cannot be detected by a megger or insulation resistance test. In addition to the nonvisible system capacitance, typical shipboard electrical systems contain radio frequency interference (RFI) filters which contain capacitors connected from the conductors to ground. These filters may be a part of the load equipment, or they may be mounted separately. Filters are used to reduce interference to communications equipment.

If physical contact is made between cable B and ground (fig. 2-7C) current will flow from the generator through the person's body to ground and back through the system resistances

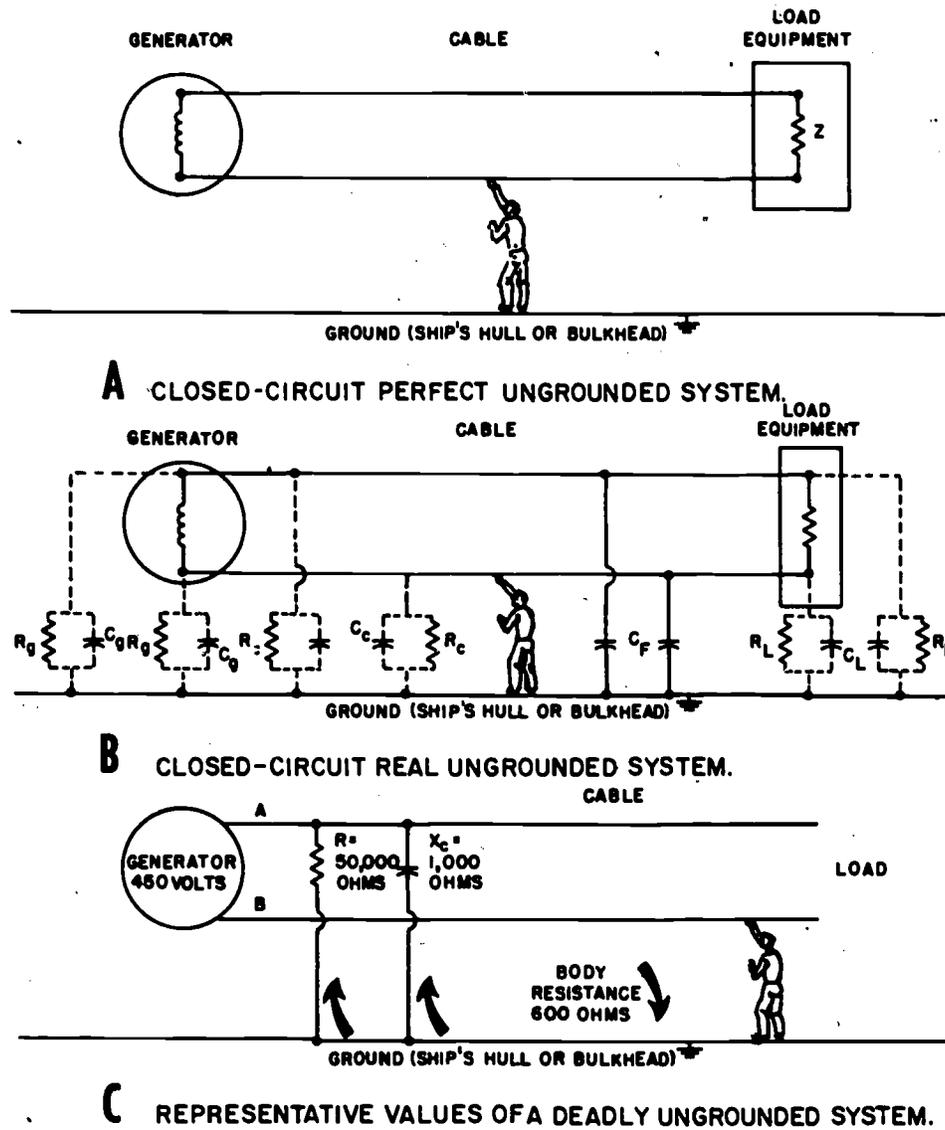

77.295

Figure 2-7.—DANGEROUS! BEWARE! Shipboard ungrounded electrical distribution systems are DEADLY.

and capacitances to cable A, thus completing the electrical circuit back to the generator. This presents a serious shock hazard.

Suppose you megger the system of figure 2-7C and obtain a system value of insulation resistance of approximately 50,000 ohms. You can conclude rightly that no low resistance grounds exist on the system, but wrongly that the system is a "perfect" ungrounded system.

Do not forget the system capacitance which exists in parallel with the resistance.

It should now be clear to you why you are NEVER to touch a live conductor of an electrical system, grounded or "ungrounded". Insulation resistance tests are made to ensure the system will operate properly, not to make the system safe. High insulation readings in a megger test do not make the system safe—nothing does.

ISOLATED RECEPTACLE CIRCUITS

Isolated receptacle circuits are installed on all new construction ships. These circuits are individually isolated from the main power distribution system by transformers and each circuit is limited to 1500 feet in length to reduce the capacitance to an acceptable level. This design is intended to limit ground leakage currents to 10 milliamperes which would produce a nonlethal shock. These receptacles are located where personnel usually plug in electrical power tools or appliances. To maintain a safe level of leakage currents, it is extremely important that the isolated receptacle circuits be free of all resistance grounds.

SWITCHBOARD METERS AND INSTRUMENT TRANSFORMERS

When removing or installing switchboard and control panel meters and instrument transformers, be extremely careful to avoid electric shock to yourself and damage to the transformers and meters.

The secondary of a current transformer **MUST** always be short circuited before disconnecting the meter as extremely high voltages will build up that could be fatal to unwary maintenance personnel.

The primary of a potential transformer must always be opened prior to removal of the meter to prevent damage to the primary circuit due to high circulating currents.

In most installations potential transformer primaries are fused and the transformer and associated meter can be removed after pulling the fuses for the transformer concerned. In disconnecting the transformer and meter leads, however, avoid contact with nearby energized leads and terminals.

SWITCHBOARDS AND SWITCHGEARS

Switchboards and switchgears must have safety precautions, operating instructions, wiring diagrams and artificial respiration instructions posted in the vicinity of the board and

switchgears. Also, **HIGH VOLTAGE** signs should be posted. Under no condition should anything be stored behind switchboards.

TEST EQUIPMENT

Test equipment is for the most part precision equipment which must be handled with care if it is to perform the designed functions accurately.

Some equipment may require special handling; however, there are precautions which apply to test equipment in general. Rough handling, moisture, and dust all affect the useful life of test equipment. Bumping or dropping a test instrument, for example, may destroy the calibration of a meter or short circuit the elements of an electron tube within the instrument.

The effects of moisture are minimized in electronic test equipment, such as signal generators and oscilloscopes, by built-in heaters. These heaters should always be operated for several minutes before high voltage is applied to the equipment.

Meters are the most delicate parts of test equipment. Protect a meter by making certain that the amplitude of the input signal under test is within the range of the meter. Also, keep a meter as far away as possible from strong magnets.

Since the movement coils of electrical test equipment are of the limited current type, they can be permanently damaged by excessive current. To avoid such an occurrence plus possible operator injury, keep the following points in mind when connecting and using electrical test equipment:

- Whenever possible, connections should be made when the circuit is not energized.

- An ammeter or the current coil of a wattmeter or other instrument must be connected in—**NEVER ACROSS**—the line carrying the current to be measured. Additionally, if an external shunt or current transformer is required, the shunt or the primary of the current transformer must be connected in the line.

Chapter 2—SAFETY PRECAUTIONS

- A voltmeter, or the potential coil of a wattmeter or other instrument, must be connected across the voltage to be measured in series with an external multiplier, if one is needed, or across the secondary of a potential transformer. If a potential transformer is required, the primary is connected across the voltage to be measured.

Keep the following additional precautions in mind when using portable instruments:

- Wires attached to an instrument should preferably extend back over the bench or table on which the instrument is placed, and away from observers.

- Wires draped over the front of the table are sometimes accidentally caught by an observer, resulting in the instrument's being thrown to the deck. If placing wires in this way cannot be avoided, clamp the wires to the bench or table at a point near the instrument.

- Instruments that must be used where vibration is unavoidably present should be placed on pads of folded cloth, felt, or similar material.

Since the use of high voltages, which are dangerous to human life, is necessary to the successful operation of some equipment, certain precautionary measures must be carefully observed by maintenance personnel when adjusting and testing the equipment. These include:

- Remember that interlocks are not always provided and that interlocks do not always work. Removal of the case or rear cover of an instrument not equipped with an interlock will allow access to circuits carrying voltages dangerous to human life.

- Do not change tubes or make adjustments inside equipment with the high voltage supply on.

- Under certain conditions, dangerous potentials may exist in circuits even with the power controls in the off position due to charges

retained by capacitors. Therefore, to avoid casualties, always remove power, and then discharge and ground the circuit prior to touching them.

- Under no circumstances should any person, other than authorized maintenance personnel, be permitted (1) to reach within or in any manner gain access to enclosures when the power supply line switches to the equipment are closed, (2) to approach or handle any portion of the equipment which is supplied with power, (3) to connect any apparatus external to the enclosure to circuits within the equipment, or (4) to apply voltages to the equipment for testing purposes while any portion of the shielding or enclosure is removed or open.

- Whenever feasible in testing circuits, maintenance personnel should check for continuity and resistance rather than directly checking voltage at various points.

- DO NOT service or adjust alone. Never reach within an enclosure to service or adjust the equipment without the immediate presence or assistance of another person capable of rendering aid.

RUBBER FLOOR MATTING

To eliminate likely causes of accidents and to afford maximum protection to personnel from the effects of electric shock, use only the approved rubber floor matting for electrical and electronic spaces. Accident investigations often show that the floors around electrical and electronic equipment had been covered with only general-purpose black rubber matting. The electrical characteristics of this type of matting do not provide adequate insulation to protect against electric shock; there are various types of electrical grade mats or sheet coverings conforming to Mil Spec Mil-M-15562 which meet the requirements.

To ensure that the matting is completely safe, operating and maintenance personnel must promptly remove from the matting surfaces all foreign substances that could possibly contaminate or impair its dielectric properties.

The dielectric properties of the matting can be impaired or destroyed by oil, imbedded metal chips, cracks, holes, or other defects. If it is apparent that the matting is defective for any reason, cover the affected area with a new piece of matting. Cementing the mat to the deck is not required but is strongly recommended to prevent removing the mat for inspection and cleaning and thus leaving the area unprotected. If the mat is not cemented, stencil an outline of the proposed mat on the deck. Inside the outline, stencil "ELECTRIC-GRADE MAT REQUIRED WITHIN MARKED LINES." Use 3/4-inch or larger letters.

Electrical insulating deck covering should be installed so that there are no seams within 3 feet of an electrical hazard. Where this is not possible, seams must be heat welded or chemically sealed to provide a continuous surface free of seams, craters, or parasites.


WORKBENCHES

As an Electrician's Mate you will be doing most of equipment testing and repair on a workbench in the electric shop. To avoid getting shocked while working there, you must be careful, and your workbench must be insulated properly.

Figure 2-8 shows the construction features of a safe electric or electronics workbench. Its work surface, or top, is usually 30 inches wide and 4 feet long. The bench must be fastened securely to the deck.

Where vinyl deck covering is not used, matting (not less than 3-foot widths) will be installed over the minimum area necessary to prevent electrical shock. Additionally, a 3-foot width of rubber matting will be installed to insulate the walkway in front of insulated workbenches where vinyl sheet is not specified.

The top and front surfaces of an electric or electronics workbench must be insulated with 3/8-inch Benelex 401. In addition, exposed ends of the workbench and kneeholes under auxiliary work tables must be insulated with 1/8-inch insulation of the same material. Do not defeat the purpose of the insulation by attaching vises, locks, hasps, hinges, or other hardware with metal throughbolts to the metal parts of the

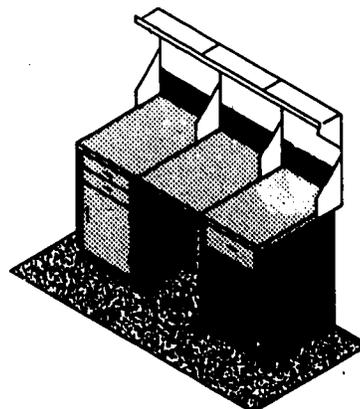

 WORKING AREA (TOP, TOP EDGE, FRONT OF DOORS AND DRAWERS) INSULATED WITH 3/8 INCH BENELEX 401 (FSN 9Q-5640-256-5194)

 ALL OTHER EXPOSED METAL SURFACES IN THE WORKING AREA (BENCH FRONT AND SIDES, KNEE HOLE SIDE, UNDERSIDE OF TOP, INSULATED WITH 1/8 INCH BENELEX 401)

 RUBBER MATTING, EITHER GREY (FSN 9Q-7220-267-4630) OR GREEN (FSN 9Q-7220-913-8751), BUT AT LEAST 3 FEET WIDE

77.308

Figure 2-8.—Typical electric workbench.

workbench. When mounting hardware items, insulate them from the workbench.


The workbench must have grounding leads that are 54 inches long and of type D, size 10 (in accordance with MIL-W-16878). The ground leads must be secured to the ship's structure or at the back of the workbench and must be equipped at the free end with a 50-ampere power clip (type PC) and insulated sleeving (both conforming to Federal Specification W-C-440). One grounding lead should be installed for every 4 feet of workbench length to ensure positive grounding of the equipment being tested. The grounding leads installed in ships with wooden hulls should be the same as those installed in ships with steel hulls except that the leads should be secured to the ship's electrical grounding system. A bare solid copper conductor, not less than 83,690 circular mils, must be used for the main internal grounding wire.

Test bench receptacle panels should be installed on test benches where power at various


Chapter 2—SAFETY PRECAUTIONS

voltages and frequencies (other than ship's service) are needed for testing equipment.

The illumination requirements vary between those for general purpose workbenches and workbenches for the repair of instruments, such as typewriters and meters. A warning plate which reads, **ELECTRIC SHOCK—DANGER—DO NOT TOUCH ENERGIZED CIRCUITS** must be installed over the workbench. Artificial respiration instructions and a description of an approved method of rescuing personnel in contact with energized circuits must also be posted. (See figure 2-9.)

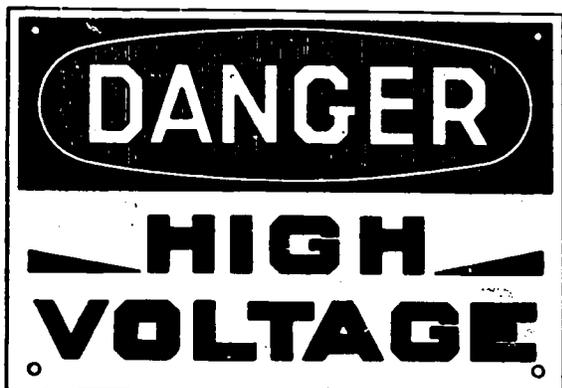

A

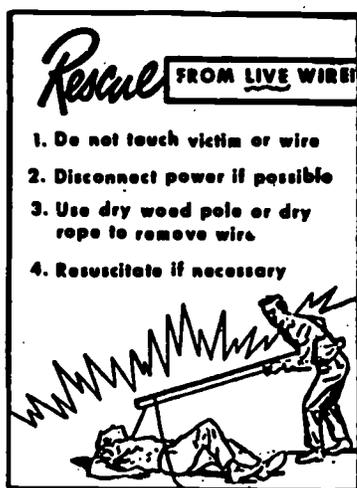

B

40.67(77C)

Figure 2-9.—Safety.

A dummy outlet should be installed near the workbench for checking the grounding conductor on portable tools prior to issue.

General specifications for ships require that each item of electronic equipment connected directly to the ship's electrical system be provided with a means for disconnecting the equipment from the distribution system. This disconnect location shall be within the compartment or space where the equipment is located.

Workbench receptacle connectors shall not supply other types of load. All receptacles on the workbench must be connected to a common or an individual isolation transformer. The transformer shall be either 450/120-volt supplied from a 450-volt load center or a 120/120-volt supplied from a 120-volt distribution point. Additional information on workbenches, grounding requirements, and electrical mattings is contained in Appendix II of this manual.

SHIPBOARD LIGHTING

The best protection against the harmful effects of glare aboard ship is the realization by all hands that prolonged exposure to glare should be avoided. Usually, it is possible to position the work and place yourself so that you will not face any exposed lamps or uncomfortably bright, reflected-glare spots. If this is not practicable, shield your eyes with a visor.

Always use the proper size lamp in every fixture. For example, glare is invariably produced if a 100-watt lamp is used in a fixture that is designed for a 50-watt lamp. This will also result in rapid deterioration of the socket and shorter lamp life due to the increased heat. Install shielded fixtures in areas where extended critical seeing tasks are required. Never use exposed lamps or unshielded globes in such spaces. Replace burned out lamps immediately. Replace fluorescent lamps when their ends start to turn black, causing a reduction in brightness. A flickering fluorescent lamp will irritate the

37 2-19

eyes. Flickering can be caused by a defective lamp or a defective starter, which should be replaced at the earliest opportunity. Light fixtures in machinery spaces must be shielded due to the danger of oil accidentally spraying on a naked lamp and igniting.

If a great difference exists between the brightness of the work area, the pupils of the eyes (which automatically adjust to the amount of light entering the eyes) must make an adjustment every time the eyes glance away from and back to the work. The muscles of the eyes ordinarily will not be overworked if the ratio of brightness of the work to brightness of the surroundings does not exceed 10 to 1. However, if the ratio of brightness is appreciably greater than 10 to 1, eye fatigue will result if the work is continued for a prolonged period. Avoid extreme brightness contrasts between work and background. When lighting fixtures are installed beyond the work area that would illuminate the background, turn on these lights.

CONFINED AREAS

Fumes tend to collect in confined areas. Because of the toxic effects of the fumes, it is dangerous for personnel to enter spaces that are not well ventilated, or spaces that have been closed for an appreciable length of time, or spaces that are normally occupied or regularly used but have been vacated and sealed due to damage or other reasons. Typical examples of these spaces are storerooms, blisters, cofferdams, pontoons, shaft alleys, and voids.

All compartments or areas which are considered or suspected of being NOT SAFE are to be appropriately classified and tagged. No person should enter any closed compartment or poorly ventilated space aboard ship, due to the dangers of suffocation or gas poisoning, unless and until the GAS-FREE Engineer (or an authorized representative) has taken appropriate action and has CLEARED the area for entrance. The area will be properly tagged for entrance, giving the date and time when the safe condition will no longer be in effect. If prolonged work is required in closed space, ventilation is required to prevent suffocation.

REPAIR PARTY ELECTRICIAN

As a repair party electrician you may be called upon to perform various tasks in the event of battle damage. These tasks could range anywhere from manning an OBA to being a stretcher bearer. Your primary responsibilities, however, will be those tasks in your rating.

You must be familiar with all electrical power sources and distribution panels in the area assigned to your repair party. In case of fire the scene leader will decide whether or not the power should be secured. If the word is passed to you to secure the power to a specific compartment or piece of equipment, do so quickly. Then the task of putting the fire out can move ahead.

At the first sounding of General Quarters the crew proceeds to G.Q. stations and sets material condition Zebra. After Zebra is set, you should report to your repair party leader for muster and further instructions. By this time the repair locker should be opened and you should proceed to take an inventory of all the electrical equipment in the locker. This equipment will generally consist of items, such as an electrical repair kit, floodlights, flashlights and spare batteries, submersible pump, casualty power cable and wrenches, extension cords, rubber gloves and rubber boots. After testing all the electrical equipment to make sure it is operational and safe, stow it in an easily accessible area. If needed it must be taken to the scene quickly.

All members of the repair party are responsible for rigging casualty power and tying it to the overhead; however, the repair party electrician is responsible for proper connection to the biscuits, (the source and the load) and finally turning on power. Standard safety precautions must be observed, wear rubber gloves and rubber boots, and stand on a section of rubber matting while making these connections.

In tagging the casualty power cable at various locations, warn all hands of the potential danger that exists. A typical warning sign is shown in figure 2-9.

RESCUE AND FIRST AID

As the Electrician's Mate knows, the job is risky even under the best of working conditions; at other times, it is exceedingly dangerous. Despite the fact that accidents are preventable, an EM runs a good chance of getting shocked and burned, and being surrounded by one or more of the hazards described earlier. If you are at the scene of an accident, you will be expected to help the victim as quickly as possible.

ELECTRIC SHOCK

How much current does it take to kill a person? When a 60-hertz alternating current, for example, is passed through a person from hand to hand or from hand to foot and the current is gradually increased from zero it will cause the following effects: (1) at about 1 milliamperes (0.001 ampere) the shock is perceptible; (2) about 10 milliamperes (0.01 ampere) the shock is of sufficient intensity to prevent voluntary control of the muscles and a person may be unable to let go and get free; (3) at about 100 milliamperes (0.1 ampere) the shock is fatal if it lasts for one second or more.

The danger of shock from the 450-volt a-c ship's service system is reasonably well recognized by operating personnel as shown by the relatively few reports of serious shock received from this voltage despite its widespread use. On the other hand, a number of shipboard fatalities have been reported due to contact with 115-volt circuits. Despite a fairly widespread but totally unfounded popular belief to the contrary, low voltage (115 volts and below) circuits are very dangerous and can cause death where the resistance of the body is lowered by moisture and especially when current passes through the chest. Shipboard conditions contribute to the severity of shock because the body is likely to be in contact with the ship's metal structure and the body resistance may be low because of perspiration or damp clothing.

Keep clothing, hands, and feet dry if at all possible. When it is necessary to work in wet or damp locations, use a dry platform or stool to sit or stand on, and place a rubber mat or other nonconductive material on top of the

wood. Use insulated tools and insulated flashlights of the molded type when required to work on exposed parts.

RESCUE

All personnel should know that a victim rendered unconscious by electric shock should receive artificial respiration and that it should be started in a matter of seconds rather than minutes. Records show that seven out of ten victims were revived when artificial respiration was started in less than 3 minutes after the shock. Beyond 3 minutes, the chances of revival decrease rapidly.

The person nearest the victim should start artificial respiration without delay and call or send others for assistance and medical aid. The only logical permissible delay is that required to free the victim from contact with the electricity in the quickest, safest way. This step, while it must be taken quickly, must be done with great care, otherwise there may be two victims instead of one. In case the contact is a portable electric tool, light, appliance, equipment, or portable outlet extension, turn off the bulkhead supply switch or remove the plug from its bulkhead receptacle. If the switch or bulkhead receptacle cannot be quickly located, the suspected electric device may be pulled free of the victim by grasping the insulated flexible cable to the device and carefully withdrawing it clear of its contact with the victim. Other persons arriving on the scene must be clearly warned not to touch the suspected equipment until it is unplugged. Aid should be enlisted to unplug the device as soon as possible.

Where a victim is in contact with stationary equipment such as a bus bar or the contacts on a machine, pull the victim free if the equipment cannot be quickly deenergized, or if considerations of ship operation or survival prevent immediate shutdown of the circuits. To save time in pulling the victim free, improvise the equivalent of the protective insulation for the rescuer. For example, instead of hunting for a pair of rubber gloves to use in grasping the victim, you can safely pull the victim free if your hands are dry by grasping the victim's slack clothing, leather shoes, or by using the rescuer's belt. Instead of hunting for a rubber mat on

which to stand, use nonconducting materials, such as deck linoleum, a pillow, blanket, mattress, dry wood, or coil of rope. At no time during the rescue should any part of the rescuer's body directly touch hull metal or metal structure or furniture.

RESUSCITATION

Methods of resuscitating or reviving an electric shock victim include artificial respiration (to reestablish breathing) and external heart massage (to reestablish heart beat and blood circulation).

Artificial Respiration

The procedure for administering artificial respiration is given in figure 2-10A. Some techniques are demonstrated in figure 2-10B. If desired, in step 6 of the procedure, use the pharyngeal plastic airway which is required in all potentially hazardous areas of electrical shock, or blow into the victim's mouth through a cloth or handkerchief placed over the face. If assistance is available, you and an assistant can take turns blowing into the victim's mouth and massaging the heart. See figure 2-8C.

Closed Chest Cardiac Massage

Massaging the heart is a practical, two-handed, easy-to-learn method of reviving an electric shock victim. The objective in closed chest cardiac massage is to squeeze the heart through the chest wall, thereby emptying the heart to create a pulse or beat.

CARDIAC ARREST.—When there is a complete absence of any pulse at the wrist or in the neck, the victim has suffered a cardiac arrest or, in other words, loss of heart beat. At the same time, the pupils of the eyes are dilated and breathing is weak or stopped. The victim may **APPEAR** to be dead. Under these circumstances, severe brain damage will occur in 4 minutes unless circulation of the blood is reestablished.

HEART MASSAGE.—The following method of reviving a victim by cardiac massage is

recommended by the Bureau of Medicine and Surgery:

1. Place the victim's back on a firm surface, such as the deck, if possible, exposing the chest.
2. Kneel beside the victim; feel for the lower end of the breastbone; place one hand across the breastbone so the heel of the hand covers the lower part; place the second hand on top of the first so that the fingers point toward neck as in figure 2-10C.
3. With arms nearly straight, rock forward so that a controlled amount of your body weight is transmitted through your arms and hands to the breastbone. The amount of pressure to apply will vary with the victim. It should be applied as smoothly as possible. The chest wall of an adult should be depressed 2 to 3 inches with each pressure application. Keep the hands positioned as described to prevent injury to the liver, ribs, or other body parts.
4. Repeat application of pressure about 60 to 80 times per minute.
5. Have an assistant ventilate the victim's lungs, preferably with pure oxygen under intermittent positive pressure; otherwise, with mouth-to-mouth resuscitation. The heart cannot recover unless supplied with oxygenated blood. Closed chest massage, however, will cause some ventilation of the lungs. When working alone, concentrate on the massage but interrupt it every half minute or so to start rapid mouth-to-mouth breathing for three or four breaths.
6. Direct other assistants when available to keep checking the victim's pulse. Use the least pressure that will secure an effective pulse beat. The pupils will become smaller when the cardiac massage takes effect.
7. Pause occasionally to determine whether a spontaneous heart beat has returned.

BURNS

The principal dangers from burns are shock and infection. All casualty care measures must be directed toward combating shock, relieving the casualty's pain, and preventing infection.

ARTIFICIAL RESPIRATION
MOUTH-TO-MOUTH OR MOUTH-TO-NOSE
RESCUE BREATHING

- ① **PLACE CASUALTY ON BACK IMMEDIATELY**
DON'T WASTE TIME MOVING TO A BETTER PLACE OR
LOOSENING CLOTHING.
- ② **QUICKLY CLEAR MOUTH AND THROAT**
REMOVE MUCUS, FOOD AND OTHER OBSTRUCTIONS.
- ③ **TILT HEAD BACK AS FAR AS POSSIBLE**
THE HEAD SHOULD BE IN A "CHIN-UP" OR "SNIFF" POSI-
TION AND THE NECK STRETCHED.
- ④ **LIFT LOWER JAW FORWARD**
GRASP JAW BY PLACING THUMB INTO CORNER OF MOUTH.
DO NOT HOLD OR DEPRESS TONGUE.
- ⑤ **PINCH NOSE SHUT OR SEAL MOUTH**
PREVENT AIR LEAKAGE.
- ⑥ **OPEN YOUR MOUTH WIDE AND BLOW**
TAKE A DEEP BREATH AND BLOW FORCEFULLY (EXCEPT
FOR BABIES) INTO MOUTH OR NOSE UNTIL YOU SEE CHEST
RISE.
- ⑦ **LISTEN FOR EXHALATION**
QUICKLY REMOVE YOUR MOUTH WHEN CHEST RISES. LIFT
JAW HIGHER IF VICTIM MAKES SNORING OR GURGLING
SOUNDS.
- ⑧ **REPEAT STEPS SIX AND SEVEN 12 TO 20 TIMES**
PER MINUTE
CONTINUE UNTIL VICTIM BEGINS TO BREATHE NORMALLY.

• FOR INFANTS SEAL BOTH MOUTH AND NOSE WITH YOUR
MOUTH
BLOW WITH SMALL PUFFS OF AIR FROM YOUR CHEEKS.

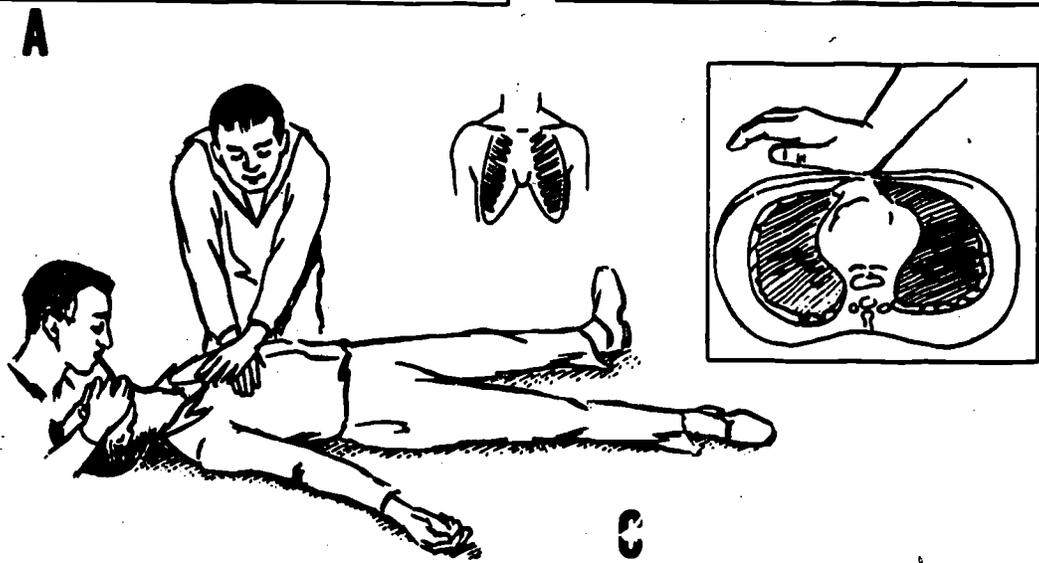
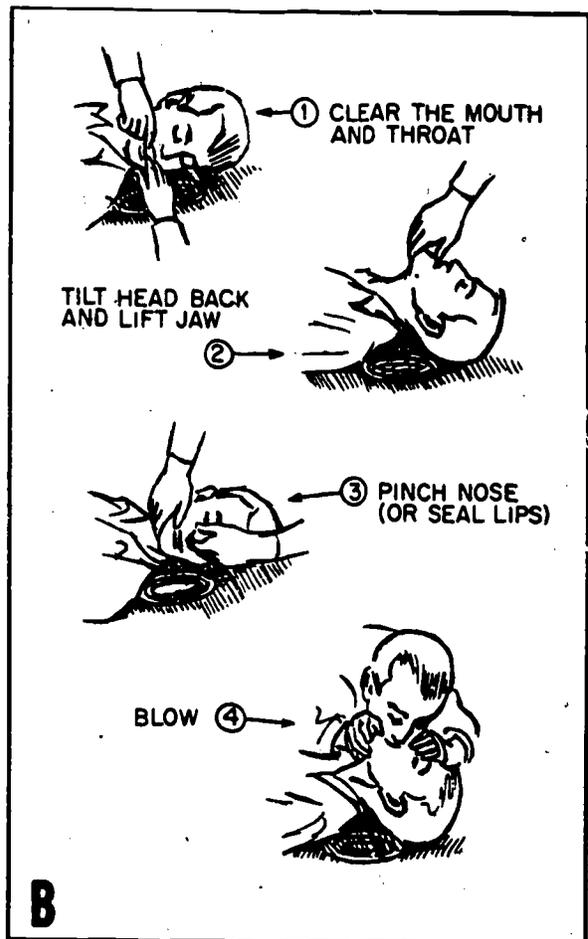


Figure 2-10.—Artificial respiration and cardiac massage.

4.224

CLASSIFICATION OF BURNS

Burns may be classified according to their cause as thermal, chemical, or electrical. Thermal burns are the direct result of heat such as fire, scalding, sun or explosion blast. Chemical burns are produced by chemical action such as battery acid on tissues. Electrical burns may be caused by electrical current passing through tissues or the superficial wound caused by electrical flash.

Burns may also be classified as first, second, or third degree, based on the depth of skin damage (fig. 2-11). First-degree burns are characterized only by reddening of the skin. Second-degree burns are characterized by blistering of the skin, either early or late. They are the most painful type of burn. The complete thickness of the skin is not destroyed.

Third-degree burns are characterized by complete destruction of the skin with charring and cooking of the deeper tissues. This is the most serious type of burn, for it produces a deeper state of shock and more permanent damage and disfigurement. It is not as painful as a second-degree burn because the sensory nerve endings have been destroyed.

BURN EMERGENCY TREATMENT

The degree of the burn, as well as the skin area involved, determines the procedures used in treatment of burns. Large skin areas require a different approach than small areas. To estimate the amount of skin area affected, use fig. 2-12.

As a guideline, consider that burns exceeding 20 percent of the body surface endanger life; the old or the very young patient will not tolerate


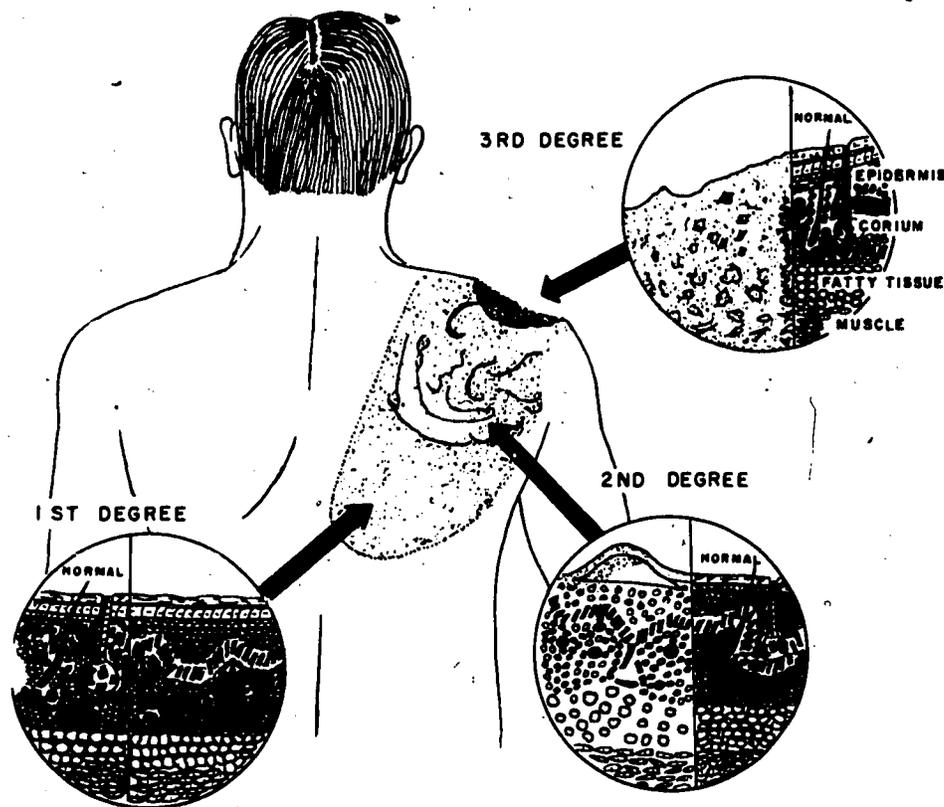


Figure 2-11.—Types and degrees of burns.

136.32

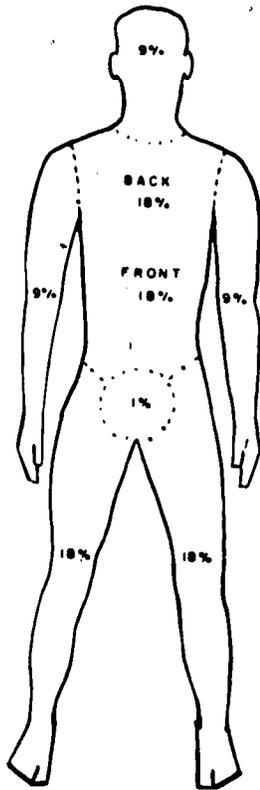

136.31

Figure 2-12.—Computing body surface.

burn injuries well; without adequate treatment. Burns of more than 30 percent are usually fatal to adults.

If time and facilities permit caring for patients with superficial burns, the area should be cleaned with soap and water. A simple sterile dressing of fine-mesh, dry gauze is then applied over the area to protect it from infection.

Based on field level casualty treatment conditions, superficial burns include first-degree burns and lesser second-degree burns, which need little attention beyond self-care.

When emergency treatment of the more serious second-degree burns and third-degree burns is required, treat the patient for shock first. Make the patient as comfortable as possible, and protect him from cold, excessive heat, and rough handling.

The loss of body fluids is the main factor in burn shock. Start oral therapy gradually at first by giving small amounts of hot coffee, tea, fruit

juice, or sugar water. Give the drinks frequently but only if the patient is conscious, able to swallow, and has no internal injuries.

To enable trained personnel to determine the kind of treatment required, no medication should be applied to burns during emergency treatment. Pain is closely allied to the degree of shock, and should be relieved as soon as possible. When available, ice water is an effective pain reducer. Flooding with lots of clean, cool fresh water helps also provided that not too much force is used. In electric shock cases, burns may have to be ignored temporarily while the patient is being revived.

After the patient has been treated for pain and shock, a compress and bandage may be applied to protect the burned area. If a universal protective dressing is not available, fine mesh gauze may be substituted. Constricting articles of clothing and ornaments should be removed, and the burned area should be elevated and immobilized.

Patients with extensive deep burns must be evacuated to a medical facility for treatment as rapidly as possible. Pain should be alleviated and shock must be controlled before and during evacuation.

Debris and loose clothing must be removed from burned areas to prevent irritation while the patient is being treated and transported. Clothing that sticks to a burn may be cut around the burn and the adhering cloth allowed to remain until it can be removed at the medical facility. The area of the burn is usually sterile; therefore, care should be taken not to contaminate it.

SAFETY PUBLICATIONS AND POSTERS

Electrician's Mates should become regular readers of safety publications, such as FATHOM magazine, MECH, and others. Published quarterly by the Naval Safety Center, FATHOM carries the most accurate information available on the subject of nautical accident prevention.

MECH is published quarterly and is distributed to aeronautical organizations. It presents the most accurate information available

on the prevention of maintenance-caused accidents and mishaps.

DECKPLATE, published by Naval Sea Systems Command, contains information for personnel in the Naval Establishment on the design, construction, conversion, operation, maintenance, and repair of naval vessels as well as articles on safety hazards and their prevention.

These publications, as well as notices and instructions distributed by the cognizant bureaus, make excellent reference materials and should be read when available to the operating forces.

At the beginning of this chapter, it was pointed out that safety posters, such as those in

figures 2-1 and 2-2, serve as warnings of danger or reminders of safe practices. The messages of these and other well-designed safety posters are clear and to the point. The left-hand poster of figure 2-13, for example, reminds personnel to think "safety"; the right-hand poster to act promptly or suffer the consequences. Remember that the messages are aimed at YOU. It is your responsibility to "read and heed." And don't forget your ABC's:

Always

Be

Careful

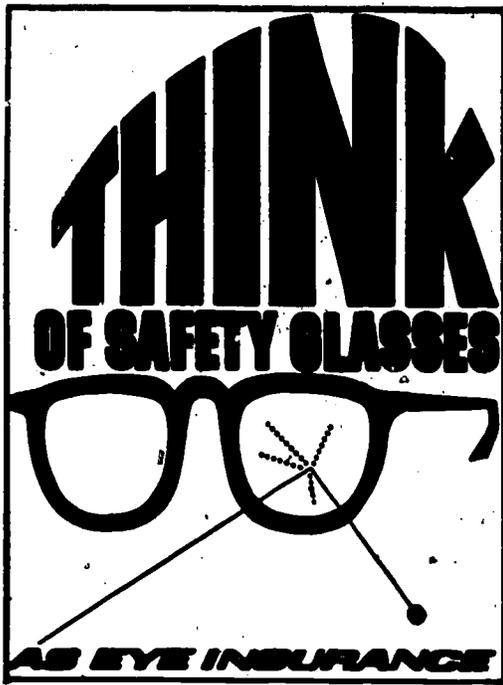


Figure 2-13.—Safety posters.

77.309



CHAPTER 3

TEST EQUIPMENT

As an Electrician's Mate, you will find it necessary to use a variety of test equipment to help troubleshoot and repair the newer, more sophisticated electrical/electronic gear aboardship. This chapter provides you with a useful and logical troubleshooting procedure, and describes the test equipment that you are likely to operate when troubleshooting and repairing the installed electrical/electronic gear.

TROUBLESHOOTING

Troubleshooting is the art of locating the problem. Like any art, it requires talent and training before it is developed into any degree of skill. Over the years Electrician's Mates have developed specific theories as to how to go about their work, and since they are passed on to you free of charge it will stand you well to use them.

The **FIRST** step in logical troubleshooting is to recognize a normal condition; in other words, to determine that everything is working properly. For example, the second hand on our watch is going through 360 degrees in a clockwise direction every minute, the chances are pretty good that the second hand on your watch is working properly. If, however, you had never seen a watch before, you would have no idea that this was the proper method for the second hand to work and therefore would have no way of knowing that the hand was working properly. When you are dealing with a voltage regulator or a large electric circuit breaker, the problem of recognition of normal conditions is far more complicated and you may need an explanation from a senior or from the manufacturer's technical manual. The point is you must have a fair comprehension of the normal condition of a piece of equipment before you can consider maintenance of it.

A **SECOND** logical step in the art of troubleshooting is the ability to recognize that a malfunction is occurring, is about to occur, or has

at some time past occurred. Then we assume that the equipment is not functioning normally, or that we have available information that indicates it will not function normally for much longer.

Picture again the watch, but this time the second hand is stopped. A malfunction has occurred at some previous time. It may be that someone has forgotten to wind the watch, but since you recognize that the normal condition is for the second hand to complete 360 degrees in 1 minute and since it is not moving, you are aware that a malfunction has occurred. If, however, when you looked at the watch, you noted that the second hand was moving at a rate of but 10 degrees in a 1-minute period, you could safely assume that a malfunction was occurring at that time. The third situation would be in effect that you find the watch running at the proper rate but noted a grinding sound from somewhere in its interior. You could then assume with some reliability that a malfunction was about to occur at some future time. Again it must be emphasized that the criterion of step one remains true: you must be able to recognize a normal condition before you can determine that there is a malfunction.

Step **THREE** in logical troubleshooting falls right in place once you are sure of the malfunction's existence. Collect all available data regarding the malfunction in order to find the symptoms. Is the unit running at all? Is it within the normal temperature and pressure range? Has this malfunction occurred before? Is the malfunction occurring only during a specific set of circumstances? Is the unit noisy?—Out of calibration?—Over or under design limits? Don't overlook anything, as the smallest unit of information that you collect may in the final analysis be the solution to the problem.

Now that you have collected all of the symptoms of the malfunctions, the next step is to list, mentally or on paper, the possible causes of these symptoms. Many manufacturers' technical

manuals list the "probable cause" in the corrective maintenance sections. It is often wise at this point to discuss the malfunction with another Electrician's Mate. Giving him the symptoms may result in his coming up with several causes that were not apparent to you.

Armed with a complete set of symptoms and with the probable causes of these symptoms, the troubleshooter now begins the painstaking checks which will ultimately lead to isolation of the malfunction. To sectionalize the trouble means to track it down into one specific area of a piece of equipment. This may be done by going over the energizing procedure slowly and determining when the trouble first appears. It may be done through the use of a troubleshooter's chart listed in the manufacturer's technical manual. It also can easily be performed through the use of the probable causes that you have listed.

Once it has been determined which section of a system is malfunctioning, it is usually but a matter of time before the defective component or components are isolated and repairs can be made. During this final step of troubleshooting it is most important that you, the Electrician's Mate, use every method of isolation. An open resistor can be determined through the use of a meter, but time is wasted if you do not note that the component is discolored when you originally open the chassis for inspection. In troubleshooting you must give full attention — look, listen, smell, and feel — to ensure good, quick, trouble isolation.

TACHOMETERS

A tachometer is an instrument which shows the rate at which a shaft is turning. Tachometers indicate in revolutions per minute (rpm) the turning speed of motors, generators, and other rotating machines. Though tachometers are installed on Navy machinery, such as ships service generators and main engines, an Electrician's Mate must often determine the speed of a rotating machine that is not equipped with a tachometer. In this case, he uses a portable tachometer.

Portable hand tachometers measure speed by direct contact with the shaft of the measured unit. Each hand tachometer (fig. 3-1) comes with an assortment of hard rubber tips, one end of which is inserted in the instrument the other applied to the rotating shaft.

Portable tachometers are for use only during testing and should not be used continuously. The tachometer shaft must be aligned to the center of the shaft of the unit under test; an off-center position will yield an incorrect reading. Additionally,

you should ensure that the design limit of the tachometer is not exceeded.

Common tachometers employed in the electric shop are both the centrifugal and chronometer types. In the centrifugal type, (fig. 3-1B), centrifugal force acts upon weights or flyballs which are connected by links to upper and lower collars. The upper collar is affixed to a drive shaft while the lower is free to move up and down the shaft. A spring, which fits over the shaft, connects the upper and lower collars. As the drive shaft begins to rotate, the flyballs (or weights) rotate with it.

Centrifugal force tends to pull the flyballs away from the center, thus the lower collar rises and compresses the spring. The lower collar is attached to a pointer and its upward motion, restricted by the spring tension, results in an increase in the indication on the dial face. The unit when properly used indicates correct shaft speed as long as it is in contact with the machine shaft under test.

The centrifugal tachometer may be either portable (single and multiple range) or permanently mounted. The portable multi-range tachometer has three ranges: low (50 to 500 rpm), medium (500 to 5,000 rpm), and high (5,000 to 50,000 rpm).

Normally, permanently mounted centrifugal tachometers operate off the governor or speed limiting assembly. The tachometer continuously records the actual rotational speed of the machinery shaft.

The shaft, portable/CHRONOMETRIC tachometer, shown in figure 3-2A, is a combination watch and revolution counter. It measures the average number of revolutions per minute of a motor shaft, pump shaft, etc. The mechanism of this tachometer is such that its outer drive shaft runs free when applied to a rotating shaft, until a starting button is depressed to start the timing element. Note the starting button beneath the index finger in figure 3-2A. The chronometric tachometer retains readings on its dial after its drive shaft has been disengaged from a rotating shaft, until the pointers are returned to zero by the reset button (usually the starting button). The range of a chronometric tachometer is usually from 0 to 10,000 rpm, and from 0 to 3,000 feet per minute (fpm).

Each portable centrifugal or chronometric tachometer is supplied with a small rubber covered wheel and a number of hard rubber tips. The appropriate tip or wheel is fitted on the end of the tachometer drive shaft, and held against the shaft to be measured. Portable tachometers of the centrifugal or chronometric type are used

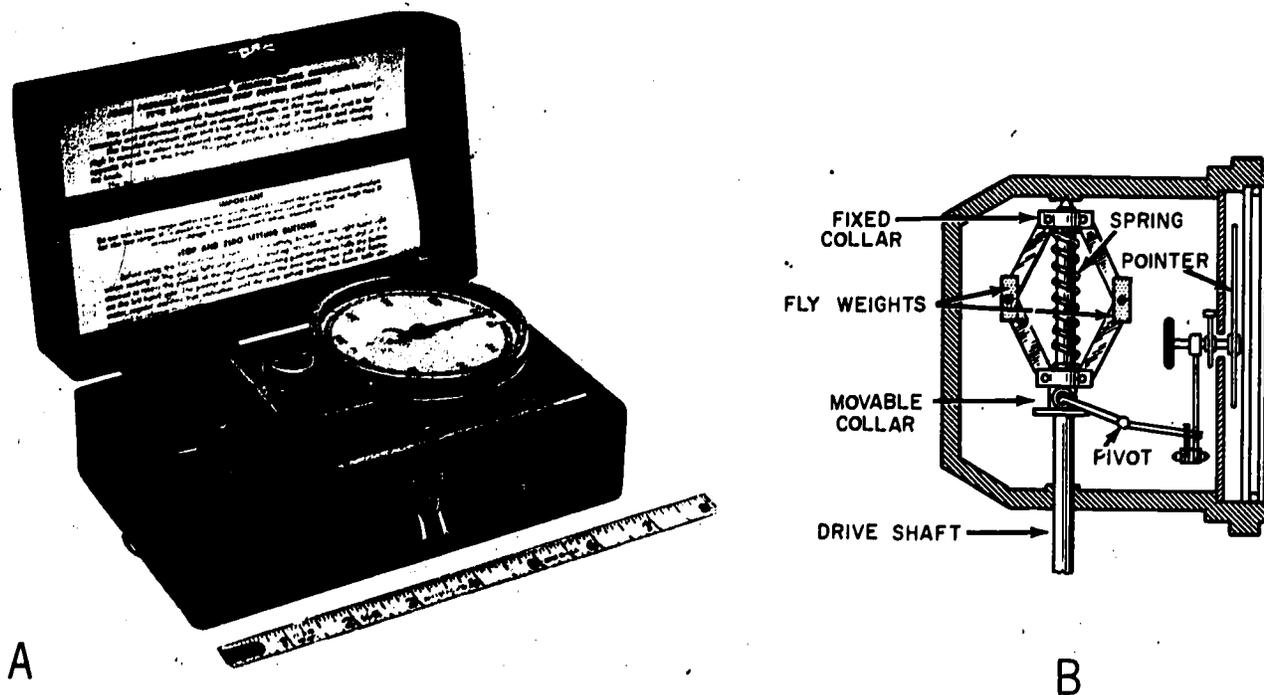


Figure 3-1.—Centrifugal tachometer.

61.17X: 2.66X

for intermittent readings only, and are not used for continuous operations.

The RESONANT REED tachometer, illustrated in figure 3-2B, is particularly useful for measuring high rotational speeds such as those that occur in turbines and generators. This type of tachometer is particularly suitable where it is practically impossible to reach the moving ends of the machinery shafts. This instrument gives continuous readings and is capable of making very rapid, instantaneous adjustments to rotational speed.

Resonance is the quality of an elastic body which causes it to vibrate vigorously when subjected to small, rhythmic impulses at a rate equal to its natural frequency, or nearly so. In a resonant reed tachometer, resonance provides a simple but accurate means for measuring speed and rate of vibration.

A resonant reed tachometer consists of a set of consecutively tuned steel reeds mounted in a case with a scale to indicate rpm of the shaft and vibrations per minute (vpm) of the reeds. This tachometer has no pointer—only a set of accurately tuned reeds—and it operates without direct contact with a moving part under test. It has no


gears or couplings, and it requires no oiling and practically no maintenance.

Since the frequency of a generator is directly related to its speed, the resonant reed instrument can be calibrated with a scale to indicate the operating frequency of a generator. When used in this way, the meter is designated a frequency meter.

STROBOSCOPIC TACHOMETER

The stroboscope is an instrument that permits rotating or reciprocating objects to be viewed intermittently and produces the optical effect of slowing down or stopping motion. For example, electric fan blades revolving at 1800 rpm will apparently be stationary if viewed under a light that flashes uniformly 1800 times per minute. At 1799 flashes per minute, the blades will appear to rotate forward at 1 rpm and, at 1810 flashes per minute, they will appear to rotate backward at 1 rpm.

Because the human eye retains images for a fraction of a second, no flicker is seen except at very low speeds. The apparent slow motion is an exact replica of the original higher speed motion,

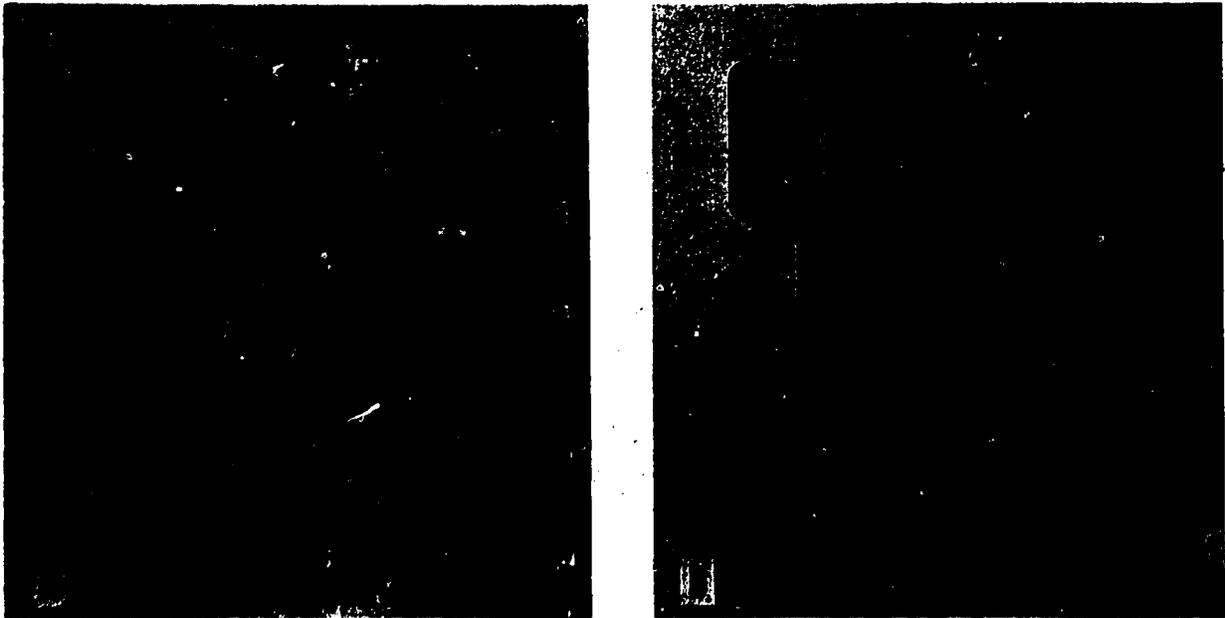

2.66X: 61.16X

Figure 3-2.—Additional tachometers. (A) portable chronometric; (B) mounted resonant reed.

so that the action of a high-speed machine can be analyzed under normal conditions.

When the flashing rate of the light is adjustable, the control can be calibrated in flashes (or revolutions) per minute. The stationary image seen when the flashing rate of the lamp and the rotational rate of a shaft are equal permits very precise speed measurements to be made.

The Strobotac is an electronic flash device, in which the flash duration is very short (on the order of a few millionths of a second), which allows very rapid motion to be arrested.

Figure 3-3 is a photograph of the Strobotac. The box contains a swivel mount with a strobotron lamp in a parabolic reflector, an electronic pulse generator to control the flashing rate, and a power supply that operates from the a-c power line. The flashing rate is controlled by the large knob (see photo), and the corresponding speed in rpm is indicated on an illuminated dial viewed through windows in the knob.

The normal speed range is from 110 to 25,000 rpm. At speeds below 600 rpm, flicker becomes pronounced because the human eye cannot retain


successive images long enough to create the illusion of continuous motion. The flicker and the low average level of illumination set 600 rpm as the lower limit of speeds used for slow-motion studies. If slow speeds are to be checked, it is necessary to use an external flash with higher intensity than the built-in flash in order to raise the average level of illumination.

Maintenance

The life of the strobotron tube is approximately 250 hours if used at flashing speeds of less than 5000 rpm, or 100 hours if used at higher speeds.

If the Strobotac is operated continuously at the higher speeds, the strobotron cathode emission may eventually be reduced to the point where the tube is inoperative. When this happens, the tube usually glows with a dull red color, but will not flash. Flickering is another symptom of low cathode emission.

It is sometimes possible to restore operation by running the tube at low speeds for several hours. Eventually, however, the tube becomes completely inoperative and must be replaced.

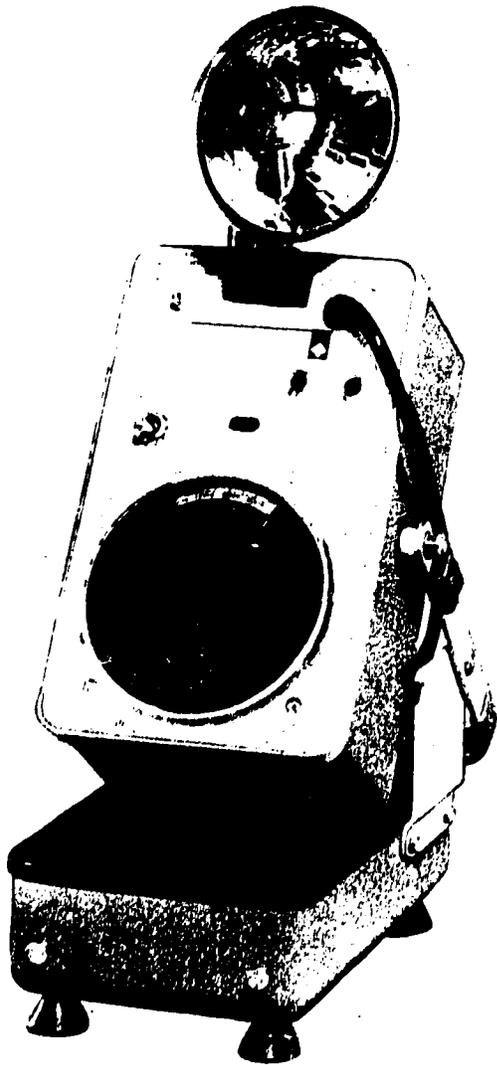

77.310

Figure 3-3.—Strobotac.

MULTIMETERS

Multimeters combine a voltmeter, ammeter, and ohmmeter in one unit and may be classified as either the electronic or nonelectronic type.

MULTIMETER AN/PSM-4 (SERIES)

Multimeter AN/PSM-4A (fig. 3-4) is a portable, nonelectronic volt-ohm-milliammeter. It can be used to measure direct current, resistance,

and voltage. The complete unit includes test probes which may be used with their prod tips, or the tips can be fitted with alligator clips or with a telephone plug to simplify contact arrangements and connections. A high voltage probe is also included, which makes it possible to read voltages up to 5000 VDC. This probe contains a warning light to indicate the presence of high voltage.

Multimeter AN/PSM-4 is designed for measuring the following:

1. Direct current up to 10 amperes.
2. Resistance up to 30 megohms.
3. D-c voltage up to 5000 volts.
4. A-c voltage up to 1000 volts (RMS).
5. Output voltage up to 500 volts (RMS).


The following discussion and the associated block diagrams treat the general circuit within the instrument part of the multimeter as it is arranged when used to measure voltage, current, or resistance. Although improvements have been made to the basic meter, for the purpose of this discussion there are no differences in the AN/PSM-4A, B, C, and D meters.

D-C Voltmeter Circuits

The block diagram of the circuit in Multimeter AN/PSM-4 which is used for measuring d-c voltages is shown in figure 3-5. The circuit is selected with function switch S101, in either its DIRECT or REVERSE DCV position. For voltages up through 500 volts, a range is selected with range switch S-102 (only one position shown in figure 3-5). For the 1000-volt range, the red test lead connects into the special 1000 VDC jack (fig. 3-4) and the range switch is not in the circuit. For the 5000-volt range the high voltage probe (not shown) connects the special 5000 VDC jack, and places its resistance in series with the meter movement. For any range, the total resistance in series with the meter movement will regulate the meter current to provide a proportional current to indicate the amount of voltage in the circuit.


A-C and Output Voltage Circuits

The circuits which measure a-c and output voltages (fig. 3-6), are selected with the ACV and OUTPUT positions of function switch S-101. For voltages up through 500 volts, a range is selected with range switch S-102. For the 1000-volt range, the red test lead connects the special

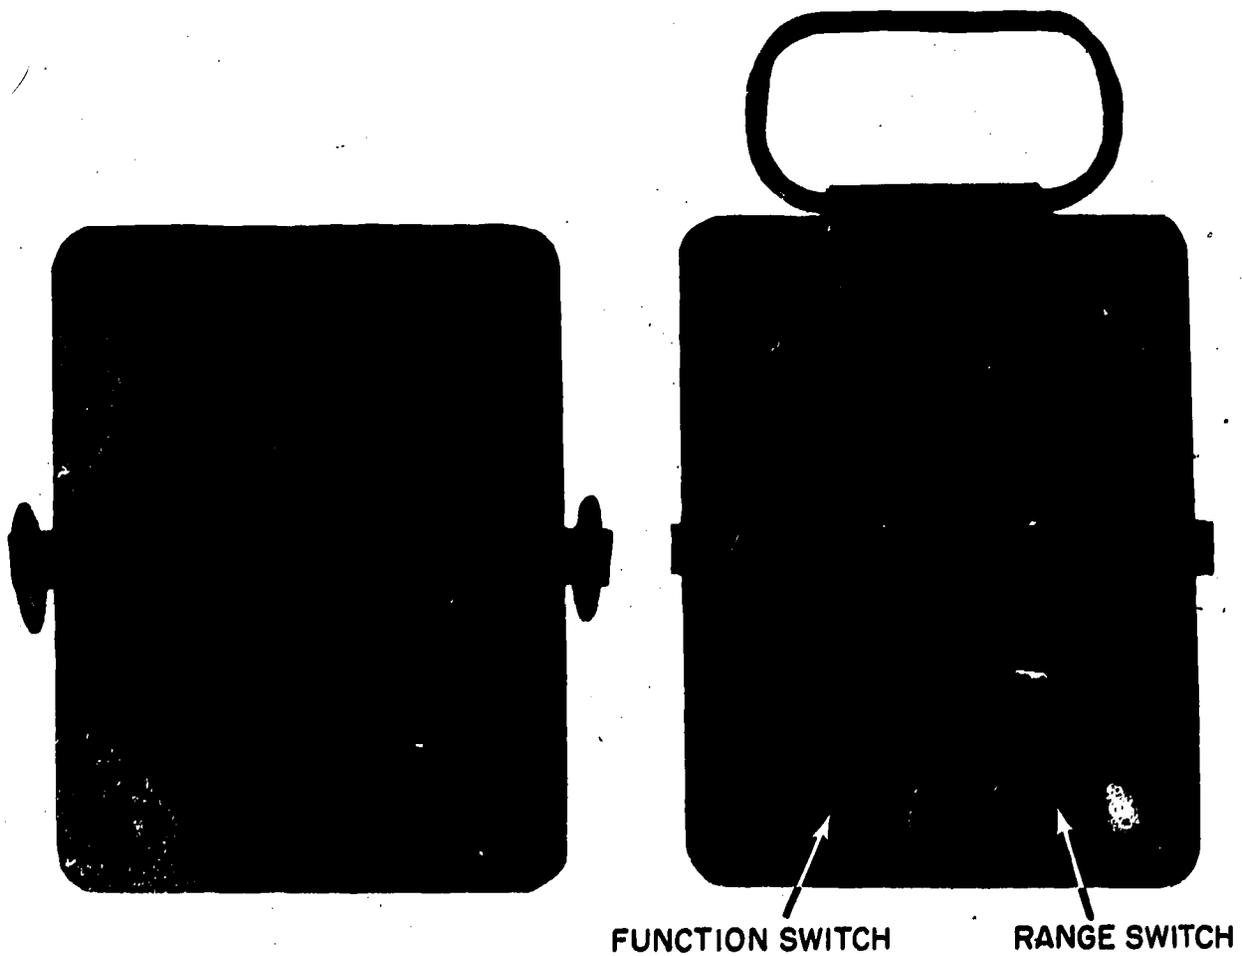


4.133

Figure 3-4.— Multimeter AN/PSM-4A.

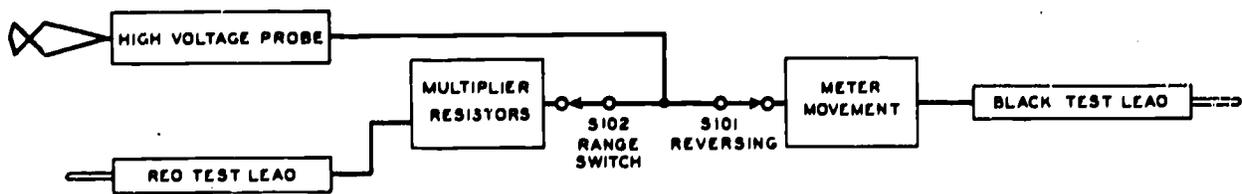

1.311

Figure 3-5.— Functional block diagram of d-c voltage circuits.

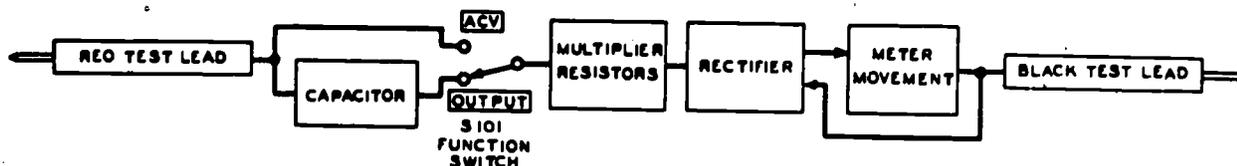

1.312

Figure 3-6.— Functional block diagram of a-c and output voltage circuits.

1000 VAC jack, and the range switch, S-102, is not in the circuit. The a-c voltage impressed across the circuit between the red and black test leads tries to send current through the resistance of the circuit in both directions, but the rectifier allows only one direction of current flow through the meter movement. The meter is calibrated to indicate the RMS value of the a-c voltage applied to the instrument circuit.

Direct Current Circuit


The circuit which measures direct current is selected with the d-c μ A MA AMPS position of function switch S-101 (fig. 3-4). For currents up to 1000 milliamperes, the range is selected with range switch S-102 (fig. 3-7). For the 10 ampere range, the red test lead connects the special 10 AMPS jack, and range switch S-102 is not in the circuit. Each range provides a parallel shunt resistance for the meter movement, and the circuit current divides between these two parallel paths. The proportional part which passes through the meter movement indicates the total circuit current.

Ohmmeter Circuit

The ohmmeter circuit (fig. 3-8) and its ranges are selected with function switch S-101. The ranges are Rx1, Rx10, Rx100, Rx1000, and Rx10000. An internal battery furnishes the power for all resistance measurements. For each range, the circuit is arranged so the meter will indicate zero ohms, and full scale deflection when the red test lead and the black test lead are shorted together. When you connect a resistance between the test leads, this resistance will be in series with the instrument circuit, and less current will flow through the meter movement. The amount of reduced meter deflection indicates how much resistance is between the test leads.


Function Switch S-101

Function switch S-101, (fig. 3-4) located in the lower left-hand corner of the front panel, selects the type of circuit for which the instrument is connected. There are two positions for d-c volts: DIRECT and REVERSE. The normal position is DIRECT. When using the meter to make a d-c

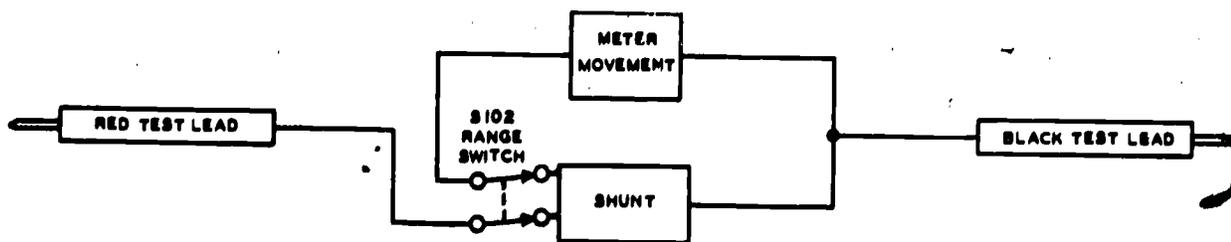

1.313

Figure 3-7.— Functional block diagram of d-c circuits.

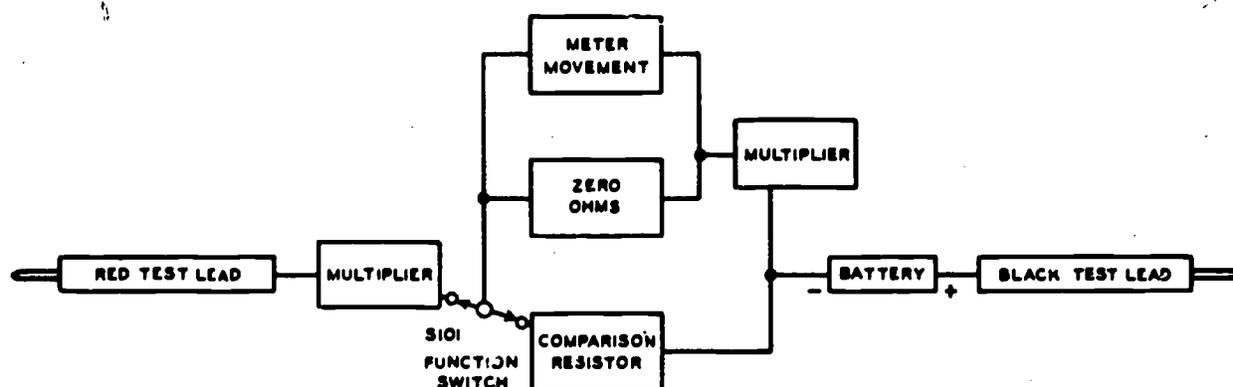

1.314

Figure 3-8.— Functional block diagram of ohmmeter circuits.

voltage measurement and a connection is made which causes the meter to read backwards (deflection of the pointer to the left), set switch S-101 to REVERSE and the pointer will be deflected up-scale. To read alternating current voltages, set switch S-101 to the ACV position. A rectifier within the instrument rectifies the a-c voltage to an equivalent d-c value, and the meter indicates the RMS value of the applied voltage. To read the a-c portion of mixed a-c and d-c voltages, set switch S-101 at OUTPUT. Set switch S-101 at D-C μ A MA AMPS to read direct current. As mentioned previously, switch S-101 also serves as a range switch resistance measurements.

Range Switch S-102

This eight-position range switch located in the lower right corner of the front panel permits the selection of voltage and current ranges. The full scale value for each range switch position is marked on the front panel.

Zero Ohms Control

The ZERO OHMS control is located near the center of the front panel. Each time the function switch S-101 is placed in a position to read resistance, short the test leads together and rotate the ZERO OHMS control knob to make the pointer read full scale, or zero ohms. If you cannot bring

the pointer to full scale, replace the battery in the rear of the case.

Test Leads and Test Jacks

There are two test leads, W-101 and W-102, (fig. 3-9) which are needed for all measurements except those which require the 5000 VDC range. Test lead W-101 is red and test lead W-102 is black. Unless otherwise specified, connect black test lead W-102 in the COMMON jack, J106, and connect the red test lead W-101 in the + V MA OHMS jack, J101. For the 1000 VDC range, place red test lead W-101 in the 1000 VDC jack, J-103. For the 1000 VAC range, place red test lead W-101 in the 1000 VAC jack, J104. Use the red test lead to contact the positive side of the source for d-c measurements and the black test lead to contact the negative side. For the 5000 VDC range, use black test lead W-102 in the COMMON jack, J-103, and use the high voltage test lead, W-103, screwed on over recessed post J-102, +5000 VDC MULTIFUNCTION. For the 10 ampere range, place red test lead, W101, in the special 10 AMPS jack, J105.

Accessories E-101, E-102, and E-103

There are two alligator clips, E-101 and E-102 which the operator may use to screw on over the end of test leads W-101 and W-102. This is for the convenience of the operator. There is a telephone plug, E-103, which may be used to connect both the test leads, W-101 and W-102, to contacts

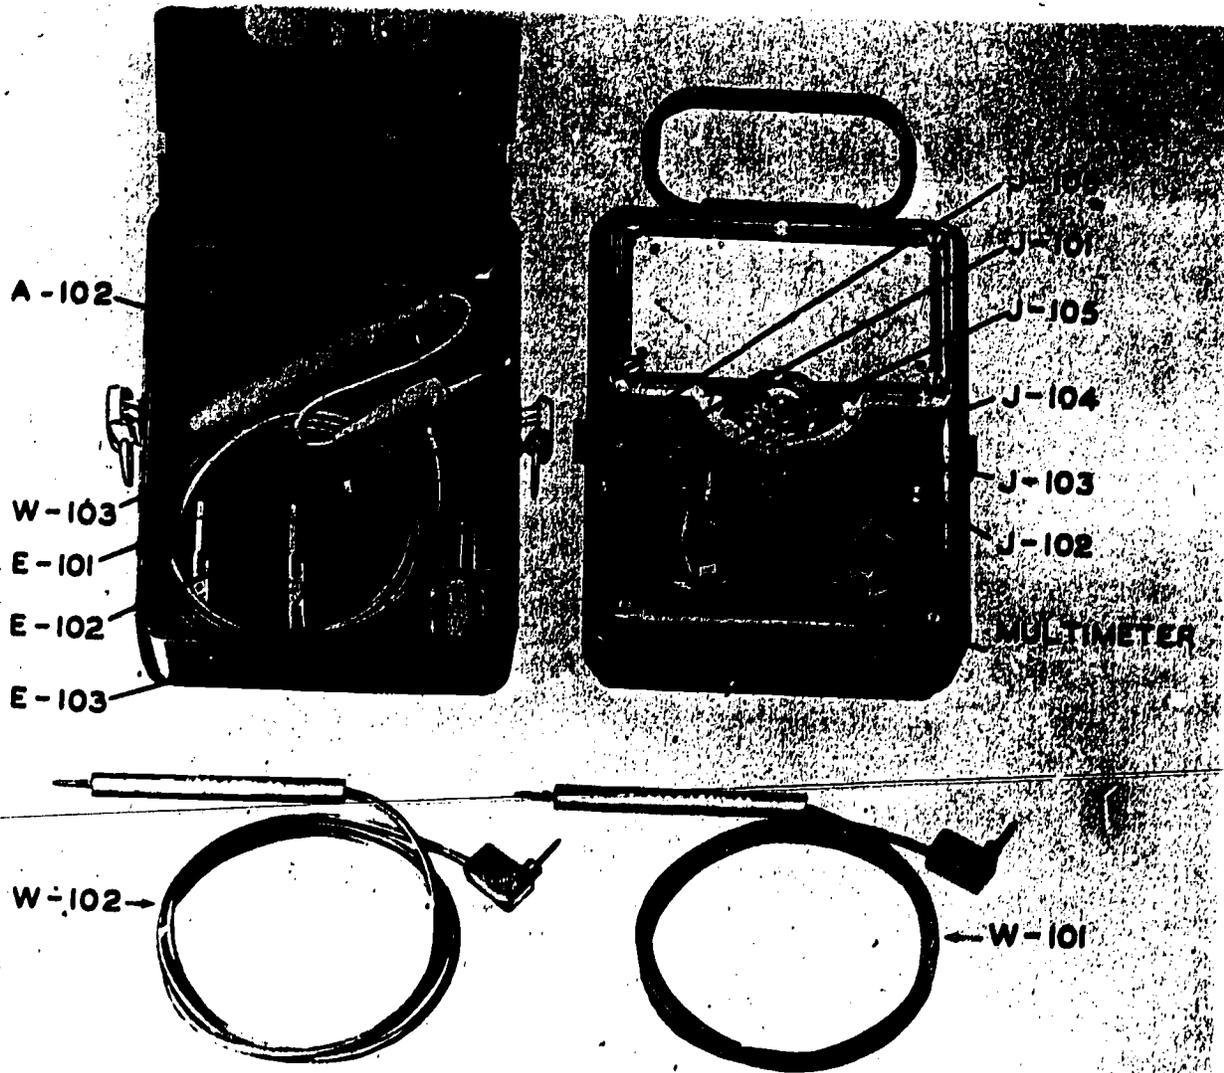


Figure 3-9.—Control, jacks, leads, and accessories.

4.133 (ME-48A/U)

within a two-contact telephone jack. This permits easier connection to the jack contacts for any electrical measurement because the operator can make the measurement directly through an equipment panel without opening the case of the equipment. The red test lead W-101, connected in the red insulated jack (not shown) on the rear of telephone plug E-103, contacts the tip of the plug. The black test lead, W-102, connected in the black insulated jack (not shown) on the rear of the telephone plug, E-103, contacts the sleeve of the plug.

MULTIMETER AN/USM-116

At times accuracy is a major consideration in the art of troubleshooting. When working with the control circuits or voltage regulator circuits, you must often adjust to tolerances of a few millivolts or perhaps a milliampere. To help you make the adjustments, the Navy has developed a series of electronic multimeters. One of these, the AN/USM-116, is a portable instrument that can

accurately measure voltage, current, and resistance. It does so through a relatively high input impedance, thereby not having to load the test circuit. This meter (fig. 3-10) requires a 115-volt a-c power source, and along with its 8-foot power cord contains 4 permanently connected test leads.

The AN/USM-116 is designed to measure the following:

1. A-c voltage—0.01 to 300 volts RMS
2. D-c voltage—0.02 to 1000 volts
3. Direct current—20 microamps to 1000 milliamps
4. Resistance—0.2 ohms to 1000 megohms

Two unshielded leads are employed in the measurement of both resistance and current. A third, red in color, is used in conjunction with the common of the former two in the measurement of d-c voltage. This probe contains a 36-megohm resistor to eliminate the capacitance caused by interaction with its shield. The fourth lead, used for a-c voltage, is recognizable by the permanent attachment of an RF type probe for use on high-frequency circuits. When measuring high frequency, a ground attachment is employed and connects directly to the a-c probe.

The AN/USM-116 has four operating controls. The Function Switch is used to select the desired parameter to be measured, that is current, resistance, a-c voltage, or d-c voltage. It is also

used as an on-off switch with a 15-minute warmup time being recommended for greater meter accuracy. The Range Switch is for selection of the scale that the operator uses in reading the meter. The Zero Adjust control permits the accurate setting of all scales through the use of two single-mounted potentiometers. The Ohms Adjust control is used to calibrate the meter before resistance is measured.

The meter face contains a zero adjustment screw by which the meter can be mechanically preset to true zero. This screw is located directly below the face glass, and should be adjusted prior to warmup. If necessary to re-adjust, do so with all probes disconnected and the function switch in the mills position.

It is sometimes necessary to isolate both test leads of test equipment from ground when measurements of voltages not referenced to ground are required. (Such measurements are frequently required in SINS and degaussing systems). There are two common methods to achieve the desired isolation. One method is by the use of a removable ground strap, but only for instruments provided with this feature. An alternative method is by the use of an isolation transformer between the test instrument's test terminals and the voltage source to be measured.

The chassis of some electronic test instruments are connected to the instruments metallic case via a removable ground strap, and the case

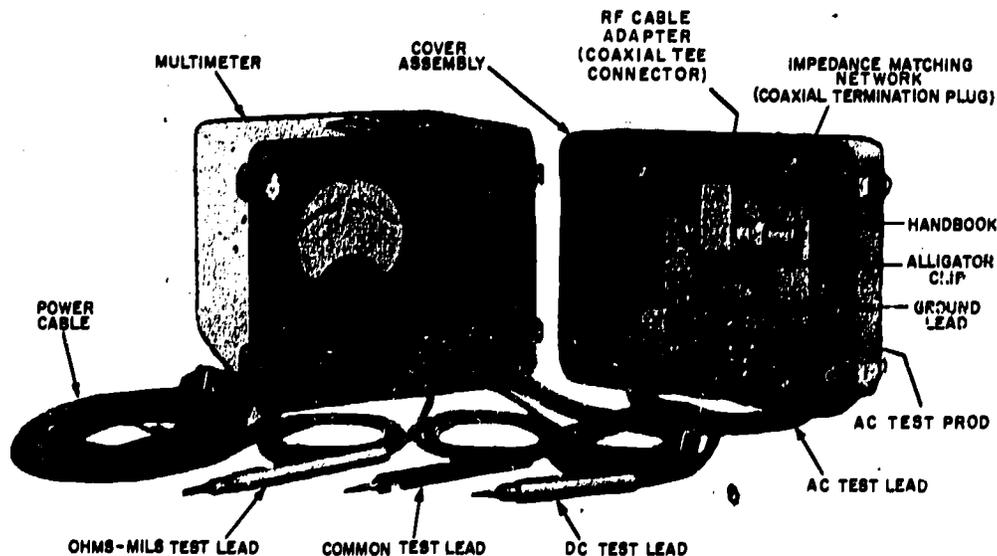


Figure 3-10.—Multimeter AN/USM 116.

4.13A

is then grounded to the ship's hull through the portable power line cable. Removal of the ground strap will then isolate both the chassis and the test lead terminals from ground, but will not remove the required safety ground connected to the instrument's case. This will permit the instrument to be used for measuring "floating" or "above-ground" voltages without jeopardizing personnel safety.

In instruments where the chassis and metallic case are solidly connected, it will be necessary to use an isolation transformer in the test leads to isolate the instrument's grounded test lead from the source being measured. Isolation transformers are presently included in COSAL (Part IIB, Group II, Section A) under SCAT Code 4642 for this purpose.

Never cheat the instrument's safety ground connection to obtain ground isolation for your test leads. This practice is not only unauthorized, but deadly as well.

FREQUENCY MEASUREMENTS

Frequency measurements are often an essential part of preventive and corrective maintenance for electronic equipment. Rotation frequencies of some mechanical devices must be determined. The output frequency of electric power generators is checked when the engine is started and during preventive maintenance routines.

The rotation frequency of rotating machinery such as radar antennas, servomotors, and other types of electric motors can be measured by the use of a stroboscope. Stroboscopic methods compare the rate of one mechanical rotation or vibration with another or with the frequency of a fluctuating source of illumination. Tachometers can be used to measure the rotation frequency of armatures in electric motors, dynamotors, and engine-driven generators.

The electrical output frequency of a-c power generators can be measured directly by vibrating reed, tuned circuit, or crossed-coil iron-vane type meters. The vibrating reed device is the simplest type of frequency meter, and has the advantage of being rugged enough to be mounted on generator control panels. It is also used to check the line voltage in the shop to insure that the proper frequency is supplied to the equipment and/or test sets.

WHEATSTONE BRIDGE

A type of circuit that is widely used for precision measurements of resistance is the Wheatstone bridge. The circuit diagram of a Wheatstone

bridge is shown in figure 3-11 (A). R_1 , R_2 , and R_3 are precision variable resistors, and R_X is the resistor whose unknown value of resistance is to be determined. After the bridge has been properly balanced, the unknown resistance may be determined by means of a simple formula. The galvanometer, G , is inserted across terminals b and d to indicate the condition of balance. When the bridge is properly balanced there is no difference in potential across terminals bd , and the galvanometer deflection, when the switch is closed, will be zero.

The operation of the bridge is explained in a few logical steps. When the switch to the battery is closed, electrons flow from the negative terminal of the battery to point a . Here the current divides, as it would in any parallel circuit, a part of it passing through R_1 and R_2 and the remainder passing through R_3 and R_X . The two currents, labeled I_1 and I_2 , unite at point c and return to the positive terminal of the battery. The value of I_1 depends on the sum of resistances R_1 and R_2 , and the value of I_2 depends on the sum of resistances R_3 and R_X . In each case, according to Ohm's law, the current is inversely proportional to the resistance.

R_1 , R_2 , and R_3 are adjusted so that when the galvanometer switch is closed there will be no deflection of the needle. When the galvanometer shows no deflection there is no difference of potential between points b and d . This means that the voltage drop (E_1) across R_1 , between points a and b , is the same as the voltage drop (E_2) across R_2 , between points a and d . By similar reasoning, the voltage drops across R_3 and R_X —that is, E_3 and E_X —are also equal. Expressed algebraically,

$$E_1 = E_2$$

or

$$I_1 R_1 = I_2 R_2$$

and

$$E_3 = E_X$$

or

$$I_1 R_3 = I_2 R_X$$

Dividing the voltage drops across R_1 and R_3 by the respective voltage drops across R_2 and R_X


$$\frac{I_1 R_1}{I_1 R_3} = \frac{I_2 R_2}{I_2 R_X}$$

Simplifying,

$$\frac{R_1}{R_3} = \frac{R_2}{R_X}$$


Therefore,

$$R_X = \frac{R_2 R_3}{R_1}$$

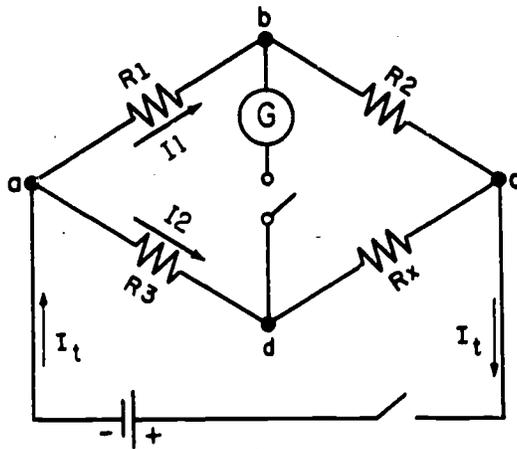

(A)

SCHEMATIC WHEATSTONE-BRIDGE CIRCUIT

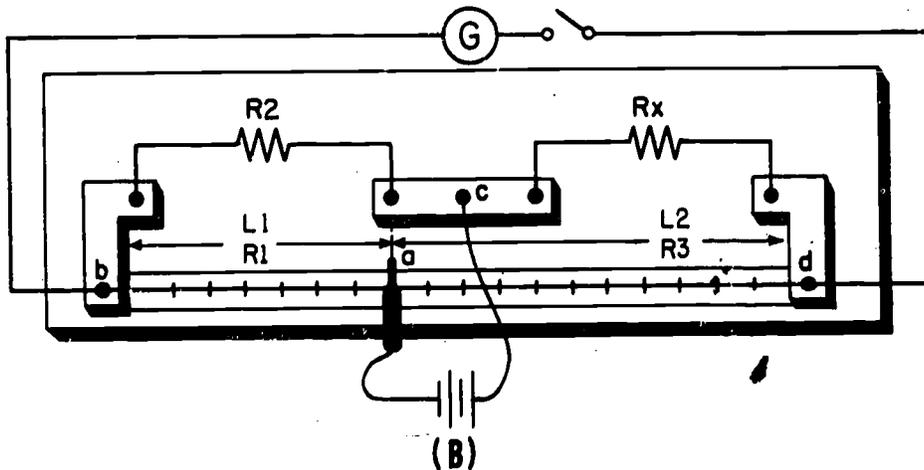

(B)

SLIDE-WIRE BRIDGE

BE.121

Figure 3-11.—Wheatstone bridge circuit.

The resistance values of R_1 , R_2 , and R_3 are readily determined from the markings on the standard resistors, or from the calibrated dials if a dial-type bridge is used.

The Wheatstone bridge may be of the slide-wire type, as shown in figure 3-11 (B). In the slide-wire circuit, the slide-wire (b to d), corresponds to R_1 and R_3 of figure 3-11 (A). The wire may be an alloy of uniform cross section; for example German silver or nichrome, having a

resistance of about 100 ohms. Point a is established where the slider contacts the wire. The bridge is balanced by moving the slider along the wire.

The equation for solving for R_x in the slide-wire bridge of figure 3-11 (B), is similar to the one used for solving for R_x in figure 3-11 (A). However, in the slide-wire bridge the length L_1 corresponds to the resistance R_1 , and the length L_2 corresponds to the resistance R_3 . Therefore,

L_1 and L_2 may be substituted for R_1 and R_2 in the equation. The resistance of L_1 and L_2 varies uniformly with slider movement because in a wire of uniform cross section the resistance varies directly with the length; therefore the ratio of the resistances equals to the corresponding ratio of the lengths. Substituting L_1 and L_2 for R_1 and R_2

$$R_x = \frac{L_2 R_2}{L_1}$$

A meter stick is mounted underneath the slide-wire and L_1 and L_2 are easily read in centimeters. For example, if a balance is obtained when $R_2 = 150$ ohms, $L_1 = 25$ cm. and $L_2 = 75$ cm., the unknown resistance is

$$R_x = \frac{75}{25} \times 150 = 450 \text{ ohms}$$

CATHODE-RAY OSCILLOSCOPE

The most versatile piece of test equipment that a technician has at his disposal is the Cathode-Ray Oscilloscope (CRO). This device gives a visual presentation of any voltage waveform present in a circuit.

The oscilloscope permits many characteristics of a circuit to be observed and measured. Some of these are: (1) frequency of operation; (2) duration (or time) of occurrence of one or more cycles; (3) phase relationships between voltage waveforms appearing at different points in the circuit; (4) shape of the waveform; and (5) amplitude of the waveform.

The oscilloscope is used for frequency comparison, percentage of modulation checks, and many other applications.

BASIC OSCILLOSCOPE

The principal components of a basic oscilloscope include a cathode-ray tube (CRT); a sweep generator; deflection amplifiers (horizontal and vertical); a power supply; and suitable controls, switches, and input connectors for proper operation. Figure 3-12 shows the block diagram of a basic oscilloscope.

The horizontal and vertical deflection amplifiers increase amplitude of the input voltage to the level necessary for deflection of the beam. The sweep generator supplies a sawtooth voltage to the input of the horizontal amplifier. The power supply provides d-c voltages for operation of the amplifiers and CRT.

The cathode-ray tube is the heart of the oscilloscope. The CRT contains an electron gun, a deflection system, and a screen inside an evacuated glass envelope. The electron gun is an arrangement of tube elements to introduce electrons into the envelope, accelerate them, and focus them into a narrow beam. The deflection system controls position of the narrow beam of electrons arriving at the screen. The screen is a chemical phosphor that converts the energy of electrons into light. Figure 3-13 shows construction of a cathode-ray tube.

Deflection

The deflection system, electrostatic in this type of cathode-ray tube, consists of two pairs


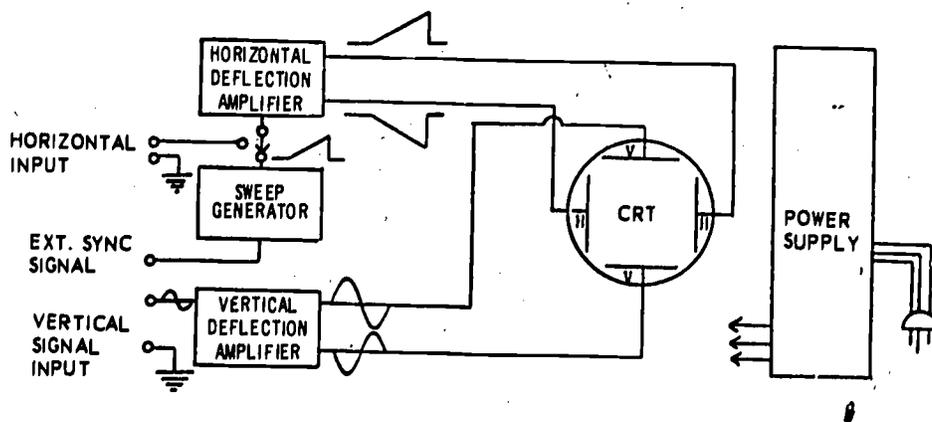


Figure 3-12.—Block diagram of basic oscilloscope.

20.324

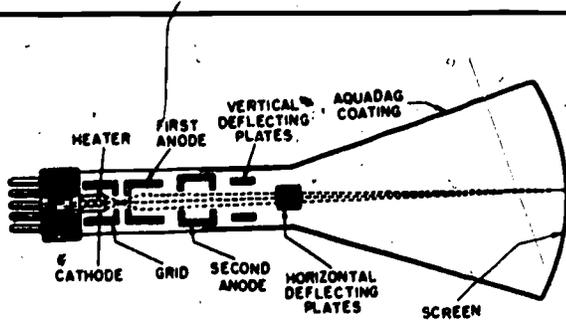

20.320

Figure 3-13.— Construction of a cathode ray tube.

of metal plates, mounted at right angles to each other, and placed inside the neck of the CRT. Figure 3-13 shows the location of the plates. When a difference of potential is applied to the plates, an electrostatic field is developed between the plates. This field acts upon the beam of energy and controls the point at which it will arrive at the screen. Figure 3-14 shows a simplified arrangement of the front screen and deflection plates for explanatory purposes.

In figure 3-14A, all plates are at the same potential and no field exists to act upon the beam, so the beam arrives at the center of the screen.

In figure 3-14B, a positive potential is applied to the top plate, resulting in beam movement towards the top of screen. The greater the amplitude of positive potential, the farther the beam moves away from the center toward the positive potential.

In figure 3-14C, a positive potential is applied to the bottom plate and the beam moves towards the bottom of the screen. In figure 3-14D, the potential is applied to the right horizontal deflection plate, and the beam moves correspondingly. In figure 3-14E, the potential is applied to the left horizontal deflection plate and the beam moves left. In figure 3-14F, a positive potential is applied to the left horizontal deflection plate and the top vertical deflection plate causing beam movement to the upper left. By controlling the amplitude of voltage on one plate with respect to the others, the beam can be positioned.

In a practical oscilloscope deflection amplifiers replace batteries. In many circuits, the voltage waveform to be examined does not have sufficient amplitude to cause beam movement across the screen. Deflection amplifiers increase the voltage waveform amplitude, without changing its shape, to a level necessary for deflection.

In figure 3-15, with a sine wave applied to the vertical signal input terminal, the vertical deflection amplifiers amplify this signal and deliver


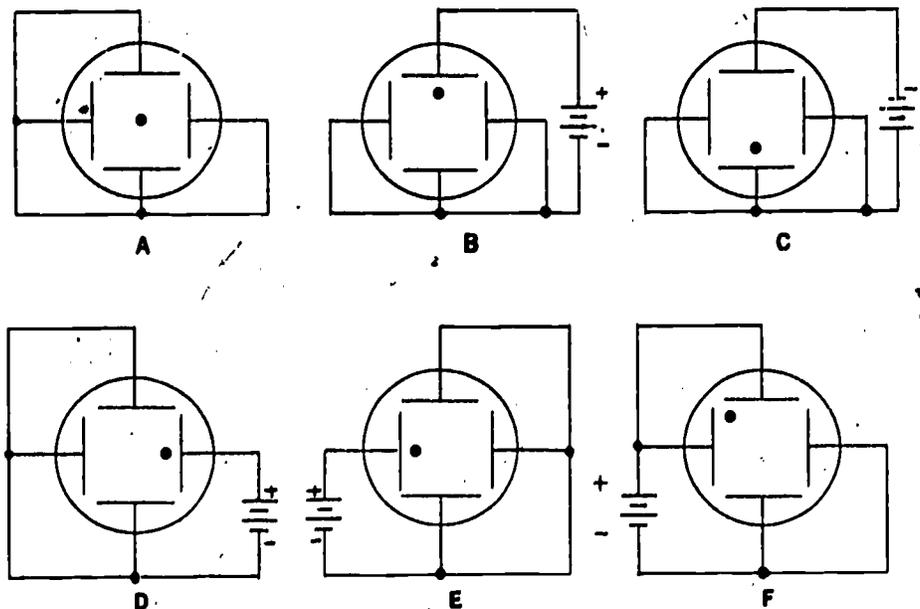


Figure 3-14.— Simplified CRT beam deflection.

179.19

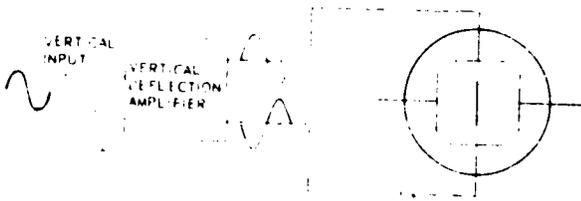

179.20

Figure 3-15.— Vertical deflection.

two sine waves of opposite polarities to the vertical deflection plates. (How two sine waves were developed will be explained later.) This will result in beam movement up and down at a rate determined by the sine wave frequency. Usually, this beam movement is so rapid that the eye cannot follow it, and instead the eye sees just a bright vertical line.

Since the beam has negligible mass, it responds to peak-to-peak excursions of the sine wave. By marking a faceplate in inches or centimeters, the oscilloscope can be calibrated with a known voltage before applying the sine wave, and then with the sine wave applied, its amplitude can be calculated.

Figure 3-16 shows a CRT with a vertical line drawn 8 centimeters long with 1 centimeter graduations. Assuming a 1 volt peak-to-peak signal moved the beam 1 cm, the amplitude of the vertical trace shown would be 3 volts peak-to-peak.

Since a voltage waveform is a graphical presentation of a voltage varying with respect to time, it is desirable that the oscilloscope gives this type of presentation. To accomplish this, a voltage is applied to the horizontal deflection plates and varied in such a manner as to move the beam at a linear rate from left to right, and then return the beam back to the left side as rapidly as possible. A sawtooth waveform is used for this purpose, and it is developed in the sweep generator section of the oscilloscope. Figure 3-17 shows a sawtooth waveform. The horizontal axis represents time, in seconds, while the vertical axis represents amplitude in volts. The values assigned were arbitrarily chosen to demonstrate a linear rate of change.

At the end of 1 second, the amplitude has risen to 10 volts. In this example, for a linear rate of change to occur, the amplitude of the sawtooth


should increase 10 volts for each 1 second increase in time. Thus, at the end of 2 seconds, the amplitude should be 20 volts, and at the end of 3 seconds, the amplitude should be 30 volts.

Figure 3-18 shows the results of applying a sawtooth waveform to the horizontal deflection plates. At the start of the sweep, the beam is at the left side of the screen. As sawtooth amplitude increases, the beam moves to the right until the sawtooth reaches its maximum amplitude. At this time, the sweep is ended, sawtooth amplitude drops down rapidly, pulling the beam back to the left. This action continues to repeat at a frequency determined by the sweep generator. This sweep, or base line, is referred to as the "time base."

During the brief period that the sawtooth is pulling the beam back to the left side of the screen, called the retrace or flyback time, no useful information is displayed. Therefore, the oscilloscope contains a circuit (the blanking circuit) that turns the beam off during flyback time so that this portion of the cycle is not seen.


Figure 3-19 shows results of applying a sawtooth to the horizontal deflection plates and a sine wave to the vertical deflection plates. As the sawtooth moves the beam from left to right, the sine wave simultaneously acts upon the beam to pull it up and down. The combined result of these two actions is the visual reproduction of the sine wave, with the vertical axis representing the amplitude of the sine wave, and the horizontal axis representing the duration, or time, of the sine wave.

Notice the necessity of applying a sawtooth waveform to the horizontal deflection plates. If any other waveform were used, such as a sine

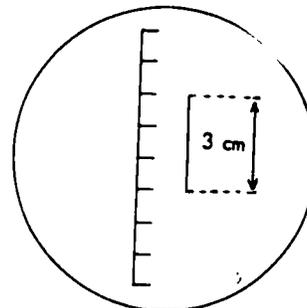

179.21

Figure 3-16.— Calculating voltage amplitude with calibrated faceplate.

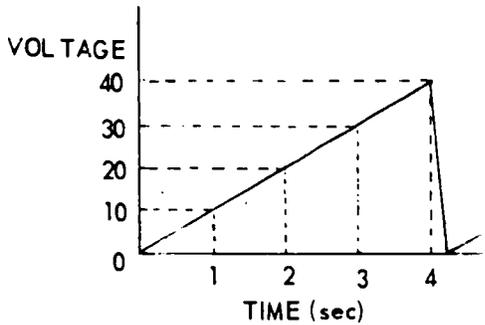

179.22


Figure 3-17.—Sawtooth waveform.

wave, the beam would not move at a constant or linear rate from left to right, and the waveform applied to the vertical deflection plates would not be faithfully reproduced.

There is a definite relationship between the frequency of the signal applied to the vertical deflection plates and the frequency of the sawtooth. Figure 3-20 illustrates this relationship. Figure 3-20A shows the sine wave and the sawtooth operating at the same frequency. Recall that during retrace the beam is cut off (blanked), therefore a full cycle of the sine wave cannot be observed. Figure 3-20B shows the results when the sine wave is twice the frequency of the sawtooth. Now one full cycle can be observed. In operating the oscilloscope, it is usually best to set the operating controls so that a minimum of two cycles of the input waveform may be viewed. This is done by setting the sweep generator (time-base) frequency to a lower frequency than the vertical input signal.

Just as the vertical axis can be calibrated to measure amplitude, the horizontal axis can be calibrated to measure time. In figure 3-21, the horizontal axis is graduated in centimeters. By knowing the frequency of the sweep generator, the time of one cycle of the input waveform can be calculated. Suppose the frequency of the sweep generator is 1 Hz, and the horizontal scale is 10 cm wide with 1-cm graduations. The time required for one sawtooth to move the beam from left to right (10 cm) is:

$$t = \frac{1}{f} \text{ second.}$$

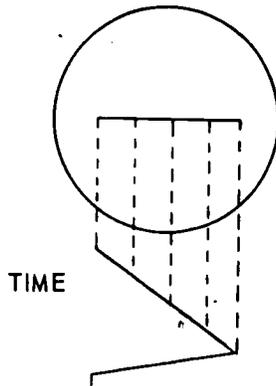

179.23


Figure 3-18.—Horizontal deflection.

Each centimeter then, in time, is $1/10 = 0.1$ second. Since one cycle of the input sine wave shown in figure 3-31 occupies 5 cm, the time is: $5 \times 0.1 = 0.5$ seconds; and the frequency is: $f = 1/t = 1/0.5 = 2$ Hz.

Rather than mark the faceplate with graduations, oscilloscope manufacturers provide separate plates of glass or plastic that are accurately marked and mounted on the oscilloscope in front of the CRT. These plates are called graticules.

Controls

Figure 3-22 is a drawing of the front panel of a general purpose oscilloscope. Oscilloscopes

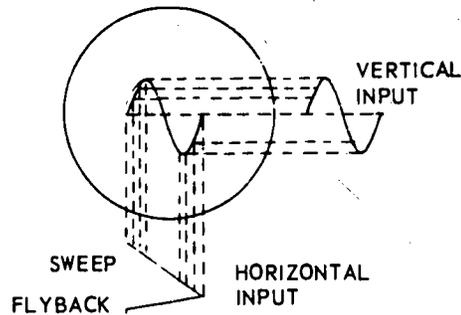

179.24

Figure 3-19.—Sinewave reproduction.

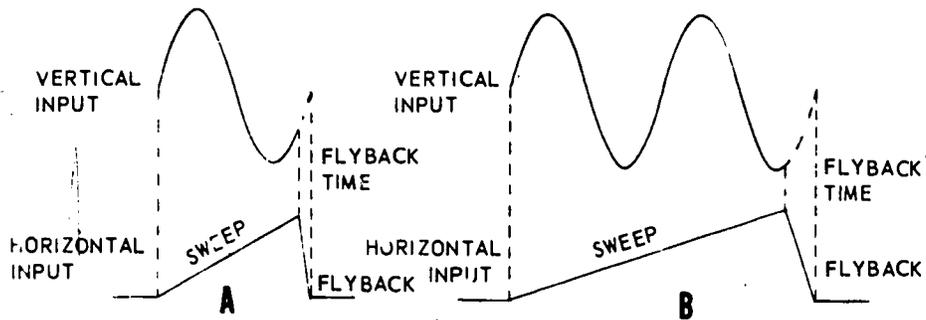


Figure 3-20. — Relationship between horizontal and vertical signal frequencies.

179.25

vary greatly in the number of controls and connectors. Usually, the more controls and connectors, the more versatile is the instrument. Regardless of the number, all oscilloscopes have similar controls and connectors, and once the operation of these are learned, the technician can move with ease from one model oscilloscope to another. Occasionally identical controls will be differently labeled from one model to another, but most controls are logically grouped, and the names are indicative of their functions.

The POWER switch may be a toggle, slide, or rotary switch, and it may be mounted separately or on a shaft that is common to another control,


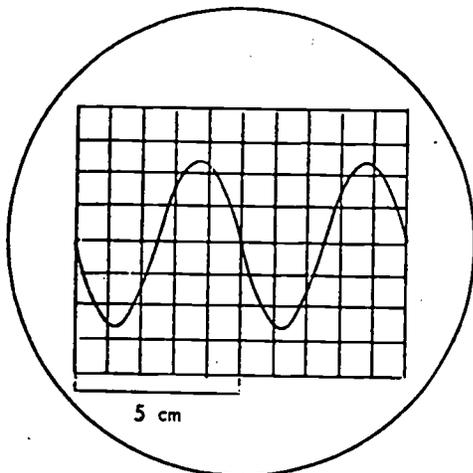


Figure 3-21. — Calculating frequency with graticule.

179.26

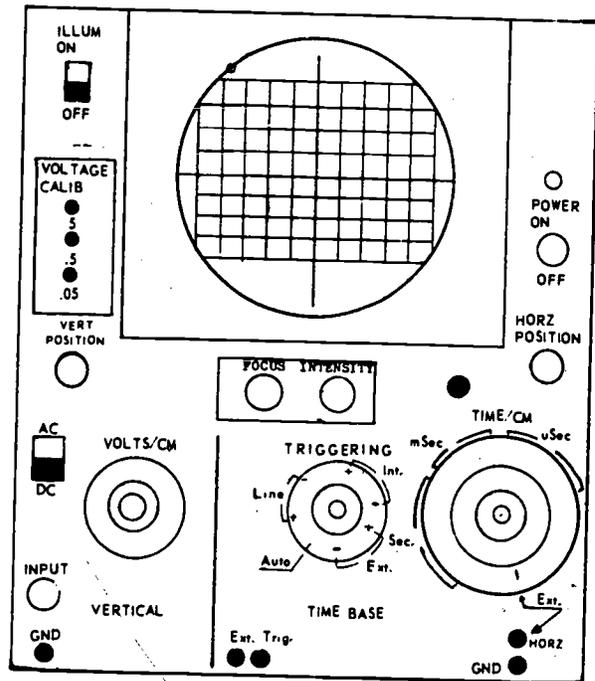

1.86

Figure 3-22. — Typical basic oscilloscope.

such as the intensity control. Its function is to apply the line voltage to the power supply.

The INTENSITY (sometimes called brightness or brilliance) control adjusts the brightness of the beam on the CRT, and is a rotary control. The control is turned clockwise to increase the

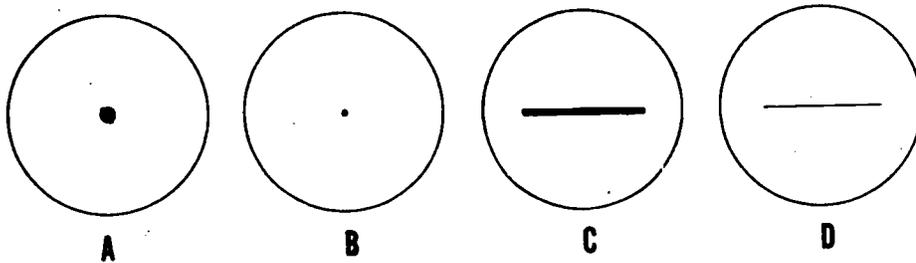


Figure 3-23.— Focus extremes.

179.27

intensity of the beam and should be adjusted to a minimum brightness level for comfortable viewing.

The FOCUS control is a rotary control that adjusts the spot (beam) size. Figure 3-23 shows the in-focus and out-of-focus extremes. In figure 3-23A, no deflection is applied and the beam is centered, but out of focus. The focus control is adjusted to give a small, clearly defined, circular dot, as shown in figure 3-23B. In figure 3-23C, horizontal deflection is applied with the focus control misadjusted. The focus control is adjusted to give a thin, sharp line as in figure 3-23D.

The HORIZONTAL POSITION and VERTICAL POSITION controls are rotary controls used to position the trace. Since the graticule is often drawn to represent a graph, some oscilloscopes have the positioning controls labeled to correspond to the "X" and "Y" axis of the graph. The "X" axis represents the horizontal movement while the "Y" axis represents the vertical movement. Figure 3-24 shows the effects of the positioning controls on the trace.

In figure 3-24A, the horizontal control has been adjusted to move the trace too far to the right while in figure 3-24B the trace has been moved too far to the left. In figure 3-24C, the

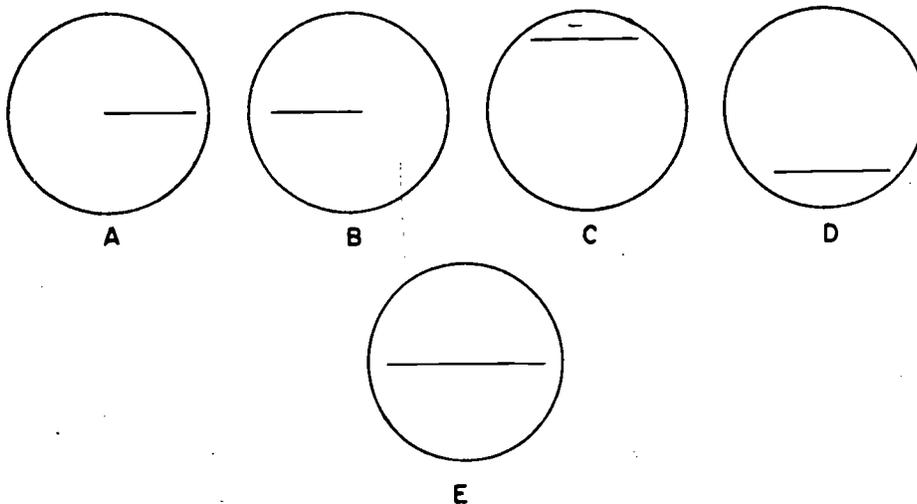


Figure 3-24.— Trace positioning.

179.28

vertical positioning control has been adjusted to move the trace too close to the top while in figure 3-24D, the trace has been moved too close to the bottom. Figure 3-24E shows the trace properly positioned.

The vertical INPUT (or "Y" INPUT or SIGNAL INPUT) jack connects the desired signal to be examined to the vertical deflection amplifiers. On some oscilloscopes, there may be two input jacks, one labeled AC and the other labeled DC. Other models may have a single input jack with an associated switch to select the AC or DC connection. In the DC position, the signal is connected directly to the vertical deflection amplifiers while in the AC position the signal is fed through a capacitor first. Figure 3-25 shows the schematic of one arrangement.


The deflection amplifiers increase the amplitude of the input signal level required for the deflection of the CRT beam. These amplifiers must not have any other effect on the signal, such as changing the shape (called distortion). Figure 3-26 shows the results of distortion occurring in a deflection amplifier.

An amplifier can handle only a limited range of input amplitudes before it begins to distort the signal. To prevent this, oscilloscopes incorporate circuitry to permit adjustment of the input signal amplitude to a level that will prevent distortion from occurring. This adjustment is the ATTENUATOR control. This control extends the usefulness of the oscilloscope by enabling it to handle a wide range of signal amplitudes.

The attenuator usually consists of two controls. One is a multi-position switch and the other is a potentiometer (fig. 3-27). Each position of the switch may be marked; (1) as to the amount of voltage required to deflect the beam a unit distance, such as volts/cm, or (2) as to the amount of attenuation given to the signal, such as 100, 10, or 1.

In the first case, suppose the .05 volt/cm position were selected. In this position, the beam will be deflected vertically 1 centimeter for every .05 volts of applied signal. If a sine wave occupied 4 cm peak-to-peak, its amplitude would be $4 \times .05 = .2$ volts pk/pk (refer to fig. 3-28).

The attenuator switch provides a means of adjusting the input signal level to the amplifiers by steps. These steps are in a definite sequence, such as 1-2-5 as shown in figure 3-27. Another sequence used is 1-10-100. The potentiometer control provides a means of fine, or variable, control between steps. This control may be mounted separately or it may be mounted on the attenuator switch. When the control is mounted

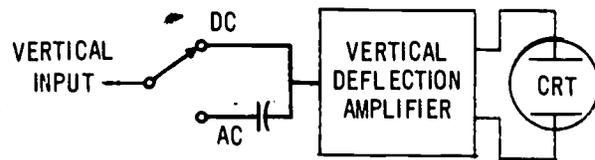


179.29

Figure 3-25.—Vertical input arrangement.

separately, it is often marked as "Fine Gain" or simply "Gain." When mounted on the attenuator switch, it is usually marked "Variable," with the panel markings and knob of a different color for ease of identification.


The variable control adds attenuation to the switch step that is selected. When the control

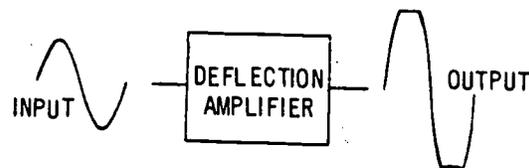

179.30


Figure 3-26.—Deflection amplifier distortion.

is turned fully counterclockwise, it is at the minimum gain, maximum attenuation setting. Since it is difficult to accurately calibrate a potentiometer, the variable control is either left unmarked, or the front panel is arbitrarily marked off in some convenient units (e.g., 1-10, 1-100). The attenuator switch, however, can be

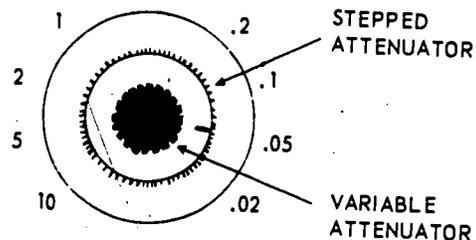

179.31

Figure 3-27.—Attenuator control.

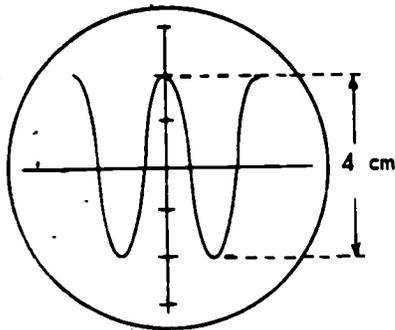


179.32

Figure 3-28.—Sinewave attenuation.

accurately calibrated to the front panel designations. To do this, the variable control is turned fully clockwise to cut it out of the attenuator circuit, and this position is usually marked CAL (calibrate) on the panel.

As mentioned previously, the sweep generator develops the sawtooth waveform that is applied to the horizontal deflection plates of the CRT. This sawtooth causes the beam to move at a linear rate from the left side of the screen to the right side. This trace, or sweep, is the TIME BASE of the oscilloscope. To enable the oscilloscope to accept a wide range of input frequencies, the frequency of the time base is variable. Again, two controls are used. One is a multi-position switch that changes the frequency of the sweep generator in steps, and the second control is a potentiometer that varies the frequency between steps (fig. 3-29). The switch has each step calibrated and the front panel is marked TIME/CM. A 1-2-5 sequence is used for numbering the switch positions and the front panel has markings that group the numbers into microseconds (μs), milliseconds (ms), and seconds (SEC).

The potentiometer is labeled variable and the panel is marked with an arrow indicating the direction to turn the pot to the calibrated (CAL) position. When it is desired to accurately measure the time of one cycle of an input signal, the variable control is turned to the CAL position and the TIME/CM switch is turned to select the appropriate time base. Suppose the $5 \mu\text{sec}$ position was chosen and two cycles of an input signal were being displayed as shown in figure 3-30. One cycle occupies 5 centimeters along the horizontal axis. Each cm is worth $5 \mu\text{sec}$ in time, so the time of one cycle equals $5 \times 5 = 25 \mu\text{secs}$. Frequency may be found by using $f = 1/t$.

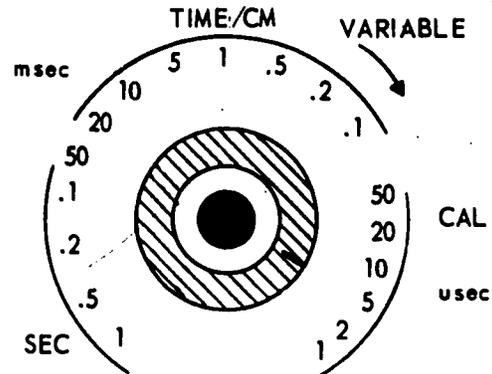


179.33

Figure 3-29.—Time base control.

In selecting a time base, remember that it should be lower in frequency than the input signal. If the input signal requires $5 \mu\text{sec}$ to complete one cycle, and the sawtooth is set for $0.5 \mu\text{sec/cm}$ with a 10 cm wide graticule, approximately one cycle will be displayed. If the time base is set for $1 \mu\text{sec/cm}$, approximately two cycles will be displayed. If the time base is set at a frequency higher than the input frequency, only a part of the input signal will be displayed.

In the basic oscilloscope, the sweep generator runs continuously (free-running) while in the more elaborate oscilloscopes, it is normally turned off. In the oscilloscope shown in figure 3-22, the sweep generator requires a signal from some source to start (trigger) it. This type of oscilloscope is called a "Triggered Oscilloscope." The triggered oscilloscope permits more accurate time meas-

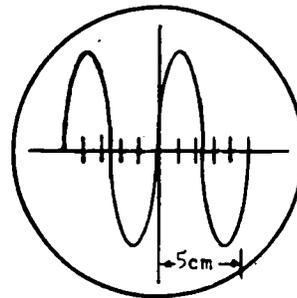

179.34

Figure 3-30.—Time measurement.

urements to be made and gives a more stable presentation.

Front panel controls are provided to permit the selection of the source and polarity of the trigger signal and the amplitude. In addition, provision is usually made to adjust the sweep generator to free-run. These controls are the TRIGGERING and LEVEL controls. The TRIGGERING control is a multi-position switch and the LEVEL control is a potentiometer.

The TRIGGERING control chooses the source and polarity of the trigger signal. The source may be LINE, INTERNAL, or EXTERNAL, and the polarity selected may be negative (-) or positive (+). When LINE is selected, the power line frequency (e.g., 60 Hz) is the trigger frequency. When internal (INT) is selected, part of the input signal is tapped off from the vertical deflection amplifiers, and the input signal frequency is also the trigger frequency. In external (EXT), a front panel binding post is connected through the switch to the sweep generator circuit, and a signal from any external source that is appropriate may be connected to the binding post.

The LEVEL control sets the amplitude level that the triggering signal must exceed to start the sweep generator. With the stability control misadjusted, or no signal available for triggering, the oscilloscope screen will be blank. When the level control is fully counterclockwise, it is in a position marked AUTO. In this position the sweep generator will be free-running. As the level control is turned slowly clockwise, the trace will disappear from the CRT. Continue turning the control clockwise until the trace reappears, and then stop turning. At this point, there will be a stable presentation on the screen.

The triggering and level controls are used to synchronize the sweep generator with the input signal. This gives a stationary waveform display. If they are unsynchronized, the pattern tends to jitter or move across the screen making observation difficult.

Most oscilloscopes provide a test signal to a front panel connector. This signal may be a few volts a-c tapped from the power transformer, or it may be an accurately calibrated square wave. There may be just one panel connector with only one amplitude of voltage available, or there may be several connectors, each providing a different amplitude signal. Some models provide one connector with a switch to select any one of a wide

range of amplitudes. The connector, or connectors may be labeled TEST SIGNAL, LINE, or VOLTAGE CALIBRATOR. The oscilloscope in figure 3-22 uses three jacks labeled VOLTAGE CALIB, with the output amplitude of a square wave marked over each jack. The voltages available are 5 volts, 0.5 volts, and 0.05 volts peak-to-peak. The voltage calibrator provides a known reference voltage for checking the calibration of the VOLTS/CM control. As an example, suppose the VOLTS/CM control is set to the 1 VOLT/CM position and the VARIABLE control is in the

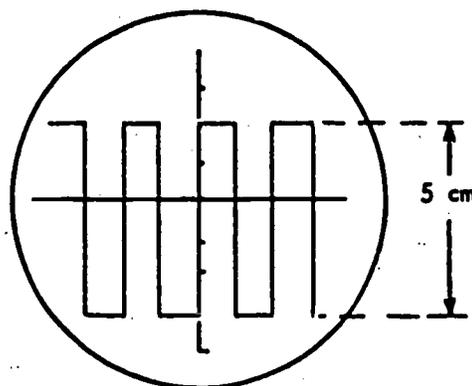


Figure 3-31.—Calibration check.

179.95

calibrated position. With the 5 volt calibrated waveform connected to the vertical input terminal, the presentation should occupy 5 centimeters in height as shown in figure 3-31.

Most oscilloscopes provide a means of connecting an external signal to the horizontal deflection amplifiers in place of the sawtooth from the sweep generator. In figure 3-22, when the TIME/CM control is rotated fully clockwise to the position marked EXT (external), the sweep generator will be disconnected from the horizontal deflection amplifiers, and a front panel binding post (HORIZ.) will be connected to the input of the amplifiers. A signal may now be connected to this binding post. The VARIABLE TIME/CM control becomes an amplitude (gain) control to provide a means of controlling the width of the trace when a signal is applied. With no signal applied to the vertical or horizontal input connectors, a small, stationary dot will be present on the CRT. CAUTION: this dot should not be allowed to remain on the CRT. Either a signal should be applied to one of the inputs, or the INTENSITY control should be turned counterclockwise until the


dot disappears. Once a signal is applied, the intensity may be turned back up to view the trace. If the dot is allowed to remain on the CRT, it will damage the chemical coating and necessitate the replacement of the CRT.

The horizontal input provides a means of connecting a second signal for the purpose of comparing the phase or frequency difference with respect to a signal applied to the vertical input. The resultant display on the CRT is called a LISSAJOUS figure.

Figure 3-32 shows the resultant pattern, and how it was formed, when two sine waves of the same frequency, but differing in phase by 90 degrees, are applied to the vertical and horizontal inputs. Notice that the pattern is a circle. Figure 3-33 shows the patterns that will result from various sine waves differing in phase. For accurate measurements, both signals should be the same amplitude on the screen. This is accomplished by applying only one signal at a time and adjusting the respective gain control.


Figure 3-34 shows the pattern that will result from applying a sine wave to the vertical input, at twice the frequency of a sine wave applied to the horizontal input. To determine the actual frequency, one of the input frequencies must be known, otherwise the only information that will be obtained is the ratio of the two frequencies.

Using lissajous figures to determine an unknown frequency is accomplished by first establishing a ratio. This is done by counting the number of times the pattern touches a horizontal line, A in figure 3-34, and the number of times the pattern touches a vertical line, B in figure 3-34. In this example, the ratio is 2:1, and represents

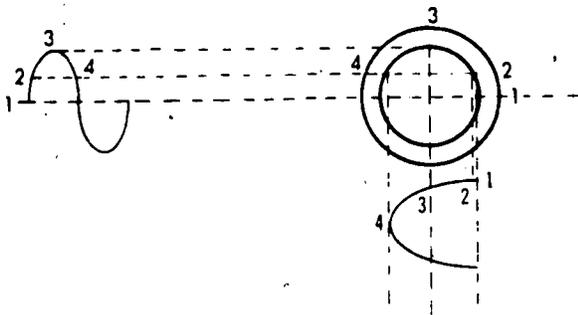

179.36

Figure 3-32.— Forming a lissajous pattern.

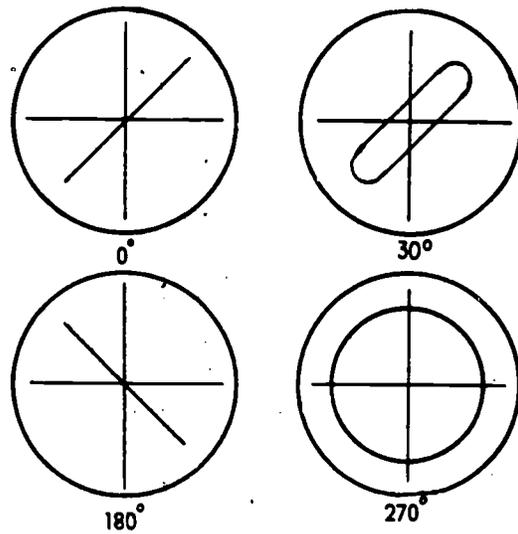


179.37

Figure 3-33.— Phase difference lissajous patterns.

the ratio of the vertical frequency to the horizontal frequency. If the horizontal frequency was known to be 1 kHz, then the vertical frequency would be 2 kHz. The number of patterns that may be obtained is quite varied, and range from the simple to the complex.

The ILLUM (illuminate) control turns on several small light bulbs mounted around the edge of the graticule making the lines visible so that measurements of the displayed signal can be made easily.

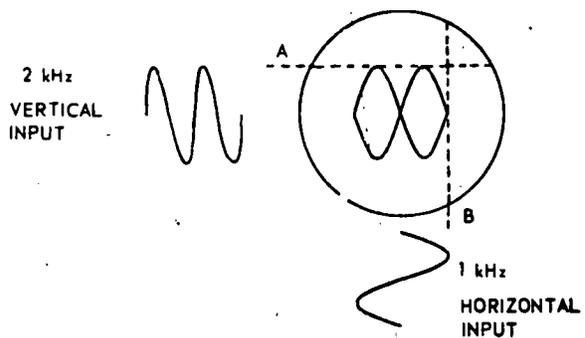


179.37

Figure 3-34.— Frequency ration lissajous pattern.

The DC BAL (balance) control is a screwdriver adjustment to prevent the whole trace from shifting vertically as the VARIABLE VOLTS/CM control is turned through its range. This control may be mounted on the front panel or it may be a service adjustment located inside the oscilloscope. This control, once set, only requires adjustment at periodic intervals, not every time the oscilloscope is used.

The STABILITY control is an adjustment that works in conjunction with the LEVEL control to provide a stable display. On the model in figure 3-22 it is a screwdriver adjustment and normally requires no adjustment by the operator. On more advanced oscilloscopes, it is a knob adjustment.

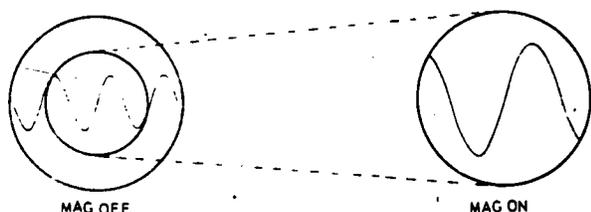

179.38

Figure 3-35.— 5 X MAG presentation.

The 5X MAG (magnifier) essentially expands the sweep. When the magnifier is turned on, it increases the sweep speed by a factor of five. If the TIME/CM control were set at 1 millisecond, and then the 5X MAG turned on, the new sweep speed would be:

$$\frac{1 \text{ msec}}{5} = 0.2 \text{ msec.}$$

The magnifier permits the operator to examine more closely one cycle of a group of cycles rapidly, without necessitating the resetting of the TIME/CM control. Figure 3-35 shows the visual presentation with the magnifier off and then turned on. On the oscilloscope in figure 3-22 the 5X MAG is turned on by pulling the horizontal positioning control straight out.

Operation

The oscilloscope is one of the many tools that a technician uses for troubleshooting. Before using the oscilloscope, a check should be made to verify that it is in good operating condition. If the oscilloscope is faulty, it will give false readings and the technician will find himself wasting many hours trying to find a trouble where none exists.

The technician should also be familiar with the operation and limitations of the oscilloscope available. Misadjusting controls will cause false readings to be obtained. Attempting to take measurements in a circuit operating beyond the capabilities of the oscilloscope will give false readings, and may even result in the instrument being damaged. When using an oscilloscope for the first time, consult the technical manual for that particular equipment to determine the correct operating procedure and any limitations.

Since the oscilloscope provides a visual display which is affected by the manipulation of the controls, and usually has its own built in test signal source, its operating condition can be checked rapidly.

For the initial setup of the oscilloscope in figure 3-22, the controls should be set as listed below:

POSITION, FOCUS, AND INTENSITY controls	: in the center of their range
	: of rotation
TRIGGERING	: INT +
LEVEL	: AUTO
TIME/CM	: 1 msec
VARIABLE	: CAL
POWER	: ON

Allow approximately two minutes for the instrument to warm up. After the warm up period, a trace should be visible. Turn the positioning controls, one at a time, to see if the trace can be moved to the edges of the CRT face, and then center the trace. Adjust the intensity control for comfortable viewing, and the focus control for a thin, well defined line.

Turn the VOLTS/CM control to the 0.02 position and the VARIABLE control to CAL. Connect the 0.05 volt output from the voltage calibrator to the vertical input. Turn the LEVEL control from the AUTO position. As this is done, the trace will disappear. Continue turning until the trace reappears. The display should be a stable display of several cycles of a square wave, 2.5 centimeters in height. Disconnect the lead from the voltage calibrator. The equipment is now ready for use.

Before connecting a signal to the input terminal, turn the input attenuator (VOLTS/CM) to the highest attenuation setting (10 volts/cm). Connect the input signal and rotate the attenuator control until the display occupies approximately 2/3 of the screen height. Adjust the time base and level controls to select the desired number of cycles of the input and stabilize the display.

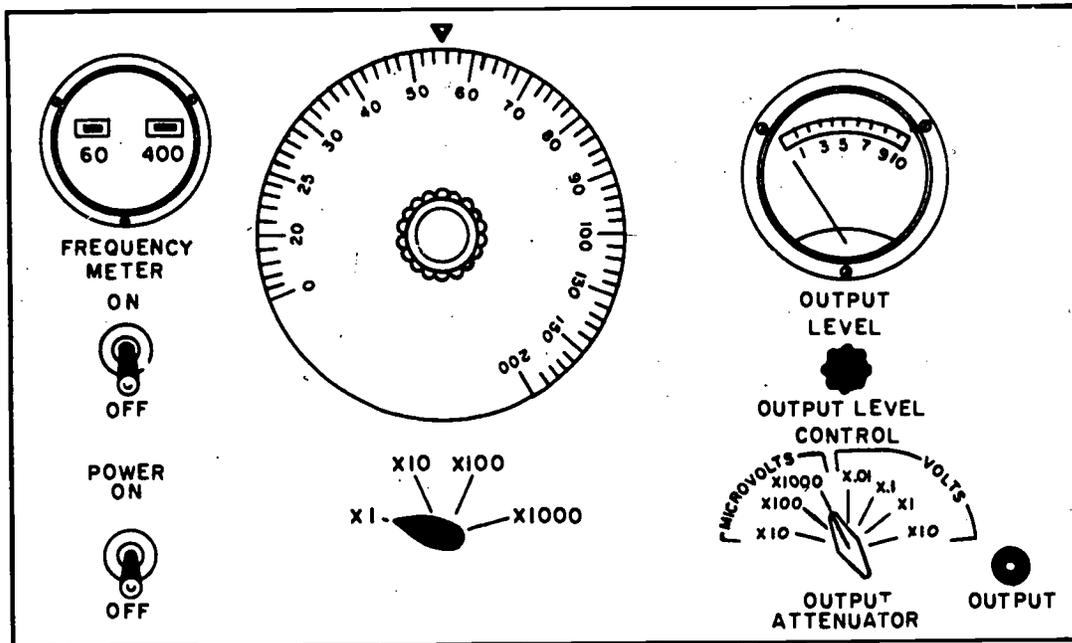


Figure 3-36.—Representative audio signal generator.

179.17

AUDIO SIGNAL GENERATORS

Audio signal generators produce stable frequency signals from about 20 hertz to 200,000 hertz. They are used primarily for testing audio sections of equipment. The major components of an audio signal generator are an oscillator (or oscillators), one or more amplifiers, an output control and a power supply. In addition, voltage regulator circuits are necessary to ensure stability of the oscillator, because the a-c line voltage sources may vary.

A representative audio frequency signal generator is shown in figure 3-36. This unit is intended primarily for bench testing of electronic equipment. It operates from line voltage (115 v.a.c.) and produces the output frequencies over a continuous range in conjunction with a four position multiplier.

Any frequency from 20 to 200,000 Hz may be selected by setting the main tuning dial and the range switch so that the two readings, when multiplied together, equal the desired frequency. For example, to select an output frequency of 52,000

Hz, set the main tuning dial to "52" and the range switch to "X1000". Voltages from zero to 10 volts may be selected by using the "OUTPUT LEVEL" control in conjunction with the attenuator switch. The attenuator is calibrated in seven decade steps so that with the output meter set to 10, output voltages of 10 volts to 10 microvolts can be obtained by simply switching the attenuator. For intermediate values of output voltage, the "OUTPUT LEVEL" control is varied so that the output meter reads the desired voltage. The attenuator switch is then set so that its value, multiplied by the output meter reading, gives the desired output voltage level. For example, to obtain an output voltage of 0.04 volts set the meter by means of the "OUTPUT LEVEL" control to read 4 and set the "ATTENUATOR" switch to the ".01" position. The output voltage will then be the meter reading multiplied by the attenuator setting, or 0.04 volts.

Oscillator frequency calibration may be checked, during operation, on the first two bands,

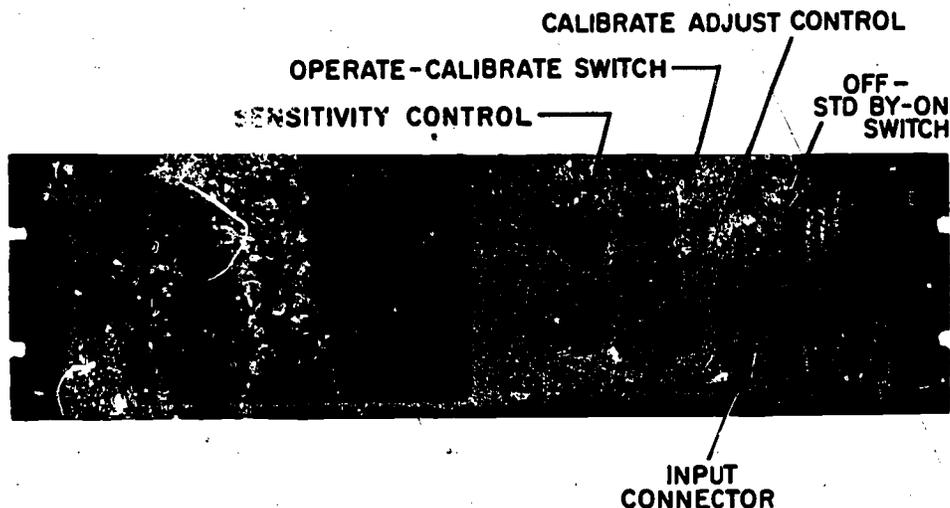


Figure 3-37.—Digital voltmeter, model 481.

151.104

by means of the built-in frequency meter. To check the operation of the oscillator at 60 Hz, set the main tuning dial to "60" and the "RANGE" switch to "X1." This sets the frequency of the oscillator at 60 hertz. Turn the "FREQUENCY METER" switch on and move the main dial back and forth slightly until the reed vibrates with maximum amplitude. This point is rather critical, and care must be used to see that the point of maximum response is located. The main tuning dial should indicate "60" within one division, if the frequency calibration is correct. Similarly, the output frequency may be checked at 400 hertz, by means of the 400 hertz reed in the frequency meter.

BALANCED POTENTIOMETER CIRCUIT

In order to understand the operation and calibration of a voltmeter of this type, it is first necessary to understand how the device accomplishes the measurement function. Consider the basic circuit shown schematically in figure 3-38. If an unknown voltage is applied at the input terminals and a variable divider adjusted until the voltage E_0 is equal in magnitude to the unknown voltage, zero current will flow through the galvanometer. This condition is called balance. Note

DIGITAL VOLTMETER, MODEL 481

The Digital Voltmeter, Model 481 (fig. 3-37) measures d-c voltages and presents the measured value directly in numerical form on a self-illuminated 4-digit readout. The digital voltmeter is essentially a self-balancing potentiometer. Range changing is automatic. The polarity sign and decimal point are also automatically displayed. Accuracy is ± 0.01 percent over the three ranges which are 0 to ± 9.999 , ± 10.00 to ± 99.99 , and ± 100.0 to ± 999.9 volts.

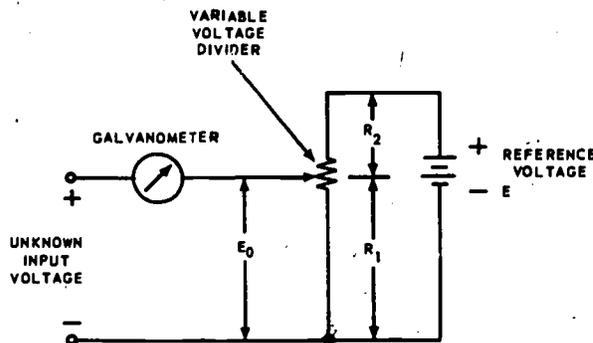


Figure 3-38.—Basic operation principles of a digital voltmeter.

151.105

that in the balanced condition no current is drawn from the input (circuit under test). The unknown voltage can be computed from the formula:


$$\text{Unknown voltage} = \frac{R_1}{R_1 + R_2} \times \text{reference voltage.}$$

If the polarity of the unknown voltage is reversed, the polarity of the reference voltage must also be reversed in order to obtain balance. The galvanometer pointer will travel in a direction opposite to that just treated, increasing its displacement from zero (center position) as the magnitude of the unknown voltage increases.

To measure the absolute value of the unknown voltage, the reference voltage must be known. Instead of accurately measuring the reference voltage directly, it can be adjusted to the proper value if an accurately known voltage is available for use as a calibration reference. Using this method, a standard cell (fig. 3-39) of known voltage is connected in place of the unknown voltage. The variable voltage divider dial reading (not shown) is set to this known voltage, and the voltage across the variable voltage divider is adjusted by means of rheostat, R_c , to obtain balance. The potentiometer is now calibrated, or standardized, and ready for use as an absolute voltage-measuring device.

DIGITAL VOLTMETER

Basically, the operation of the digital voltmeter (fig. 3-40) is the same as the operation of

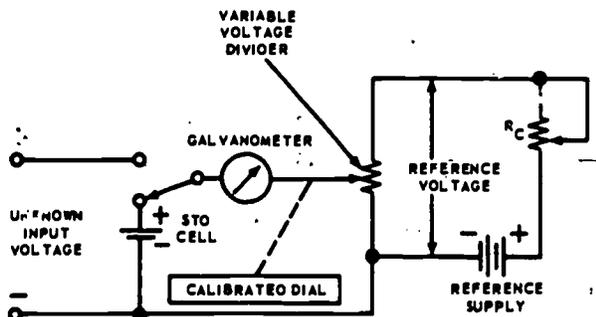

151.106

Figure 3-39.—Potentiometer with calibration rheostat.

the balanced potentiometer just discussed. The main difference is that instead of the balance being achieved manually it is done automatically through the use of an error detection circuit which controls the operation of a series of stepping relays or switches.

There are five stepping relays. One automatically selects the proper range (attenuation) and polarity (reference voltage polarity), depending on the amplitude and polarity of the input (unknown) voltage. The other four relays automatically select the proper magnitude of feedback voltage so as to achieve a balance between it and the range output voltage.

Whenever a balance is achieved—that is, whenever feedback voltage and the range output voltage are equal in polarity and magnitude—all switching action stops. The readout device then gives an illuminated digital readout of the magnitude and polarity of the unknown voltage, accurate to within ± 0.01 percent.

To eliminate unnecessary switching when the magnitude of the unknown voltage is such as to cause the X10 or X100 range to be selected, a lockout device is incorporated into the switching logic. This causes the most sensitive range to be selected first, and prevents the leftmost readout from registering a zero.


POWER REQUIREMENTS

The digital voltmeter is designed to operate from 105-to-125 or 210-to-250 volts, 60-Hz power sources. Primary power requirements for this instrument are satisfied by most nominal 115- or 230-volt, 60-Hz power line input sources.

FRONT PANEL CONTROLS AND INDICATORS

The front panel controls and indicators for the Digital Voltmeter Model 481 are shown in figure 3-37.

OFF-STD BY-ON switch (figure 3-37) in the OFF position disconnects primary power from the voltmeter. The STD BY (standby) position permits the instrument to remain warmed up while the stepping switches are turned off to prevent needless operation. This position also permits locking the reading (so that the displayed information remains indefinitely) at any time. The ON position of the switch fully enables the meter after a 15 to 30 second operation delay, controlled by a thermal timer (not shown).

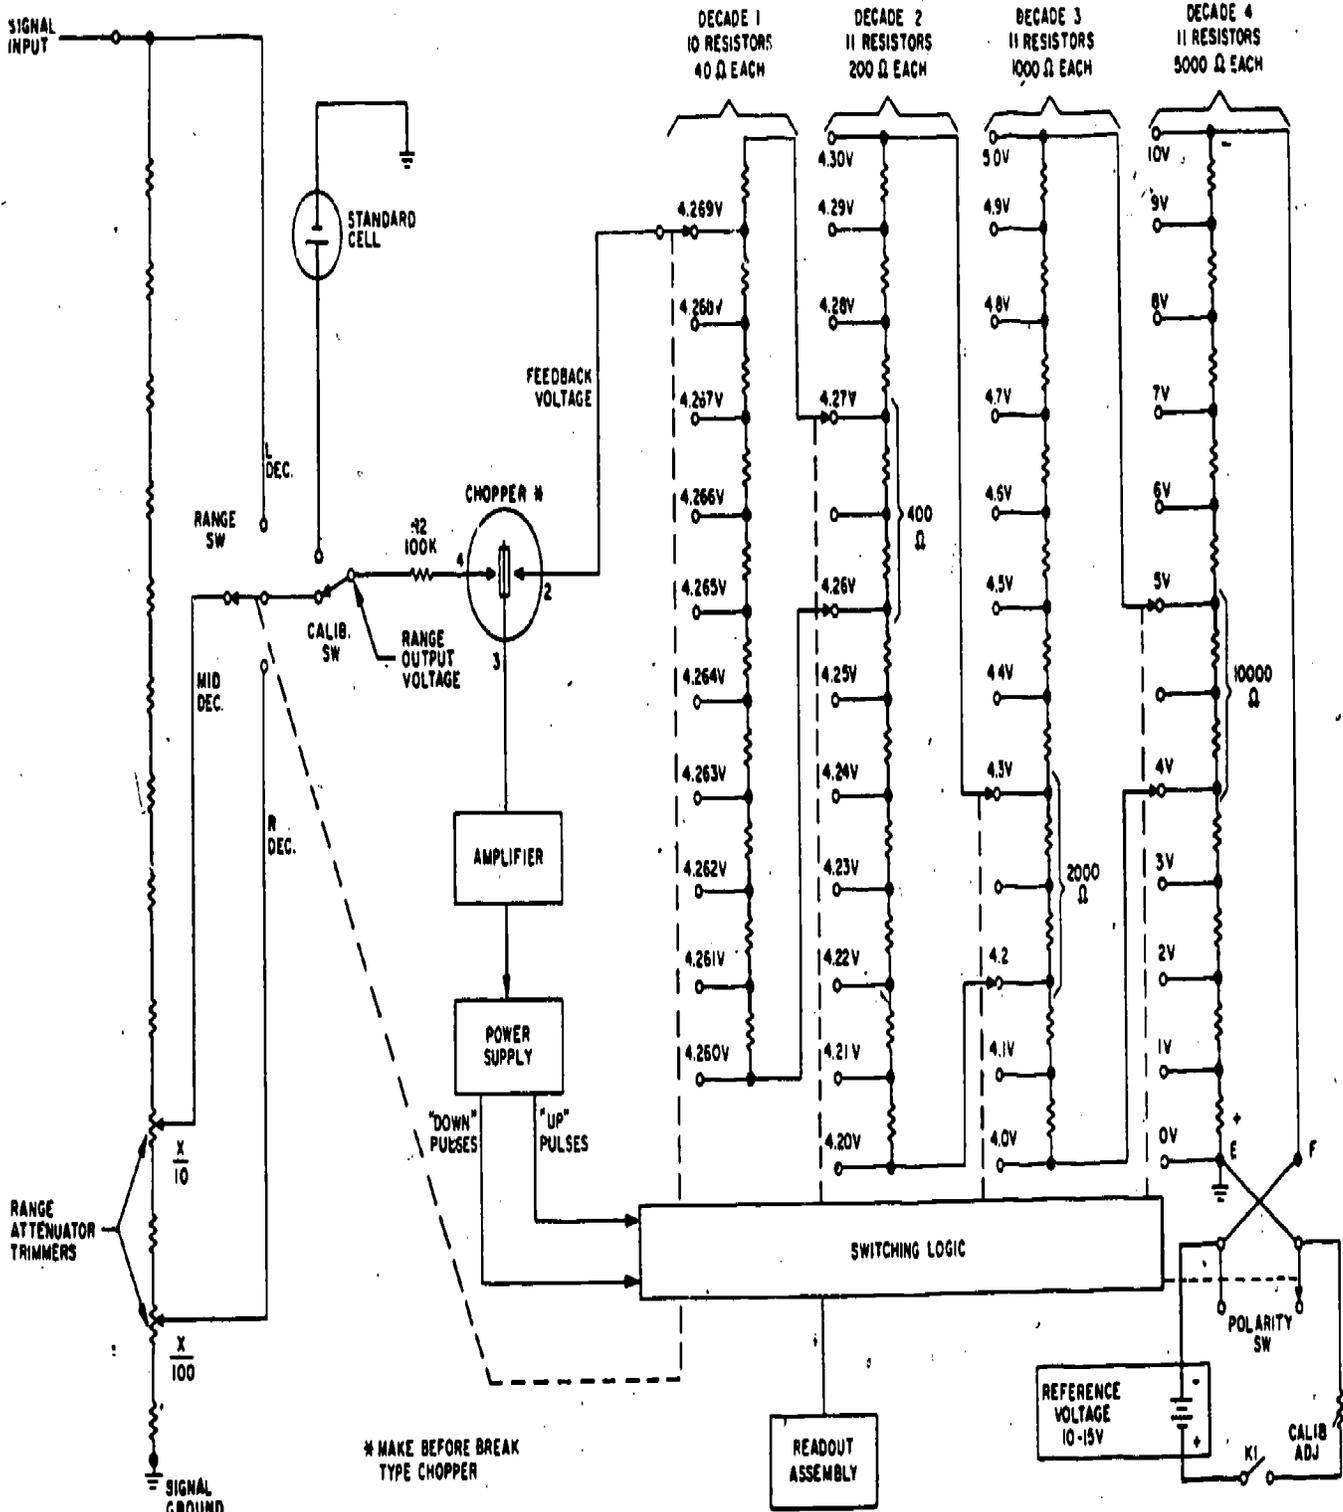

3-27

Figure 3-40.—Multirange, digital voltmeter for measuring absolute d-c voltages, simplified circuit diagram.

The operate-calibrate switch selects either an operating or calibrating mode of operation for the digital voltmeter.

The calibrate adjust control (located behind a metal protective cap on the front panel) is used to standardize the digital voltmeter when the following steps are performed:

1. Set the sensitivity control to its full clockwise position.
2. Ensure that the error amplifier gain of the instrument is properly set. To accomplish this, hold the operate-calibrate switch in the CALIBRATE position and slowly turn the calibrate-adjust control in the counterclockwise direction, stopping each time the meter changes reading. The meter reading should change by one digit each time. If the reading changes by more than one digit, or exhibits instability, adjustment of the internal gain control is necessary. (The gain setting procedure is described later.) Repeat turning the calibrate adjust control counterclockwise until ten steps have been satisfactorily completed. Once it has been ascertained that the gain adjustment is proper, the instrument may be accurately standardized as described in the next paragraph.

While holding the operate-calibrate switch in the CALIBRATE position, slowly turn the calibrate adjust control in the clockwise direction until the meter reads 1019, then stop. The meter is now standardized.

NOTE: The decimal point may appear in any location during the standardization procedure because the d-c voltage range change circuits (which determines the position of the decimal point) become deenergized during this operation.

The sensitivity control varies the gain of the digital voltmeter. When measuring unstable voltages, turn the control counterclockwise until the meter settles at a fixed reading. This reading will be as accurate as the unstable signal measurement will allow. Always turn the sensitivity control fully clockwise for proper operation with stable d-c voltages.

GAIN SETTING

For best results, the digital voltmeter should be operated with the amplifier gain set for advancement in single digit steps. If the amplifier gain is not high enough, the resolution of the meter will be too low. On the other hand, excessively high amplifier gain setting may cause instability of the readout display. To set the amplifier gain, proceed as follows:

1. Remove the cover over the calibrate adjust control on the front panel. Hold the operate-calibrate switch (fig. 3-37) in the CALIBRATE position.

2. After the usual readout has become stable, use a screwdriver to slowly turn the calibrate adjust control, R13 (fig. 3-41) in a counterclockwise direction. Observe the magnitude of the decrease in the readout display. If the value displayed decreases in steps of one digit and does not become unstable, no adjustment of amplifier gain is necessary. If slowly rotating the calibration control in a counterclockwise direction results in a decrease of two or more digits in the rightmost window, the amplifier gain should be increased by slightly turning the amplifier gain control, R20 (fig. 3-41) in a clockwise direction. Again, observe the number of digits by which the readout display decreases when the calibrate adjust control, R13, is slowly turned counterclockwise. Repeat the amplifier gain adjustment if necessary, to obtain a readout display decrease of one digit in the rightmost window. If instability develops in the readout display, turn the amplifier gain control, R20, counterclockwise until the instability just disappears and the readout display decreases in steps of one digit in the rightmost window as the calibrate adjust control, R13, is slowly turned counterclockwise.

HUM CONTROL ADJUSTMENT

To adjust hum control, R53, (fig. 3-41) located on the amplifier chassis, proceed as follows:

NOTE: Improper adjustment of the hum control will cause considerable error in calibration accuracy. The hum control is accurately set at the factory and should not be reset until it is definitely determined to be out of adjustment. Changing the input tubes can cause the hum control to become incorrectly adjusted. Be sure that the input tube has been aged before resetting the hum control.

1. Connect the chassis to ground (the third pin on the power cord is connected to the chassis). Turn on the digital voltmeter and allow a warmup of 15 minutes. Connect an oscilloscope between either of the two test points (fig. 3-41) and ground. Calibrate the oscilloscope in terms of one digit error. To do this, turn the operate-calibrate switch (fig. 3-37) to CALIBRATE and slowly turn calibrate adjust control, R13, (fig. 3-41) counterclockwise. Note the amount of error signal on the oscilloscope. This error is equivalent to one digit if the gain is properly set (as described in the

gain setting procedure), and the sensitivity control is advanced fully clockwise.

2. With the operate-calibrate switch (fig. 3-38) set to operate, short the input leads to obtain a reading of +0.000. Set OFF-STD BY-ON switch to STD BY. Remove the stepping switch

cover. Step range-polarity switch, K5 (fig. 3-41) by hand until the meter reads +00.00. Replace the stepping switch cover. Adjust hum control R53, for zero error signal as displayed on the oscilloscope. It is necessary that the stepping switch cover, bottom plate, and front panel be in position. The hum control is now properly set.

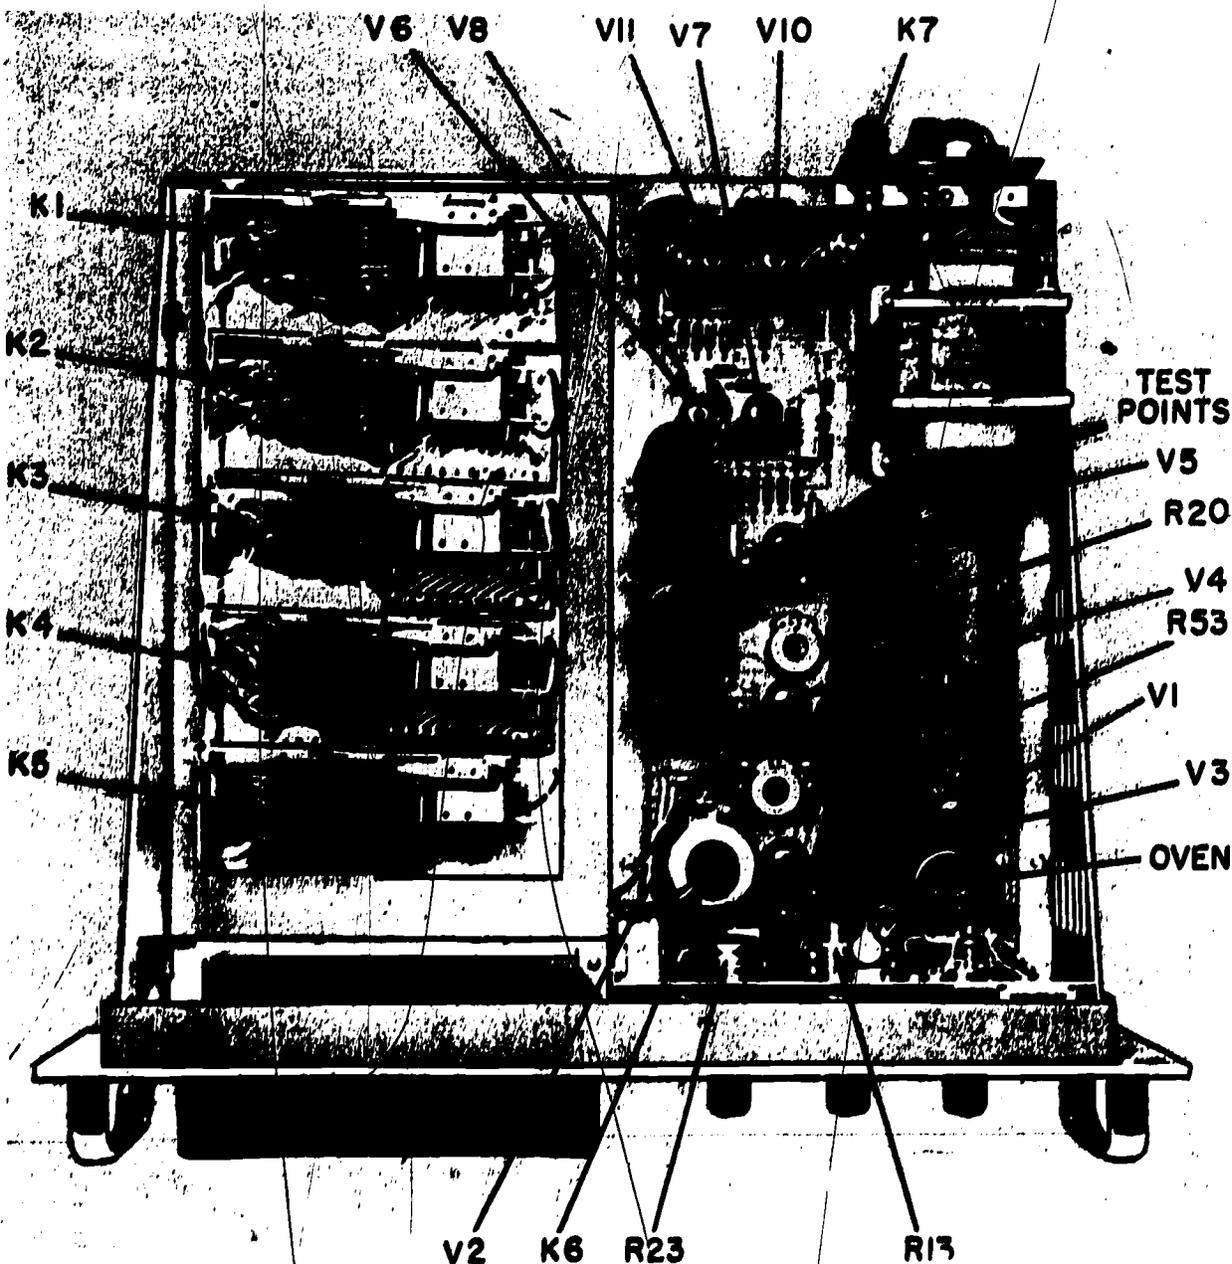


Figure 3-41.—Digital voltmeter, model 481, top interior view.

151.108

3. Check the error signal for all ranges (+00.00, +0.000, -000.0, -00.00, -0.000, and +000.0), each time removing the stepping switch cover, stepping range-polarity switch, K5, (fig. 3-41) by hand, and replacing the cover. Do not readjust hum control, R53. The error signal for all range positions should be less than one-half that allowable in changing from one digit to another. If the error exceeds this amount, there are two possible sources of trouble: (1) excessive hum pickup and (2) excessive grid current drawn by the input amplifier tube (not shown). Check all shield and ground leads. Replace the input amplifier tube (type 5751).

NOTE: Do not substitute any other type tube.

STANDARDIZATION ADJUSTMENT

The following standardization procedure is necessary to ensure accurate readout (measurements). Before making any adjustments, make sure that the gain and hum controls are properly set and that the digital voltmeter is connected to ground. Calibrate the voltmeter as described in the calibrate adjust procedure treated earlier. Connect a bank of nine standard cells, each of which has an accuracy of at least 0.01 percent, to the input. The meter reading should be correct to within one digit.

NOTE: Be sure to take into account the internal resistance of the standard cells. The digital voltmeter has an input resistance of 10 megohms, and a 9 volt signal will draw 0.9 microamperes. If the reading is not correct, adjust potentiometer, R11, and repeat the entire procedure. (Potentiometer, R11, is located slightly above and to the right of the calibrate adjust control, R13, shown in figure 3-41.)

FEEDBACK VOLTAGE LINEARITY TEST

One of the several factors which may affect the accuracy of digital voltmeters is the linearity of the reference voltage divider (fig. 3-40). This reference voltage divider supplies the feedback voltage which is compared to the range output voltage in order to get a readout, thus, any change in its linearity (or accuracy) will affect the accuracy of the readout. While several methods have been devised for testing the linearity of reference voltage dividers, the one described below is found to be most satisfactory. (It is

assumed that the error amplifier gain is properly adjusted before the test is started.)

NOTE: In order to perform this test, a precision voltage divider having a resistance of 1 megohm and an accuracy 5 to 10 times that of the reference voltage divider is used as a standard. The high resistance is necessary to prevent excessive current drain from the reference supply.

Connect the input of the external precision voltage divider to the input of the reference voltage divider in the digital voltmeter. Disconnect the wire from the arm of the operate-calibrate switch. Connect the output of the external precision voltage divider to this terminal. (Observe proper shielding and grounding rules.) Adjust the standard divider at 00000. The visual readout should display a zero in each window. Adjust the standard voltage divider for 99990. The visual readout display should display a 9 in each window. These two readout displays must be obtained for the indicated standard divider settings. If the voltmeter displays digits other than those indicated above for these two end points, an improper circuit condition exists and must be located and corrected before proceeding with this test.

Now set the standard divider for various readings such as: .89990, .7990, .6990, ---- .08990, .0790, ----, 00890, .00790, ----- .00080, .00070. The digital voltmeter readout should be equal to the standard divider setting ± 1 digit.

One advantage of this method of testing voltage divider linearity is that reasonably large (20 percent) deviations in reference voltage from the nominal value of reference voltage have no significant effect upon test accuracy. This is true because the same voltage is furnished to the input of the reference voltage divider as well as the input of the external standard voltage divider. Hence, for equal settings of the two voltage dividers, the output voltages should be equal.

RANGE UNIT ADJUSTMENT

The range unit will require scale factor readjustment only if the range unit resistors change their ohmic value, or if the internal electrical loading of the unit output taps changes. The adjustment method described below requires several accurate voltage dividers and a stable d-c source. This method permits accurate range unit scale factor adjustment regardless of the inaccuracies present in the digital voltage divider. This is because the voltage divider is always brought back to the same position (same numerical display on the voltmeter, ignoring decimal point location)

when the correspondence of scale factors on each range is checked.

As in any other test, proper shielding and grounding techniques must be followed to prevent electrical noise pickup from interfering with the stability and resolution of the digital voltmeter. Also, in checking each range, best accuracy is achieved when the test voltage used is as close to full scale for that range as is practicable. The precision voltage divider used in the range unit adjustment procedure must be compensated for the electrical loading effect of the digital voltmeter. The accuracy of the external voltage divider should be five to ten times better than the accuracy to which the range unit is to be adjusted.

Access to the range trim potentiometers referred to in the following paragraphs is gained by removing the left-hand protective cap on the front panel (fig. 3-37). These potentiometers are identified by 1000v and 100v on the printed circuit range board.

Adjusting the 100-Volt Range Scale Factor

The following procedure is used:

1. Connect the input terminals of a 10-to-1 precision voltage divider to a stable source of d-c voltage, approximately 95 to 99 volts.

2. Connect the input terminals of the digital voltmeter under test to the input of the voltage divider. Observe the readout display and waveform at the error amplifier test points.

3. Connect the input terminals of the voltmeter to the output terminals of the voltage divider. Observe the readout display and the error amplifier waveform.

4. The 100 volt range is properly adjusted when the readout display in step 3 is exactly

equal to one-tenth of the readout display observed in step 2, (for example: 95.93 in step 2, compared to 9.593 in step 3) and when the error amplifier waveform amplitude and phase are similar to that observed in step 2. If this correspondence is not present, adjust 100 volt range trim potentiometer R4.

Adjusting the 1000-Volt Range Scale Factor

The following procedure is used:

1. Connect the input terminals of a 100-to-1 voltage divider to a stable source of d-c voltage as close to 999 volts as practicable. (Lower voltages, no less than 200 volts, can be used, but accuracy will not be as good as when higher voltages are used.)

2. Connect the input terminals of the voltmeter under test to the input terminals of the voltage divider. Observe the readout display and waveform at the error amplifier test points.

3. Connect the input terminals of the digital voltmeter to the output terminals of the 100-to-1 voltage divider. Observe the readout display and error amplifier waveform.

4. The 1000-volt range is properly adjusted when the readout display in step 3 is exactly one-hundredth of the readout display observed in step 2, (for example: 982.3 in step 2, compared with 9.823 in step 3) and when the error amplifier waveform amplitude and phase are similar to that observed in step 2. If this correspondence is not present, adjust the 1000-volt range trim potentiometer, R2.

NOTE: Tube and transistor testers are described in Chapter 13.

CHAPTER 4

ELECTRICAL INSTALLATIONS

The proper installation and maintenance of the various electrical systems aboard ship are very important to the Electrician's Mate. The repair of battle damage, accomplishment of ship alterations, and some electrical repairs may require that changes or additions to the ship's cables, control and protective devices, be made by the Electrician's Mate. Additionally, during shipyard and tender availabilities, you may be required to inspect, test, and approve the new installations.

To perform these tasks you must first have a working knowledge of the various types, sizes, capacities, and uses of shipboard electrical cable. The Electrician's Mate must also be capable of selecting, installing, and maintaining cables in such a manner as to ensure their adequacy. Finally, you must know the purpose, construction, installation, and testing procedures of control and protective devices in order to maintain an electrical system properly.

ELECTRICAL CABLES

The EM needs to have a working knowledge of the Cable Comparison Guide, NAVSEA 0981-052-8090. This guide fills a need for information on the use of electric shipboard cable, particularly for the selection of substitute cable items for replacement of obsolete items. Cable items are listed in the guide by general classifications as to construction and service conditions. These broad groupings are broken down into types and sizes, and indicated as being current (C), discontinued (D), or obsolete (O), as shown in the first column of Table 4-1.

The term "watertight cable," in the cable guide and in Table 4-1, indicates standard cables in which all spaces under the impervious sheath are filled with material to eliminate voids and to prevent the flow of water through the cable by hose action in the event that an open end of cable is exposed to water under pressure.

Because of the varied service conditions aboard ship, the cable must have the ability to withstand heat, cold, dampness, dryness, bending, crushing, vibration, twisting, and shock. No one type of cable has been designed to meet all of these requirements; therefore, a variety of types are employed in a shipboard cable installation.

Cable types are grouped under the general classifications of: (1) cables for nonflexing service (table 4-1), (2) cables for repeated flexing service, and (3) cables for special purposes.

CABLE TYPE AND SIZE DESIGNATIONS

The types and sizes of lighting and power cables for shipboard applications are numerous. The initial letter of the type designation for lighting and power cables indicates the number of conductors (cdrs) the cable contains. These initial letters are S, D, T, or F and indicate, respectively, single, double, triple, or four conductors. Also included in this lighting and power group is the SGU type cable. This cable employs silicone rubber and glass as primary insulation, making it heat and flame resistant. SGU is now replacing the SGA.

The construction of a SGA cable is shown in figure 4-1. The insulated stranded copper conductors are enclosed in an impervious sheath, braided metal armor, and paint. The cable has been made watertight by the application of water-proof sealing compound to all voids of the conductors and cable core. SGA cables are designed to have a minimum outside diameter and weight as compared to older type cables. The SGA type cables supersede the type LPA (Lighting and Power, Armored) cables and the type FPA (Flame Proof-Armored) cables. Using the newer cable saves on space and weight which is at a premium on combatant naval vessels.

Table 4-1. — Cables for Nonflexing Service

WATERTIGHT, NON-FLEXING SERVICE
POWER AND LIGHTING

CUR DIS OBS	TYPE & SIZE DESIGNATION	NO. OF CDRS IN CABLE	NOM DIAM OF CDR (inch)	NOM AREA OF CDR (MCM)	CABLE O.D. MAX (inch)	RATED VOLT-AGE MAX (rms)	COR IDENT	APPROX WT PER FOOT (lbs)	BEND RADIUS MIN (inch)	AMPACITY MAX AMPERES PER CDR				FEDERAL STOCK NO. 6145
										DC or 60Hz 40°C AMBIENT		400Hz 50°C AMBIENT		
										40°C	50°C	40°C	50°C	
C	OSGU-300	2	0.628	296.400	1.841	1,000	LET-5	3.120	11.5	413	380	347	319	110-6333
O	OSGA-300	2	0.628	296.400	1.891	1,000	---	3.23	11.5	413	380	347	319	191-3596
O	OHFA-300	2	0.628	296.400	2.280	600	---	3.70	14.0	413	380	---	---	186-1451
C	OSGU-400	2	0.742	413.600	2.069	1,000	LET-5	4.158	13.0	492	453	337	310	110-6334
O	OSGA-400	2	0.742	413.600	2.119	1,000	---	4.28	13.0	492	453	337	310	184-5897
O	OHFA-400	2	0.742	413.600	2.508	600	---	4.75	15.5	492	453	---	---	192-7195
C	FPS-14	4	0.136	14.340	0.815	600	STO-4	0.454	5.0	42*	---	42*	---	
C	FSGU-3	4	0.060	2.828	0.447	1,000	STO-1	0.126	3.0	11	10	11	10	905-7252
O	FSGA-3	4	0.060	2.828	0.497	1,000	---	0.153	3.0	11	10	11	10	542-6901
O	FHFA-3	4	0.060	2.828	0.610	600	---	0.205	4.0	11	10	---	---	184-1090
C	FSGU-4	4	0.076	4.497	0.513	1,000	STO-1	0.173	3.5	18	17	18	17	110-2032
O	FSGA-4	4	0.076	4.497	0.563	1,000	---	0.204	3.5	18	17	18	17	542-6898 77.1
O	FHFA-4	4	0.076	4.497	0.865	800	---	0.389	5.5	18	17	---	---	184-1089

* Ampacity based on 100°C ambient

The numerals (table 4-1) immediately following the type letters indicate the cross-sectional area of a single conductor and expressed in thousands of circular mils. For example, 6SGA-150 indicates approximately 158 thousand circular mils conducting area.

mored cable. These letters are also followed by numbers that give the approximate cross-sectional area expressed in thousands of circular mils.

Type and Size Exceptions

The Electrician's Mate must also be able to identify cables used for degaussing service. For these applications the initial letters have been restricted to S and M for identifying single and multiple conductors, respectively. Thus, SDGA is a SINGLE conductor, degaussing, ar-

By analyzing the designations for cable types and sizes, you will notice that some letters have more than one meaning. The letter T, for example, usually means THREE. In the designation TTHFWA-10, however, the double T stands for twisted-pair, telephone. The T in TRXF means tough jacket.

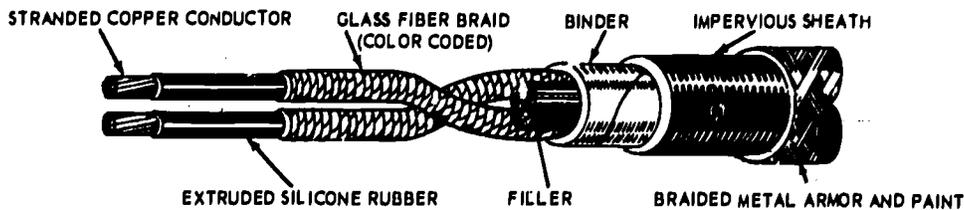


Figure 4-1. — Type SGA shielded nonflexing service cable.

29.226(77A)A

Similarly, there are exceptions regarding the use of numerals in size designations since the numerals may indicate number of copper conductors or size of copper conductor or number and size of a conductor or size and number of strands per conductor or number of twisted pairs or maximum rms rated voltage.

Example: MSCA-7-----The 7 stands for the number of conductors, not the conductor area (in thousands of circular mils) as in the case of DHFA-400 (table 4-1).

Example: TTHFWA-10---The 10 indicates the number of twisted pairs, that is, 20 conductors.

Example: SS5P-----The 5 is an indication of maximum rms rated voltage, 5000 in this case.

NONFLEXING SERVICE

Nonflexing service cable designed for use aboard ship is intended for permanent installation and is commonly referred to as such. The cables that are described in the previous paragraphs for use with lighting and power circuits are intended for this nonflexing service. This nonflexing service can be further classified according to its application and is of two types—general use and special use.


General Use (Nonflexing Service)

Nonflexing service cable is intended for use in nearly all portions of electric distribution systems, including the common telephone circuits and most propulsion circuits. Special cases occur in d-c propulsion circuits for surface ships. In those cases where the impressed voltage is less than 1000 volts, an exception is permitted.

The previously described SGA cable is one type usually found in this general use, nonflexing service. Also in this classification is the type MSCA cable. This cable is nothing more than watertight cable for use in interior communications, as well as in fire control circuit.

Special Use (Nonflexing Service)

There are many shipboard electrical circuits where special requirements of voltage, current, frequency and service must be met in the cable

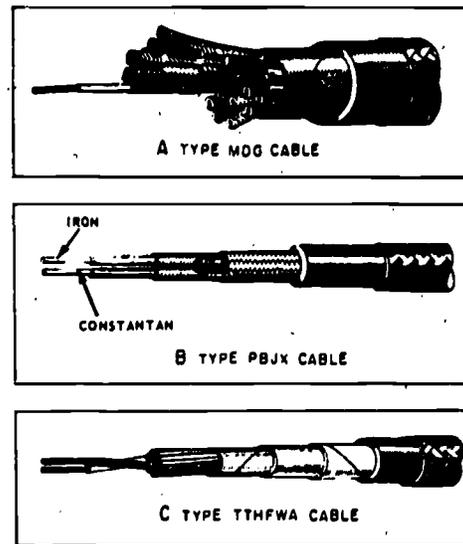

29.226(77A)B
Figure 4-2.— Nonflexing service cable for special use.

installation and other circuits where general-use, nonflexing service cable may meet the necessary requirements, yet be economically impracticable. For these reasons, there are many different types of nonflexing service cable for specialized use, such as degaussing, telephone, radio, and casualty power. Some of these cables are shown in figure 4-2.

Type MDG (fig. 4-2A) is a multiconductor cable used in degaussing circuits. Type PBJX (replaced by type TCJA-mil-C-2194 on new construction) cable (fig. 4-2B) consists of one conductor of constantan (red) and one conductor of iron (gray), and is used for pyrometer base leads. Type TTHFWA (fig. 4-2C) is a multi-conductor, twisted-pair cable used for telephone circuits.

REPEATED FLEXING SERVICE

Repeated flexing service cable designed for use aboard ship is commonly referred to as being portable because it is principally used as leads to portable electric equipment. It is also of two types—general use and special use.

General Use (Flexing Service)

Repeated flexing service cable, is designed for use as leads to portable equipment and permanently installed equipment where cables are

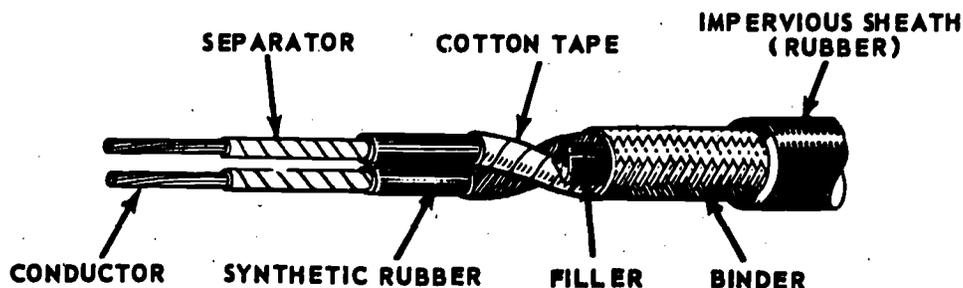


Figure 4-3.—Type DHOF cable.

29.226(77A)C

subjected to repeated bending, twisting, mechanical abrasion, oil, sunlight, or where maximum resistance to moisture is required. Its letter designation is HOF (heat and oil resistant, flexible). This cable contains stranded copper conductors that are insulated with butyl rubber, covered with a tape or braid. The designated number of conductors are twisted together, held by a binder, and covered with an impervious sheath (fig. 4-3).

Repeated flexing service cable designed for general use is of four different types depending on the number of conductors. Type SHOF cable is available in various conductor sizes and designated as types SHOF (single conductor), DHOF (two conductor), THOF (three conductor), and FHO (four conductor).

Special Use (Flexing Service)

There are many different types of repeating flexing service cable designed for special requirements of certain installations, including type TTOP and casualty power cables. Two of these types are shown in figure 4-4. Type MHOF (fig. 4-4A) is used for control circuits in revolving structures, and type TRF (fig. 4-4B) is used for arc-welding circuits.

CABLE REPAIR AND INSTALLATION

Electrical cables installed aboard Navy vessels must meet certain requirements determined by the Naval Ships Systems Command. These requirements, published in the General Specifications for Ships in the U.S. Navy, are too numerous to cover in detail in this training

manual; hence, only the more basic ones are included.

The job of installing nonflexing service cable may be performed by the Electrician's Mate whenever necessary to repair damage or to accomplish authorized ship alterations. Before work is begun on a new cable installation, cable-way plans should be available. If repairs to a damaged section of installed cable are to be effected, information on the original installation can be obtained from the plans of the ship's electrical system, which are normally on file in the engineering department office (log room) aboard ship. If a ship alteration is to be accomplished, applicable plans not already on board, can be obtained from the naval shipyard based on the authorization for the alteration (SHIPALT) at the planning yard for the ship.

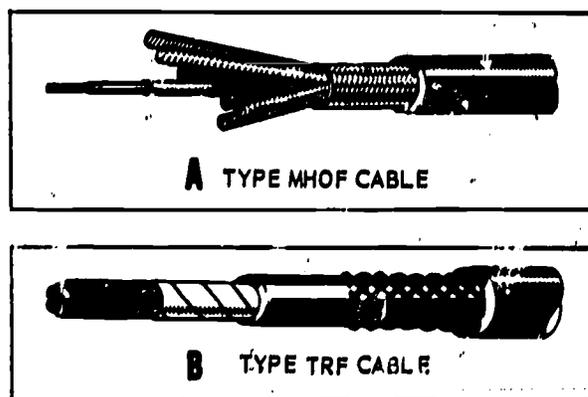


Figure 4-4.—Repeated flexing service cable for special use.

29.226(77A)D

Wireways

Before installing new cable, survey the area to see if there are spare cables in existing wireways and spare stuffing tubes that can be used in the new installation. The cable run must be located so that damage from battle will be minimized, physical and electrical interference with other equipment and cables will be avoided, and maximum dissipation of internally generated heat will occur. Do not run cables on the exterior of the deckhouse or similar structures above the main deck, except where necessary because of the location of the equipment served, or because of structural interferences or avoidance of hazardous conditions or locations. Where practicable, route vital cables along the inboard side of beams or other structural members to afford maximum protection against damage by flying splinters or machine gun strafing.

Where practicable, avoid installing cable in locations subject to excessive heat, and never install cable adjacent to machinery, piping, or other hot surfaces having an exposed surface temperature greater than 150°F. In general, cables shall not be installed where they may be subjected to excessive moisture.

Selecting Cable

Two-conductor cable shall be installed for 2-wire, d-c and single-phase, a-c circuits. Three-conductor cable shall be installed for 3-wire, d-c or 3-phase, a-c circuits. Four-conductor cable shall be installed where two 2-wire lighting circuits are run in the same cable. Four-conductor and multiconductor cable shall be installed for control circuits and communications circuits as necessary.

To select the proper size cable for a particular installation, it is necessary to know (1) the total connected load current, (2) the demand factor, and (3) the allowable voltage drop.

The total connected load current for d-c power circuits is determined by adding the sum of the rated current of the connected loads as listed on the identification plates of connected motors and appliances and an additional 100 watts for each receptacle not specifically indicated. For a-c power circuits the connected load current of the connected motors and appliances is added vectorially to obtain the total connected load current.

The demand factor of a circuit is the ratio of the maximum load averaged for a 15-minute period to the total connected load on the cable.

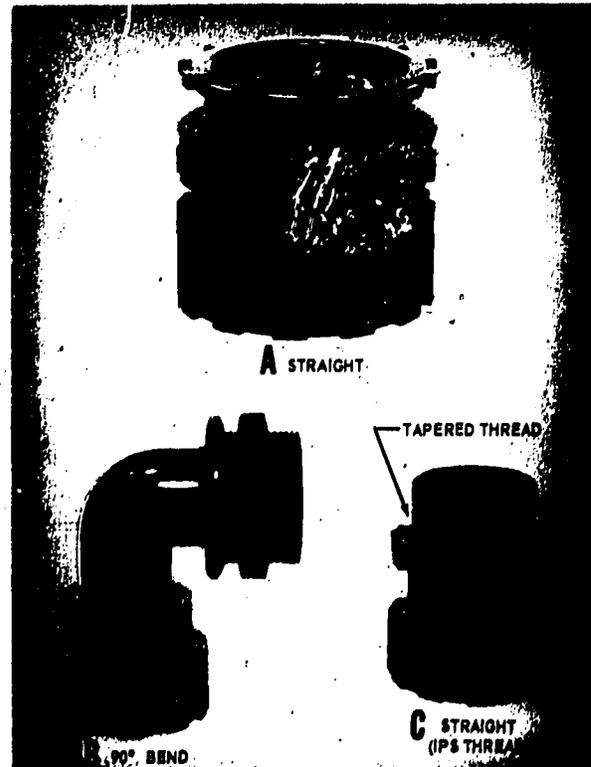


Figure 4-5.—Nylon stuffing tubes.

12.78

If the feeder demand factor for a group of loads cannot be determined, a value of 0.9 may be assumed. For power systems supplying a single-phase load or for a lighting system branch, submain, and main circuits, the demand factor is unity.

The voltage drop (difference in voltage between any two points in a circuit) is expressed as a percentage of the rated switchboard (or switchgear group) bus voltage or the transformer nominal voltage. The maximum percent voltage drop allowed for a circuit is specified by the Naval Sea Systems Command and varies according to the intended service of the circuit.

Stuffing Tubes

Stuffing tubes (fig. 4-5A, B, and C) are used to provide for the entry of electric cable into splash-proof, spraytight, submersible, and explosion-proof equipment enclosures. Cable clamps

commonly called box connectors (shown in fig. 4-6), may be used for cable entry into all other types of equipment enclosures, except that top entry into these enclosures shall be made drip-proof through stuffing tubes or cable clamps sealed with plastic sealer.

Below the main deck, stuffing tubes are used for cable penetrations of watertight decks, watertight bulkheads, and watertight portions of bulkheads that are watertight only to a certain height. Above the main deck, stuffing tubes are used for cable penetrations of (1) watertight or airtight boundaries; (2) bulkheads designed to withstand a waterhead; (3) that portion of bulkheads

below the height of the sill or coaming of compartment accesses; (4) flamtight or gas-tight, or watertight bulkheads, decks, or wiring trunks within turrets or gun mounts; and (5) structures subject to sprinkling.

Stuffing tubes are made of nylon, steel, brass, or aluminum alloys. Nylon tubes have very nearly replaced metal tubes for cable entry to equipment enclosures. Cable penetration of bulkheads and decks are normally of metal, because of their integrity during fires. Stuffing tubes made of metal are normally used for cable penetration of bulkheads and decks. Nylon stuffing tubes melt and fail to act as a barrier during a fire.


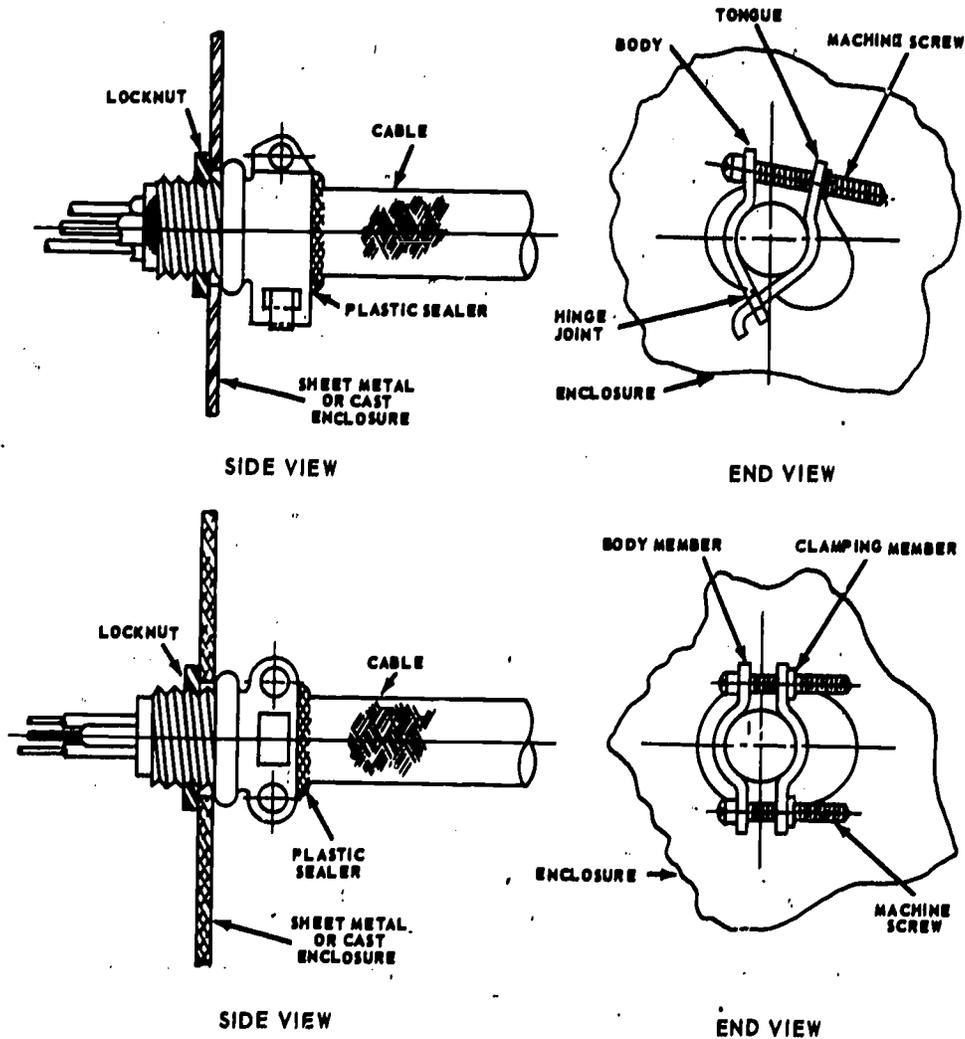


Figure 4-6.—Cable clamps.

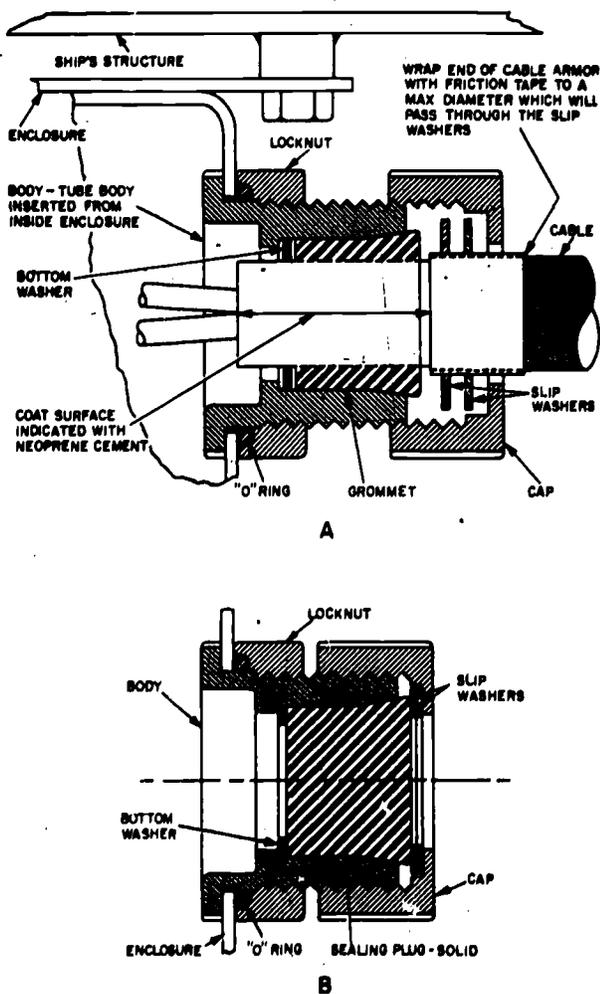

77.10
Figure 4-7.— Representative nylon stuffing tube installations.

The nylon tube is a lightweight, positive-sealing, noncorrosive stuffing tube, which requires only minimum maintenance for the preservation of watertight integrity (fig. 4-7). The watertight seal between the entrance to the enclosure and nylon body of the stuffing tube is made with a neoprene "O" ring, which is compressed by a nylon locknut. A grommet type, neoprene packing is compressed by a nylon cap to accomplish a watertight seal between the body of the tube and the cable. Two slip washers act as compression washers on the grommet as the nylon cap of the stuffing tube is tightened. Grommets of the same external size, but with different sized holes for the cable, are

available. This allows a single-size stuffing tube to be used for a variety of cable sizes, and makes it possible for nine sizes of nylon tubes to replace 23 sizes of aluminum, steel, and brass tubes.

The nylon stuffing tube is available in two parts. The body, "O" ring, locknut, and cap comprise the tube; and the rubber grommet, two slip washers, and one bottom washer comprise the packing kit.

A nylon stuffing tube that provides cable entry into an equipment enclosure is applicable to both watertight and nonwatertight enclosures (fig. 4-7A). Note that the tube body is inserted from inside the enclosure. The end of the cable armor, which will pass through the slip washers, is wrapped with friction tape to a maximum diameter. To ensure a watertight seal, one coat of neoprene cement is applied to the inner surface of the rubber grommet and to the cable sheath where it will contact the grommet. After the cement is applied, the grommet is immediately slipped onto the cable. The paint must be cleaned from the surface of the cable sheath before applying the cement.

Sealing plugs are available for sealing nylon stuffing tubes from which the cables have been removed. The solid plug is inserted in place of the grommet, but the slip washers are left in the tube (fig. 4-7B).

A grounded installation that provides for cable entry into an enclosure equipped with a nylon stuffing tube is shown in figure 4-8. This type of installation is required only when radio interference tests indicate that additional grounding is necessary within electronic spaces. In this case, the cable armor is flared and trimmed to the outside diameter of the slip washers. One end of the ground strap, inserted through the cap and one washer, is flared and trimmed to the outside diameter of the washers. Contact between the armor and the strap is maintained by pressure of the cap on the slip washers and the rubber grommet.

Watertight integrity is vital aboard ship in peacetime or in combat. Just one improper cable installation could endanger the entire ship. For example, if one THA-4 cable (.812 inches in diameter) is replaced by the newer TSGA-4 cable (.449 inches in diameter) but the fittings

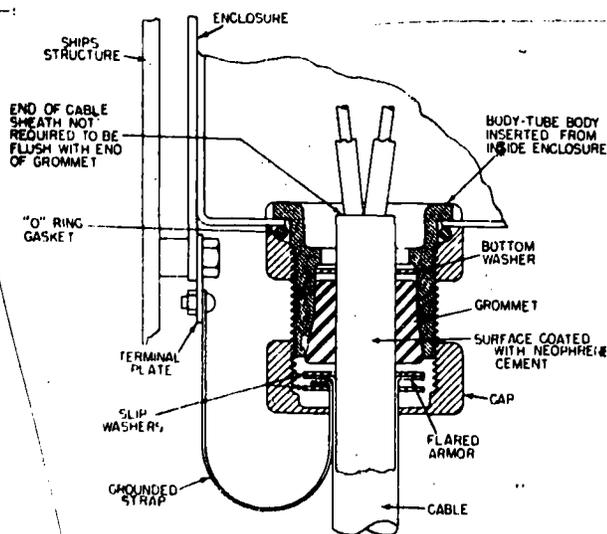


Figure 4-8.— Nylon stuffing tube grounded installation.

77.11

passing through a watertight bulkhead are not changed to the proper size, the result could be two flooded spaces in the event of a collision or enemy hit.

Deck Risers


Where one or two cables pass through a deck in a single group, kickpipes are provided to protect the cables against mechanical damage. Steel pipes are used with steel decks, and aluminum pipes with aluminum and wooden decks. Inside edges on the ends of the pipe and the inside wall of the pipe must be free of burrs to prevent chafing of the cable. Kickpipes including the stuffing tube shall have a minimum height of 9 inches and a maximum of 18 inches. Where the height exceeds 12 inches, a brace is necessary to ensure rigid support. Where the installation of kickpipes is required in nonwatertight decks, a conduit bushing may be used in place of the stuffing tube.

When three or more cables pass through a deck in a single group, riser boxes must be used to provide protection against mechanical damage. Stuffing tubes are mounted in the top of riser boxes required for topside weather-deck applications. For cable passage through watertight decks inside a vessel the riser box

may cover the stuffing tubes if it is fitted with an access plate of expanded metal or perforated sheet metal. Stuffing tubes are not required with riser boxes for cable passage through nonwatertight decks.

Cable Supports

The single cable strap is the simplest form of cable support. The cable strap is used to secure cables to bulkheads, decks, cable hangers, fixtures, etc. (fig. 4-9). The one-hole cable strap (fig. 4-9A) may be used for cables not exceeding five-eighths of an inch in diameter. The two-hole strap (fig. 4-9B) may be used for cables over five-eighths of an inch in diameter. The spacing of simple cable supports, such as those shown in figure 4-9 must not exceed 32 inches center to center. A more complex cable support is the cable rack, which consists of

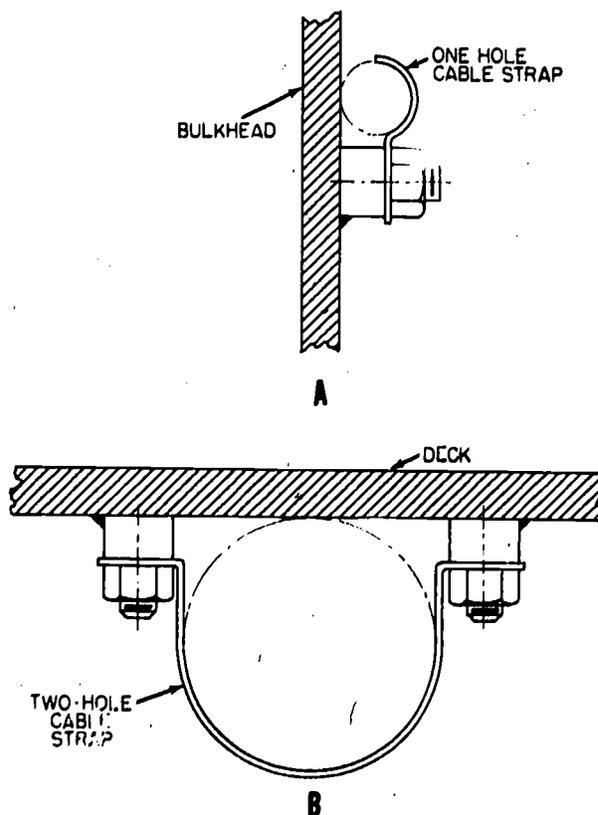

77.15

Figure 4-9.— Single cable strap applications.

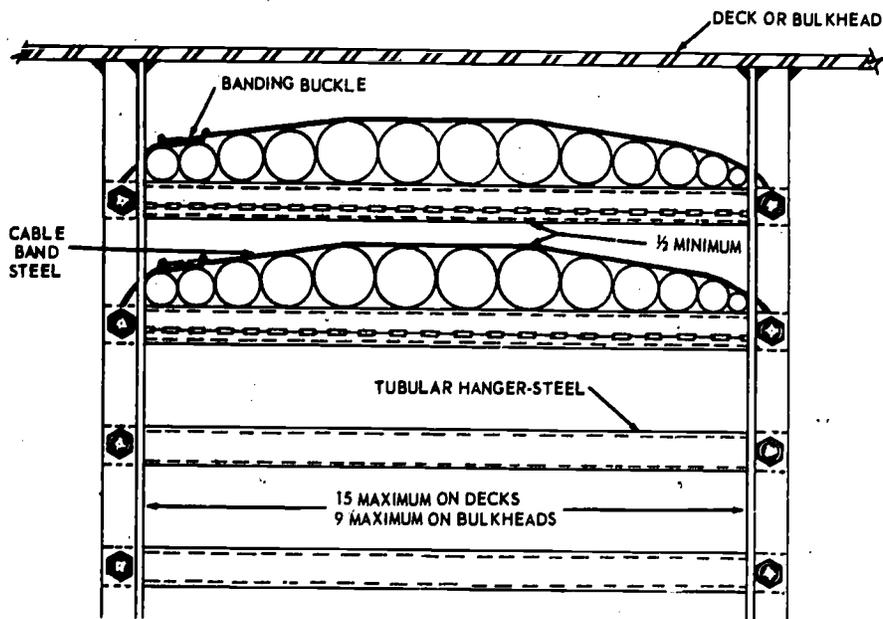


Figure 4-10.—Cables installed in a cable rack.

77.16

the cable hanger, cable strap, and hanger support (fig. 4-10).

Banding material is five-eighths of an inch wide, and may be zinc-coated steel, corrosion resistant steel or aluminum, depending on the requirements of the installation. For weather-deck installations, use corrosion resistant steel band with copper armored cables; zinc-coated steel with steel armor; and aluminum with aluminum armor.

When applying banding material apply one turn of banding for a single cable less than one inch in diameter. Apply two turns of banding for single cables of one inch or more in diameter and for a row of cables. Apply three turns of banding for partially loaded hangers where hanger width exceeds the width of a single cable or a single row of cable by more than one-half inch.

Cables must be supported so that the sag between supports, when practicable, will not exceed one inch. Five rows of cables may be supported from an overhead in one cable rack, and two rows of cables may be supported from a bulkhead in one cable rack. As many as 16 rows of cables may be supported in main cableways, in machinery spaces and boiler rooms.


Not more than one row of cables shall be installed on a single hanger.

Modular cable supports (fig. 4-11) are being installed on a number of naval ships. The modular method saves over 50 percent in cable-pulling time and labor. Groups of cables are now passed through wide opened frames, instead of being inserted individually in stuffing tubes. The frames are then welded into the metal bulkheads and decks for cable runs.


The modular method of supporting electrical cables from one compartment to another is designed to be fireproof, water- and air-tight.

Modular insert semicircular grooved twin half-blocks are matched around each cable to form a single block. These grooved insert blocks which hold the cables (along with the spare insert solid blocks) fill up a cable support frame.


During modular armored cable installation (fig. 4-11B), a sealer is applied in the grooves of each block to seal the space between the armor and cable sheath. The sealer penetrates the braid and prevents air passage under the braid. A lubricant is used when installing the blocks which allow the blocks to slide easily over each other when packing and compressing them over the cable. Stay plates are normally inserted

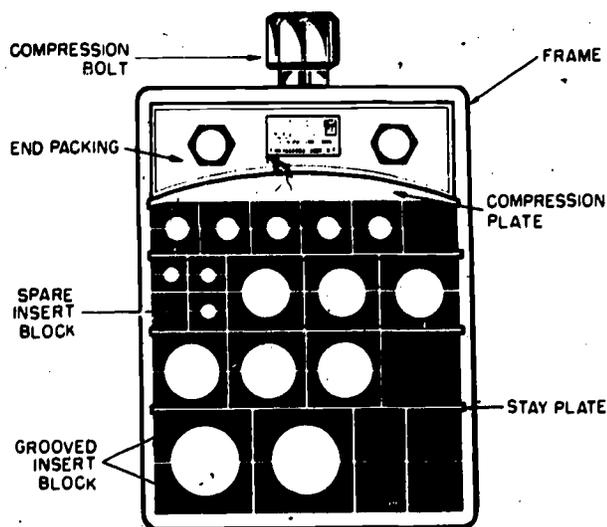

A

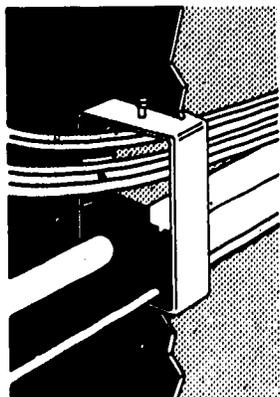

B

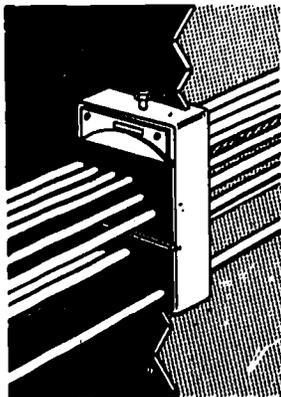

C

77.296

Figure 4-11.—Modular cable supports.

between every completed row to keep the blocks positioned and help distribute compression evenly throughout the frame. When a frame has been built up, a compression plate is inserted and tightened until there is sufficient room to insert the end packing.

To complete the sealing of the blocks and cables, the two bolts in the end packing are tightened evenly until there is a slight roll of the insert material around the end packing metal washers. This indicates the insert blocks and cables are sufficiently compressed to form

a complete seal. The compression bolt is then backed off about 1/8 turn.

When removing cable from modular supports, first tighten down the compression bolt thus pushing the compression plate further into the frame in order to free the split end packing. This end packing is then removed by loosening the two bolts which separate the metal washers and the end packing pieces. The compression bolt is backed off, loosening the compression plate. This plate is then removed, permitting full access to the insert blocks and cables.

Cable Blueprints

For elementary and isometric blueprints of ship's electrical cable wiring diagrams, their care and stowage, and the correction of blueprints after modification of their circuits, see *Blueprint Reading and Sketching*, NAVEDTRA 10077-C.

Cable Markings

Metal tags embossed with the cable designation are used to identify all permanently installed shipboard electrical cables. These tags, when properly applied, afford easy identification of cables for purposes of maintenance and replacement.

Two systems of cable marking (the old and the new) may be found aboard naval vessels. These systems are covered in chapter 4 of *Blueprint Reading and Sketching*, NAVEDTRA 10077-C.

Equipment Marking

All distribution panels and bus transfer equipment are provided with cabinet information plates. These plates contain the following information in the order listed: (1) the name of the space, apparatus, or circuits served; (2) the service (power, lighting, electronics, etc.) and basic location number; and (3) the supply feeder number. For example,

CREW LIVING SPACE, FRAMES
FIRST PLATFORM
LIGHTING PANEL 4-108-2
2S-4L-(4-108-2).

If a panel contains two or more sets of buses and each set is supplied by a separate feeder, the number of each feeder will be indicated on the identification plate.

Distribution panels are provided with circuit information plates adjacent to the handle of each circuit breaker or switch. These plates contain the following information in the order listed: (1) the circuit number, (2) the name of the apparatus or circuit controlled, (3) the location of apparatus or space served, and (4) the circuit breaker element or fuse rating. Red markers are attached to circuit information plates to indicate vital circuits. Information plates for circuit breakers supplying circle W and circle Z class ventilation systems contain, in addition to the red marker, the class designation of the ventilation system supplied. Information plates without markings are provided for spare circuit breakers mounted in distribution panels. Panel switches controlling circuits that are deenergized during darkened ship operations are marked DARKENED SHIP. The ON and OFF position of these switches are marked LIGHT SHIP and DARKENED SHIP, respectively.

Circuit information plates are provided inside fuse boxes (adjacent to each set of fuses) and indicate the circuit controlled; the phase, or polarity; and the ampere rating of the fuse.

Conductor Identification

Each terminal and connection of rotating a-c and d-c equipment, controllers, and transformers is marked with standard designations. This may be accomplished with synthetic resin tubing or fiber wire markers located as close as practicable to equipment terminals, with fiber tags near the end of each conductor, or by stamping the terminals.

Individual conductors may also be identified by a system of color coding. Color coding of individual conductors in multiconductor cable is in accordance with color coding tables contained in chapter 320 Naval Ships Technical Manual. The color coding of conductors in power and lighting cables is shown in table 4-2. Neutral polarity, (±), where it exists, is always identified by the white conductor.

Cable Ends

When connecting a newly installed cable to a unit of electrical equipment, the first thing to determine is the proper length of the cable. To do this, form the cable run from the last cable support to the equipment by hand, allowing sufficient slack and radius of bend to permit repairs without renewal of the cable. Carefully estimate where the armor on the cable will have

to be cut to fit the stuffing tube (or connector), and mark the location with a piece of friction tape. In addition to serving as a marker, the tape will prevent unraveling and hold the armor in place during cutting operations.

Determine the length of the cable inside the equipment, using the friction tape as a starting point. Whether the conductors go directly to a connection or form a laced cable with breakoffs, carefully estimate the length of the longest conductor, add approximately 2 1/2 times its length, and mark this position with friction tape. The extra cable length will allow for mistakes in attaching terminal lugs and possible rerouting of the conductors inside the equipment. The length of the cable is now known and it can be cut.

The armor must be removed next. This may be accomplished by using a cable stripper of the

Table 4-2.—Color Code for Power and Lighting Cable Conductor

System	No. of Conductors in Cable	Phase or Polarity	Color Code
3-phase a-c	3	A B C	Black White Red
	2	AB	A, black B, white
	2	BC	B, white C, black
	2	AC	A, black C, white
3-wire d-c	3	+ ± -	Black White Red
	2	+ and ±	+, black ±, white
	2	± and -	±, white -, black
	2	+ and -	+, black -, white
2-wire d-c	2	+ -	Black White

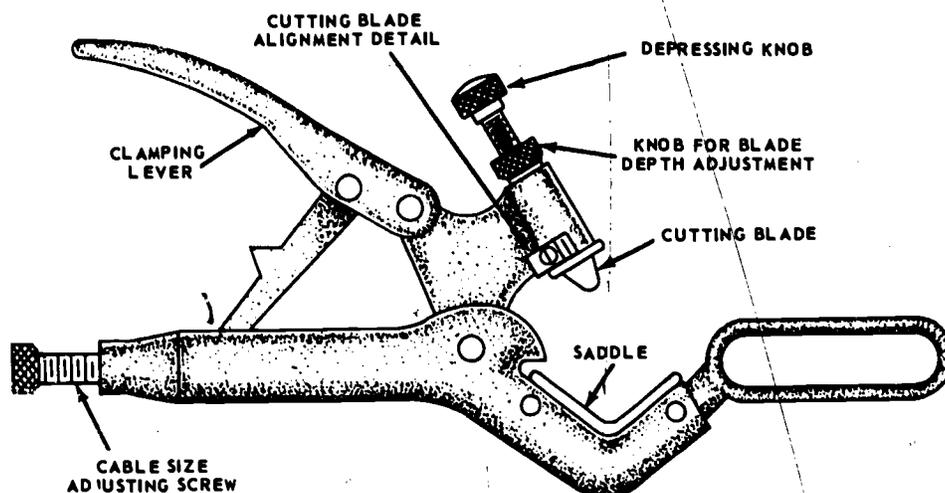


Figure 4-12.— Cable strippers.

77.22

type shown in figure 4-12. Care must be taken not to cut or puncture the cable sheath where the sheath will contact the rubber grommet of the nylon stuffing tube (fig. 4-7).

Remove the impervious sheath, starting a distance of at least 1 1/4 inch (or as necessary to fit the requirements of the nylon stuffing tube) from where the armor terminates. The cable stripper should be used for this job. Do not take a deep cut because the conductor insulation can be easily damaged. Flexing the cable will help separate the sheath after the cut has been made. Clean the paint from the surface of the remaining impervious sheath exposed by the removal of the armor (this paint is conducting).

Once the sheath has been removed, the cable filler can be trimmed with a pair of diagonal cutters.

The proper method of finishing and protecting cable ends that do not require end sealing is shown in figure 4-13. For cables entering enclosed equipment (connection boxes, outlet boxes, fixtures, etc.) the method shown in figure 4-13A, should be used. An alternate method (when synthetic resin tubing is not readily obtainable) is to apply a coat of air drying insulation varnish to the insulation of each conductor as well as to the crotch of the cable. The end of the insulation on each conductor is reinforced and served with treated glass cord, colored to indicate proper phase marking. For cables entering open equipment (switchboards, etc.) the method shown in figure 4-13B, should be used. An alternate

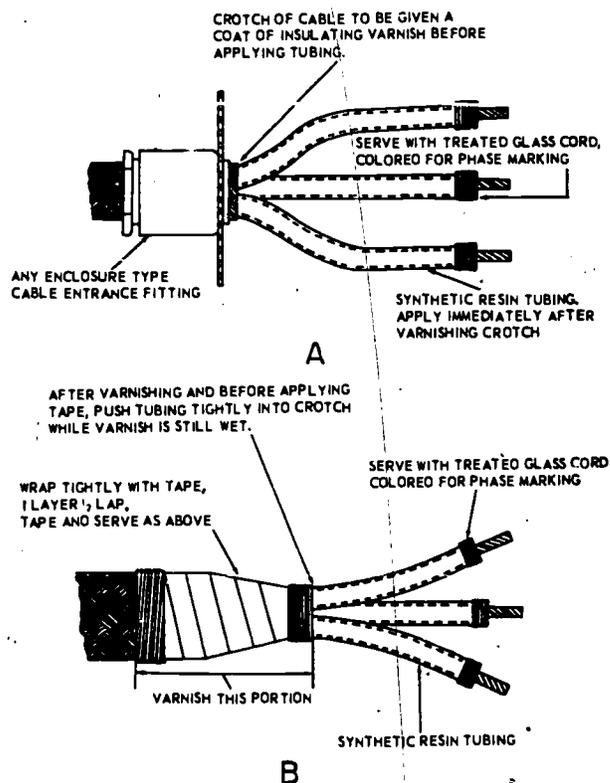


Figure 4-13.— Protecting cable ends.

29.226

method is to wrap each conductor tightly with one layer of synthetic tape (half lapped) and serve with cord as in the tubing method. Apply tape, air-drying varnish, and serve the crotch and part of the cable for a distance about 2 inches back of the crotch.

Conductor Ends

Wire strippers (fig. 4-14) are used to strip insulation from the conductors. Care must be taken to avoid nicking the conductor stranding while removing the insulation. Side, or diagonal, cutters should not be used for stripping insulation from conductors.

Conductor surfaces must be thoroughly cleaned before the terminals are applied. After baring the conductor end for a length equal to the length of the terminal barrel, clean the individual strands thoroughly and twist them tightly together. Solder them to form a neat, solid terminal for fitting either approved clamp type lugs or solder type terminals. If the solder type terminal is used, tin the terminal barrel and clamp it tightly over the prepared conductor (before soldering) to provide a solid mechanical joint. Conductor ends need not be soldered for use with solderless type terminals applied with crimping tool. Do not use a side, or diagonal, cutter for crimping solderless type terminals.

Solderless type terminals may be used for all lighting, power, interior communications and fire control applications, except with equipment provided with solder type terminals by the manufacturer, and with wiring boxes or equipment in which electrical clearances would be reduced below minimum standards by the use of the solderless type terminal.

For connection under a screwhead where a standard terminal is not practicable, an alternate method can be used. Bare the conductor for the required distance and thoroughly clean the strands. Then twist the strands tightly together, bend them around a mandrel to form a suitable size loop (or hook where the screw is not removable), and dip the prepared end into solder. Remove the end, shake off the excess solder, and allow it to cool before connecting it.

After the wiring installation has been completed, the insulation resistance of the wiring

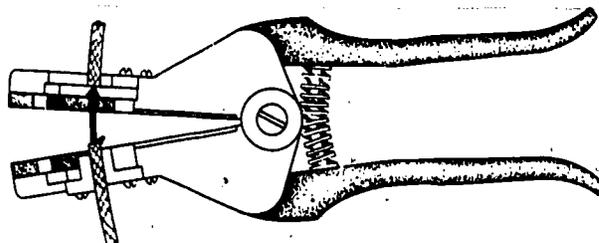


Figure 4-14.— Mechanical wire strippers. 1.24

circuit must be measured with a megger or similar (0-100 megohm, 500-volt d-c) insulation resistance measuring instrument. Do not energize a newly installed, repaired, or modified wiring circuit without first ascertaining (by insulation tests) that the circuit is free of short circuits and grounds.

Small refrigerators, drinking fountains and coffee makers are plugged into receptacles connected directly to the ship's wiring. To remove stress from the equipment terminal block and its connected wiring, rigidly clamp the cable to the frame of the equipment close to the point where the cable enters the equipment.

Lacing Conductors

Conductors within equipment must be kept in place in order to present a neat appearance and facilitate tracing of the conductors when alterations or repairs are required. When conductors are properly laced, they support each other and form a neat, single cable.

The most common lacing material is waxed cord. The amount of cord required to single lace a group of conductors is approximately 2 1/2 times the length of the longest conductor in the group. Twice this amount is required if the conductors are to be double laced.

Before lacing, lay the conductors out straight and parallel to each other. Do not twist them together because twisting makes conductor lacing and tracing difficult.

A shuttle on which the cord can be wound will keep the cord from fouling during the lacing operations. A shuttle similar to the one shown

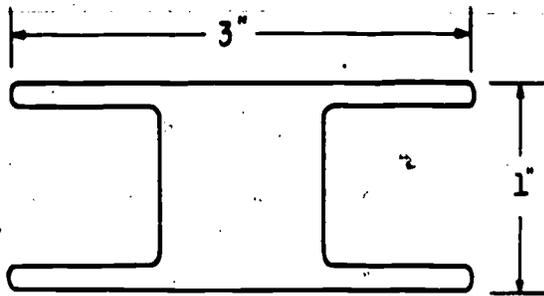


Figure 4-15.—A lacing shuttle. 5.138


in figure 4-15 may easily be fashioned from aluminum, brass, fiber, or plastic scrap. Rough edges of the material used for the shuttle should be smoothed to prevent injury to the operator and damage to the cord. To fill the shuttle for single lace, measure the cord, cut it, and wind it on the shuttle. For double lace, proceed as before, except double the length of the cord before winding it on the shuttle, and start the ends on the shuttle in order to leave a loop for starting the lace.

Some installations, however, require the use of twisted wires. One example is the use of "twisted pairs" for the a-c filament leads of certain electron tube amplifiers, reducing the effect of radiation of their magnetic field, thus helping to prevent annoying hum in


the amplifier output. The EM should duplicate the original layout, when relacing any wiring harness.

Single lace may be started with a square knot and at least two marling hitches drawn tight. Details of the square knot and the marling hitch are shown in figure 4-16. Do not confuse the marling hitch with a half hitch. In the marling hitch, the end is passed over and under the strand (fig. 4-16A). After forming the marling hitches, draw them tight against the square knot (fig. 4-16B). The lace consists of a series of marling hitches evenly spaced at one-half inch to one-inch intervals along the length of the group of conductors, as indicated in figure 4-16C.


When dividing conductors to form two or more branches, follow the procedure illustrated in figure 4-17. Bind the conductors with at least

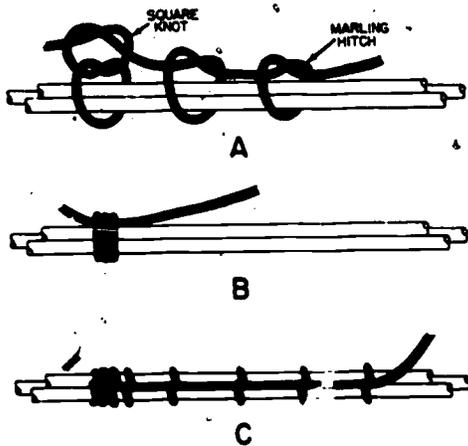


12.247(77A)A
Figure 4-16.—Applying single lace.

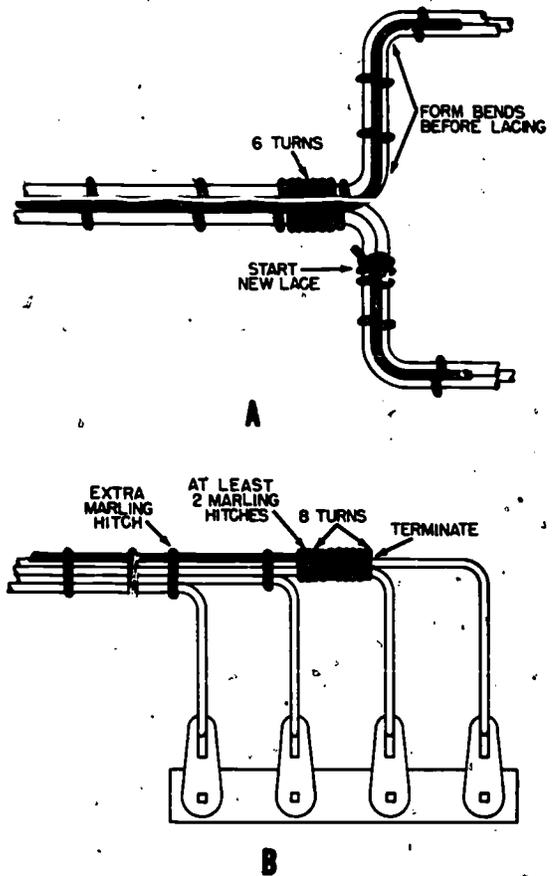


12.247(77A)B
Figure 4-17.—Lacing branches and breakouts.

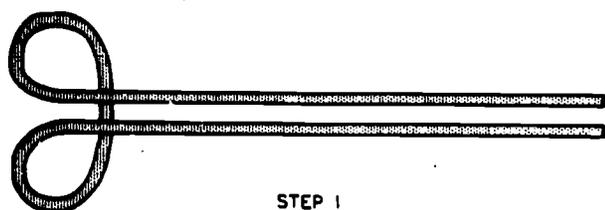


STEP 1

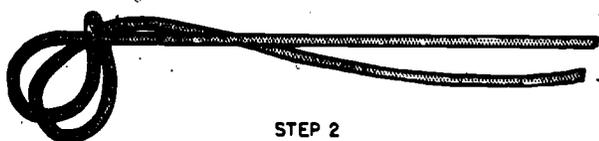

STEP 2

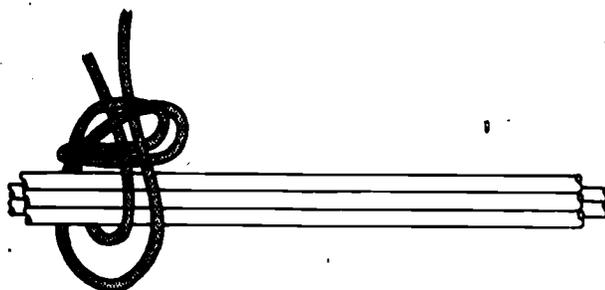

STEP 3

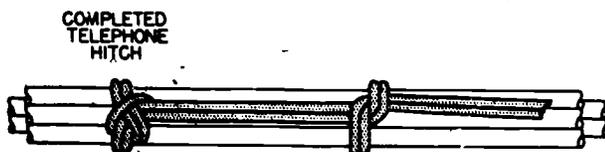

COMPLETED TELEPHONE HITCH

STEP 4


5.139.1

Figure 4-18.—Starting double lace with the telephone hitch.

six turns between two marling hitches, and continue the lacing along one of the branches (fig. 4-17A). Start a new lacing along the other branch. To keep the bends in place, form them in the conductors before lacing. Always add an extra marling hitch just prior to a breakout (fig. 4-17B).

Double lace is applied in a manner similar to single lace, except that it is started with the telephone hitch and is double throughout the length of the lacing (fig. 4-18). Double as well as single lace may be terminated by forming a loop from a separate length of cord and using it to pull the end of the lacing back underneath a serving of approximately eight turns (fig. 4-19).


Lace the spare conductors of a multiconductor cable separately, and secure them to active conductors of the cable with a few telephone hitches. When two or more cables enter an enclosure, each cable group should be laced separately. When groups parallel each other, they should be bound together at intervals with telephone hitches (fig. 4-20).

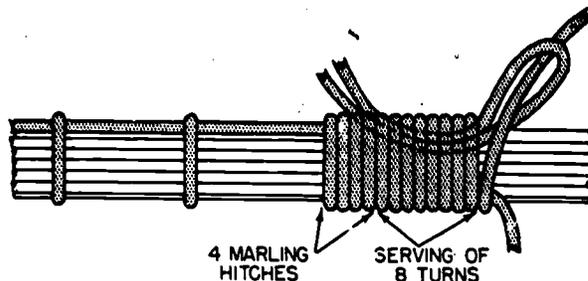

4 MARLING HITCHES

SERVING OF 8 TURNS


STEP 1

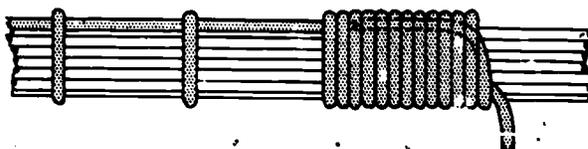

STEP 2

5.140.1

Figure 4-19.—The loop method of terminating the lace.

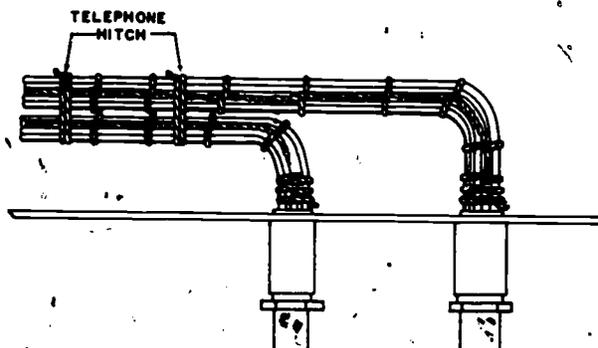

5.139

Figure 4-20.—Binding cable groups with the telephone hitch.

Conductor ends (3000 cm or larger) should be served with cord to prevent fraying of the insulation (fig. 4-21). When conductor ends are served with glass cord colored for phase marking, the color of the cord should match the color of the conductor insulation.


GROUNDING RECEPTACLES

Aboard naval vessels, grounded receptacles are used with grounded plugs and portable cables having a ground wire, which grounds the metallic case and exposed metal part of portable tools or equipment to the ship's structure when the plugs are inserted in the receptacles. The ground wire prevents the occurrence of dangerous potentials between the tool or equipment housing and ship's structure, and thus protects the user from fatal shock.


The grounded receptacles most widely used aboard naval vessels have metal enclosures, which are connected internally to the ground terminal of the receptacle. Grounding the enclosures will ground the grounded terminal. Grounded receptacles with plastic enclosures are also in use aboard some vessels. In some types, the grounded terminal is connected to ground through a conductor. In later types, the grounding ferrules are molded within the mounting. The ground wire is also molded within the bottom of the box and connects the grounding terminal to the metal insert. The cross-sectional area of the conductor used to connect the grounded terminal to ground must be at least the same size or greater than that of the conductors that supply such a receptacle.

The routine ground continuity test of each installed receptacle is required by PMS. Prior to ground testing a receptacle, it must be de-energized, safety tagged, and checked for voltage. This safety precaution will protect you and your test equipment.

In one method of testing, you connect one test lead of an ohmmeter or multimeter to the ground lead of a dummy plug of the receptacles to be tested. The power prongs of this plug are to be left unconnected. Insert the plug into the receptacle to be tested. Touch the probe of the other test lead of the meter to the ship's structure. The resulting reading should be less than one ohm.

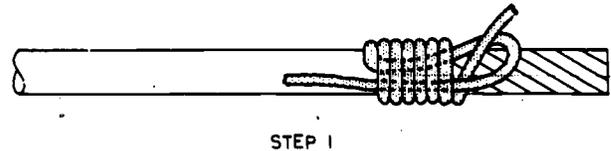

 STEP 1



STEP 2

Figure 4-21.—Serving conductor ends.

Unsatisfactory receptacles should be immediately repaired or be tagged to indicate that they must not be used. Keep a record of the locations of all grounded receptacles and the dates they were tested.

On the older ships with single 125-volt, 10-ampere, single-phase a-c (or 2-wire d-c), stub type watertight receptacles are used for all applications except for electric shavers and some electronic applications. For electric shavers and some electronic applications, double 125-volt, 15-ampere, single-phase a-c (or 2-wire d-c) bladed type receptacles are used.

On new ships, general-purpose grounded receptacles are provided as follows:

1. Double 125-volt, 15-ampere, single-phase a-c (or 2-wire d-c) bladed type receptacles are used for all below-deck applications.
2. Single 125-volt, 15-ampere, single-phase a-c (or 2-wire d-c) watertight bladed type receptacles are installed on radar platforms and open bridges for use of electronic test equipment.
3. Single 125-volt, 10-ampere, single-phase a-c (or 2-wire d-c) stub type submersible receptacles are used topside and for applications where a watertight receptacle is required, except on radar platforms and open bridges.

Receptacles must be spaced to permit the use of portable tools at any place on the ship without requiring more than 50 feet of flexible cable between a tool and receptacle. The reasons are twofold: (1) closer spacing of receptacles

is wasteful and (2) wider spacing of receptacles results in excessively long and thus a higher resistance grounding conductor which may not protect the operator from shock if a portable equipment fault places potential on the metal case.

Receptacles installed for specific applications, such as radiant heaters, are included in the receptacle spacing to meet the 50-foot limit and therefore may be considered as available for portable tools.

If additional receptacles are required to meet the 50-foot limit, make sure that added receptacles do not result in overloading the circuits. In some ships the receptacles are on an isolated circuit, as an additional means of preventing fatal shocks.

PLUGS AND CORDS

Nonconducting plastic-cased portable electric tools do not require grounding cords or plugs. The two conductor cords and two-prong ungrounded connector plugs furnished on these plastic-cased tools are acceptable and can be inserted in blade type receptacles aboard ship which may be labeled "WARNING: Insert 3-prong grounded plugs only." CAUTION: There is a wide range of miscellaneous portable electric equipment that may be received aboard ship without being provided with a cord that has a grounding conductor and a grounded plug that is not plastic encased. This equipment includes galley equipment (fruit juice extractors, food-mixing machines, coffee pots, toasters); office equipment (adding machines, addressograph machines); shop equipment (key duplicating machines, valve grinders, mica undercutters, hot-plates); medical equipment (infrared lamps, ultraviolet lamps, sterilizers); barber shop equipment (hair clippers, and laundry equipment (flatirons).

Electrical equipment that is permanently mounted to the hull of the ship does not require additional ground wire. CAUTION: Shock mounts prevent good grounding.

All 115-volt or 220-volt single-phase a-c and all 115-volt or 230-volt two-wire d-c electrically operated equipment now on board ship which do not have a cord with a grounding conductor and grounded plug, and all such equipment subsequently issued to the ship without a cord

which has a grounding conductor and grounded plug, should be provided with a three-conductor flexible cable with grounded plug except as indicated previously.

The three-conductor flexible cable should be type SO or ST color-coded black, white, and green, as listed in the Navy Stock List of General Stores, Group 61. For general use, the plugs should be bladed and have U-shaped grounding prongs. These plugs are available for use with small and large diameter cords. Stub-type plugs which can be made watertight when in use (formerly designed as type SNR are now furnished with plastic shells.

Test of Plug Connections

Before using portable electrical equipment for the first time, test the plug connections of the equipment for correct wiring. Do the testing in a workshop equipped with a nonconducting surface workbench and approved rubber deck covering. Conduct the test in accordance with current PMS.

All portable electrical equipment must be tested and visually inspected. A list of such equipment must be established. The following items should be included: portable hand-held electric tools that are permanently charged out or on loan to other shipboard departments or divisions; electric equipment which is frequently touched, such as hot plates, coffee makers, toasters, portable vent sets, movie projectors, and office equipment. All faulty equipment must be removed from service until repaired and properly safety checked.

Bladed Plugs (Round or U-shaped Contact)

Before testing a bladed plug, check to see that the insulation and contacts are in good condition; and that the conductors are secured properly under the terminal screws. Using a volt-ohmmeter, measure the resistance from the ground contact to the equipment housing. The measurement must be less than one ohm. Move or work the cable around by bending or twisting it. A change of resistance indicates broken strands in the grounding conductor which means the cable must be replaced.

Navy Type SNR Plugs.

You must also examine these plugs to make sure the insulation and contacts are in good condition and that the conductors are secured properly under the terminal screws. Then check to see that the plug is clean and that the contacts (in particular the ground contact) are free of hangover fringes of molded insulation which could prevent making good contact. As in testing the bladed plugs, measure the resistance from the ground contact to the equipment housing. Again the measurement must be less than one ohm. If bending or twisting the cable causes a change in resistance, the strands in the grounding conductor are broken and the cable must be replaced. The type SNR plug must be checked on equipment and extension cord. Using a megohmmeter, measure the insulation resistance between the brass shell and each contact on the plug. Push on, pull on, twist, and bend the cable while taking measurements. If the resistance measures less than one megohm, check for twisted bare wires in the plug. Rewire a defective plug and replace the brass shell of the plug with a nonconducting plastic (nylon) shell. If the plug has to be replaced due to wear and tear, renew the plug tip and replace the brass plug shell with a nylon shell. Reuse brass shells only if the nylon plug shells are not in stock. In this case, rewire and retest the brass shell plug for temporary use until the nylon shell becomes available. There are two sizes of nylon plug shells. One size is used for 0.425-inch-diameter cables or smaller, the other size for 0.560-inch-diameter cables.

Workmanship

Cord conductors must be fastened securely and properly to wiring terminals. Aboard ship in portable equipment, extension cords, portable receptacles, and plugs, the conductor ends are crimped or soldered into standard eyelets (or hooks where the terminal screws are not removable). If eyelets or hooks are not available, the strands of each conductor are twisted together tightly and formed into an eyelet or hook. Then the formed eyelet or hook is coated with solder in order to hold the strands together unless manufacturer's instructions forbid tinning of the leads. There must be no loose strands to come in contact with metal parts, which would place line potential on the metal shell of the plug when it is partially inserted in an energized receptacle. A fatal hand-to-hand electrical shock can result if the receptacle is on the end of an energized extension cord and has its metal case raised to line potential (of

opposite polarity to that on the shell of the plug) by loose conducting strands at the cord connection to the receptacle.

Examine ALL cords to make sure they are connected properly to their terminals. Remove from service damaged plugs and cords that are improperly connected, torn, or chafed. It is not intended that molded rubber plugs and receptacles in which the connections are encapsulated be cut open for examination of connections.

If the grounding conductor which is connected to the metallic equipment casing is inadvertently connected to a line contact of the plug, a dangerous potential will be placed on the equipment casing. The man handling the portable metal-cased equipment when it is plugged into a power receptacle will almost certainly receive a fatal shock since line voltage will be on the exposed parts of the equipment. Do not overlook the connections to the cord on each portable tool, equipment, or extension receptacle that is repaired aboard ship or delivered to the ship. Make sure that ALL connections are right before using the tool, equipment, or receptacle.

Extension cords for use with portable tools and equipment are authorized, and consist of 25 feet of three-conductor flexible cable (which includes the grounding wire) with a grounded plug attached to one end and a grounded type portable receptacle suitable for receiving the grounded type tool or equipment plug on the other end.

CASUALTY POWER CABLE

Suitable lengths of portable casualty power cables are stowed on naval vessels close to the locations where they may be needed for making temporary connections in the event the installed distribution systems are damaged. See chapter 5 for a description of the casualty power distribution system. Casualty power cable for a-c distribution systems is type THOF-42, which is capable of carrying 93 amperes at 40°C and 86 amperes at 50°C indefinitely and 200 amperes in an emergency. They are of suitable lengths and distributed throughout the ship in accordance with the Ship's Information Book. Metal tags installed on the cables designate their proper lengths and locations (fig. 4-22).

The portable cable ends are marked to identify the A, B, and C phases visually or by touch when

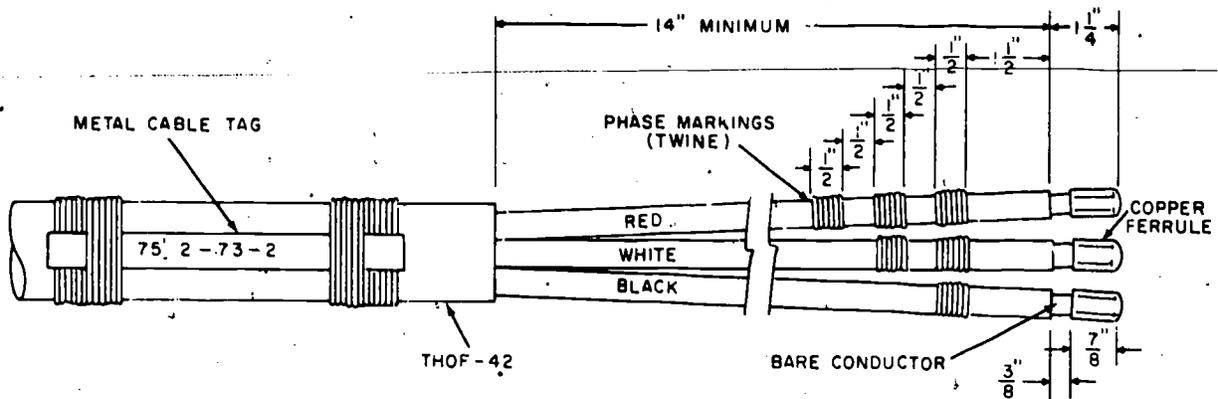


Figure 4-22.—Casualty, power cable—old method of serving.

77.311

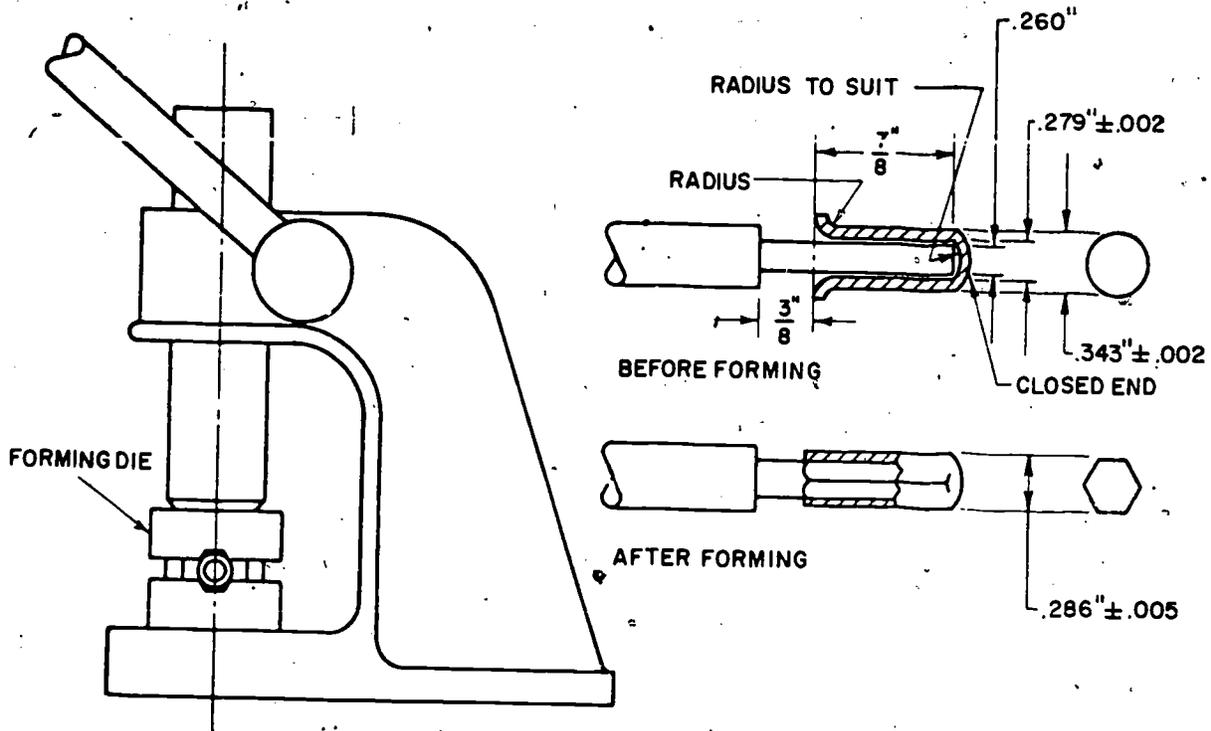


Figure 4-23.—Method of securing copper ferrule to conductor.

77.312

illumination is insufficient for visual identification. Phase A is color-coded black and has one serving on the conductor end; phase B is color-coded white and has two servings; and phase C is red with three servings. The insulation of the individual conductors is exposed to shipboard ambient temperatures and perhaps oil or oil fumes and accidental damage. After an exposure period of five years or more, the conductor insulation may have lost elasticity to the extent that it will crack when bent while being handled, such as it would be when the casualty power system is rigged for emergency use. The exposed ends of the individual conductors of the casualty power cables should be inspected in accordance with PMS. The best method of determining acceptable insulation is to bend sharply all conductors by hand. If no cracks develop, the insulation is satisfactory. If cracking occurs, repair a defective cable as follows:


1. Cut off the protruding ends and prepare new terminals as shown in figure 4-22. To avoid

inserting a bare conductor into bulkhead terminals, do not strip more than 1 1/4 inches of the insulation from the conductor.

2. Apply one heavy coat of clear air-drying varnish, grade CA, to the cut ends of the insulation. Varnishing makes the cut ends watertight.

3. Place a round copper ferrule on the conductor and secure by forming as shown in figure 4-23.

4. Use either of the following methods so the phase can be identified by touch and color. Method 1 (fig. 4-22). Apply close wrappings of cotton twine approximately 3/64 inch in diameter, knot securely, and coat with varnish. Use one wrapping on the black wire (phase A), two wrappings on the white wire (phase B), and three wrappings on the red wire (phase C). Method 2 (fig. 4-24). Instead of cotton twine, O-rings and heat-shrinkable colored tubing are used.

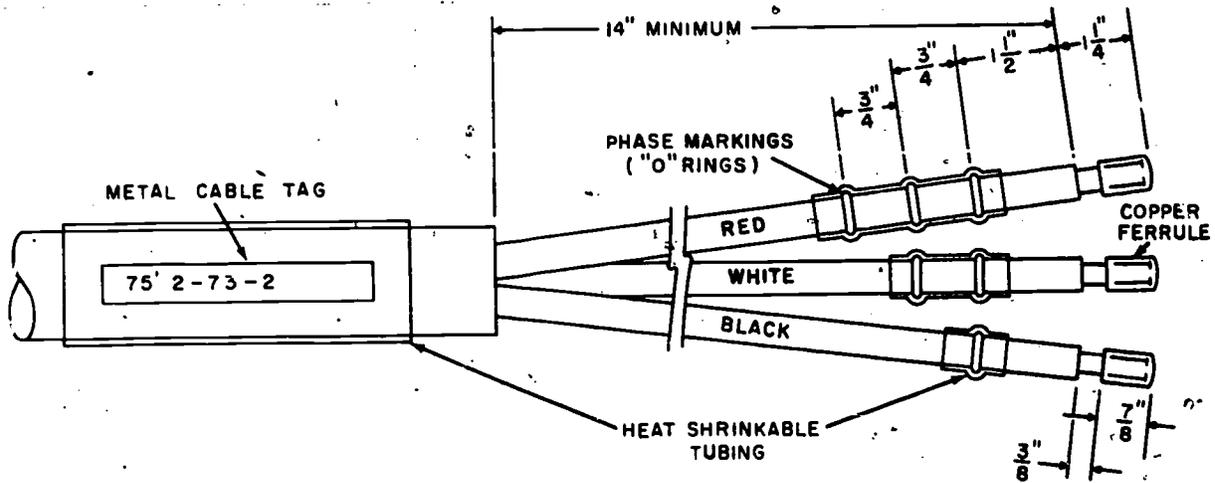

TUBING 3/4" I.D.	FSN
BLACK -----	5970-914-3118
WHITE -----	5970-812-1360
RED -----	5970-914-3117
CLEAR -----	5970-767-0511
CLEAR (2" I.D.) -----	5970-089-1454
"O" RING (3/8" I.D.) -----	5330-050-1211
HEAT GUN -----	4940-561-1002

77.313

Figure 4-24.—Casualty power cable—new method of serving.

The number of O-rings correspond to the number of wrappings in method 1 above. Measure the individual conductors for proper placement of the O-rings and roll the rings on the conductors. Then cut the tubing to proper lengths, slide them over the O-rings, and apply heat with a heat gun. The tubing will shrink around the conductors and rings, making clear and distinctive markings for proper identification of the casualty power cable. The O-rings, tubing, and heat gun used in this method are readily available in the naval supply system.


Portable casualty power cables should be rigged only when required for use or for practice in rigging the casualty power system. At all other times, they should be stowed in the cable rack indicated on the cable tag. When portable casualty power cables are rigged, connections should be made from the load to the supply to avoid handling energized cables.

Casualty power cables are a very important part of the ship's equipment. Each year the cables and terminal connections should be closely inspected and tested.

If in checking the work schedule, you find that the division PO has assigned you and a striker to accomplish the inspection of the casualty power cables, proceed as follows. Remove the appropriate maintenance requirement card from the file or cardholder in your shop. Read the card carefully, it tells what tools and material the job will require, safety precautions to observe, and procedures to follow. The total manhours the job should require will vary depending on your particular type ship.

SHORE POWER CABLE

A shore terminal box is provided at a suitable weatherdeck location aboard ship. Portable cables from shore power or from a ship alongside can be attached to the shore terminal box to supply power to the ship's distribution system. This same connection can be used to supply power from the ship's service generators to a ship alongside. The shore power system is designed to handle only enough power to operate necessary machinery and provide illumination for habitability and the accomplishment of necessary work. Care must be exercised not to exceed the capacity of the system when it is in use.

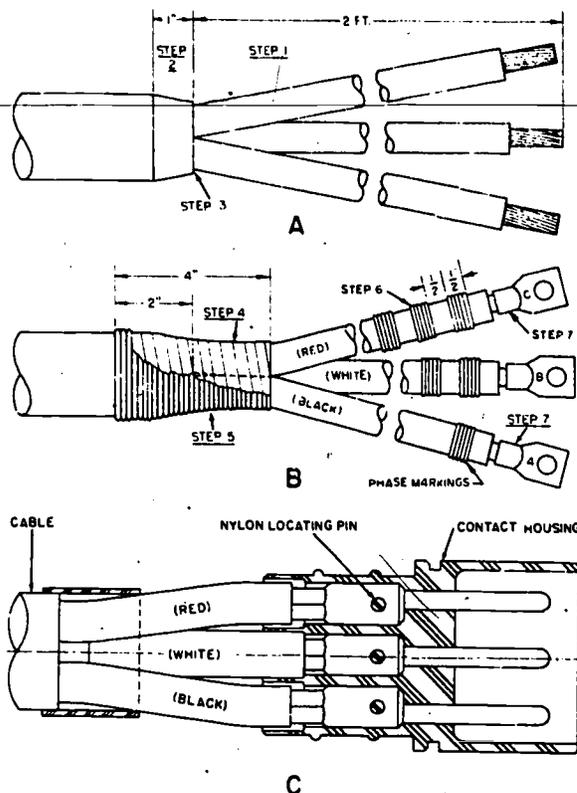

70.6:103.141
Figure 4-25.—Shore power cable ends.

Older type flexible shore power cables are connected to their shipboard terminal box(es) by bolted (fig. 4-25B) lugs. Later type cables have molded rubber plugs (fig. 4-25C) with contacts which are plugged into 400-ampere (3-terminal) receptacles.

For a-c systems, the flexible shore power cables are 3-conductor, 400,000 cm (type THOF-400). These are rated 366-amp and 338-amp in ambient temperature of 40°C and 50°C, respectively. Where practical for maintaining the best voltage regulation, several cables should be connected to limit each conductor's current below 250 amperes. However, all cables should be able to safely carry 400-ampere loads for 2 to 3 hours when the desired arrangement is not practical.

The lug ends of all shore-power cables (if not already prepared when received aboard ship) should be made up in the following manner:

1. Remove the outer sheath from the cable for approximately 2 feet, or a sufficient distance to permit ready attachment to the shore terminal box (step 1, fig. 4-25A). Do not damage the insulation of the individual conductors.

2. Taper the end of the outer sheath, starting about 1 inch back from the cut end (step 2, fig. 4-25A).

3. Apply a coat of air-drying, insulating varnish to the crotch of the cable and allow it to dry (step 3, fig. 4-25A).

4. Apply two layers of pressure-sensitive synthetic resin tape or friction tape (half-lap), starting about 2 inches back of the crotch and finishing about 2 inches in front of the crotch (step 4, fig. 4-25B).

5. Reinforce and seize the tape with a serving of treated glass cord, and coat the completed serving with air-drying insulating varnish (step 5, fig. 4-25B).

6. Apply a serving of treated glass cord, colored for phase marking (step 6, fig. 4-25B).

7. Attach lugs as furnished with the ship's shore terminal box (step 7, fig. 4-25B). Stamp the lugs to indicate the phase (A, B, C) or polarity (+, -, -) of the conductors. The lug markings, the colored glass cord serving, and the color of the conductor should all agree with the phase and polarity code for light and power conductors (table 4-2).

The terminal connecting block, and terminals of the ship's shore terminal box must be plainly marked to indicate phase sequence or polarity, as appropriate. For example, the terminal of the black conductor should be stamped (A) to indicate phase A; or stamped (+) to indicate polarity. The color code of cables should not be implicitly trusted because the conductors (from exposure) may become discolored or lose their original coloring.

When practicable, follow these procedures in connecting shore power cables.

- Test the ship's shore terminal box for proper marking after energizing the shore terminal box from the ship's service generator. Check the phase sequence of a-c systems by testing the terminals with a phase-sequence indicator,

or check the polarity of d-c systems by testing the terminals with a polarity-indicating voltage tester. (A little later on in this chapter, you will find a description of the phase-sequence indicator and the procedure for checking phase sequence.)

- After determining the correct connections, secure the ship's power to the shore terminal box by opening the ship's shore power switch. Tag this switch in the manner prescribed for tagging circuits on which men are working.

- Rig the shore power cable and connect one end of it to the ship's shore terminal box. Make certain that the leads are properly connected in accordance with the terminal markings of the box.

- Check the terminals on the shore connection with a voltage tester, and after it has been determined that they are deenergized, connect the other end of the shore power cable leads.

- Energize the cable from the shore power supply, and test the phase sequence or polarity, depending on whether the system is a-c or d-c. Only after the phase sequence, or polarity, matches that of the ship's power may the ship safely be switched to shore power. The procedure for switching to shore power is given in chapter 5, A-C Power Distribution Systems.

Warning signs indicating the voltage of the cable should be attached to the shore power cable at intervals to warn personnel to keep clear of the cable. All connections must be tightly made to prevent damage to the terminals or leads as a result of overheating and arcing.

The procedures and precautions that follow apply to all portable cables as well as the shore power cables. Spliced portable cables are extremely dangerous and should not be used unless an emergency warrants the great risk involved. Portable cables must be of sufficient length to prevent their being subjected to longitudinal stresses and the need to be pulled taut to make connections. Current-carrying capacity must be ample for the expected power demand. The cable must be checked frequently to ascertain the degree of heating, and any cable that feels uncomfortably warm to the bare hand (placed outside the insulation) should be checked immediately for overloading or loose connections. Interconnections between lengths of portable cable

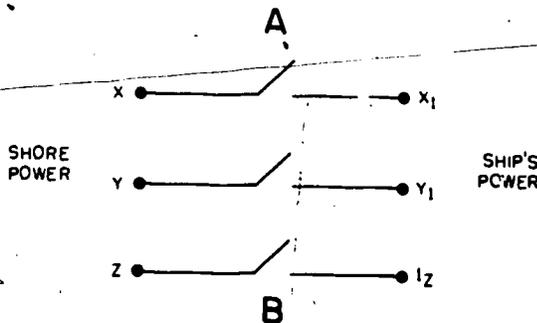
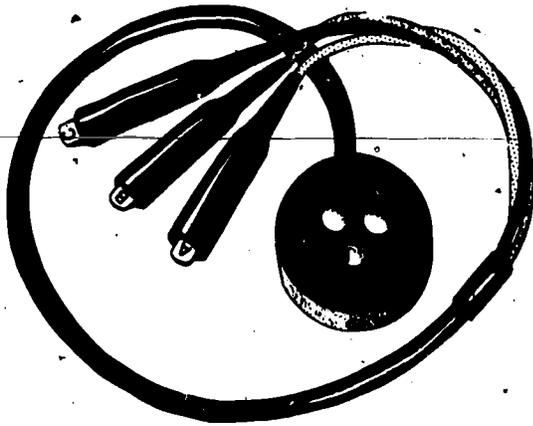


Figure 4-26.—Phase-sequence indicator and connections.

shall be made only on approved connection block or by other approved fittings that shall be suitably insulated and enclosed to eliminate all possible hazards from fire or shock to personnel.

Always support portable cables above decks, floor plates, and gratings. Never place them where they can be damaged by falling objects, by being walked on, or by contact with sharp corners or projections in the ship's hull or other objects. Where portable cables pass through doorways or hatches, provide stops to prevent cables from being pinched by a door or hatch cover.

Phase-Sequence Indicator

As mentioned earlier, a phase-sequence indicator is used in connecting shore cables to an a-c distribution system. Phase sequence is the sequence or order in which the voltages of a 3-phase system appear.

An approved type of phase-sequence indicator (fig. 4-26A) has a miniature, 3-phase induction motor and three leads labeled A, B, and C. The miniature motor can be started by means of a momentary contact switch. When the motor starts turning, you can tell its direction of rotation by looking through the three ports in the instrument. Clockwise rotation would indicate correct phase sequence. You stop the motor by releasing the momentary contact switch.

When connecting a-c shore power to the ship, connections must be made so that the phase sequences of the two systems will be the same. To ensure the phase sequences are the same use the phase sequence indicator (fig. 4-26), connect indicator terminal A to X1, B to Y1, and C to Z1 (fig. 4-26B) and press the contact switch, noting the direction of rotation of the motor. Next, move the A terminal to X, the B to Y, and the C to Z, and again press the switch. If the motor turns in the same directions as before, the phase rotation is the same and the connection can be made X to X1, Y to Y1, and Z to Z1. If the motor turns in the opposite direction, transpose the connections of any two of the incoming shore power leads before making the connection.

It is not absolutely necessary that A of the phase sequence indicator be connected to the top terminal, B to the center terminal, and C to the bottom terminal. The important thing is to ensure that the phase sequence indicator lead that was used on X1 be brought over to X, the one used on Y1 to Y, and the one used on Z1 to Z. If, after, shifting the indicator to X, Y, and Z, the rotation is counterclockwise, reverse any two of the shore power leads which will reverse the direction of rotation of the indicator, resulting in clockwise rotation.

RF COAXIAL CABLES

Radio frequency cables may look like power cables, but they require special handling and careful installation. These cables are vital to the proper operation of all electronic equipment and therefore must be installed and maintained with the greatest care.

Construction

Flexible radio-frequency transmission lines (coax) are two-conductor cables, one conductor of which is concentrically contained within the

other, as illustrated in figure 4-27. Both conductors are essential for efficient operation of the transmission line. The proper connectors and terminations are also necessary for efficient operation of the line.

The inner conductor may be either solid or stranded and may be made of unplated copper, tinned copper, or silver-plated copper. Special alloys may be used for special cables.

The dielectric insulating material is usually polyethylene or teflon, although neoprene or other rubber-like materials are occasionally used for pulse cables. (Pulse cables carry d-c pulses that may have relatively high voltages during a relatively short pulse time.)

Braided copper is usually used for the outer conductor; it may be tinned, silver plated, or bare. The outer conductor is chosen to give the best electrical qualities consistent with maximum flexibility.

The protective insulating jacket is usually a synthetic plastic material (vinyl resin). Neoprene rubber is generally used on pulse cable; silicone rubber jackets are used for high-temperature applications.

Armor is needed for protection. It may be braided aluminum, or sometimes galvanized steel, similar to that used on power cables.

Polyethylene is a gray, translucent material. Although it is tough under general usage, it will flow when subjected to heavy pressure for a period of time.

Teflon is a white opaque plastic material. This material will withstand high temperatures and will remain flexible as relatively low temperatures. It has a peculiar quality in that nothing will stick to it and it is unaffected by the usual solvents.

Synthetic rubber (neoprene) is very flexible and adheres tightly to metals (conductors). This flexible TRF type cable is used primarily as welding cable to carry high current.

Installing the Cables

When possible, cables are run along different well separated paths to reduce the probability of battle damage to several cables simultaneously. Wherever possible, high-temperature locations are avoided. Pulse cables are run separately, when possible, to reduce coupling and interference.

Because attenuation (power loss) in a line increases with its length, cables are kept as short as practicable, consistent with avoiding high-temperature locations, sharp bends, and strain on the cable.

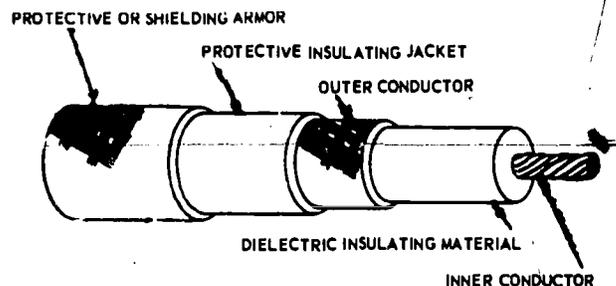


Figure 4-27.— Construction of flexible RF transmission line. 1.43

Flexible cables are flexible only in the sense that they will assume a relatively long bend radius. They are not intended to be stretched, compressed, or twisted; and they are installed with this in mind. Bends are made as large as practicable, the minimum radius of bend being 10 times the diameter of the cable.

The number of connectors are generally kept to a minimum to reduce line losses and maintenance problems.

Fabricated straps are used for holding the cables. They are snug, but not too tight. Back straps (which keep the cable away from a surface) are used in making cable runs along masts or in compartments that are subject to sweating. In more recent installations semicontour straps and cable bands are used for certain applications.

The exact methods of installing cables are included in the Electronics Installation and Maintenance Book, NAVSEA 0967-000-0110.

Remember, the Cable Comparison Guide, NAVSEA 0981-052-8090, contains information pertaining to all types of electrical shipboard cable.

CABLE MAINTENANCE

The primary purpose of electrical cable maintenance is to preserve the insulation resistance. Hence, it is important to know the characteristics of the insulating materials that are used in naval shipboard electrical equipment and the factors that affect insulation resistance.

Insulation

The purpose of insulation on electric cables and equipment is to (1) isolate current-carrying conductors from metallic and structural parts.

and (2) insulate points of unequal potential on conductors from each other. The resistance of such insulation should be sufficiently high to result in negligible current flow through or over its surface.

The electrical insulating materials used in naval shipboard electrical equipment (including cables) are grouped according to their temperature composition for example, class O, class A, class B, class C, class H, class E, and class T insulation.

Class O insulation consists of cotton, silk, paper, and similar organic materials when neither impregnated nor immersed in a liquid dielectric. Class O insulation is seldom used by itself in electrical equipment.

Class A insulation consists of (1) cotton, paper, and similar organic materials when they are impregnated or immersed in a liquid dielectric; (2) molded and laminated materials with cellulose filler, phenolic resins and other resins of similar properties; (3) films and sheets of cellulose acetate and other cellulose derivatives of similar properties; and (4) varnish (enamel), as applied to conductors.

Class B insulation consists of mica, asbestos, fiber glass, and similar inorganic materials in built-up form with organic binding substances.

Class H insulation consists of (1) mica, asbestos, fiber glass, and similar inorganic materials in built-up form with binding substances composed of silicone compounds or materials with equivalent properties; and (2) silicone compounds in the rubbery or resinous forms, or materials with equivalent properties.

Class C insulation consists entirely of mica, glass, quartz, and similar inorganic material. Class C materials, like class O, are seldom used alone in electrical equipment.

Class E insulation is an extruded silicone rubber dielectric used in reduced-diameter types of electric cables in sizes 3, 4, and 9. Special care should be exercised in handling the cables to avoid sharp bends and kinks that can damage the silicone rubber insulation on the old types that did not employ a nylon jacket over each insulated conductor.

Class T insulation is a silicone rubber treated glass tape, which is also used in reduced-diameter cables in sizes 14 through 2,000.

Propulsion generators and motors are usually insulated with class B insulating materials. Ship's service and emergency generators may have either class A, B, or H materials; however, the trend is away from class A. Auxiliary motors are usually class A, although the trend is toward class B and class H materials. Lighting transformers for 60-hertz service are class B insulated, and 400-hertz transformers are class H insulated. Miscellaneous coils for control purposes may be class A, B, or H, but the majority of such coils are class A insulated.

Temperature Effects on Insulation

It is important to maintain operating temperature of electrical equipment within their designed values to avoid premature failure of insulation. Temperatures only slightly in excess of designed values may produce gradual deterioration, which, though not immediately apparent, shortens the life of the insulation. The highest temperature (hot-spot temperature) to which class O insulation may be subjected continuously with normal life expectancy (5 years) is 90° centigrade, class A insulation, 105° centigrade; class B insulation, 130° centigrade; and class H, 200° centigrade. No limit has been established for class C insulation.

The ultimate temperature rise of electrical equipment is reached when the rate at which heat is developed equals the rate at which heat is transferred to the surrounding atmosphere. The heat developed by electrical equipment can usually be measured with accuracy but the temperature of the immediate surrounding area (known as ambient temperature) can become critical to the equipment if proper ventilation is not maintained.

The maximum allowable temperature rise and the design ambient temperature allowed for electrical equipment are usually shown on the nameplate, on equipment drawings, and in the technical manual for the equipment. When information is not available from these sources, the maximum permissible temperature rises, shown in Chapter 300 of NavShips' Technical

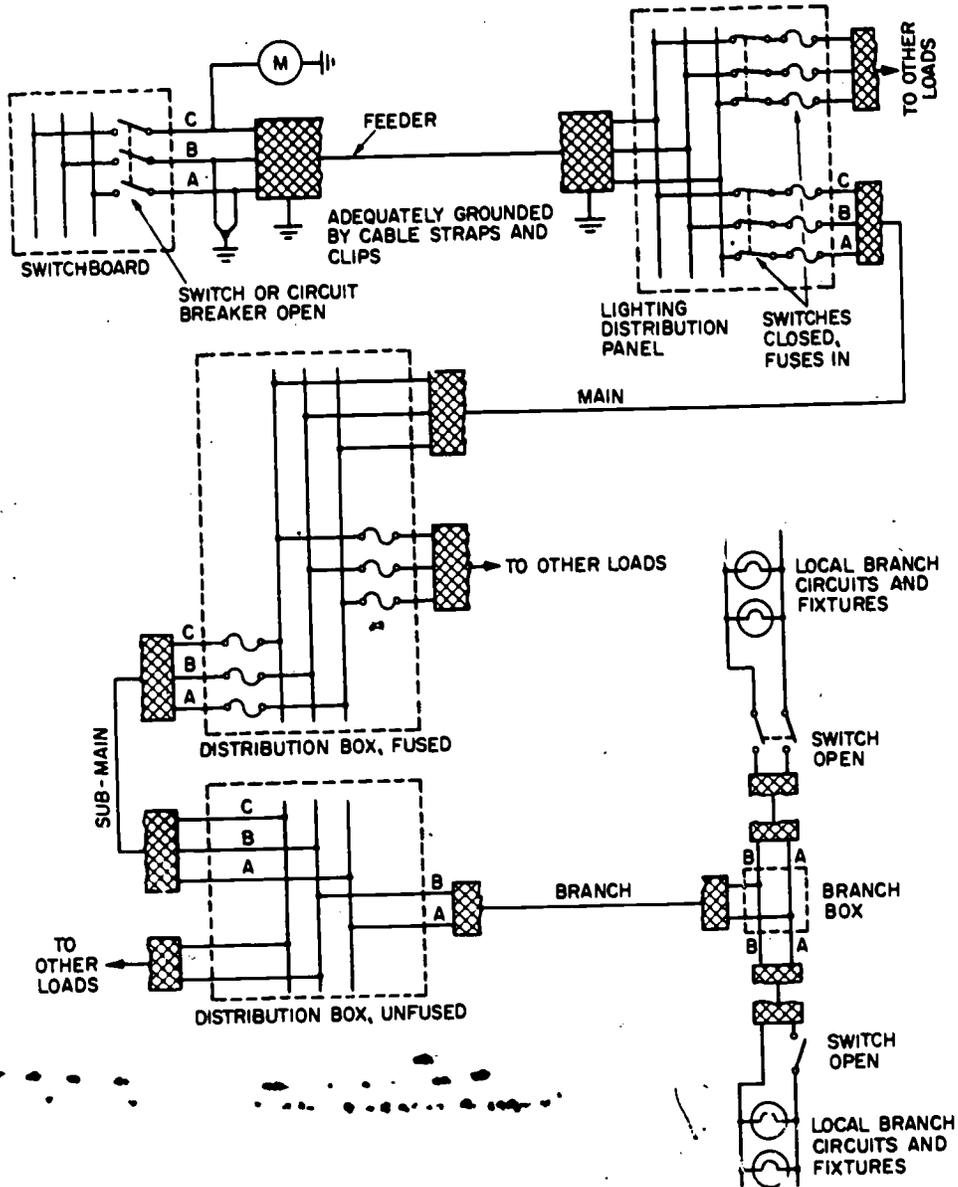


Figure 4-28.— Measuring insulation resistance of a lighting circuit.

77.25

Manual, shall be used as a guide for checking or testing windings of rotating electrical machinery.

The engineering design of ships takes into account the relationship of cable sizes and resistances with the cable load currents and temperatures.

Insulation Resistance Measurements

The insulation resistance of shipboard electrical cable must be measured periodically with an insulation-resistance-measuring instrument (megger) to determine the condition of the cable.

Chapter 4—ELECTRICAL INSTALLATIONS

Measurements should be made on each individual leg of d-c circuits and each individual phase lead of 3-phase a-c circuits.

For lighting circuits, the legs or phase leads should include all panel wiring, terminals, connection boxes, fittings, fixtures, and outlets normally connected, but with lights turned off at their switches and with all plugs removed from the outlets (fig. 4-28). If local lighting switches are double pole, the insulation resistance of the local branch circuit will not be measured when the switch is open. In such cases, making an insulation test from one leg or phase lead to ground with the local switches closed will determine whether grounds exist on the circuits and fixtures.

For power circuits, the legs or phase leads should include panel wiring, terminals, connection boxes, fittings, and outlets (plugs removed), motor controller terminals, and other equipment that remains connected when the legs or phase leads are isolated by opening switches (or circuit breakers) at the switchboard, and by leaving motor controller contactors open (fig. 4-29).

For degaussing circuits, measurements should be taken at a degaussing coil connection box; the legs

measured should include the coil cables, through boxes, and feeder cables. Disconnect the supply and control equipment by opening the circuit on the coil side of the control equipment. Measure the compass-compensating coil feeder cable with all control equipment disconnected. Additional information on tests of degaussing installations is obtained in NavSiips Technical Manual, Chapter 475 and in the degaussing folder furnished with each degaussing installation.

Measurements of these circuits (lighting, power, and degaussing circuits) should be made as follows:

1. Check to see that the cable armor is adequately grounded by measuring between the cable armor and the metal structure of the vessel (step 1, fig. 4-30); normally, grounding has been accomplished by means of cable straps. If a zero reading is not obtained, ground the cable armor.

2. Select one lead to be measured, and connect all the other leads in the cable together and ground them by means of temporary wires (step 2, fig. 4-30).


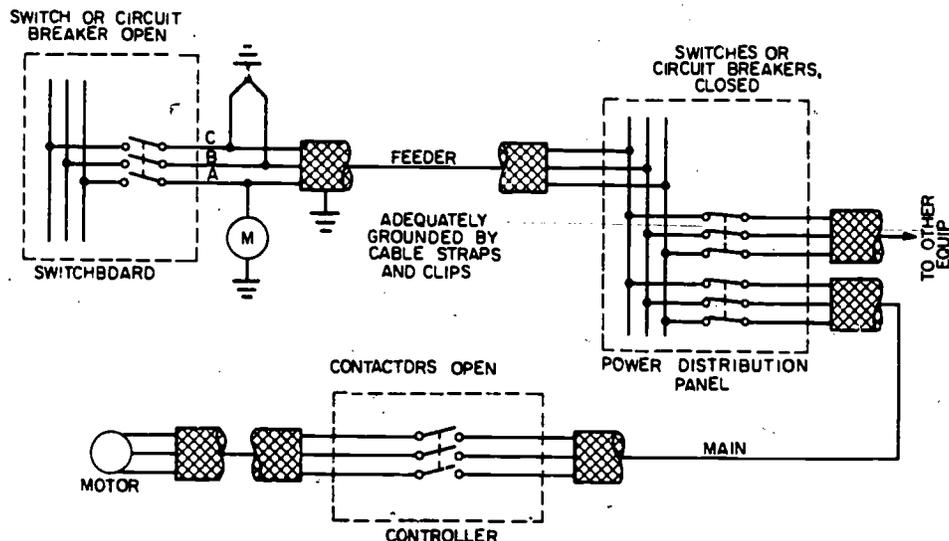


Figure 4-29.—Measuring insulation resistance of a power circuit.

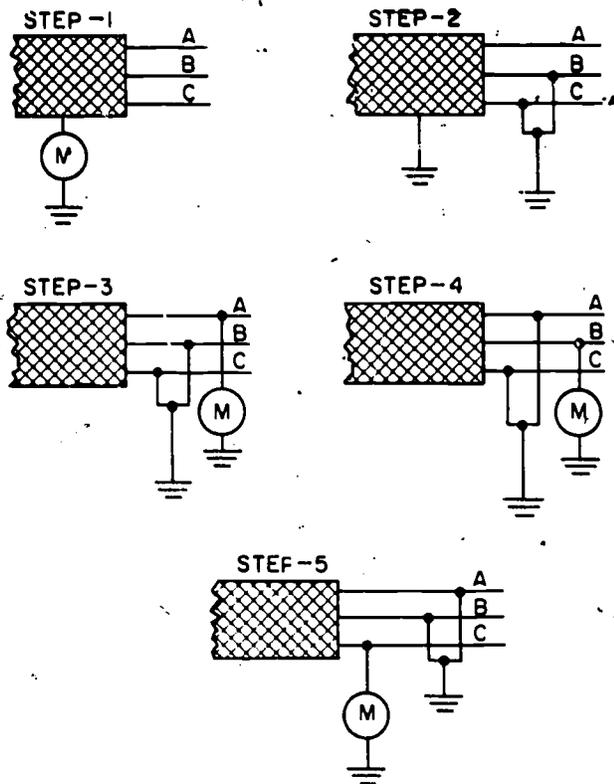

77.27
Figure 4-30.—Measuring circuit insulation resistance.

3. Measure the resistance of the lead being tested to ground (step 3, fig. 4-30). The test voltage should be applied until a constant reading is obtained. Hand-driven generator type instruments (meggers) should be cranked for at least 30 seconds to ensure a steady reading.

4. Repeat steps 2 and 3 as necessary to measure each leg or phase lead to ground (steps 4 and 5, fig. 4-30). When circuits contain permanently connected paths between legs or phases, such as transformers, indicator lights, control relays, etc., measurements need be made only between one lead and ground unless low readings requiring further tests are obtained.

These measurements of resistance should be considered satisfactory if they are not less than 1 megohm for each complete power circuit

or at least 0.5 megohms for each complete lighting circuit. The minimum acceptable value of a degaussing circuit to ground is 0.1 megohm from any leg, which includes the coil cables, the through boxes, and the feeder cables, of a degaussing circuit to ground. If the readings are lower than these minimum values, they should be considered satisfactory if they are not lower than previous measurements made under the same conditions (same cable with the same equipment connected and approximately the same average sheath temperature), provided the value of the previous measurements has been established as satisfactory by further investigation and satisfactory service operation.

Where the insulation resistance of a circuit is less than the minimum described above, the low resistance may be due to trouble localized in a segment of the circuit. To determine the cause, segregate the circuit into two or more parts by opening switches and circuit breakers, removing fuses, etc. at the feeder distribution panels and boxes, and measure the insulation resistance of each segment. One or more of the segments may indicate abnormally low resistance. The low values on these segments may be due to low insulation resistance at cable junctions or in equipment remaining connected to the segment. Inspect and correct any such faults by cleaning or corrective action as necessary.

If successive isolation of components from the circuit indicates that the low insulation resistance is due to the cables, the acceptance values which shall be used to judge whether or not a cable is safe to operate depend upon the temperature, the cable length, and the type of cable. Measurements shall be made either immediately upon deenergizing circuits which have been energized for at least four hours, or after the circuits have been deenergized for at least four hours. Circuits which have been deenergized for at least four hours shall be classed as either in a warm ambient or in a cold ambient. A warm ambient is defined as a warm climate or a condition in which the entire cable is in a heated space and not in contact with the ship's hull. A cold ambient is defined as a cold climate or a condition in which most of the cable is in an unheated space or is against the ship's hull in cold waters. The cable temperature shall be considered to be 104°F if the cable has been energized for four hours, 70°F if it is deenergized in a warm ambient, and 40°F if it is deenergized

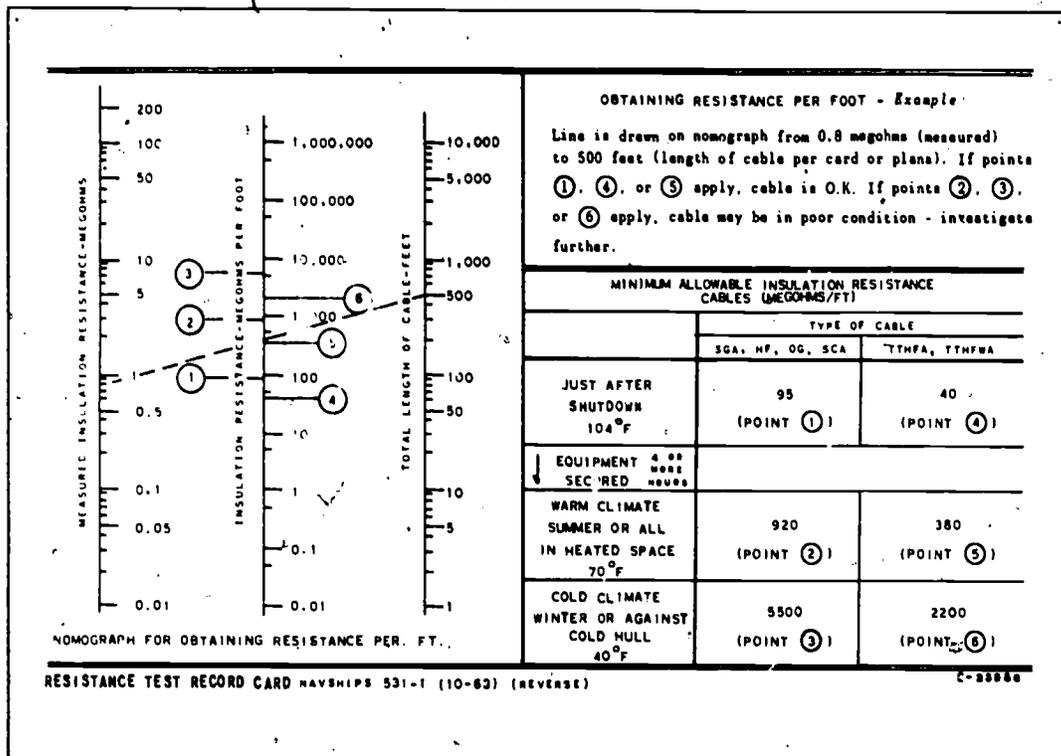


Figure 4-31.—Nomograph for obtaining resistance per foot.

1.3.1

in a cold ambient. In figure 4-31, select the point of allowable resistance per foot based on the ambient condition and the type of cable. Using the nomograph, a straight line from the measured insulation resistance to the length of cable should cross the resistance per foot line above the selected minimum resistance per foot point. Corrective action is required if the resistance per foot is less than the selected point.

You must keep in mind that when checking insulation resistance on circuits where semiconductor control devices are involved, the 500-volts d-c megger can NOT be used. An electron tube megohmmeter is used on circuits and components where insulation resistance must be checked at a much lower potential. The megohmmeter operates on internal batteries and when circuits or components under test contain a large electrical capacity, the megohmmeter READ button must be depressed for a sufficient time to allow its capacitor to charge before a steady reading is obtained. The test voltage applied by the megohmmeter to an unknown


resistance is approximately 50 volts when measuring resistances of approximately 10 megohms and slightly greater than this when measuring higher resistances.

CONTROL DEVICES

A CONTROL DEVICE, in its simplest form is an electrical switching device that applies voltage to or removes it from a single load. In more complex control systems, the initial SWITCH may set into action other CONTROL DEVICES that govern the motor speeds, the compartment temperatures, the depth of water, the aiming and firing of guns, or the direction of guided missiles. In fact, all electrical systems and equipment are controlled in some manner by one or more CONTROLS.

MANUALLY OPERATED CONTACTS

Manually operated switches are those familiar electrical items which can be conveniently operated with the hand. The pushbutton (fig. 4-32)

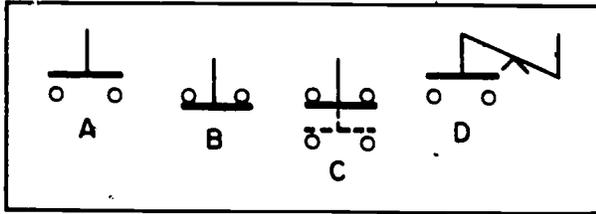

73,291

Figure 4-32.— Manually operated contacts.

is the simplest form of electrical control. When the button is pushed down (fig. 4-32A), contact is made across the two circles representing wire connections. When pressure is released, a spring (not shown) opens the contact. Figure 4-32B shows a normally closed contact. When it is pressed, contact at the two terminals is broken. When it is released, a spring-loaded feature (not shown) closes the switch again. The switch in figure 4-32C is designed to make one contact and break another when it is pressed: the upper contact is opened when the lower is closed; again, the spring arrangement (not shown) resets the switch to the position shown. The switch in figure 4-32D is a maintained contact type. When it is pressed, it hinges about the center point and will stay in that position until the other part of the button is pressed.

ELECTRICALLY OPERATED CONTACTS

Schematic wiring diagrams have both push-button and electrically operated contacts. Shown in figure 4-33 are control contacts illustrated by two different methods. Figure 4-33A is shown in the normally open (NO) position therefore, it


closes when operated. Figure 4-33B is shown in the normally close (NC) position therefore, when energized, it opens. Figure 4-33C, D, E, and F are timer contacts. That is, after being energized it will take some time for these contacts to close or open as the case may be. This time element is controlled by a timer motor, by a dashpot, pneumatically, or by magnetic flux. Notice that those devices that are timed closed or open have this indicated at the lower contacts: TC means timed close, TO means timed open, and TO ENERGIZE means that while this contact is already shown open, before it can be timed open, it must close. In operation this switch might be closed by a clutch in a timer assembly. After the timer motor operates through a given number of revolutions, a clutch in the timer will release the contact causing the switch to reopen. The timed switches may also be illustrated with an arrow which indicates whether the contact is timed open or time closed. The direction of the arrow serves to indicate which condition exists.

LIMIT SWITCHES

In certain applications the ON-OFF switch does not give enough control to ensure safety of equipment or personnel. A limit switch is incorporated in the circuit in order that operating limits are not exceeded.


The limit switch is installed in series with the master switch and the voltage supply. Any action causing the limit-switch to operate will open the supply circuit.

One application of limit switches is in equipment that moves over a track. It is possible to apply power so that operation will continue until the carriage hits an obstruction or runs off the end of the track.

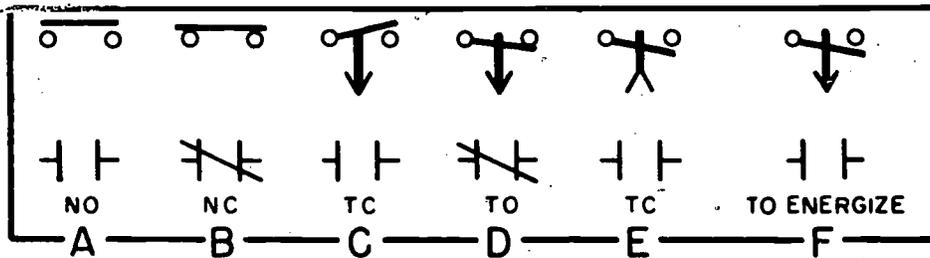

73,292

Figure 4-33.— Electrically operated contacts.

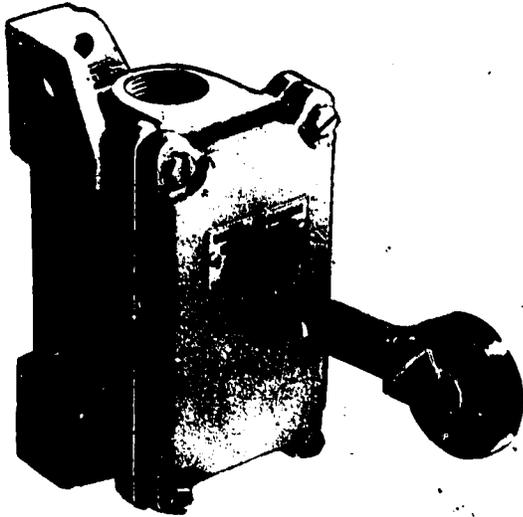

77.250
Figure 4-34.—Limit switch, roller actuator arm operated.

If limit switches are installed near the end of travel, an arm or projection placed on the moving section will trip a lever (as shown in figure 4-34) on the limit switch. The switch then opens the circuit and stops the travel of the carriage. This type of control is a direct-acting, lever-controlled limit switch. Another type, an intermittent gear drive limit switch, may be coupled to a motor shaft to stop action when a definite number of shaft revolutions is completed.

FLOAT SWITCHES

A float switch (figs. 4-35 and 4-36) controls electrically driven pumps used to fill or empty tanks.

Construction

In a tank installation (fig. 4-35) the deck and overhead flanges are welded to the deck and overhead of the tank. The float guide rod, E, fits into the bottom flange and extends through the top flange. The float guide rod then passes

through an opening in the switch operating arm. Collars A and B on the guide rod exert upward or downward pressure on the operating arm as the float approaches minimum or maximum depth positions. The switch operating arm is fastened to the shaft, which is coupled to the switch contact mechanism (fig. 4-36). Collars C and D on the guide rod are held in position by set-screws so that their positions can be changed to set the operating levels to the desired points.

As the float goes up and down, corresponding to the liquid level, it does not move the operating rod, E, until contact is made with either collar. When the float comes in contact with either collar, the external operating arm of the switch is moved and the switch is operated.

Although the switch assembly is of rugged construction, it must be checked regularly for proper performance.

Maintenance

The switch contacts should be kept in good electrical condition. Determine the kind of metal used for the contacts, whether copper or silver, and apply maintenance procedures outlined in Chapter 7, Motor Controllers. Of course, contacts should never be cleaned while power is applied to the circuit. Nor should lubricants be applied to contact surfaces.

PRESSURE AND TEMPERATURE SWITCHES

Pressure and temperature controls have been grouped together because the switching mechanism is the same for both controls; the difference is in the operation.

Pressure-controlled switches are operated by changes in pressure in an enclosure such as a tank. On the other hand, temperature-controlled switches operate from changes in temperature that take place in an enclosure or the air surrounding the temperature-sensing element. Actually, both switches are operated by changes in pressure. The temperature element is arranged so that changes in temperature cause a change in the internal pressure of a sealed gas or air-filled bulb or helix, which is connected to the actuating device by a small tube or pipe. Temperature changes cause a change in the volume of the sealed-in gas, which causes

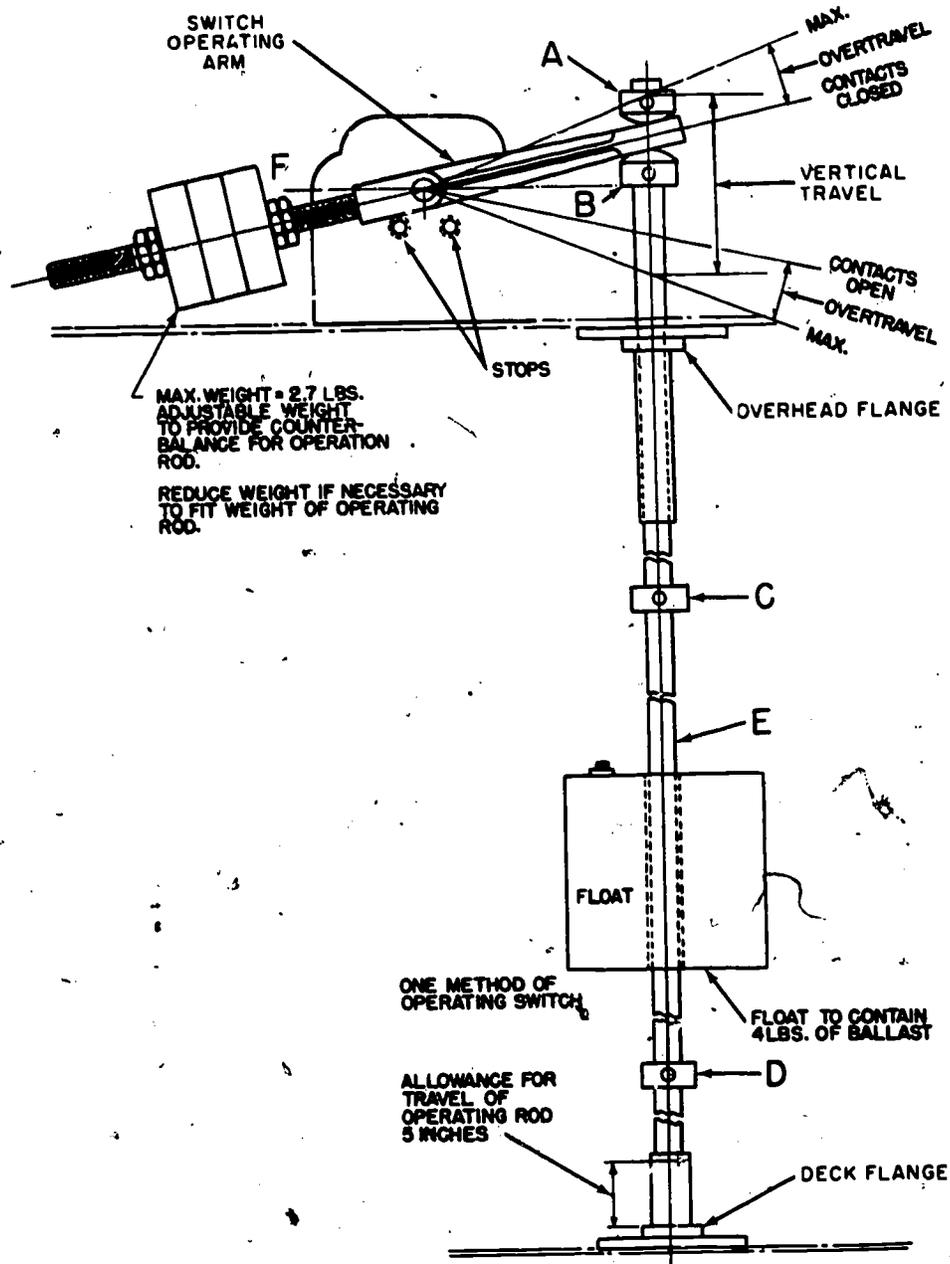



Figure 4-35.— Float switch tank installation.

77.116

movement of a diaphragm. The movement is transmitted by means of a plunger to the switch arm. The moving contact is on the arm, and a fixed contact may be arranged so that the switch will open or close on a temperature rise.

When the switch is used to control pressure, the temperature element is replaced by a tube that leads to the pressure tank. The pressure inside the tank then operates the switch mechanism.

104

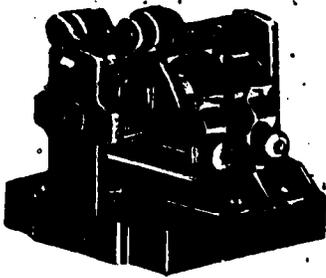

77.117.
Figure 4-36.— Float switch mechanism.

Pressure or temperature controls may be used as a pilot device (fig. 4-37). The circuit operation is exactly the same regardless of the kind of pilot device used to control the circuit. To maintain more or less constant temperature or pressure, switch contacts are arranged to close when the pressure or temperature drops to a predetermined value and to open when the pressure or temperature rises to the desired value. The reverse action can be obtained by changing the contact positions.

The difference in pressure for contact opening and closing is the differential. The switch mechanism has a built-in differential adjustment so


that the differential can be varied over a small range. Once set, the differential remains essentially constant at all pressure settings.

Each switch has a range adjustment that sets the point at which the circuit is closed. Changing the range adjustment raises or lowers both the closing and opening points without changing the differential.


Operating Adjustments

To set the operating range of the switch, turn the differential adjustment screw (fig. 4-38) counterclockwise against the stop for minimum differential. Bring the pressure to the value at which the circuit is to be closed. If the switch contacts are open at this pressure, turn the range screw slowly clockwise until the contacts close. If the contacts are closed when the desired pressure is reached, turn the range screw counterclockwise until the contacts open; then turn the screw slowly clockwise until the contacts close. These adjustments set the closing pressure.

The pressure (keep in mind that changes in temperature are converted to changes in pressure) is now raised to the point where the circuit is to be opened. Since the differential adjustment is now set at minimum the circuit will probably open at a lower pressure than desired; therefore, turn the differential adjustment screw clockwise to widen the differential until the desired opening pressure is obtained.

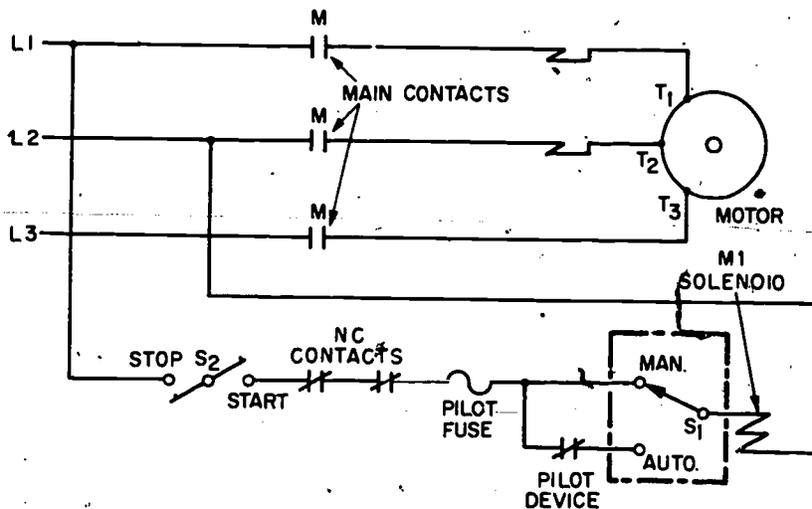

77.118
Figure 4-37.— Representative pilot device control circuit.

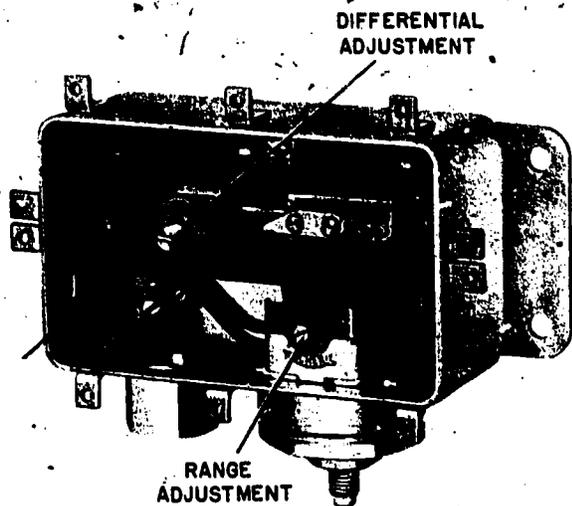

77.119

Figure 4-38.— Pressure-operated switch.

Thermal Unit Type

The bulb and helix units can be connected to the switch section (fig. 4-39). The bulb unit (fig. 4-39A) is normally used when liquid temperatures are to be controlled. However, it may control air or gas temperatures, provided the circulation around it is rapid and the temperature changes at a slow rate.

The helical unit (fig. 4-39B) has been specifically designed for air and gas temperature control circuits. To be most effective, the thermal unit must be located at a point of unrestricted circulation so it can "feel" the average temperature of the substance that is to be controlled.

Some switches are stamped, "WIDE DIFFERENTIAL." They are adjusted in the same manner described for the regular controls. However, because of slight design changes it is possible to get wider variation in differential settings.

Maintenance

When adjusting temperature controls, allow several minutes for the thermal unit to reach the temperatures of the surrounding air, gas, or liquid before setting the operating adjustments. After adjusting the operating range of pressure or temperature controls, check the operation through, at least one complete cycle. If you


find variation from the desired operating values, go through the entire procedure again and observe operation through a complete cycle.

PILOT CONTROL DEVICE

A pilot is defined as a director or guide of another thing (or person). You may be familiar with ship pilots, pilot rudders, and pilot flames. In this text, a pilot is a small device that controls a relatively larger device or mechanism, usually doing so by electrical means. The previously described float switch and pressure operated switches are representative examples of such pilot devices. Pilot devices are limited in their ability to handle large currents and voltage required to operate shipboard motors or power-handling units. Therefore, it is customary for a pilot device to actuate only a magnetic switch. The magnetic switch can be chosen with characteristics suitable for handling the desired amount of power in the motor circuit.

Use of a Pilot Device

Float switches used as pilot devices control the pump operation through other controls. A typical control circuit is shown in figure 4-37.

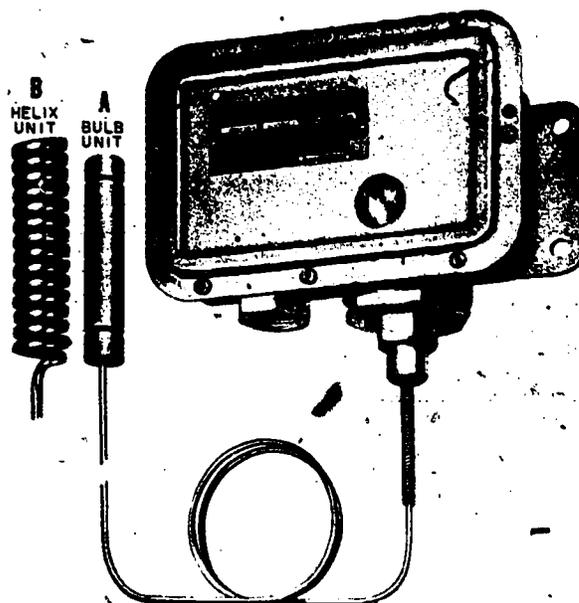

77.120

Figure 4-39.— Thermal units.

Switch S1 makes it possible to have either manual or automatic operation of the motor-driven device. When this switch is in the manual position (the circuit is closed by the start-stop switch, S2) current flows through the contactor (holding coil M1), which pulls line contacts M closed, and applies power to the motor. The motor will then operate until it is stopped manually.

With S1 in the automatic position, and the start-stop switch closed, the motor will not run unless the switch on the pilot device is closed. When the pilot device (in this example, the float switch) closes the circuit, current flows through the arm of S1 to the operating coil, M1, which then pulls the line switch contacts closed and starts the motor. The motor drives a pump that fills the tank. When the liquid in the tank rises to the desired level, the pilot device opens the circuit and removes voltage from the operating coil. This action allows the line contacts to open and stop the motor. This start-stop action will continue automatically as long as the start-stop switch is in the ON or START position and S1 is in the automatic position.

PROTECTIVE DEVICES

You have learned that the first thing to do in electrical failure is to check the fuses, circuit breakers, or other protective devices. A thorough knowledge of these devices will help you isolate circuits in troubleshooting, find the cause of interruption, clear the trouble, and restore operation with minimum loss of time. This chapter concludes by describing types, operating principles, and maintenance of the relays and circuit breakers that are used for circuit protection.

MAGNETIC OVERLOAD RELAY

A magnetic type of overload relay for a d-c system is illustrated in figure 4-40. A pictorial view and a diagram identifying the various parts are shown in figure 4-40, A and B respectively.

In an installation, the operating (series) coil ⑥ is connected in series with the protected circuit (fig. 4-40B). Normal current through the coil will have no effect on relay operation. If an overload occurs, increased current will flow

through the coil and cause an increase in the magnetic flux around the coil. When the flux becomes great enough, the iron plunger ⑤ will be lifted into the center of the coil, opening contacts ⑨ and ⑩. This action opens the control circuit to the main contactor in series with the motor terminals, thereby disconnecting the motor from the line.


To keep the relay from operating when the motor is drawing a heavy but normal starting current, an oil dashpot mechanism ① and ② is built in. This gives a time delay action that is inversely proportional to the amount of overload.

Overload relays may use either single or double coils. In addition, the single-coil overload relay may be obtained with or without a manual "latching" control. Relays with manual latching are used on three-wire controls and reset automatically after an overload has occurred. Double-coil overload relays are used for two-wire control. They have a series coil ⑥ carrying the load current and a shunt holding coil ⑦ mounted above the series coil. These two coils are connected so that their respective fields aid each other. Then, when an overload occurs the plunger moves up into the shunt-connected field coil and is held in the tripped position until the shunt coil is deenergized by the pressing of a reset button or some other form of contact (switch) device.

Before placing the overload relay in service, raise the indicating plate ③ to allow the dashpot ① to be unscrewed from the relay. Lift out the plunger ⑤ and make certain all of the internal parts are clean. Place about 9/16 of an inch of dashpot oil (furnished with the relay) in the dashpot. Replace the plunger and indicating plate, and then screw the dashpot on the relay to the desired setting.

The relay is calibrated at the factory for the individual application, and the current values for which it is calibrated are stamped on the calibration plate ④. The marked values are minimum, maximum, and midpoint currents.

The operating points may be set by first raising the indicating plate ③ which allows the dashpot to be turned. Then, to lower the tripping current, raise the dashpot by turning it. This action raises the plunger further into the magnetic circuit of the relay so that a lower current will trip the relay.

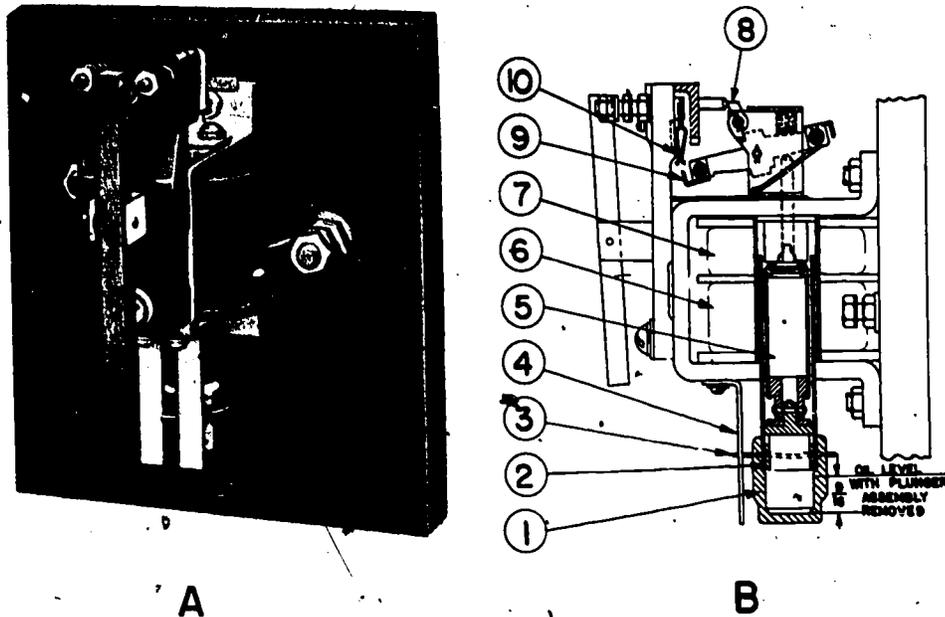

- | | | |
|----------------------|------------------------------|-------------------------|
| 1. Dashpot | 5. Plunger | 8. Latch |
| 2. Piston | 6. Series coil | 9. Movable contact |
| 3. Indicating plate | 7. Shunt coil
(when used) | 10. Stationary contacts |
| 4. Calibration plate | | |

77.99

Figure 4-40.—Magnetic overload relay.


The current at which the relay trips may be increased by turning the dashpot in a reverse direction. This action reduces the magnetic pull on the plunger and requires more current to trip the relay. After the desired settings have been obtained, lower the indicating plate over the hexagonal portion of the dashpot to again indicate the tripping current and lock the dashpot in position.

Figure 4-41 shows two magnetic types of a-c overload relays. Part A is the nonlatching type, and part B is the latching type. In part C the various components are identified.

The operating (series) coil (6) is connected in series with the protected circuit (fig. 4-41, C). Therefore, the load current flows through the coil. If the circuit current rises above normal


because of overload conditions, it will cause an increase in the magnetic lines of flux about the coil. The increased flux lifts the iron plunger (5) into the center of the coil and opens the contacts (9). This, in turn, causes the main contactor (not shown) to open, and disconnects the motor or other device from the line. An oil dashpot mechanism (1) and (2) is used to prevent the operation of the relay on motor starting current surges.

If the relay does not have manual latching, a three-wire control is provided to give automatic reset after an overload occurs. The manual-latch relay is generally used with two-wire control. The latch (7) holds the contacts in the open position after an overload has occurred and the circuits have been deenergized. It is necessary for the operator to manually reset the overload relay at the controller.

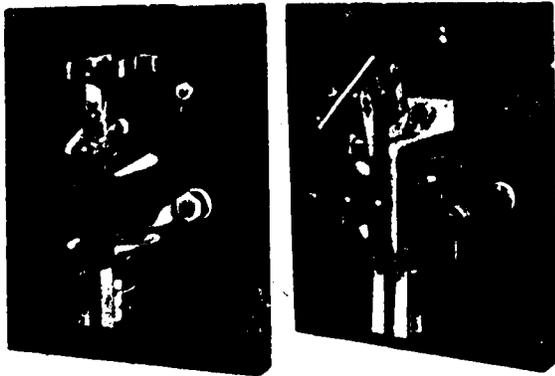

A-NONLATCHING

B-LATCHING

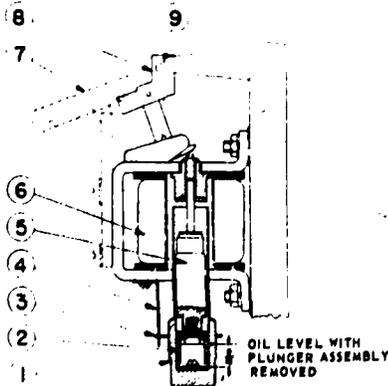

C-DIAGRAM

- | | |
|----------------------|------------------------|
| 1. Dashpot | 5. Plunger |
| 2. Piston | 6. Series coil |
| 3. Indicating plate | 7. Latch (when used) |
| 4. Calibration plate | 8. Insulating splitter |
| | 9. Contacts |

77.100

Figure 4-41.—A-c overload relays.

THERMAL OVERLOAD RELAY


Thermal type overload relays (a-c and d-c) are designed to open a circuit when excessive current causes the heater coils to reach the temperature at which the ratchet mechanism releases. The heater coils are rated so that normal circuit current will not produce enough heat to release the ratchet mechanism.

The essential operating parts of a d-c thermal overload relay (fig. 4-42) are the two heater coils (4), two solder tube assemblies (5), and control contacts (1). Under normal conditions the splitter arm (7) (so called because it splits the overload contacts) completes a circuit with the contacts. The spring is then under compression and the operating arm (3) tends to rotate the splitter arm out of the circuit. This action is prevented by the ratchet assembly, which is held by the solder film between the outer and inner part of the solder tubes.

When current flows through the heater coils and produces enough heat to melt the solder film, the inner part of the solder tube assembly rotates and releases the ratchet mechanism to open the control circuits. When this happens, the circuit to the coil handling the power contacts (not shown in the figure) opens and disconnects the load. As soon as the load is disconnected, the heaters cool, and the solder film hardens. When the hardening is complete, the relay is ready to be reset with the reset button.

An adjustable type thermal relay with magnetic reset is illustrated in figure 4-43. This relay may be adjusted to trip at a value between 90 and 110 percent of the rated coil current. To change the operating point, loosen the binding screws that hold the relay heater coil (4) (fig. 4-42) so that the coil position may be changed. Moving the coil away from the relay will increase the amount of current needed to trip the relay. Moving the coil closer to the relay will decrease the current needed to trip the relay. This range of adjustment is available only within the range of 90 to 110 percent of coil rating. Each rating has a different manufacture part number. The correct rating is installed when the controller is installed in the ship. Do not use another rating. Make sure both heater coils in each overload relay are the same rating.

The terminal plates and the underside of the slotted brackets of the heater coil assembly are serrated so that the coil is securely held in position when the binding screws are tightened. Some thermal overload relays have reset magnet assemblies attached. It may become necessary to replace the heater coils from the relay. Then remove the four screws that hold the overload relay to the mounting plate. When removing the relay from the mounting plate, use care not to lose the phenolic pin and bearing block located between the thermal blocks on the underside of the relay.

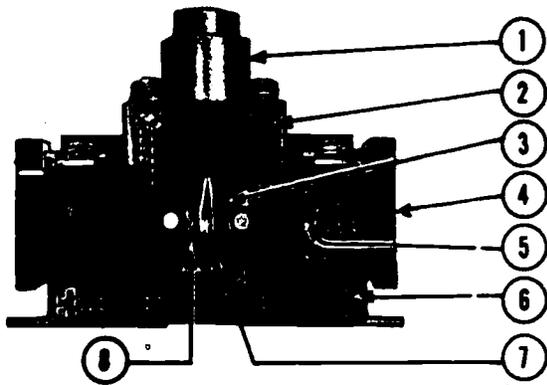

- | | |
|----------------------|-----------------|
| 1. Contact structure | 4. Heater coil |
| 2. Screw | 5. Solder tube |
| 3. Operating arm | 6. Screw |
| | 7. Splitter arm |

77.101
Figure 4-42.— Thermal overload relay.

Next, remove the four large countersunk screws that hold the mounting plate and the reset magnet assembly to the square posts. Remove the four screws in the mounting plate, which support the reset magnet. Take care not to lose the lever and spring, items ⑨ and ⑩. Remove the two screws ⑫ and pull out the plunger guides. Remove the old coil ⑪ and install the new coil. Then insert the plunger guides and replace the screws ⑫. Reassemble the magnet, spring, and lever to the mounting plate. Mount the plate on the posts and then mount the overload relay on the mounting plate. Replace the heater coils as the last operation.

Overload relays are PROTECTIVE DEVICES. After an overload relay has performed its safeguarding function it must be reset by the EM before the system can again be run with overload protection.

CIRCUIT BREAKERS

Circuit breakers have three fundamental purposes: First, they are used to provide circuit protection and to perform normal switching operations. Second, they are used to isolate a defective circuit while repairs are being

made. Third, circuit breakers are used in manual and automatic bus transfer, also as starters for large motors.

Air circuit breakers are used in switchboards, switch gear groups, and in distribution panels. The types installed on naval ships are ACB, AQB, AQB-A, AQB-LF, NQB-A, ALB and NLB. They are called air circuit breakers because the main current carrying contacts interrupt in air.

Circuit breakers are available in manually or electrically operated types. Some types may be operated both ways, while others are restricted to one mode. Manually or electrically operated types may or may not provide protective functions; the following sections describe the differences and uses of the various types of circuit breakers.

ACB

The ACB type of circuit breaker may be for either manual local closing or electrical remote closing. It has an open metallic frame construction mounted on a drawout mechanism and is normally applied where heavy loads and high short circuit currents are available.

Figure 4-44 shows the external appearance of a type ACB circuit breaker.

Type ACB circuit breakers are used to connect ship's service and emergency generators to the power distribution system. They are also used on bus ties and shore connection circuits, and on some feeder circuits from the ship's service switchboard.

When used in these applications the pilot device may be a reverse-power relay or any of the control devices discussed later in this chapter. The reverse-power relay is mounted on the panel close to the circuit breaker. Other automatic controls may be located at remote points to give maximum protection to the circuit.

Circuit breakers designed for high currents have a double-contact arrangement. The complete contact assembly consists of the main bridging contacts and the arcing contacts. All current carrying contacts are high-conductivity, arc-resisting silver or silver alloy inserts.

Each contact assembly has a means of holding the arcing to a minimum and extinguishing the arc as soon as possible. The arc control section is called an arc chute or arc runner. The contacts are so arranged that when the circuit is closed, the arcing contacts close first. Proper pressure is maintained by springs to ensure the arc contacts close first. The main contacts then close.

When the circuit opens, the main contacts open first. The current is then flowing through

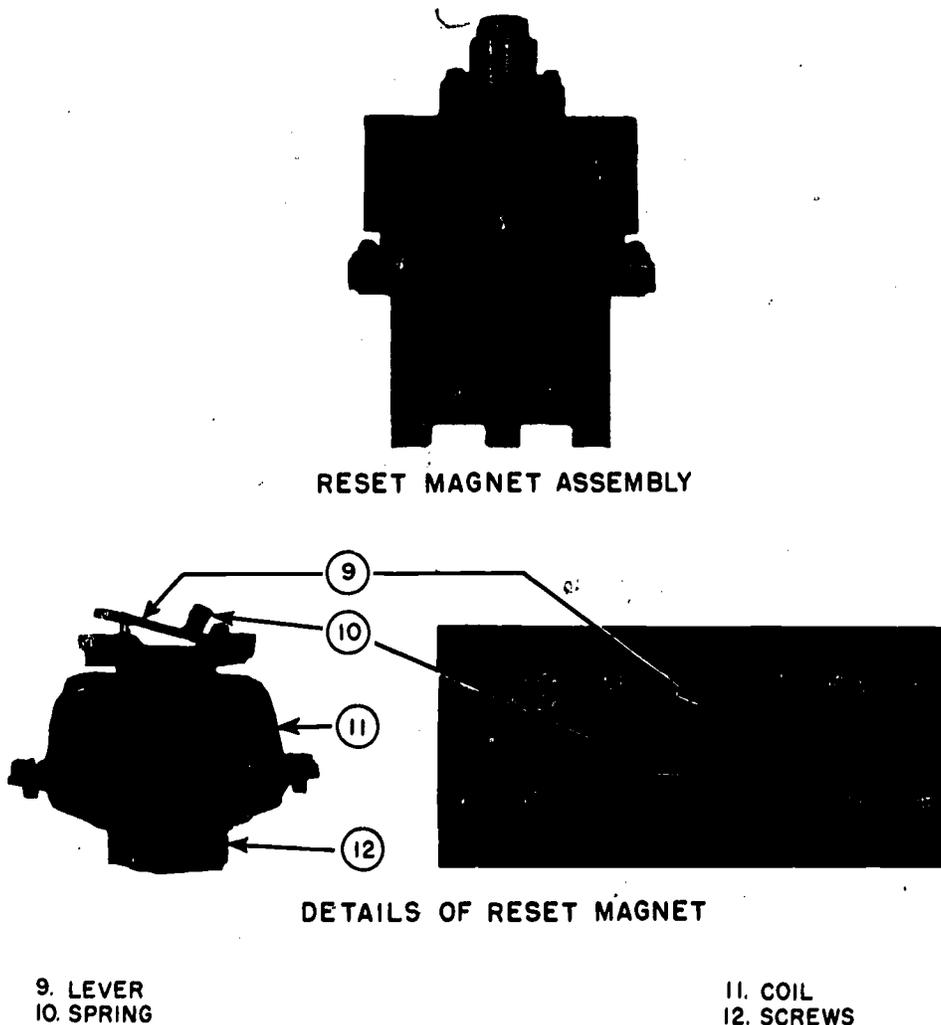


Figure 4-43.— Adjustable thermal relay with magnetic reset.

77.102

the arc contacts, which prevents burning of the main contacts. When the arc contacts open, they pass under the front of the arc runner. This causes a magnetic field to be set up, which blows the arc up into the arc quencher and quickly opens the circuit.


Type ACB circuit breakers are available in both manually (hand-operated) and electrically operated types. Electrically operated ACB breakers may be operated from a remote location. The high interrupting types are electrically operated because it is then unnecessary for personnel

to approach them in order to open or close the circuit.

No circuit breaker, regardless of type, should be worked on without opening the circuit. Remember that certain terminals may have voltage applied to them even though the breaker is open. Aboard ship, power may be supplied to either end of the circuit breaker.

AQB

Type AQB circuit breakers (fig. 4-45) are mounted in supporting and enclosing housings

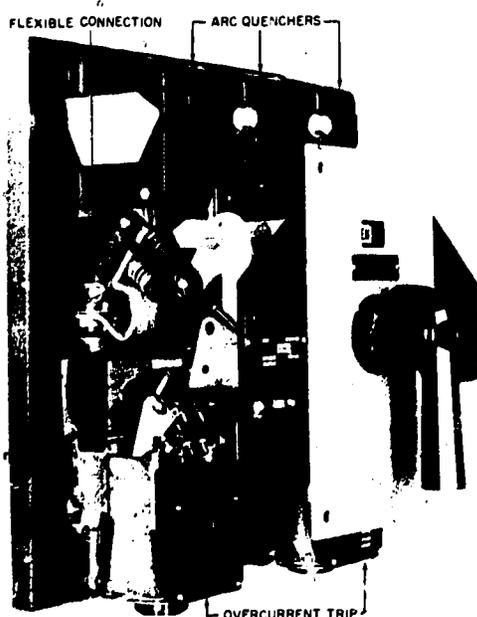

27.73
Figure 4-44.— Type ACB circuit breaker.

of insulating material and have direct-acting automatic tripping devices. They are used to protect single-load circuits and all feeder circuits coming from a load center distribution panel.

Where the requirements are low enough, the type AQB may be used on generator switchboards. When it becomes necessary to replace one of the older type circuit breakers, it should be replaced by the newer AQB-A101, AQB-A250, AQB-A400, AQB-A600, or AQB-A800 as required.

AQB-A250


The newer AQB type circuit breakers such as the AQB-A250 have several advantages over the older types. The outside dimensions of these new breakers are the same for both the two-pole and three-pole circuit breakers. They are designed for front or rear connections as required and may be mounted so as to be removable from the front without removing the circuit breaker cover. The voltage ratings of the AQB-A250 are 500-volts a-c, 60-hertz or 250-volts d-c.

The 250-part of the circuit breaker type designation indicates the frame size of the circuit breaker. In a 250-ampere frame size circuit breaker, the current carrying parts of the breaker


have a continuous rating of 250 amperes. Trip units (fig. 4-46) for this breaker are available with current ratings of 125, 150, 175, and 250 amperes.

The trip unit houses the electrical tripping mechanisms, the thermal element for tripping the circuit breaker on overload conditions, and the instantaneous trip for tripping on short circuit conditions.

In addition 100, 160, and 250 ampere rating trip units with a special calibration are available for use with generator circuit breakers. Regardless of the trip unit used the breaker is still a 250-ampere frame size. The automatic trip devices of the AQB-A250 circuit breaker are "trip free" of the operating handle; in other words the circuit breaker cannot be held closed by the operating handle if an overload exists. When the circuit breaker has tripped due to overload or short circuit, the handle rests in

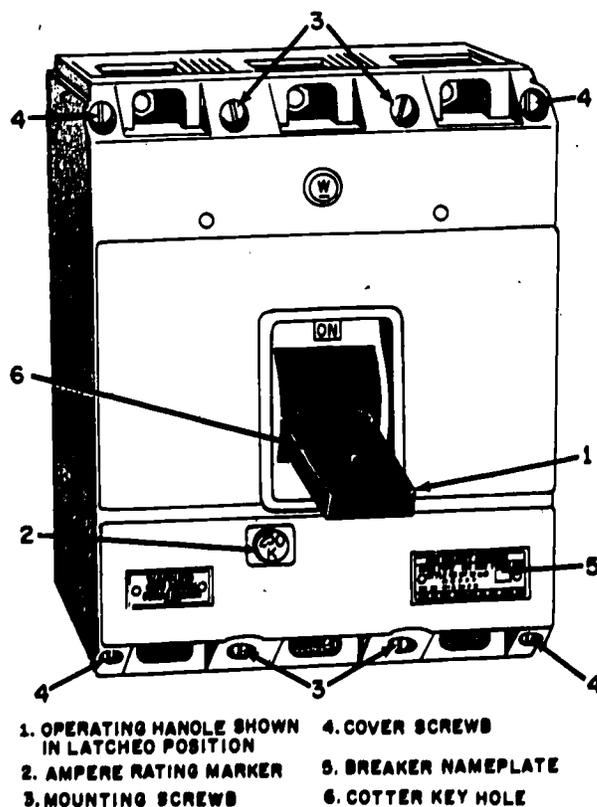

77.241
Figure 4-45.— AQB-A250 circuit breaker complete, front view.

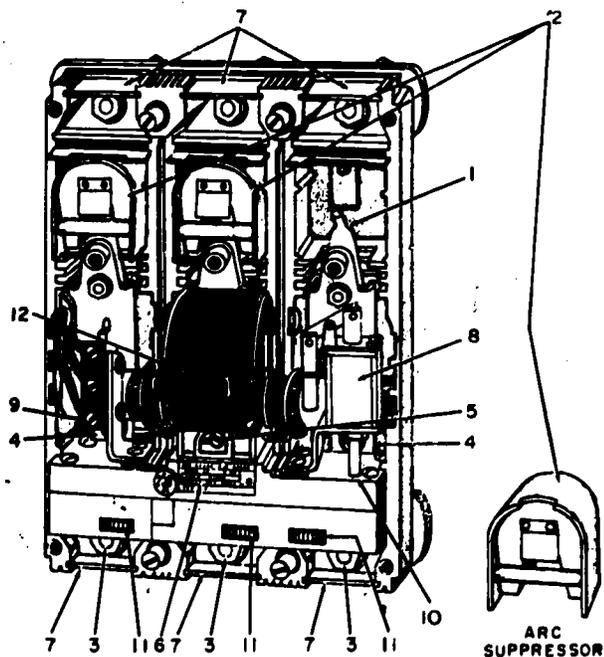


- (1) STATIONARY CONTACT
- (2) ARC SUPPRESSORS
- (3) TERMINAL STUD NUTS AND WASHERS
- (4) TRIP UNIT LINE TERMINAL SCREW-OUTER POLES
- (5) TRIP UNIT LINE TERMINAL SCREW-CENTER POLE
- (6) TRIP UNIT NAMEPLATE
- (7) TERMINAL BARRIERS
- (8) SHUNT TRIP OR UNDERVOLTAGE DEVICE
- (9) AUXILIARY SWITCH
- (10) HOLE FOR SHUNT TRIP OR UNDERVOLTAGE RELEASE PLUNGER
- (11) INSTANTANEOUS TRIP ADJUSTING WHEELS
- (12) COTTER KEY HOLE

77.242


Figure 4-46.—AQB-A250 circuit breaker front view, cover and arc suppressor removed.

a center position. To reclose after automatic tripping, move the handle to the extreme OFF position which resets the latch in the trip unit, then move the handle to the ON position.

The AQB-A250 circuit breaker may have auxiliary switches, shunt trip (for remote tripping), or undervoltage release attachments when so specified. However, a shunt trip cannot be provided in the same breaker with an under-voltage release since in all cases the shunt trip coil is momentary rated and must be connected in series with a circuit breaker auxiliary switch. Figure 4-47 shows a trip unit with shunt trip and a trip

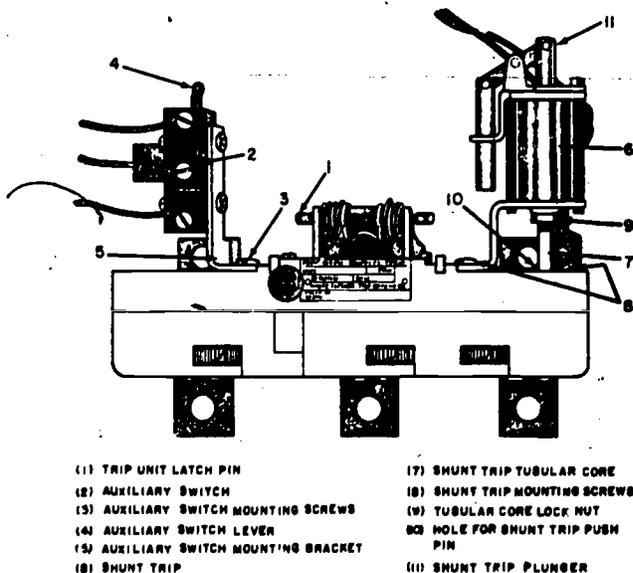


- (1) TRIP UNIT LATCH PIN
- (2) AUXILIARY SWITCH
- (3) AUXILIARY SWITCH MOUNTING SCREWS
- (4) AUXILIARY SWITCH LEVER
- (5) AUXILIARY SWITCH MOUNTING BRACKET
- (6) SHUNT TRIP
- (7) SHUNT TRIP TUBULAR CORE
- (8) SHUNT TRIP MOUNTING SCREWS
- (9) TUBULAR CORE LOCK NUT
- (10) HOLE FOR SHUNT TRIP PUSH PIN
- (11) SHUNT TRIP PLUNGER

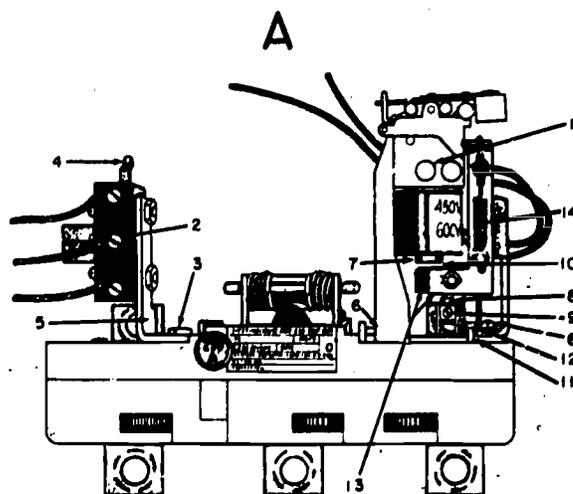

- (1) UNDERVOLTAGE RELEASE
- (2) AUXILIARY SWITCH
- (3) AUXILIARY SWITCH MOUNTING SCREWS
- (4) AUXILIARY SWITCH LEVER
- (5) AUXILIARY SWITCH MOUNTING BRACKET
- (6) UNDERVOLTAGE RELEASE MOUNTING SCREWS
- (7) UNDERVOLTAGE RELEASE MAGNET
- (8) ARMATURE TRAVEL ADJUSTING SCREW
- (9) SET SCREW FOR ARMATURE TRAVEL ADJUSTING SCREW
- (10) ARMATURE - MAGNET AIR GAP
- (11) UNDERVOLTAGE RELEASE PUSH ROD
- (12) LOCK NUT FOR PUSH ROD
- (13) UNDERVOLTAGE RELEASE ARMATURE
- (14) ARMATURE RETAINING SPRINGS

77.243.244

Figure 4-47.—AQB-A250 trip unit: (a) with shunt trip and auxiliary unit; (b) with undervoltage release and auxiliary switch.

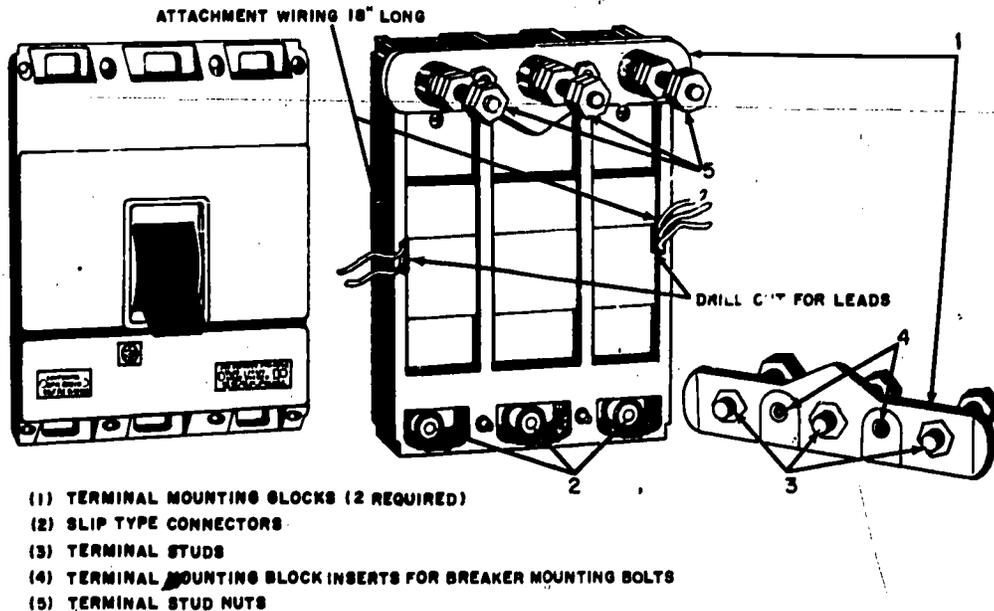

77.245

Figure 4-48.—AQB-A250 circuit breaker rear view, with terminal mounting blocks.


unit with undervoltage trip. The coil for a shunt trip has a dual rating for a-c and d-c voltages, whereas the undervoltage trip coils are wound for a specified voltage, such as 450 a-c or 250 d-c and have rated pickup and dropout values. The instantaneous trip setting of the AQB-A250 trip units may be adjusted by the instantaneous trip adjusting wheels shown in figure 4-47. Though not shown in the figure these trip adjusting wheels are marked for five positions, LO-2-3-4-HI, the trip unit label (not shown) will list the instantaneous trip value obtainable for each marked position. Identical settings must be made on each pole of the circuit breaker. NEVER remove a circuit breaker cover to perform adjustments while the circuit breaker is in the closed (ON) position.

Terminal mounting block assemblies used in conjunction with the circuit breaker (fig. 4-48) for drawout mounting, consist of terminal studs in terminal mounting blocks of insulating material. The terminals of the circuit breaker have slip type connectors which engage the terminal studs as shown in figure 4-48. Two mounting blocks are usually required for each circuit breaker.

This method of connecting a circuit breaker to a bus or circuit is known as a "back-connected circuit breaker." Circuit breakers which have solderless connectors attached to their terminal are commonly called "front-connected circuit breakers." The interrupting rating of the AQB-A250 circuit breaker is 20,000 amperes at 500-volts a-c or 15,000 amperes at 250-volts d-c.

AQB-LF250

The AQB-LF250 circuit breaker (fig. 4-49), combines the standard AQB circuit breaker and a current limiting fuse unit which interrupts the circuit when the current is in excess of the interrupting rating of the breaker. Constructed as one compact unit, the AQB-LF circuit breaker incorporates the current limiting fuses (fig. 4-50) as integral parts of the circuit breaker. The common trip features of the AQB-A250 circuit breaker are retained and trip units from 125 to 250 amperes and available for use in the AQB-LF250.

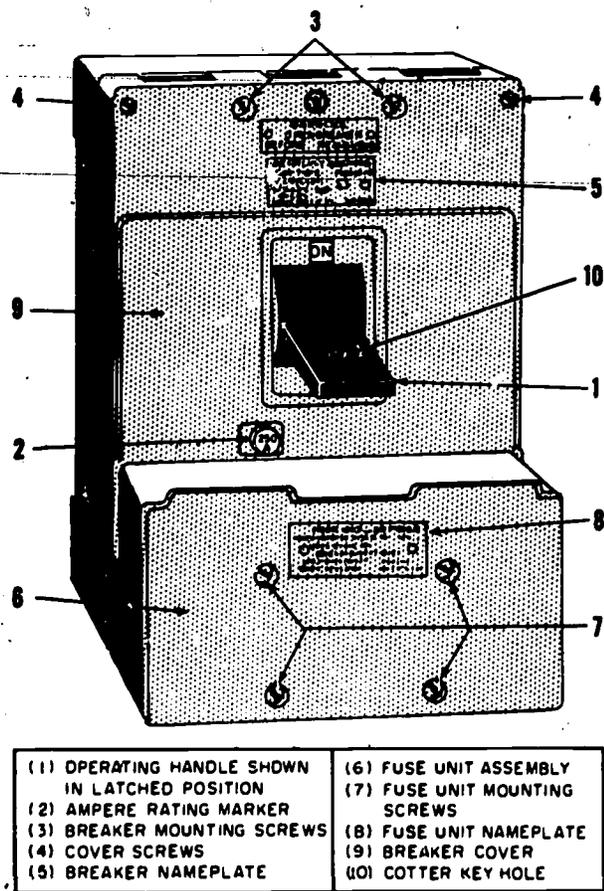

77.246
 Figure 4-49.—AQB-LF250 complete circuit breaker, front view.

The current limiting fuse unit is designed so that it trips the breaker and opens all poles if any current limiting fuse (fig. 4-51) is blown. After a fuse has blown, the circuit breaker cannot be reclosed until the blown fuse is replaced. Any attempt to remove the fuse unit when the circuit breaker is in the closed position will automatically trip the breaker.

The AQB-LF250 circuit breaker is interchangeable with the AQB-A250 circuit breaker except a larger cutout is required in the switchboard front panel to accommodate the fuse unit of the AQB-LF250.

The AQB-LF250 circuit breaker is a 250 ampere frame size, however, the circuit breaker

has an interrupting rating of 100,000 amperes at 500-volts a-c whereas the AQB-A250 circuit breakers interrupting rating is 20,000 amperes at 500-volts a-c.

While the AQB-A250 circuit breaker could be either front or back connected, the AQB-LF250 is designed only for back (drawout type) connection, using the same type of slip connectors terminal studs as shown in figure 4-48.

NQB-A250

The NQB-A250 circuit breaker (fig. 4-52) is similar to the AQB-A250 circuit breaker except the NQB-A250 has no automatic tripping devices. This type of circuit breaker is used for circuit isolation and manual transfer applications. This NQB-A250 is still a 250-ampere frame size as the current carrying parts of the breaker are capable of carrying 250 amperes. Technically this circuit breaker is simply a large on-and-off switch. Some type of AQB and NQB breakers are provided with electrical operators mounted on the front of the breaker. These are geared motor devices for remote operation of the breaker handle.

ALB

Type ALB circuit breakers are designated low-voltage, automatic circuit breakers. The continuous duty rating ranges from 5 through 200 amperes at 120-volts a-c or d-c. The breaker is provided with a molded enclosure, drawout type connectors, and nonremoveable and nonadjustable thermal trip elements.

This circuit breaker is a quick-made, quick-break type. If the operating handle is in the tripped (midway between ON and OFF) position, indicating a short circuit or overload, the operating handle must be moved to the extreme off position, which automatically resets the overload unit and the breaker can again be closed.

NLB

Circuit breakers type NLB are identical to ALB types except that they have no automatic tripping device and are used only as on-off switches.

Selective Tripping

The purpose of selective tripping is to isolate the faulty section of the system and at the

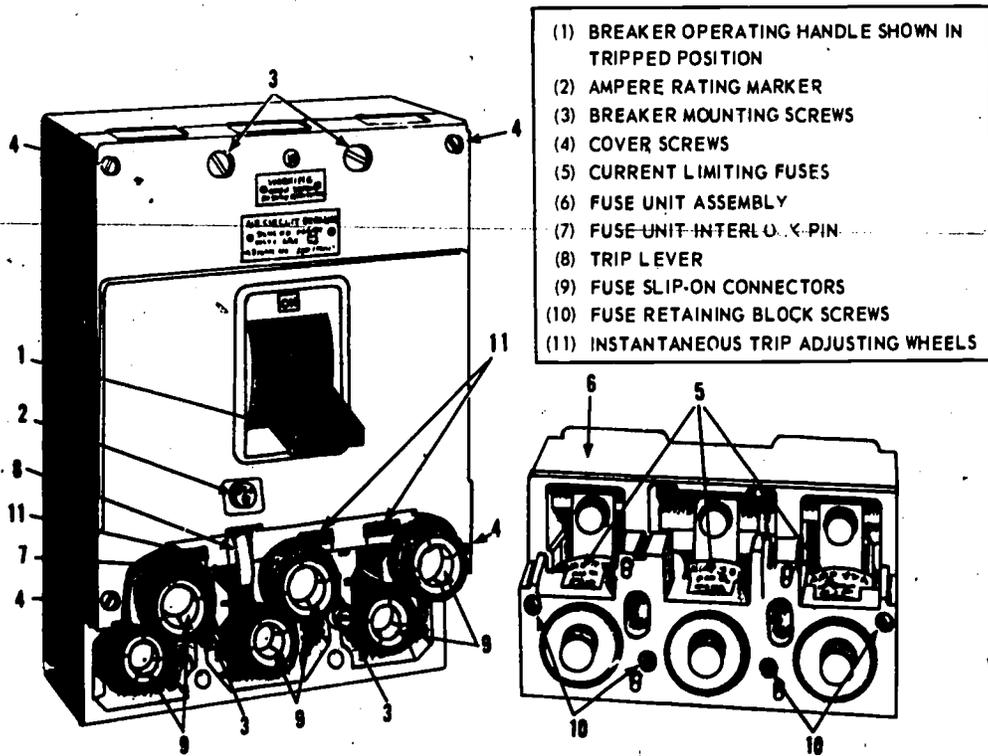


Figure 4-50.—Complete circuit breaker, front view with fuse unit removed.

77.247


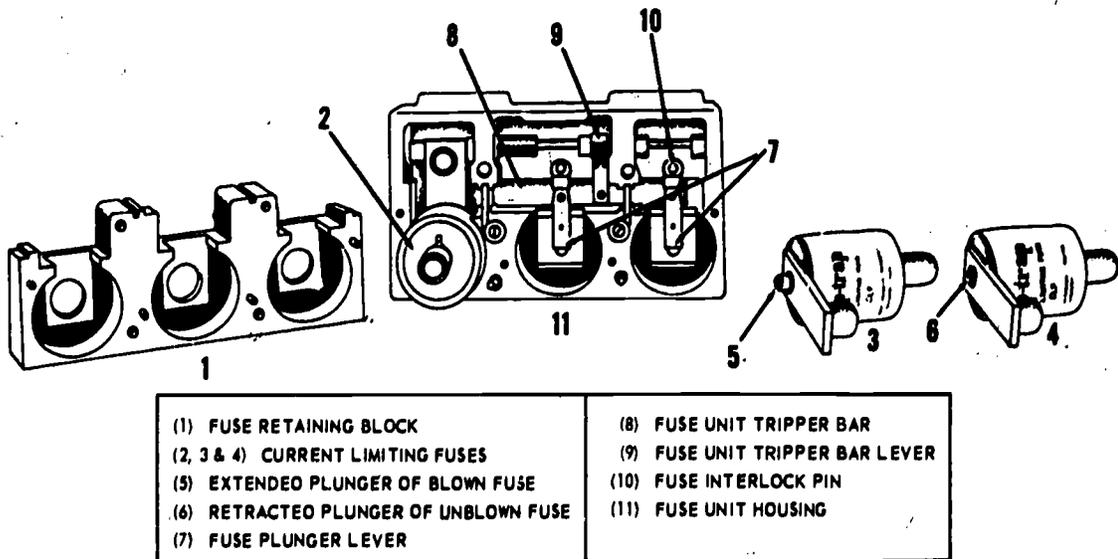


Figure 4-51.—Current limiting fuse unit assembly.

77.248

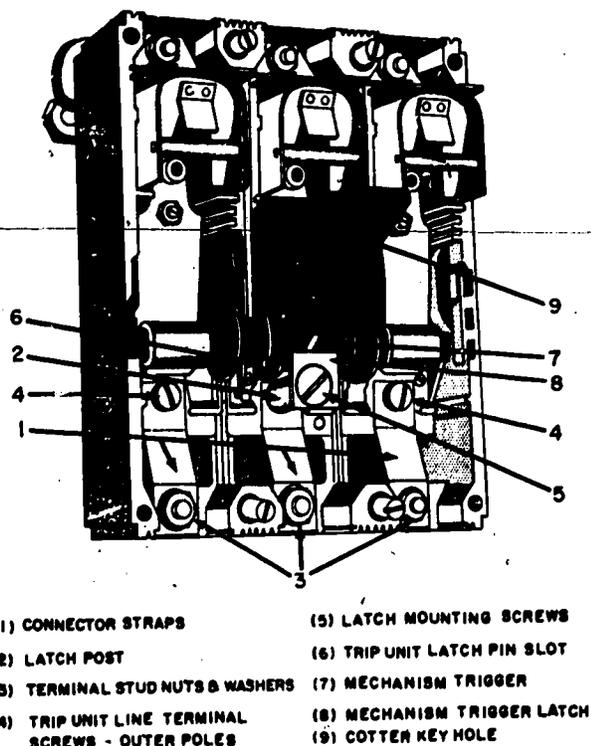

77.249

Figure 4-52.—NQB-A250 circuit breaker front view, cover removed.

same time to maintain power on as much of the system as possible. Selective tripping of circuit breakers is obtained by coordination of the time-current characteristic of the protective devices so that the breaker closest to the fault will open first, and the breaker farthest from the fault and closest to the generator will open last.

A portion of a distribution system with circuit breakers employing selective tripping is illustrated in figure 4-53. The so-called instantaneous tripping time is the minimum time required for a breaker to open and clear a circuit when the operation of the breaker is not intentionally delayed. Each circuit breaker will trip in less than 0.1 second (almost instantaneously) when the current exceeds the instantaneous trip current setting of the breaker. In a shipboard selective tripping power system the individual circuit breakers (generator, bus

tie, shore power or feeder breakers) differ from each other depending on:

1. The available load current.
2. The available short circuit current.
3. The tripping time band and trip current settings selected.

Selective tripping of breakers is normally obtained by a short time delay feature. This feature is a mechanical time delay and can be varied with limitations. The generator circuit breaker, which is closest to the power source, has the maximum continuous current carrying rating, the highest available short circuit current rating and the maximum short time delay trip in order that the generator breaker may be the last breaker to trip. However, it will trip on the generator short circuit current at some definite interval of time within the tolerance of the breaker.

Bus tie circuit breakers are usually set to trip after a prescribed time delay (which is less than the generator circuit breaker time delay), at a current that is nearest to, but not less than 150% of the bus tie breaker coil rating (for multigenerator switchgear groups) or the nearest to but not more than 80% of the generator breaker short-time delay setting (for single generator switchgear groups). Instantaneous tripping is not normally used on bus tie circuit breakers.

The construction of circuit breakers for selective tripping, for currents less than the instantaneous trip current setting, is such as to cause an intentional delay in the operation of the breaker. The time delay is greater for small currents than for large currents and is therefore known as an inverse time delay. The current that would trip the AQB load circuit breaker instantaneously and clear the circuit will not trip the ACB feeder circuit breaker unless the current flows for a greater length of time. The same sequence of operation occurs for the other groups of circuit breakers adjusted for selective tripping in the system. The difference between the tripping times of the breakers is sufficient to permit each breaker to trip and clear the circuit before the next breaker starts to operate.

Assume that a fault or defect develops in the cable insulation at point A (fig. 4-53) and

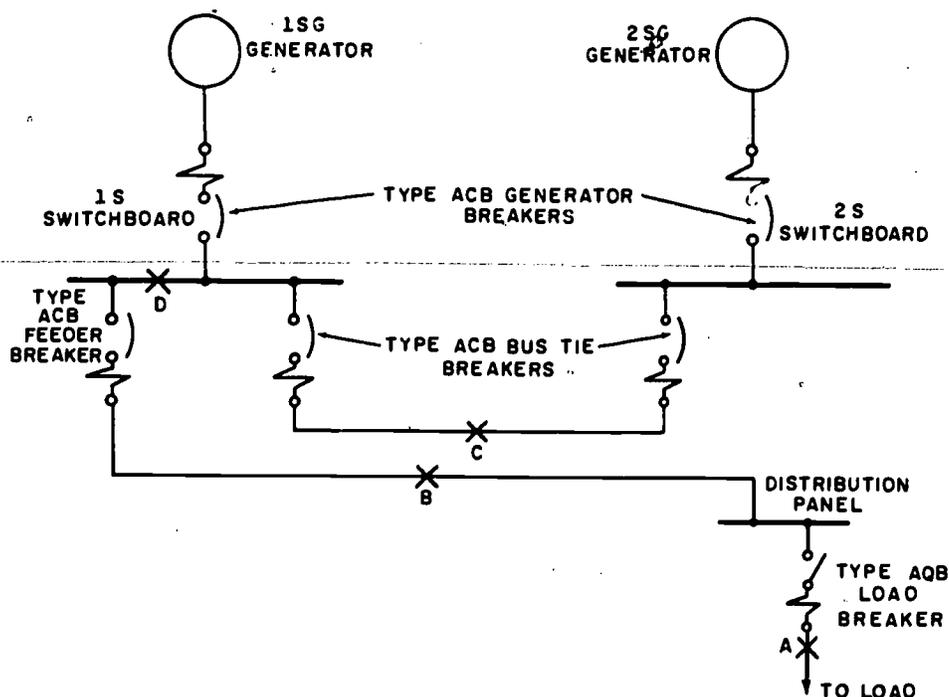


Figure 4-53.—Selective tripping of circuit breakers.

77.98

allows an overcurrent to flow through the AQB load circuit breaker and the ACB feeder circuit breaker. The AQB load breaker will open the circuit and interrupt the current in an interval of time that is less than the time required to open the ACB feeder circuit breaker. Thus, the ACB feeder breaker will remain closed when the AQB breaker clears the circuit. However, if the fault current should exceed the interrupting capacity of the AQB load breaker (for example, an excess of 10,000 amperes), this breaker would be unable to interrupt the fault current without damage to the breaker. To prevent damage to the AQB load breaker, the ACB feeder breaker (on switchboard 1S) serves as a BACK UP breaker for the AQB load breaker and will open almost instantaneously in time.

A fault at point B with overcurrent would trip the ACB feeder breaker in time but not the ACB generator or bus tie breakers, which require longer time intervals in which to trip. A fault at point C with overcurrent would trip both ACB bus tie breakers. A fault at D with

overcurrent on switchboard 1S would trip the associated ACB generator breaker and one or both of the ACB bus tie breakers. In each case, the faulty section of the system is isolated, but power is maintained on as much of the system as possible with respect to the location of the fault.

The attainment of selective tripping requires careful coordination of time-current characteristics for the different groups of circuit breakers. For example, if the system illustrated in figure 4-53 is operating split plant (bus ties open) and if the time-current characteristics of the ACB feeder breaker and the ACB generator breaker were interchanged, a fault at B with overcurrent would trip generator 1SG off the line but would leave the feeder connected to the switchboard. This action would disconnect power to all equipment supplied by switchboard 1S and also would not isolate the faulty section. Therefore, no unauthorized changes should be made to circuit breaker trip settings because these changes may completely disrupt the scheme of protection based on selective tripping.

It is not feasible to provide system protection by selective tripping of circuit breakers in all types of naval ships or for all circuits. For example, d-c distribution systems in older ships and all lighting circuits use fuses to a great extent. Time delay can be incorporated only to the extent that is permitted by the characteristics of the fuses. The use of progressively large fuse sizes from the load to the generator provide some degree of selectivity for overload or limited fault protection.

Maintenance

Metal locking devices are available that can be attached to the handles of AQB type circuit breakers to prevent accidental operation. All breaker handles are now provided with a 3/32-inch hole permitting fastening the locking device with a standard cotter pin. NavShips' Technical Manual, Chapter 300, lists the stock numbers for three different sizes of breaker handle locking devices.

Circuit breakers require careful inspection and cleaning at least once a year (more frequently if subjected to unusually severe service conditions). The special inspections follow.

No work should be undertaken on circuit breakers without first obtaining approval of the electrical or engineer officer, and only after a thorough review of the applicable technical manual, plus Chapter 300 of NavShips' Technical Manual.

Before working on a circuit breaker be aware of its time delay characteristics, whether short time, long time, or instantaneous trip are provided. The adjustments for selective tripping of most circuit breakers are made and sealed at the factory. Changes should not normally be made to their trip settings as these changes may completely disrupt their intended functions of protection. Improper tripping action is corrected best by replacement of the entire breaker assembly, especially where trouble is encountered in the compact assemblies.

A special inspection should be carefully made of each pair of contacts after a circuit breaker has opened on a heavy short circuit. Before working on a circuit breaker, deenergize all control circuits to which it is connected; the procedure differs somewhat with the type of mounting which is employed. For example, before work is performed on drawout circuit breakers,

they should be switched to the open position and removed. Before working on fixed-mounted circuit breakers, open the disconnecting switches ahead of the breakers. If disconnecting switches are not provided for isolating fixed-mounted circuit breakers, deenergize the supply bus to the circuit breaker, if practicable, before inspecting, adjusting, replacing parts, or doing any work on the circuit breaker.

Contacts are the small metal parts especially selected to resist deterioration and wear from the inherent arcing. The arcing occurs in a circuit breaker while its contacts are opening and carrying current at the same time. When firmly closed, the contacts must not arc.

Contact materials have been subjected to constant research, resulting in various products, ranging from pure carbon or copper, to pure silver, each being used alone and also as alloys with other substances. Modern circuit breakers have contacts coated with silver, or silver mixed with cadmium oxide, or silver and tungsten. The two latter silver alloys are extremely hard and resist being filed. Fortunately, such contacts made of silver or its alloys conduct current when discolored (blackened during arcing) with silver oxide. The blackened condition, therefore, requires no filing, polishing, or removal. As with a silver contact, silver oxide is formed during arcing and it has been found that the addition of cadmium oxide greatly improves operation of the contact, because it minimizes the tendency of one contact to weld to another, retards heavy transfer of one material to another, and inhibits erosion.

Usually, a contact containing silver is serviceable as long as the total thickness worn away is on the order of 0.015 to 0.030 inch.

Severe pitting or burning of a silver contact is another matter. It may require some filing (with a fine file or with fine sandpaper, No. 00) to remove raised places on surfaces that prevent intimate and overall closure of the contact surfaces. If necessary, use a CLEAN cloth moistened with INHIBITED methyl chloroform. Be very certain to provide ample ventilation to remove all DEADLY and TOXIC fumes of the solvent.

When cleaning and dressing copper contacts, maintain the original shape of each contact surface and remove as little copper metal as possible. Inspect and wipe the copper contact surfaces for removal of the black copper-oxide film and, in extreme cases, dress and clean

only with fine (No. 00) sandpaper to prevent scratching the surfaces. NEVER use emery cloth or emery paper. Because this copper-oxide film is a partial insulator, follow the sanding procedure by wiping with a clean cloth moistened with inhibited methyl chloroform solvent. Provide VERY LIBERAL ventilation by means of exhaust fans or with portable blowers to entirely remove all traces of the deadly fumes of the solvent.

Calibration problems on circuit breakers should be handled in accordance with Chapter 300 of NavShips' Technical Manual.

The function of arcing contacts is not necessarily impaired by surface roughness. Remove excessively rough spots with a fine file. Replace arcing contacts when they have been burned severely and cannot be properly adjusted. Make a contact impression and check the spring pressure in accordance with the manufacturers' instructions. If information on the correct contact pressure is not available, the contact pressure should be checked with that of similar contacts. When the force is less than the designed value, the contacts either require replacing because they are worn down, or the contact springs should be replaced. Always replace contacts in sets; not singly, and replace contact screws at the same time. Do not use emery paper or emery cloth to clean contacts, and do not clean contacts when the equipment is energized.

Clean all surfaces of the circuit breaker mechanism, particularly the insulation surfaces, with a dry cloth or air hose. Before directing the air on the breaker, be certain that the water is blown out of the hose, that the air is dry, and that the pressure is not over 30 psi. Check the pins, bearings, latches, and all contact and mechanism springs for excessive wear or corrosion and evidence of overheating. Replace parts if necessary.

Slowly open and close circuit breakers manually a few times to be certain that trip shafts, toggle linkages, latches, and all other mechanical parts operate freely and without binding. Be certain that the arcing contacts make-before and break-after the main contacts. If poor alignment, sluggishness, or other abnormal conditions are noted, adjust in accordance with the manufacturer's instructions for the particular circuit breaker.

Oil-piston type overcurrent tripping devices (grade B timers) are sealed mechanisms and

normally do not require any attention. When oil-film (dashpot) overcurrent tripping devices are used, the oil should be removed and the interior of the oil chambers should be cleaned with kerosene and refilled with new oil every six months. Be certain that the dashpot is free of dirt, which destroys the time-delay effect, and that the tripping device is clean, operates freely, and has sufficient travel to trip the breaker. Do not change the air-gap setting of the moving armature because this would alter the calibration of the tripping device. Lubricate the bearing points and bearing surfaces (including latches) with a drop or two of light machine oil. Wipe off any excess oil.

Before returning a circuit breaker to service, inspect all mechanical and electrical connections, including mounting bolts and screws, drawout disconnect devices, and control wiring. Tighten where necessary. Give the breaker a final cleaning with a cloth or compressed air. Operate manually to be certain that all moving parts function freely. Check the insulation resistance.

The sealing surfaces of circuit-breaker contactor and relay magnets should be kept clean and free from rust. Rust on the sealing surface decreases the contact force and may result in overheating of the contact tips. Loud humming or chattering will frequently warn of this condition. A light machine oil wiped sparingly on the sealing surfaces of the contactor magnet will aid in preventing rust.

Oil should always be used sparingly on circuit breakers, contactors, motor controllers, relays, and other control equipment, and should not be used at all unless called for in the manufacturer's instructions or unless oil holes are provided. If working surfaces or bearings show signs of rust, disassemble the device and carefully clean the rusted surfaces. Light oil can be wiped sparingly to prevent further rusting. Oil has a tendency to accumulate dust and grit, which may cause unsatisfactory operation of the device, particularly if the device is delicately balanced.

Arc chutes or boxes should be cleaned by scraping with a file if wiping with a cloth is not sufficient. Replace or provide new linings when they are broken or burned too deeply. Be certain that arc chutes are securely fastened and that there is sufficient clearance to ensure that no interference occurs when the switch or contact is opened or closed.

Shunts and flexible connectors, which are flexed by the motion of moving parts, should be replaced when worn, broken, or frayed.

Operating tests that consist of operating the circuit breakers in the manner in which they are intended to function in service should be conducted regularly. For manually operated circuit breakers, simply open and close the breaker to check the mechanical operation. To check both the mechanical operation and the control wiring, electrically operated circuit breakers should be tested by means of the operating switch or control. Exercise care not to disrupt any electric power supply that is vital to the operation of the ship, or to endanger personnel by inadvertently starting motors and energizing equipment under repair.


REVERSE-POWER RELAY

On all ships with a-c ship service power systems where the generators are operated in parallel, each generator control unit has a reverse power relay. (Motor generators are an exception.) The relay should trip the generator circuit breaker in approximately 10 seconds with reverse power equal to 5 percent of the generator rating.

Reverse power relays trip the generator circuit breaker to prevent motoring the generator. This protection is provided primarily for the prime mover or system, rather than for the generator. Motoring results from a deficiency in the prime mover input to the a-c generator. This deficiency can be caused by loss of or low steam to the turbine, lack of fuel to the diesel engine or gas turbine, or other factors which affect the operation of the prime mover. In the absence of reverse power protection, when the input to the generator falls below that needed to maintain synchronous generator speed, real power is taken from the ship service power system, and the generator acts as a motor driving the prime mover. Reverse power protection prevents damage to the prime mover in case a reverse power condition should occur.

The reverse-power relay consists of two induction disc type elements. The upper element is the timer, and the lower one is the direction element. Figure 4-54 shows the coil and induction disc arrangement in the induction type relay timer element. The disc is four inches in diameter and is mounted on a vertical shaft. The shaft is mounted on bearings for minimum friction.

An arm is clamped to an insulated shaft, which is geared to the disc shaft. The moving contact, a small silver hemisphere, is fastened

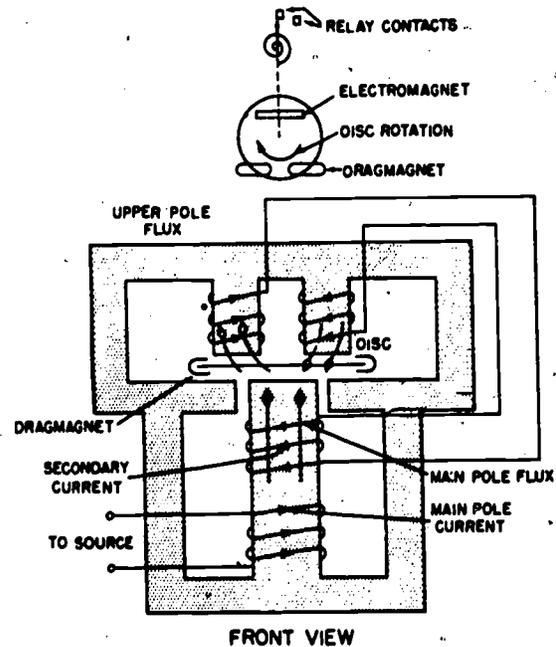

77.105
Figure 4-54.—Coil and disc arrangement, a-c reverse power relay.

on the end of the arm. The electrical connection to the contact is made through the arm and a spiral spring. One end of the spring is fastened to the arm and the other end to a slotted spring adjusted disc fastened to a molded block mounted on the element frame. The stationary contact is attached to the free end of a leaf spring. The spring is fastened to the molded block, and a setscrew makes it possible to adjust the stationary contact position.

The main relay contacts (not shown in the figure) will safely handle 30 amperes at 250-volts d-c and will carry the current long enough to trip a breaker.

The induction disc is rotated by an electromagnet in the rear of the assembly. Movement of the disc is damped by a permanent magnet in front of the assembly.

The operating torque of the timer element is obtained from the electromagnets (fig. 4-54). The main-pole coil is energized by the line voltage. This coil then acts as the primary of a transformer and induces a voltage in the secondary coil. Current then flows through the upper pole coils and thus produces a torque

on the disc because of the reaction between the fluxes of the upper and lower poles.

The timer element cannot be energized unless the power flow is in the direction that will cause tripping. This interlocking action is accomplished by connecting the timer potential coil in series with the contacts of the directional element. Thus, the direction of power flow controls the timer relay.



The directional element is similar to the timing element, except that different quantities are used to produce rotation of the disc. There is also a different contact assembly. The two upper poles of the electromagnet are energized by a current that is proportional to the line current, and the lower pole is energized by a polarizing voltage. The fluxes produced by these two quantities cause rotation of the disc in a direction depending upon the phase angle between the current and voltage. If the line power reverses, the current through the relay current coils will reverse with respect to the polarizing voltage and provide a directional torque.

The contact assembly and permanent magnet construction are the same as that used for the timer element. The timer element is rated at 115 volts, 60 hertz. The minimum timer element trip voltage is 65 volts, and its continuous rating is 127 volts.

The directional element has a power characteristic such that, when the current and voltage are in phase, maximum torque is developed. The potential coil is rated at 70 volts, 60 hertz.

The current coil rating is 5 amperes, and the minimum pickup current is 0.1 ampere through the coil. This current is in phase with 65 volts (minimum) across the potential coil. These are minimum trip values, and the timing characteristic of the timing relay may be erratic with low values.

For maximum protection and correct operation, the relay should be connected so that maximum torque occurs for unity power factor on the system. Because the directional element has power characteristics, this connection may be accomplished by using line to neutral voltage for the directional element potential coil (polarizing voltage) and the corresponding line current in the series coils. If a neutral is not available, a dummy neutral may be obtained by connecting two reactors, as shown in figure 4-55. When connected in this manner, the directional element voltage coil forms one leg of a wye connection, and the reactors form the other two legs of the

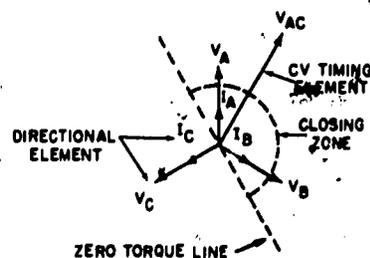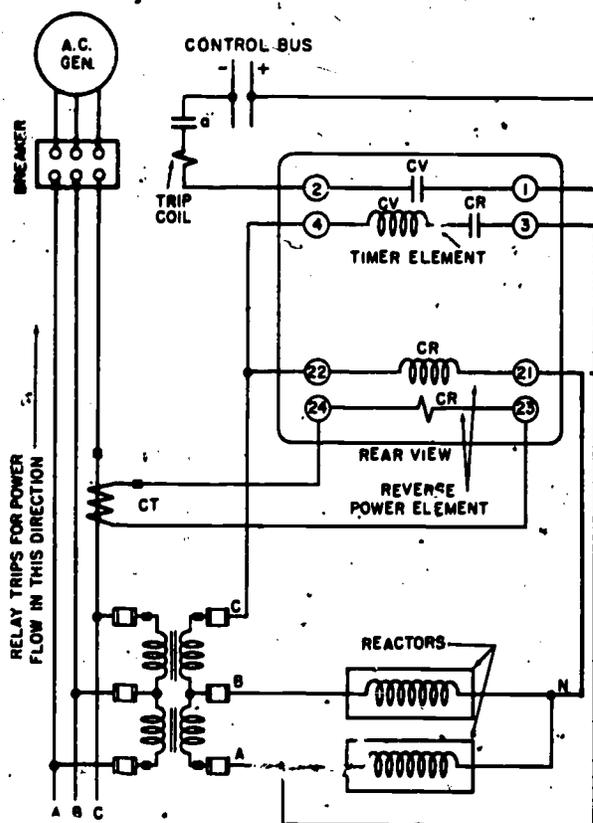

77.106
Figure 4-55.—Schematic wiring diagram of an a-c reverse power relay.

wye. The voltage-operated timer element should be connected across the outside legs of the transformer secondaries.

PHASE-FAILURE RELAY

Because propulsion type a-c motors require full voltage and current from all three phases

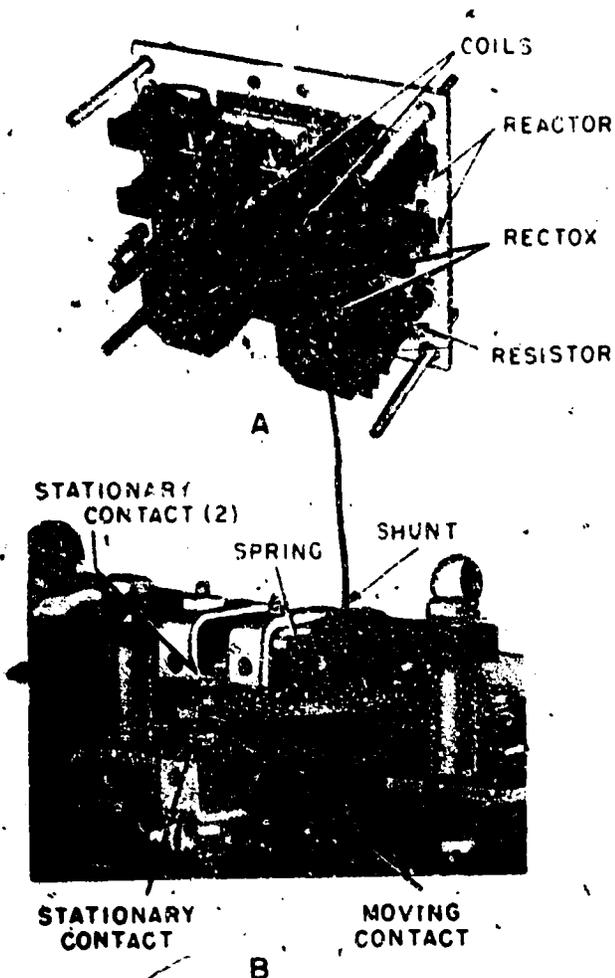


Figure 4-56.— Phase-failure relay. 77.107

supplied by the generator, phase-failure protection is a requirement where this type of ship and propulsion is used.

This type of relay is used to detect short circuits on alternating current propulsion systems for ships. Ordinary instantaneous trip relays cannot be used because, under certain conditions, for example, when the motor is plugged (direction of a rotation reversed on full voltage) during a crash stop, the momentary current may be as great as the short circuit current.

The relay in use operates when there is a current unbalance. It is connected in the control circuit so that it will shut down the system

fault. However, operation of the relay is not limited to short-circuit detection, and the relay may be used as a phase-failure relay. A phase-failure relay is shown in figure 4-56. Part A is the arrangement of the parts in the complete assembly, and part B is a closeup of the contact assembly. The entire unit is enclosed in a cover to prevent dirt and dust from interfering with its operation.

The moving contact is the only moving element in the complete relay. There are two stationary contacts that make it possible to have the relay open or close a circuit when it operates.

Two coils are built into the relay. Each coil has two windings that are actuated by direct current from the two Rectox units. Four reactors are used to get sensitivity over a wide frequency range. Because variations in reactance are introduced during manufacture, two resistors are provided to balance the systems during the initial adjustment.

Figure 4-57 is the schematic wiring diagram for the phase-failure relay. The windings are identified by numbers that refer to numbered leads in the 3-phase bus. The winding (1-3) is connected to lines 1 and 3; the winding (1-2) is connected to lines 1 and 2; and the two windings (2-3) are connected to lines 2 and 3. However, the coils are not directly connected to the bus lines. Instead, connection is made through the Rectox units, which are connected to the line in series with a reactor.

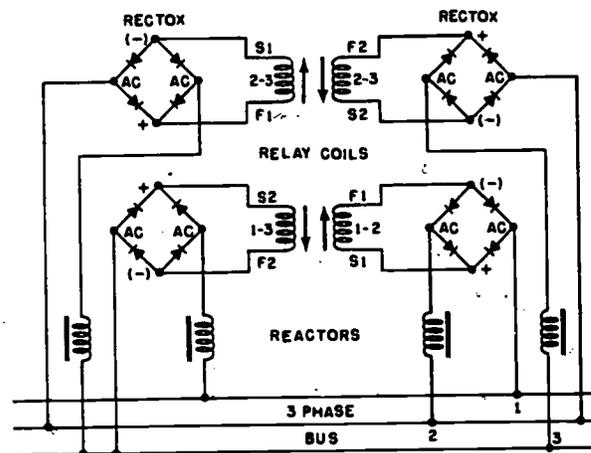


Figure 4-57.— Schematic wiring of phase-failure relay. 77.108

When all three phase voltages are balanced, the flux produced by winding (1-2) is exactly equal and opposite to that produced by winding (2-3). The flux produced by winding (1-3) is exactly equal and opposite to that produced by the other (2-3) winding. Therefore, the resultant flux is zero, and no magnetic pull is exerted on the armature of the relay.

If a short circuit is placed across lines 1 and 2, no flux is produced by winding (1-2). This means that the flux produced by one of the (2-3) windings is no longer balanced, and there is a resultant flux, which exerts pull on the relay armature. The armature moves until the moving contact hits stationary contact

2 (fig. 4-56B). This action opens the circuit between the moving contact and stationary contact 1. As soon as the short circuit is removed from lines 1 and 2, the resultant flux is zero, which allows the spring to return the armature to its original position. Similarly, if shorts occur on lines 2 and 3 or lines 1 and 3, the resultant flux is no longer zero, and the relay will operate.

Never open the d-c circuit to the Rectox unit while the voltage is being applied to the a-c side. This precaution is necessary because the voltage across the Rectox is only a small portion of the total voltage drop due to the reactor being in the circuit. If the d-c side

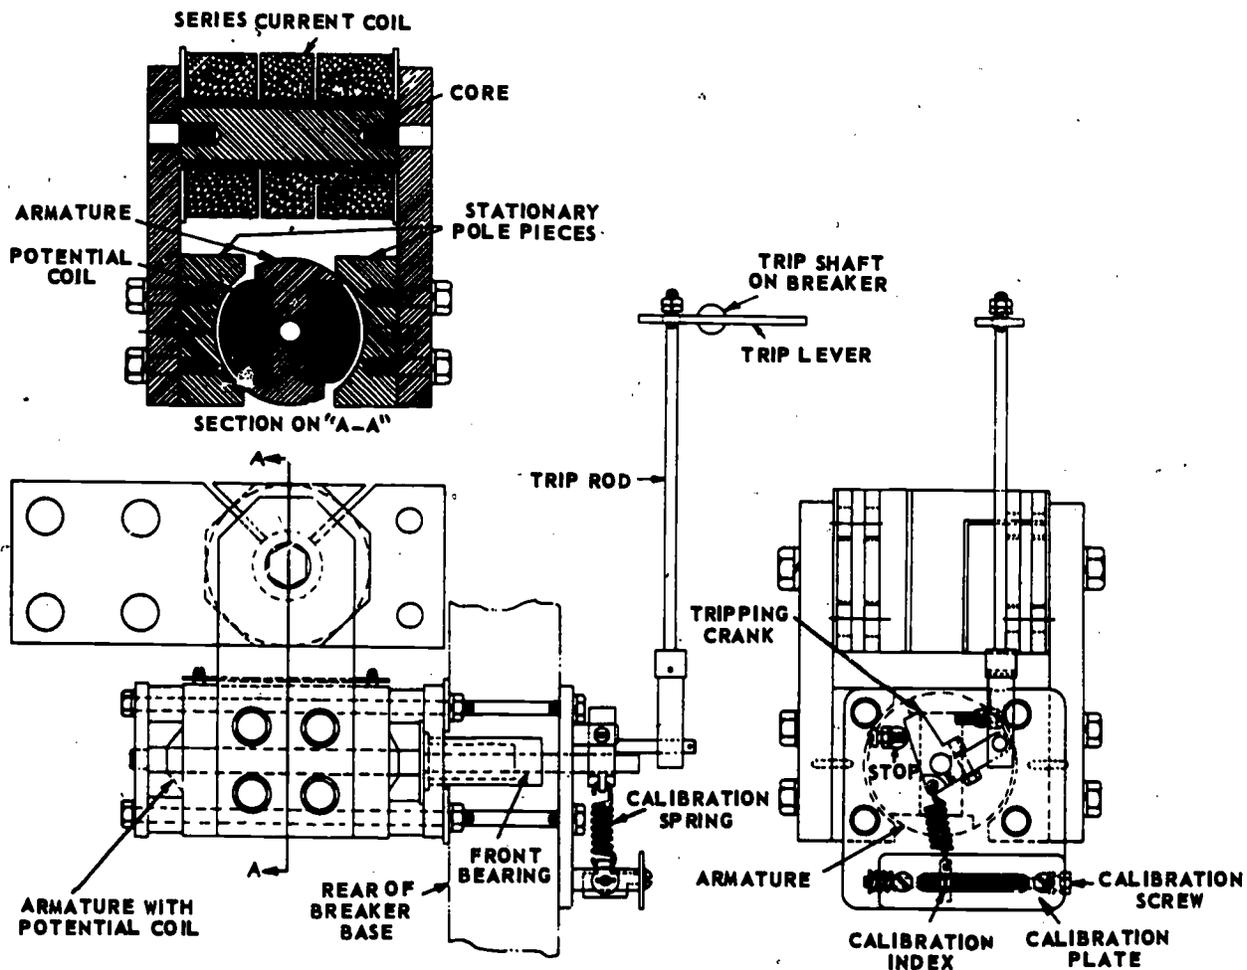


Figure 4-58.— Mechanical construction of d-c reverse current relay.

77.103

is opened, full voltage is applied across the unit, which may cause the unit to break down.

Very little maintenance is required for this relay. No lubrication is needed. However, the relay should be kept clean so that dirt and dust will not interfere with its operation.


Because the relay rarely operates, it is advisable to check its operation every month or two as recommended by NavShips' Technical Manual, Chapter 320.

REVERSE-CURRENT RELAY

Two or more d-c generators may be connected in parallel to supply sufficient power to a circuit. Each d-c generator is driven by its own prime mover. If one prime mover fails, its generator will slow down and draw power from the line. The generator will then operate as a motor and instead of furnishing power to the line, it will draw power from the line. This can result in damage to the prime mover and overloading of the generator. To guard against this possibility, reverse-current relays are used. The reverse-current relay connections are such that when the reverse power reaches a definite percentage of the rated power output, it will trip the generator circuit breaker, disconnecting the generator from the line.

Normally, the reverse-current settings for d-c relays are about 5 percent of rated generator capacity for d-c generators. The reverse-current relay (one for each generator) is located on the generator switchboard and is an integral part of the circuit breaker. The mechanical construction of a d-c relay designed to limit reverse-current flow is illustrated in figure 4-58. Note that the construction is similar to that of a bipolar motor with stationary pole pieces and a rotating armature.

The potential coil is wound on the armature, and a current coil is wound on the stationary pole pieces. When used as a protective device, the current coil is in series with the load, and the potential coil is connected across the line, as shown in figure 4-59. If the line voltage exceeds the value for which the potential coil is designed, a dropping resistor is connected at point X in the circuit.

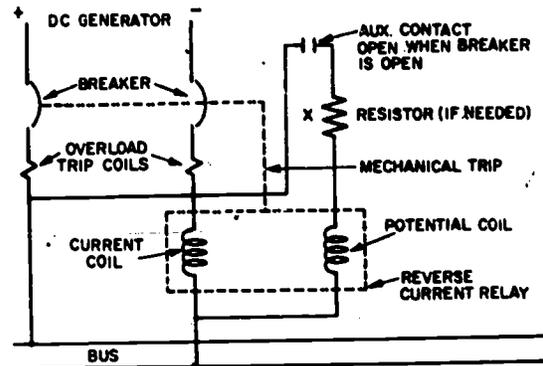

77.104
Figure 4-59.—D-c reverse current relay connections.

When the line is energized, current flowing through the series coil produces a magnetic field across the air gap. Voltage applied to the armature winding produces a current in the armature coil, which interacts with the magnetic field, thereby developing a torque that tends to rotate the armature in a given direction. The construction of the relay is such that the armature cannot turn through 360 degrees as in a motor. Instead, the torque produced by the two fields plus the force from the calibrated spring tends to hold the tripping crank on the armature shaft against a fixed stop. This pressure is maintained as long as current flows through the line in the right direction.

However, if one generator fails, the voltage output of that generator will drop. When the voltage drops below the terminal voltage of the bus to which it is connected, the generator terminal current (through the relay series coil) will reverse. However, the polarity of the voltage applied to the potential coil remains the same. As soon as the reversed current exceeds the calibration setting of the relays, the armature rotates, and through a mechanical linkage, trips the circuit breaker that opens the bus. This action disconnects the generator from the line.

CHAPTER 5

A-C POWER DISTRIBUTION SYSTEMS

The a-c power distribution system aboard ship consists of the a-c power plant, the means of distributing power, and the equipment which consumes the power. The power plant is either the ship service electric plant or the emergency electric plant. The power distribution system comprises the ship service power distribution system, emergency power distribution system, and casualty power distribution system.

SHIP SERVICE POWER DISTRIBUTION

Most a-c power distribution systems in naval ships are 450-volt, 3-phase, 60-hertz, 3-wire systems.

The ship service generator and distribution switchboards are interconnected by bus ties so that any switchboard can be connected to feed power from its generators to one or more of the other switchboards. The bus ties also connect two or more switchboards so that the generator plants can be operated in parallel. In large installations (fig. 5-1) distribution to loads is from the generator and distribution switchboards or switchgear groups to load centers, to distribution panels, and to the loads, or directly from the load centers to some loads.

On some ships, such as large aircraft carriers, a system of zone control of the ship service and emergency distribution is provided. Essentially, the system establishes a number of vertical zones, each of which contains one or more load center switchboards supplied through bus feeders from the ship service switchgear group. A load center switchboard supplies power to the

electrical loads within the electrical zone in which it is located. Thus, zone control is provided for all power within the electrical zone. The emergency switchboards may supply more than one zone, the number of zones depends on the number of emergency generators installed.


In small installations (fig. 5-2), the distribution panels are fed directly from the generator and distribution switchboards. The distribution panels and load centers (if any) are located centrally with respect to the loads that they feed. This arrangement simplifies the installation and requires less weight, space, and equipment than if each load were connected to a switchboard.

At least two independent sources of power are provided for selected vital loads. The distribution of this dual supply is accomplished in several ways: by a normal and an alternate ship service feeder; normal ship service feeder and an emergency feeder; or normal and alternate ship service feeder and an emergency feeder.

A-C GENERATORS

Most electric power utilized today is generated by alternating-current generators. A-c generators are also finding increased use in aircraft and automobiles.

A-c generators are made in many different sizes, depending on their intended use. For example, any one of the generators at Boulder Dam can produce millions of volt-amperes, while generators used on aircraft produce only a few thousand volt-amperes.

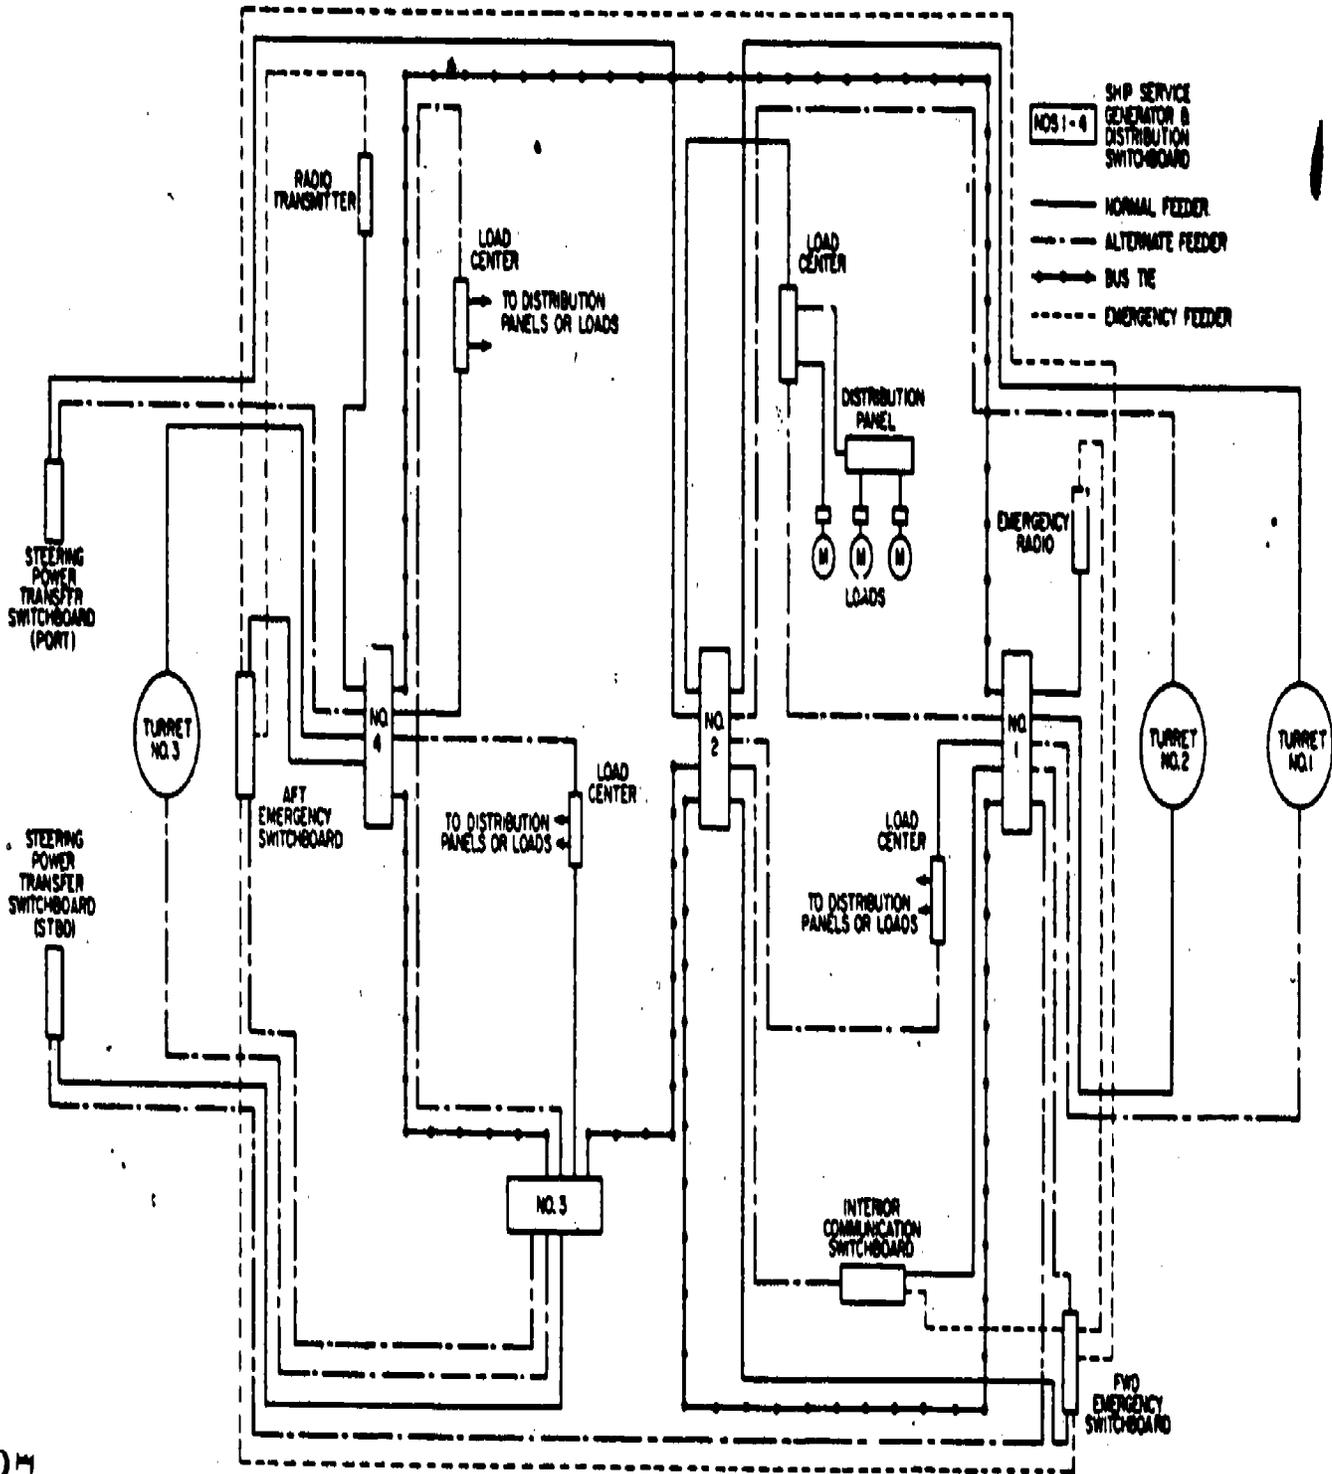


S-2

127

Figure 5-1.—Power distribution in a large combatant ship.

77.320

128

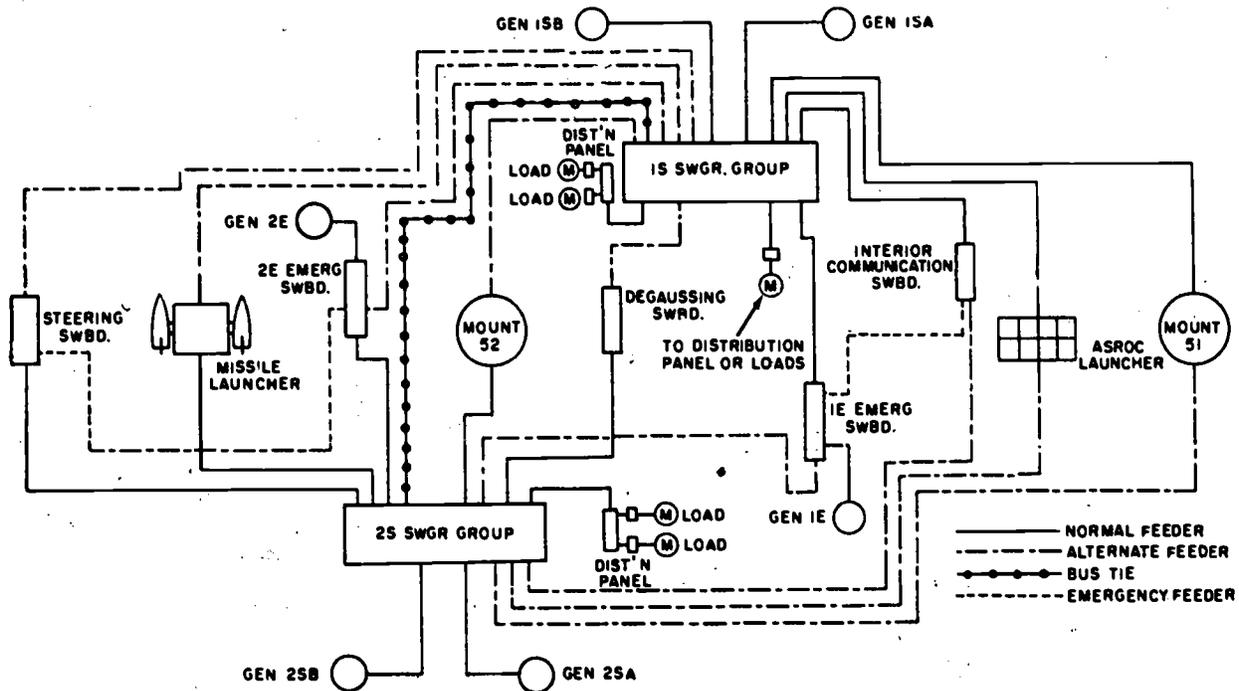

77.321

Figure 5-2.—Power distribution in a guided missile destroyer.

Regardless of size, however, all generators operate on the same basic principle—a magnetic field cutting through conductors, or conductors passing through a magnetic field. Thus, all generators have at least two distinct sets of conductors. They are (1) a group of conductors in which the output voltage is generated, and (2) a second group of conductors through which direct current is passed to obtain an electromagnetic field of fixed polarity. The conductors in which the output voltage is generated are always referred to as the armature windings. The conductors in which the electromagnetic field originates are always referred to as the field windings.

In addition to the armature and field, there must also be motion between the two. To provide this, a-c generators are built in two major assemblies, the stator and the rotor. The rotor rotates inside the stator. It may be driven by any one of a number of commonly used power sources, such as gas or hydraulic turbines,

electric motors, and steam or internal-combustion engines.

TYPES OF A-C GENERATORS

There are various types of alternating-current generators utilized today. However, they all perform the same basic function. The types discussed in the following paragraphs are typical of the more predominant ones encountered in electrical equipment.

Revolving Armature


In the revolving-armature a-c generator, the stator provides a stationary electromagnetic field. The rotor, acting as the armature, revolves in the field, cutting the lines of force, producing the desired output voltage. In this generator, the armature output is taken through sliprings and thus retains its alternating characteristic.

For a number of reasons, the revolving-armature a-c generator is seldom used. Its

primary limitation is the fact that its output power is conducted through sliding contacts (sliprings and brushes). These contacts are subject to frictional wear and sparking. In addition, they are exposed, and thus liable to arc-over at high voltages. Consequently, revolving-armature generators are limited to low-power, low-voltage applications.

Revolving Field

The revolving-field a-c generator (fig. 5-3) is by far the most widely used type. In this type of generator, direct current from a separate source is passed through windings on the rotor by means of sliprings and brushes. This maintains a rotating electromagnetic field of fixed polarity (similar to a rotating bar magnet). The rotating magnetic field, following the rotor, extends outward and cuts through the armature windings imbedded in the surrounding stator. As the rotor turns, alternating voltages are induced in the windings since magnetic fields of first one polarity and then the other cut through them. Since the output power is taken from stationary windings, the output may be connected through fixed terminals T1 and T2 in figure 5-3. This is advantageous, in that there are no sliding contacts, and the whole output circuit is

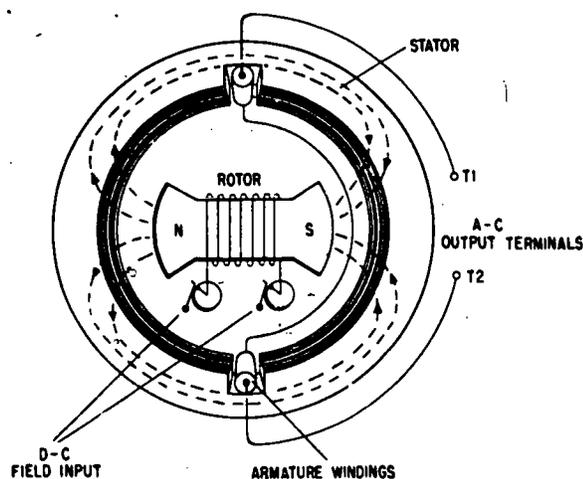

236.284

Figure 5-3.—Essential parts of a rotating-field a.c. generator.

continuously insulated, thus minimizing the danger of arc-over.

Sliprings and brushes are adequate for the d-c field supply because the power level in the field is much smaller than in the armature circuit.

RATING OF A-C GENERATORS

The rating of an a-c generator pertains to the load it is capable of supplying. The normal-load rating is the load it can carry continuously. Its overload rating is the above-normal load which it can carry for specified lengths of time only. The load rating of a particular generator is determined by the internal heat it can withstand. Since heating is caused mainly by current flow, the generator's rating is identified very closely with its current capacity.

The maximum current that can be supplied by an a-c generator depends upon (1) the maximum heating loss (I^2R power loss) that can be sustained in the armature and (2) the maximum heating loss that can be sustained in the field. The armature current varies with the load. This action is similar to that of d-c generators. In a-c generators, however, lagging power-factor loads tend to demagnetize the field and terminal voltage is maintained only by increasing the d-c field current. Therefore, a-c generators are rated in terms of armature load current and voltage output, or kilovolt-ampere (kva) output, at a specified frequency and power factor. The specified power factor is usually 80 percent lagging. For example, a single-phase a-c generator designed to deliver 100 amperes at 1,000 volts is rated at 100 kva. This machine would supply a 100-kw load at unit power factor or an 80-kw load at 80 percent power factor. If the a-c generator supplied a 100-kva load at 20 percent power factor, the required increase in d-c field current needed to maintain the desired terminal voltage would cause excessive heating in the field.

Basic Functions of Generator Parts

A typical rotating-field a-c generator consists of an a-c generator and a smaller d-c generator

built into a single unit. The output of the a-c generator section supplies alternating current to the load for which the generator was designed. The d-c generator's only purpose is to supply the direct current required to maintain the a-c generator field. This d-c generator is referred to as the exciter. A typical a-c generator is shown in figure 5-4(A); figure 5-4(B) is a simplified schematic of the generator.

Any rotary generator requires a prime moving force to rotate the a-c field and exciter armature. This rotary force is transmitted to the generator through the rotor drive shaft (fig. 5-4(A)) and is usually furnished by a combustion engine, turbine, or electric motor. The exciter shunt field (2, fig. 5-4(B)) creates an area of intense magnetic flux between its poles. When the exciter armature (3) is rotated in the exciter field flux, voltage is induced into the exciter armature windings. The exciter output commutator and brushes (4) connect the exciter output directly to the a-c generator field

input sliprings and brushes (5). Since these sliprings, rather than a commutator, are used to supply current through the a-c generator field (6), current always flows in one direction through these windings. Thus, a fixed polarity magnetic field is maintained at all times in the a-c generator field windings. When the a-c generator field is rotated, its magnetic flux is passed through and across the a-c generator armature windings (7). Remember, a voltage is induced into a conductor if it is stationary and a magnetic field is passed across the conductor, the same as if the field is stationary and the conductor is moved. The alternating voltage induced in the a-c generator armature windings is connected through fixed terminals to the a-c load.

Construction

A-c generator sets may be divided into two classes according to the speed or the generator. These classes are as follows:

1. Low-speed engine-driven.
2. High-speed turbine-driven.

The stator, or armature, of the revolving-field a-c generator is built up from steel punchings, or laminations. The laminations of an a-c generator stator form a steel ring that is keyed or bolted to the inside circumference of a steel frame. The inner surface of the laminated ring has slots in which the stator winding is placed.

The low-speed engine-driven a-c generator (fig. 5-5) has a large diameter revolving field with many poles, and a stationary armature relatively short in axial length. The stator (fig. 5-5(A)) contains the armature windings, and the rotor (fig. 5-5(B)) consists of salient poles, on which are mounted the d-c field windings. The exciter armature is the smaller unit shown in the foreground and mounted on an extension of the a-c generator shaft.



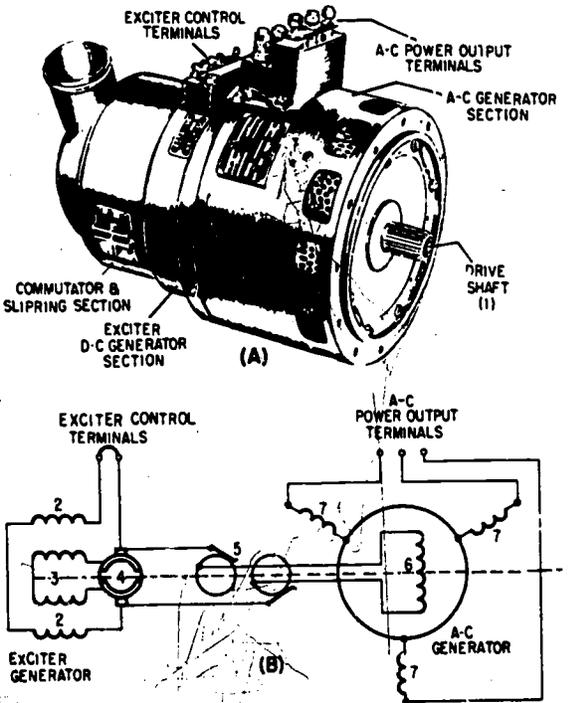


Figure 5-4.—A-c generator and schematic.

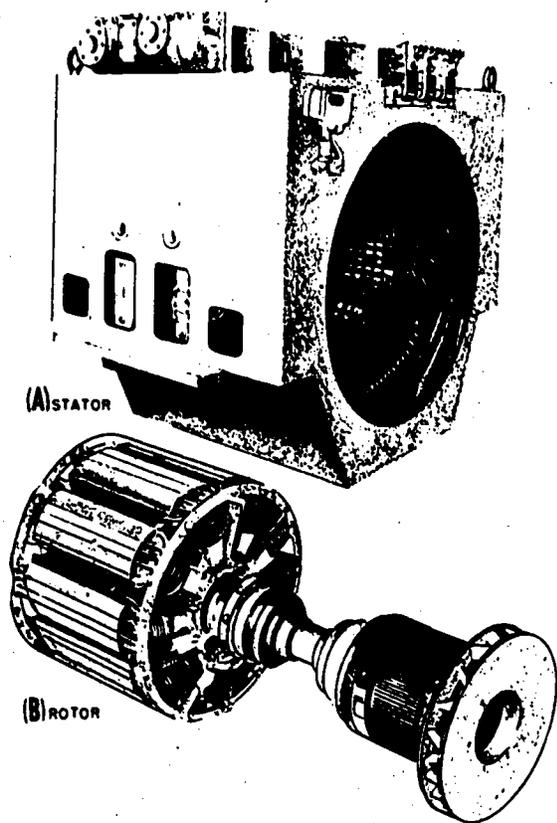

236.286

Figure 5-5.—Low-speed engine-driven a.c. generator.

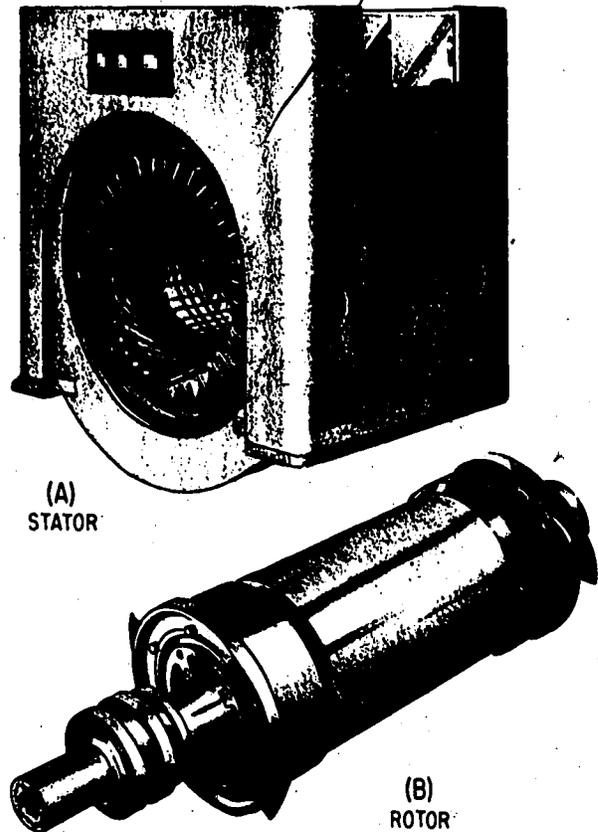

236.287

Figure 5-6.—High-speed turbine-driven a.c. generator.

The high-speed turbine-driven a-c generator (fig. 5-6) is connected either directly or through gears to a turbine. The enclosed metal structure is a part of a forced ventilation system that carries away the heat by circulation of the air through the stator (fig. 5-6(A)) and rotor (fig. 5-6(B)). The exciter is a separate unit (not shown). The enclosed stator directs the paths of the circulating air-cooling currents and also reduces windage noise.


THREE-PHASE GENERATORS

The 3-phase a-c generator, as the name implies, has three single-phase windings spaced so that the voltage induced in each winding is 120° out of phase with the voltages in the other two windings. A schematic diagram of a 3-phase stator showing all the coils becomes complex,

and it is difficult to see what is actually happening. A simplified schematic diagram, showing all the windings of a single phase lumped together as one winding, is illustrated in figure 5-7(A). The rotor is omitted for simplicity. The waveforms of voltage are shown to the right of the schematic. The three voltages are 120° apart and are similar to the voltages that would be generated by three single-phase a-c generators whose voltages are out of phase by angles of 120° . The three phases are independent of each other.

The Wye Connection


Rather than have six leads come out of the 3-phase a-c generator, one of the leads from each phase may be connected to form a common junction. The stator is then called wye, or star,

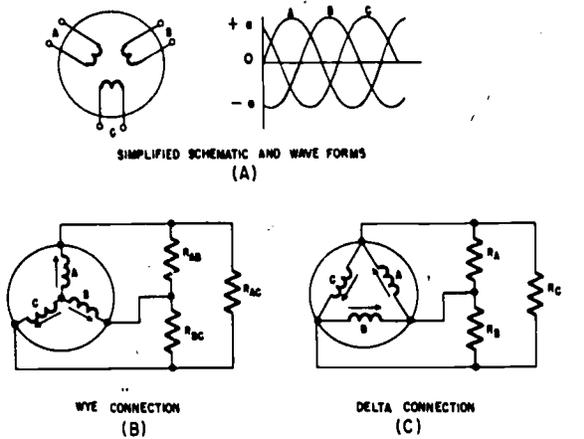


236.292

Figure 5-7.—Three-phase s.c. generator.

connected. The common lead may or may not be brought out of the machine. If it is brought out, it is called the neutral. The simplified schematic (fig. 5-7(B)) shows a wye-connected stator with the common lead not brought out. Each load is connected across two phases in series. Thus, R_{ab} is connected across phases A and B in series, R_{ac} is connected across phases A and C in series, and R_{bc} is connected across phases B and C in series. Thus the voltage across each load is larger than the voltage across a single phase. In a wye-connected a-c generator the three start ends of each single-phase winding are connected together to a common neutral point and the opposite, or finish, ends are connected to the line terminals A, B, and C. These letters are always used to designate the three phases of a 3-phase system, or the three line wires to which the a-c generator phases connect. A 3-phase wye-connected a-c generator supplying three separate loads is shown in figure 5-8(A). When unbalanced loads are used, a neutral may be added as shown in the figure by the broken line between the common neutral point and the loads. The neutral wire serves as a common return circuit for all three phases and maintains a voltage balance across the loads. No current flows in the neutral wire when the loads are balanced. This system is a 3-phase 4-wire circuit and is used to distribute 3-phase power to shorebased installations. The 3-phase 4-wire

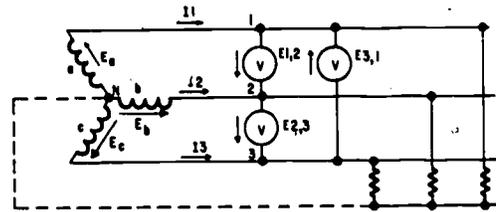

CIRCUIT (A)

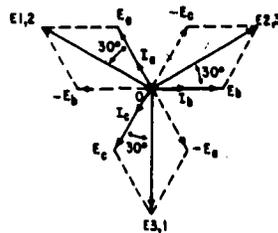

$$\begin{aligned}
 E_{1,2} &= E_a \ominus E_b \\
 E_{2,3} &= E_b \ominus E_c \\
 E_{3,1} &= E_c \ominus E_a \\
 I_a &= I_1 \\
 I_b &= I_2 \\
 I_c &= I_3 \\
 E_{1,2} &= \sqrt{3}E_a \\
 E_{2,3} &= \sqrt{3}E_b \\
 E_{3,1} &= \sqrt{3}E_c
 \end{aligned}$$

VECTORS (B)

236.293

Figure 5-8.—Three-phase wye-connected system.

system is not used aboard ship, but is widely used in industry and for aircraft a-c power systems.

The phase relations in a 3-wire 3-phase wye-connected system are shown in figure 5-8(B). In constructing vector diagrams of 3-phase circuits, a counterclockwise rotation is assumed in order to maintain the correct phase relation between line voltages and currents. Thus, the a-c generator is assumed to rotate in such a direction as to generate the three-phase voltages in the order, E_a, E_b, E_c .


The voltage in phase b, or E_b , lags the voltage in phase a, or E_a , by 120° . Likewise, E_c lags E_b by 120° and E_a lags E_c by 120° . In figure 5-8(A), the arrows $E_a, E_b,$ and E_c , represent the positive direction of generated voltage in the wye-connected a-c generator. The arrows $I_1, I_2,$ and I_3 represent the positive direction of phase and line currents supplied to balance unity power-factor loads connected in wye. The three voltmeters connected between lines 1-2, 2-3, and 3-1, respectively, indicate

effective values of line voltage. The line voltage is greater than the voltage of a phase in the wye-connected circuit because there are two phases connected in series between each pair of line wires, and their voltages combine. Line voltage is not twice the value of phase voltage, however, because the phase voltages are not in phase with each other.


The relation between phase and line voltages is shown in the vector diagram. Effective values of phase voltage are indicated by vectors, E_a , E_b , and E_c . Effective values of line and phase current are indicated by vectors I_a , I_b , and I_c . Because there is only one path for current between any given phase and the line wire to which it is connected, the phase current is equal

to the line current. The respective phase currents have equal values because the load is assumed to be balanced. For the same reason, the respective line currents have equal values. When the load has unity power factor, the phase currents are in phase with their respective phase voltages.


In combining a-c voltages, it is necessary to know the direction in which the positive maximum values of the voltages act in the circuit as well as the magnitudes of the voltages. For example, in figure 5-9(A), the positive maximum voltage generated in coils A and B act in the direction of the arrows, and B leads A by 120° . This arrangement may be obtained by assuming coils A and B to be two armature windings located 120° apart. If each voltage has

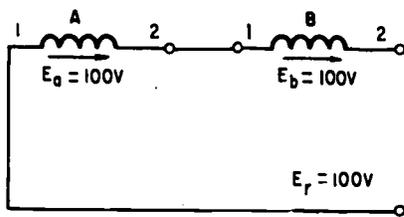


(A) POSITIVE VOLTAGES
SAME DIRECTION

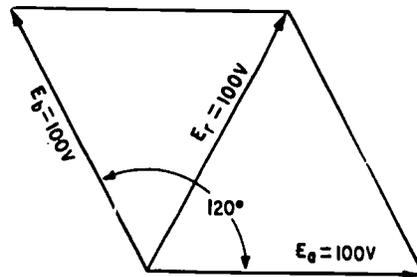

(B) E_b LEADS E_a BY 120°

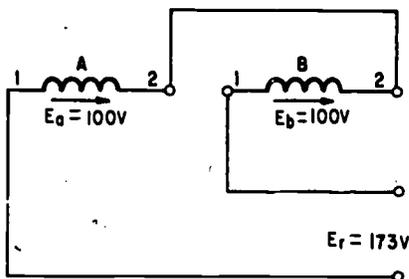

(C) POSITIVE VOLTAGES
IN OPPOSITE DIRECTION

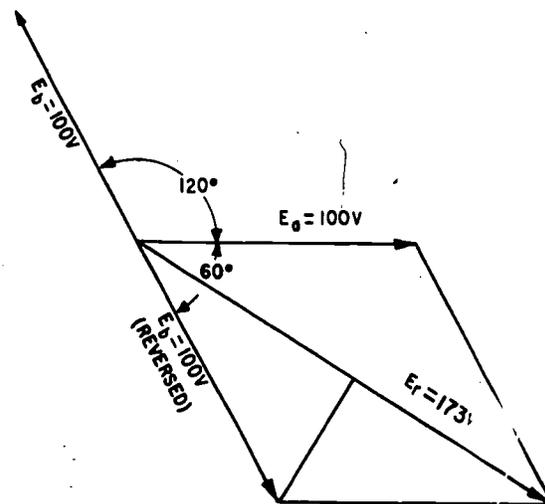

(D) (REVERSED) E_b LAGS E_a BY 60°

Figure 5-9.—Vector analysis of voltages in series aiding and opposing.

236.294

5-8
134

an effective value of 100 volts, the total voltage is $E_T = 100$ volts, as shown by the polar vectors in figure 5-9(B).

If the connections of coil B are reversed (fig. 5-9(C)) with respect to their original connections, the two voltages are in opposition, as may be seen by tracing around the circuit in the direction of the arrow in coil A. The positive direction of the voltage in coil B is opposite to the direction of the trace; the positive direction of the voltage generated in coil A is the same as that of the trace; hence, the two voltages are in opposition. This effect is the same as though the positive maximum value of E_b , were 60° out of phase with that of E_a , and E_b acted in the same direction as E_a when the circuit trace was made (fig. 5-9(D)) to vector E_a is accomplished by reversing the position of E_b from that shown in figure 5-9(B) to the position shown in figure 5-9(D) and completing the parallelogram. If E_a and E_b are each 100 volts, $E_T = \sqrt{3} \times 100$, or 173 volts. The value of E_T may be derived in the following manner: Erecting a perpendicular to E_T divides the isosceles triangle into two equal right triangles each having a hypotenuse of 100 volts and a base of $100 \cos 30^\circ$, or 86.6 volts. The total length of E_T is 2×86.6 , or 173.2 volts.

To construct the line voltage vectors $E_{1,2}$, $E_{2,3}$, and $E_{3,1}$, in figure 5-8 it is first necessary to trace a path around the closed circuit which includes the line wires, armature windings, and one of the three voltmeters. For example, in figure 5-8(A), consider the circuit that includes the upper and middle wires, the voltmeter connected across them, and the a-c generator phases a and b. The circuit trace is started at the center of the wye, proceeds through phase a of the a-c generator, out line 1, down through the voltmeter from line 1 to line 2, and through phase b of the a-c generator back to the starting point. Voltage drops along line wires are disregarded. The voltmeter indicates an effective value equal to the vector sum of the effective value of voltage in phases a and b. This value is the line voltage, $E_{1,2}$. According to Kirchhoff's law, the source voltage between lines 1 and 2 equals the voltage drop across the voltmeter connected to these lines.

If the direction of the path traced through the generator is the same as that of the arrow,

the sign of the voltage is plus; if the direction of the trace is opposite to the arrow, the sign of the voltage is minus. If the direction of the path traced through the voltmeter is the same as that of the arrow, the sign of the voltage is minus; if the direction of the trace is opposite to that of the arrow, the sign of the voltage is plus.

The following equations for voltage are based on the preceding rules:

$$E_a \oplus (-E_b) = E_{1,2}, \text{ or } E_{1,2} = E_a \ominus E_b$$

$$E_b \oplus (-E_c) = E_{2,3}, \text{ or } E_{2,3} = E_b \ominus E_c$$

$$E_c \oplus (-E_a) = E_{3,1}, \text{ or } E_{3,1} = E_c \ominus E_a$$

The signs \oplus and \ominus mean vector addition and, vector subtraction, respectively. One vector is subtracted from another by reversing the position of the vector to be subtracted through an angle of 180° and constructing a parallelogram, the sides of which are the reversed vector and the other vector. The diagonal of the parallelogram is the difference vector.

These equations are applied to the vector diagram of figure 5-8(B), to derive the line voltages $E_{1,2}$, $E_{2,3}$, and $E_{3,1}$, as the diagonals of three parallelograms of which the sides are the phase voltages E_a , E_b , and E_c . From this vector diagram, the following facts are observed:



- (1) The line voltages are equal and 120° apart;
- (2) the line currents are equal and 120° apart;
- (3) the line currents are 30° out of phase with the line voltages when the power factor of the load is 100 percent; and (4) line voltage is the product of the phase voltage and $\sqrt{3}$.

The Delta Connection

A three-phase stator may also be connected as shown in figure 5-7(C). This is called the delta connection. In a delta-connected a-c generator, the start end of one phase winding is connected to the finish end of the third; and the start of the third phase winding is connected to the finish of the second phase winding; and the start of the second phase winding is connected to the finish of the first phase winding. The three junction points are connected to the line wires leading to the load. A 3-phase delta-connected

a-c generator is depicted in figure 5-10(A). The generator is connected to a 3-phase 3-wire circuit which supplies a 3-phase delta-connected load at the right-hand end of the 3-phase line. Because the phases are connected directly across the line wires, phase voltage is equal to line voltage. When the generator phases are properly connected in delta, no appreciable current flows within the delta loop when there is no external load connected to the generator. If any one of the phases is reversed with respect to its correct connection, a short-circuit current flows within the windings of no load, causing damage to the windings.

The three-phase currents, I_a , I_b , and I_c , are indicated by accompanying arrows in the generator phases in figure 5-10(A). These arrows point in the direction of the positive current and voltage of each phase. The three voltmeters connected across lines 1-2, 2-3, and 3-1, respectively, indicate effective values of line and phase voltage. Line current I_1 is supplied by phases a and c, which are connected to line 1.

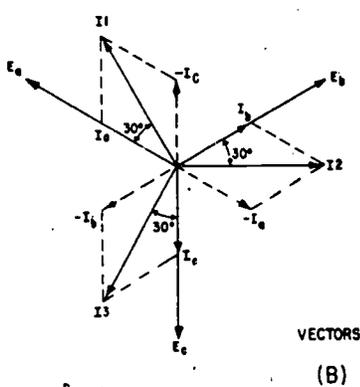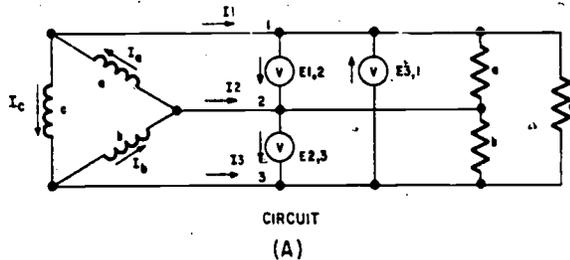

$$\begin{aligned} I_1 &= I_a \oplus I_c \\ I_2 &= I_b \oplus I_a \\ I_3 &= I_c \oplus I_b \\ E_{1,2} &= E_a \\ E_{2,3} &= E_b \\ E_{3,1} &= E_c \\ I_1 &= \sqrt{3} I_a \\ I_2 &= \sqrt{3} I_b \\ I_3 &= \sqrt{3} I_c \end{aligned}$$

Line current is greater than phase current, but not twice as great because the phase currents are not in phase with each other. The relation between line currents and phase currents is shown in figure 5-10(B).

Effective values of line and phase voltages are indicated by vectors E_a , E_b , and E_c . Note that the vector sum of E_a , E_b , and E_c is zero. The phase currents are equal to each other because the loads are balanced. The line currents are equal to each other for the same reason. At unity-power-factor loads, the phase current and phase voltage have a 0° angle between them.

The power delivered by a balanced 3-phase delta-connected system is also three times the power delivered by each phase.

Because

$$E_{\text{phase}} = E_{\text{line}} \text{ and } I_{\text{phase}} = \frac{I_{\text{line}}}{\sqrt{3}}$$

the total true power is

$$\begin{aligned} P_t &= 3E_{\text{line}} \frac{I_{\text{line}}}{\sqrt{3}} \cos \theta \\ &= \sqrt{3} E_{\text{line}} I_{\text{line}} \cos \theta \end{aligned}$$

Thus, the expression for 3-phase power delivered by a balanced delta-connected system is the same as the expression for 3-phase power delivered by a balanced wye-connected system. Two examples are given to illustrate the phase relations between current, voltage, and power in (1) a 3-phase wye-connected system and (2) a 3-phase delta-connected system.

Example 1: A 3-phase wye-connected a-c generator has a terminal voltage of 450 volts and delivers a full-load current of 300 amperes per terminal at a power factor of 80 percent. Find (a) the phase voltage, (b) the full-load current per phase, (c) the kilovolt-ampere, or apparent power, rating, and (d) the true power output.

$$(a) E_{\text{phase}} = \frac{E_{\text{line}}}{\sqrt{3}} = \frac{450}{\sqrt{3}} = 260 \text{ volts}$$

$$(b) I_{\text{phase}} = I_{\text{line}} = 300 \text{ amperes}$$

$$(c) \text{ Apparent power} = \sqrt{3} E_{\text{line}} I_{\text{line}}$$

$$= \sqrt{3} \times 450 \times 300 = 233,600 \text{ va, or } 233.6 \text{ kva}$$

236.295

Figure 5-10.—Three-phase delta-connected system.

5-1P36

(d) True power = $\sqrt{3} E_{line} I_{line} \cos \theta$
 $= \sqrt{3} \times 450 \times 300 \times 0.8$
 $= 186,800 \text{ watts, or } 186.8 \text{ kw}$

Example 2: A 3-phase delta-connected a-c generator has a terminal voltage of 450 volts and the current in each phase is 200 amperes. The power factor of the load is 75 percent. Find (a) the line voltage, (b) the line current, (c) the apparent power, and (d) the true power.

(a) $E_{phase} = E_{line} = 450 \text{ volts}$

(b) $I_{line} = \sqrt{3} I_{phase} = 1.732 \times 200$
 $= 346 \text{ amperes}$

(c) Apparent power = $\sqrt{3} E_{line} I_{line}$
 $= 1.732 \times 450 \times 346 = 269,000 \text{ va, or } 269 \text{ kva}$

(d) True power = $\sqrt{3} E_{line} I_{line} \cos \theta$
 $= 1.73 \times 450 \times 346 \times 0.75$
 $= 202,020, \text{ or } 202.02 \text{ kw}$

MEASUREMENT OF POWER

The wattmeter connections for measuring the true power in a 3-phase system are shown in figure 5-11. The method shown in figure 5-11(A) uses three wattmeters with their current coils inserted in series with the line wires and their potential coils connected between line and neutral wires. The total true power is equal to the arithmetic sum of the three wattmeter readings.

The method shown in figure 5-11(B) uses two wattmeters with their current coils connected in series with two line wires and their potential coils connected between these line wires and the common, or third, wire that does not contain the current coils. The total true power is equal to the algebraic sum of the two wattmeter readings. If one meter reads backward, its potential coil connections are first reversed to make the meter read up-scale and the total true power is then equal to the difference in the two wattmeter readings. If the load power

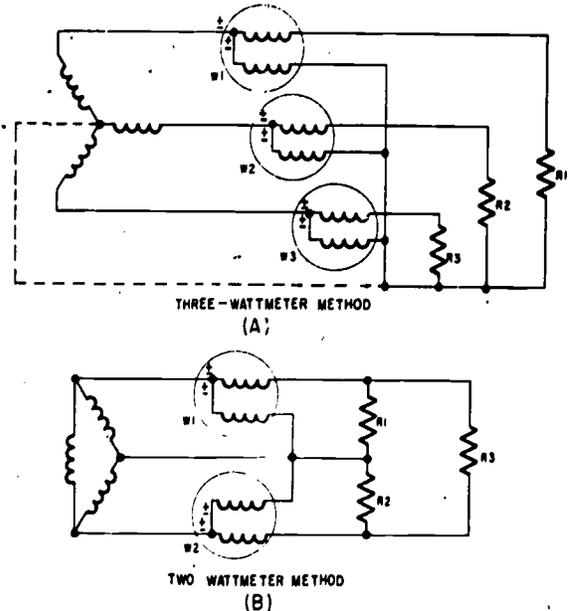


Figure 5-11.—Wattmeters.

factor is less than 0.5 and the loads are balanced, the total true power is equal to the difference in the two wattmeter readings. If the load power factor is 0.5, one meter indicates the total true power and the other indicates zero. If the load power factor is above 0.5, the total true power is equal to the sum of the two wattmeter readings.

FREQUENCY

The frequency of the a-c generator voltage depends upon the speed of rotation of the rotor and the number of poles. The faster the speed, the higher the frequency will be; and the lower the speed, the lower the frequency becomes. The more poles there are on the rotor, the higher the frequency is for a given speed. When a rotor has rotated through an angle such that two adjacent rotor poles (a north and a south pole) have passed one winding, the voltage induced in that winding will have varied through one complete cycle. For a given frequency, the more pairs of poles there are, the lower is the speed of rotation. A 2-pole generator rotates at twice the speed of a 4-pole generator for the same

frequency of generated voltage. The frequency of the generator in Hz (cycles per second) is related to the number of poles and the speed, as expressed by the equation

$$f = \frac{P}{2} \times \frac{N}{60} = \frac{PN}{120}$$

where P is the number of poles and N the speed in rpm. For example, a 2-pole 3,600-rpm

generator has a frequency of $\frac{2 \times 3,600}{120} = 60$ Hz;

a 4-pole 1,800-rpm generator has the same frequency; and a 6-pole 500-rpm generator has a

frequency of $\frac{6 \times 500}{120} = 25$ Hz, and a 12-pole

4,000-rpm generator has a frequency of $\frac{12 \times 4,000}{120} = 400$ Hz.

GENERATED VOLTAGE

Once the machine has been designed and built, the generated voltage of an a-c generator is controlled, in practice, by varying the d-c excitation voltage applied to the field winding.

CHARACTERISTICS

When the load on a generator is changed, the terminal voltage varies with the load. The amount of variation depends on the design of the generator and the power factor of the load. With a load having a lagging power factor, the drop in terminal voltage with increased load is greater than for unity power factor. With a load having a leading power factor, the terminal voltage tends to rise. The causes of a change in terminal voltage with load change are (1) armature resistance (2) armature reactance, and (3) armature reaction.

Armature Resistance

When current flows through a generator armature winding, there is an IR drop due to the resistance of the winding. This drop increases with load, and the terminal voltage is reduced. The armature resistance drop is small because the resistance is low.

Armature Reactance

The armature current of an a-c generator varies approximately as a sine wave. The continuously varying current in the generator armature is accompanied by an IX_L voltage drop in addition to the IR drop. Armature reactance in an a-c generator may be from 30 to 50 times the value of armature resistance because of the relatively large inductance of the coils compared with their resistance.

A simplified series equivalent circuit of one phase of an a-c generator is shown in figure 5-12. The voltage generated in the phase winding is equal to the vector sum of the terminal voltage for the phase and the internal voltage loss in the armature resistance, R, and the armature reactance, X_L , associated with that phase. The voltage vectors for a unity power-factor load are shown in figure 5-12(A). The armature IR drop is in phase with the current, I, and the terminal voltage E_t . Because the armature IX_L drop is 90° out of phase with the current, the terminal voltage is approximately equal to the generated voltage, less the IR drop in the armature.

The voltage vectors for a lagging power-factor load are shown in figure 5-12(B). The load current and IR drop lag the terminal voltage by angle θ . In this example, the armature IZ drop is more nearly in phase with the terminal voltage and the generated voltage. Hence, the terminal voltage is approximately equal to the generated voltage, less the armature IZ drop. Because the IZ drop is much greater than the IR drop, the terminal voltage is reduced that much more. The voltage vectors for a leading power-factor load are shown in figure 5-12(C). The load current and IR drop lead the terminal voltage by angle θ . This condition results in an increase in terminal voltage above the value of E_g . The total available voltage of the a-c generator phase is the combined effect of E_g (rotationally induced) and the self-induced voltage (not shown in the vectors). The self-induced voltage, as in any a-c circuit, is caused by the varying field (accompanying the varying armature current) linking the armature conductors. The self-induced voltage always lags

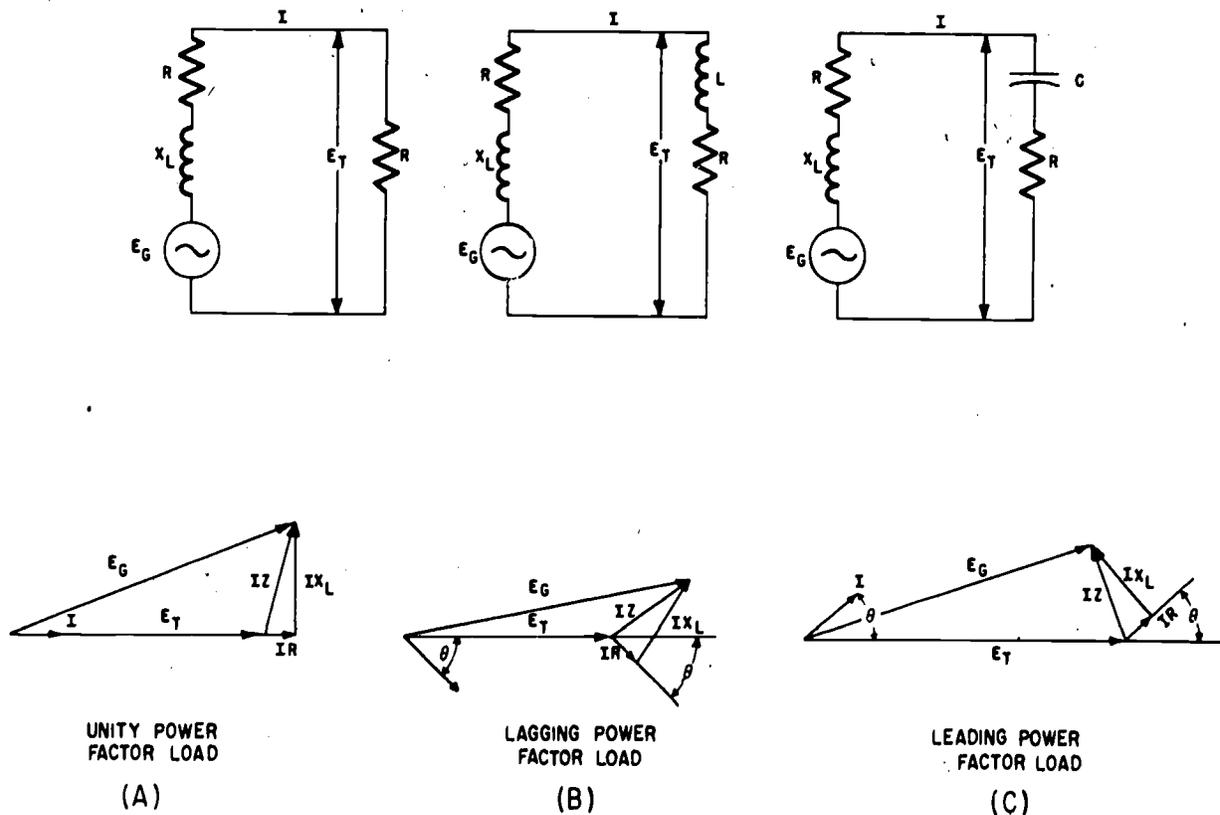


Figure 5-12.—A-c generator voltage characteristics.

236.297

the current by 90° ; hence, when I leads E_t , the self-induced voltage aids E_g , and E_t increases.

Armature Reaction

When an a-c generator supplies no load, the d-c field flux is distributed uniformly across the airgap. When an a-c generator supplies a reactive load, however, the current flowing through the armature conductors produces an armature magnetomotive force (mmf) that influences the terminal voltage by changing the magnitude of the field flux across the airgap. When the load is inductive, the armature mmf opposes the d-c field and weakens it, thus lowering the terminal voltage. When a leading current flows in the armature the d-c field is aided by the armature mmf and the flux across the airgap is increased, thus increasing the terminal voltage.

VOLTAGE REGULATION

The voltage regulation of an a-c generator is the change of voltage from full load to no load, expressed in percentage of full-load volts, when the speed and d-c field current are held constant.

$$\text{Percent regulation} = \frac{E_{NL} - E_{fL}}{E_{fL}} \times 100$$

For example, the no-load voltage of a certain generator is 250 volts and the full-load voltage is 220 volts. The percent regulation is

$$\frac{250 - 220}{220} \times 100 = 13.6 \text{ percent}$$

PRINCIPLES OF A-C VOLTAGE CONTROL

In an a-c generator, an alternating voltage is induced into the armature windings when magnetic fields of alternating polarity are passed across these windings. The amount of voltage induced into the a-c generator windings depends mainly on three things: the number of conductors in series per winding, the speed at which the magnetic field passes across the winding (generator rpm), and the strength of the magnetic field. Any of these three could conceivably be used to control the amount of voltage induced into the a-c generator windings.

The number of windings, of course, is fixed when the generator is manufactured. Also, if the frequency of a generator's output is required to be of a constant value, then the speed of the rotating field must be held constant. This prevents the use of the generator rpm as a means of controlling the voltage output. Thus, the only practical remaining method for obtaining voltage control is to control the strength of the rotating magnetic field. In some specialized applications, the field is furnished by a permanent magnet. The a-c generator uses an electromagnetic field rather than a permanent magnetic type field. The strength of this electromagnetic field may be varied by changing the amount of current flowing through the coil. This is accomplished by varying the amount of voltage applied across the coil. It can be seen that by varying the exciter armature d-c output voltage, the a-c generator field strength is also varied. Thus, the magnitude of the generated a-c voltage depends directly on the value of the exciter output voltage. This relationship allows a relatively large a-c voltage to be controlled by a much smaller d-c voltage.

The next function of the a-c generator that must be understood is how the d-c exciter output voltage is controlled. Voltage control in a d-c generator is obtained by varying the strength of the d-c generator shunt field. This is accomplished by using any of a number of different types of voltage regulators. A device which will vary the exciter shunt field current in accordance with changes in the a-c generator voltage is called an a-c generator voltage regulator. This regulator must also maintain the

correct value of exciter shunt field current when no a-c voltage corrective action is required (steady state output). In figure 5-13, note that a pair of connections labeled a-c sensing input feeds a voltage proportional to the a-c generator output voltage to the a-c voltage regulator. Note also that a portion of the exciter's armature output is connected through the exciter's field rheostat, RX, then through the exciter shunt field windings, and finally back to the exciter armature. Obviously, the exciter supplies direct current to its own control field, in addition to the a-c generator field, as determined by the setting of RX. The setting of RX is controlled by the magnetic strength of the control coil L. The magnetic strength of L is in turn controlled by the voltage across resistor R. The voltage across R is rectified d.c., and is proportional to the a-c line voltage. (Rectifiers are devices that change a.c. to d.c.)

Thus, the essential function of the voltage regulator is to use the a-c output voltage, which it is designed to control, as a sensing influence to control the amount of current the exciter supplies to its own control field. A drop in the output a-c voltage will change the setting of RX in one direction and cause a rise in the exciter control field current. A rise in the output a-c voltage will change the setting of RX in the opposite direction and cause a drop in the exciter control field current. These latter two characteristics are caused by actions within the voltage regulator. These characteristics are common to both the resistive and magnetic (magnetic amplifier) types of a-c voltage regulators. Both types of regulators perform the same functions, but accomplish them through different operating principles.

PARALLEL OPERATION OF A-C GENERATORS

A-c generators are connected in parallel to (1) increase the plant capacity beyond that of a single unit, (2) serve as additional reserve power for expected demands, or (3) permit shutting down one machine and cutting in a standby machine without interrupting the power supply. When a-c generators are of sufficient size, and are operating at unequal frequencies and

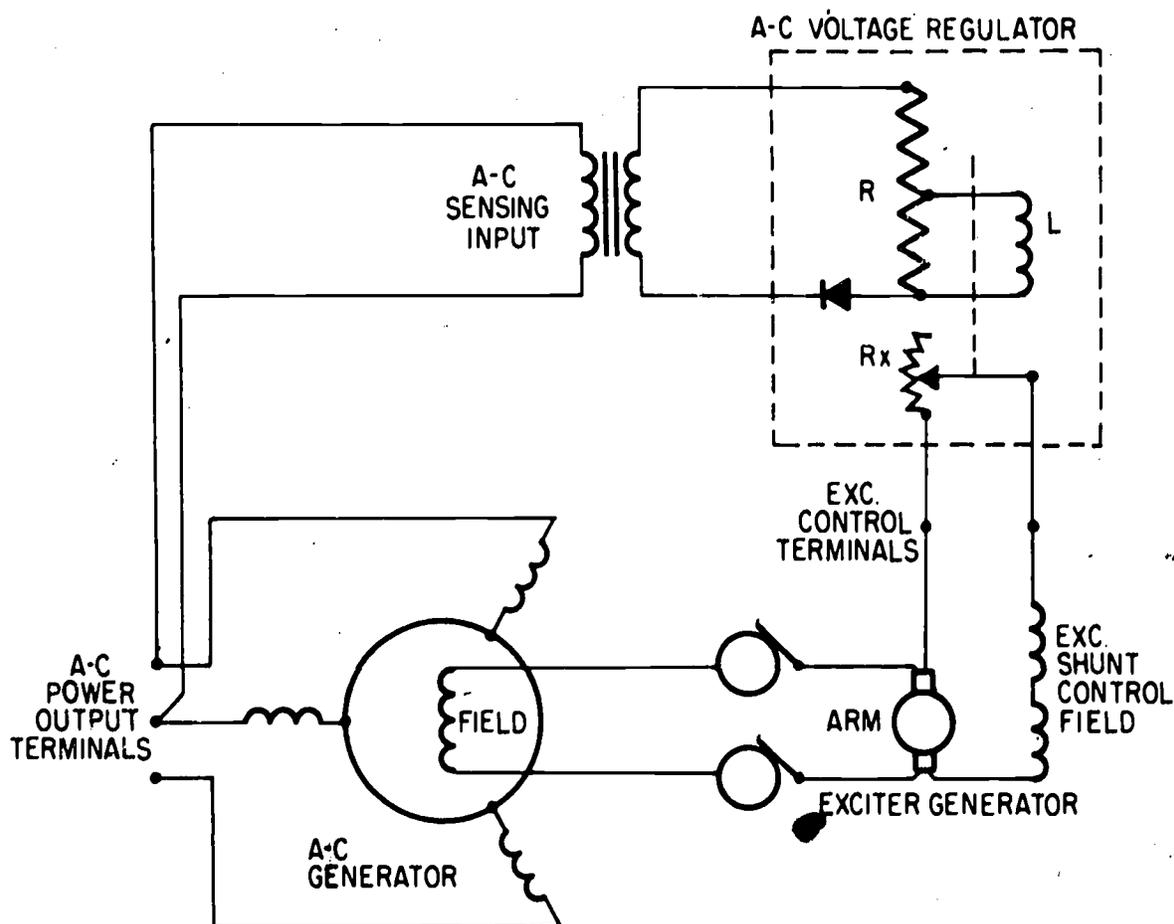


Figure 5-13.—Simplified voltage regulator circuit.

236.298

terminal voltages, severe damage may result if they are suddenly connected to each other through a common bus. To avoid this, the generators must be synchronized as closely as possible before connecting them together. This may be accomplished by connecting one generator to the bus (referred to as bus generator), and then synchronizing the other (incoming generator) to it before closing the incoming generator's main power contactor. The generators are synchronized when the following conditions are set:

1. Equal terminal voltages. This is obtained by adjustment of the incoming generator's field strength.

2. Equal frequency. This is obtained by adjustment of the incoming generator's prime mover speed.

3. Phase voltages in proper phase relation. (Connecting phase voltages must reach peak values of the same polarity at the same instant.) The generators could have the same frequency, and still not be in phase. That is, if the two generators have the same frequency, but one is lagging the other, the lagging generator will remain a fixed number of degrees behind the leading generator, until it is accelerated slightly to catch up.


4. Phases connected in proper sequence. One pair of phases may be properly connected, while the other two pairs may be crossed. In this

case, the phase sequence of one generator may be ACB, while the other is ABC.

Synchronizing A-C Generators

All of the foregoing conditions may be set by the following methods:

Equal voltages may be checked by using a voltmeter. The remaining conditions, equal frequency, phase relations, and phase sequence, are checked by using either synchronizing lamps or a synchroscope. There are a number of ways in which synchronizing lamps may be connected, but the most satisfactory arrangement is the two-bright one-dark method. This connective arrangement is shown in figure 5-14. Note that the lamps are connected directly between the incoming generator's output and the buses. In this way, the two a-c sources may be synchronized before the incoming generator's

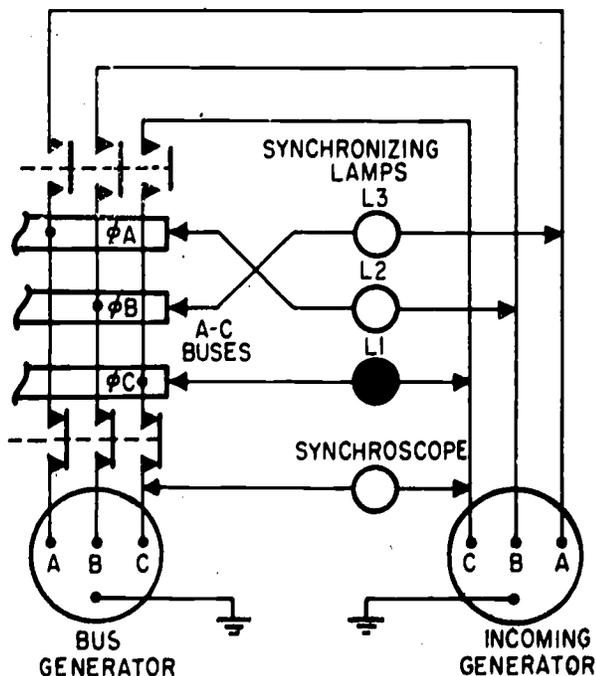

238.299

Figure 5-14.—Synchronizing lamp connection for two-bright one-dark method.

main power contactor is closed. At the instant the two generators are to be paralleled L_2 and L_3 will glow with maximum brilliance and L_1 will be dark.

Assume that the incoming generator is far out of synchronism-lagging. All three lamps will appear to glow steadily, because the frequency of the voltage across them is the difference in the frequencies of the two generators, and thus is too high for individual alteration to be observed. As the lagging generator is accelerated, however, the lamp (differential) frequency decreases until their light flickers visibly. Their flickering will have a rotating sequence, if connections are correct, and will indicate which generator is faster.

At a point approaching synchronism, lamp L_1 will be dark because it is connected between like phases. That is, the two-phase C voltages will be so nearly synchronized that their differential voltage across L_1 will be insufficient to make it glow visibly. However, this differential may still be of sufficient magnitude to damage the generators should they be connected at this time. The reason for cross-connecting L_2 and L_3 is now indicated. Under perfectly synchronized conditions, the phase voltages across L_2 and L_3 are both 120° apart, because of their cross-connection, and both glow with equal brilliance. However, if the generators are not in complete synchronism, but only very near it, one of the bright lamps would be increasing in voltage as the other was decreasing. This action would cause a visible difference in the brilliance of L_2 and L_3 . Thus, by adjusting the incoming generator's frequency so that no visible difference of brilliance exists between L_2 and L_3 , the exact point of synchronism can be approached very closely before paralleling the incoming generator with the generator on the bus.

When the lamps have been used to bring the generators as close to synchronization as is visibly possible, the synchroscope is used to make the final fine adjustment to the incoming generator's frequency. A synchroscope is a highly sensitive instrument used to detect a difference in frequency between two a-c sources.

TRANSFORMERS

A transformer is a device that has no moving parts and that transfers energy from one circuit to another by electromagnetic induction. The energy is always transferred without a change in frequency, but usually with changes in voltage and current. A stepup transformer receives electrical energy at one voltage and delivers it at a higher voltage. Conversely, a stepdown transformer receives energy at one voltage and delivers it at a lower voltage. Transformers require little care and maintenance because of their simple, rugged, and durable construction. The efficiency of transformers is high. Because of this, transformers are responsible for the more extensive use of alternating current than direct current. The conventional constant-potential transformer is designed to operate with the primary connected across a constant-potential source and to provide a secondary voltage that is substantially constant from no load to full load.

Various types of small single-phase transformers are used in electrical equipment. In many installations, transformers are used on switchboards to step down the voltage for indicating lights. Low-voltage transformers are included in some motor control panels to supply control circuits or to operate overload relays.

Instrument transformers include potential, or voltage, transformers and current transformers. Instrument transformers are commonly used with a-c instruments when high voltages or large currents are to be measured.

Electronic circuits and devices employ many types of transformers to provide necessary voltages for proper electron-tube operation, interstage coupling, signal amplification, and so forth. The physical construction of these transformers differs widely.

The power-supply transformer used in electronic circuits is a single-phase constant-potential transformer with one or more secondary windings, or a single secondary with several tap connections. These transformers have a low volt-ampere capacity and are less efficient than large constant-potential power

transformers. Most power-supply transformers for electronic equipment are designed to operate at a frequency of 50 to 60 Hz. Aircraft power-supply transformers are designed for a frequency of 400 Hz. The higher frequencies permit a saving in size and weight of transformers and associated equipment.


CONSTRUCTION

The typical transformer has two windings insulated electrically from each other. These windings are wound on a common magnetic core made of laminated sheet steel. The principal parts are: (1) The core, which provides a circuit of low reluctance for the magnetic flux; (2) the primary windings, which receives the energy from the a-c source; (3) the secondary winding, which receives the energy by mutual induction from the primary and delivers it to the load, and (4) the enclosure.

When a transformer is used to step up the voltage, the low-voltage winding is the primary. Conversely, when a transformer is used to step down the voltage, the high-voltage winding is the primary. The primary is always connected to the source of the power; the secondary is always connected to the load. It is common practice to refer to the windings as the primary and secondary rather than the high-voltage and low-voltage windings.

The principal types of transformer construction are the core type and the shell type, as illustrated respectively in figures 5-15(A) and (B). The cores are built of thin stampings of silicon steel. Eddy currents, generated in the core by the alternating flux as it cuts through the iron, are minimized by using thin laminations and by insulating adjacent laminations with insulating varnish. Hysteresis losses, caused by the friction developed between magnetic particles as they are rotated through each cycle of magnetization, are minimized by using a special grade of heat-treated grain-oriented silicon-steel laminations.

In the core type transformer, the copper windings surround the laminated iron core. In the shell type transformer the iron core

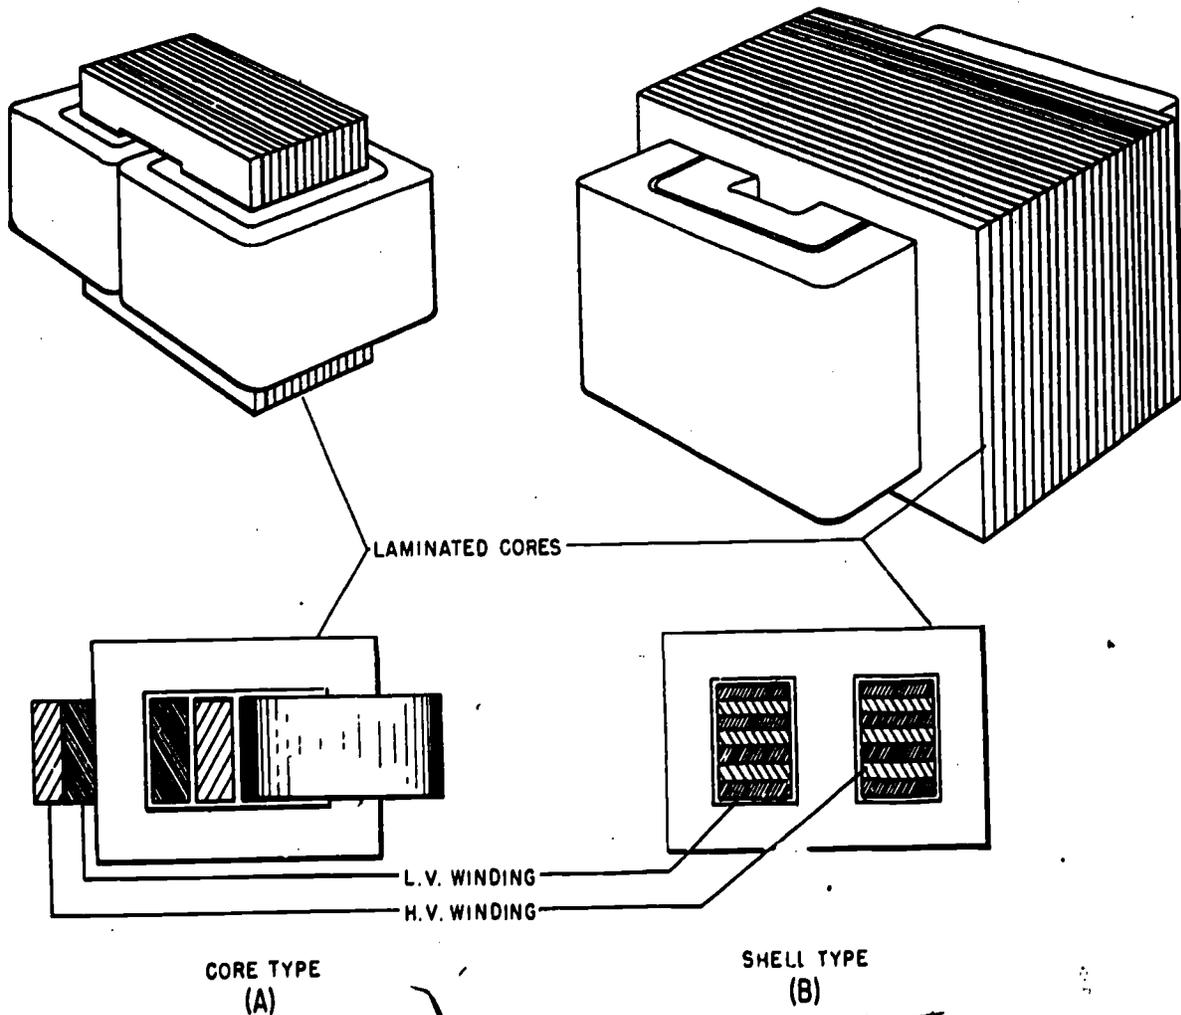

236.300

Figure 5-15.—Types of transformer construction.

surrounds the copper windings. Distribution transformers are generally of the core type; whereas some of the largest power transformers are of the shell type.

If the windings of a core-type transformer were placed on separate legs of the core, a relatively large amount of the flux produced by the primary winding would fail to link the secondary winding and a large leakage flux would result. The effect of the leakage flux would be to increase the leakage reactance drop, IX_L , in both windings. To reduce the leakage

flux and reactance drop, the windings are subdivided and half of each winding is placed on each leg of the core. The windings may be cylindrical in form and placed one inside the other with the necessary insulation, as shown in figure 5-14(A). The low-voltage winding is placed with a large part of its surface area next to the core, and the high-voltage winding is placed outside the low-voltage winding in order to reduce the insulation requirements of the two windings. If the high-voltage winding were placed next to the core, two layers of high-voltage insulation would be required, one

next to the core and the other between the two windings.

In another method, the windings are built up in thin flat sections called pancake coils. These pancake coils are sandwiched together, with the required insulation between them, as shown in figure 5-15(B).

The complete core and coil assembly (fig. 5-16(A)) is placed in a steel tank. In some transformers the complete assembly is immersed in a special mineral oil to provide a means of insulation and cooling, while in other transformers they are mounted in drip-proof enclosures as shown in figure 5-16(B).

Transformers are built in both single-phase and polyphase units. A 3-phase transformer

consists of separate insulated windings for the different phases, wound on a 3-legged core capable of establishing three magnetic fluxes displaced 120° in time phase.

VOLTAGE AND CURRENT RELATIONS

The operation of the transformer is based on the principle that electrical energy can be transferred efficiently by mutual induction from one winding to another. When the primary winding is energized from an a-c source, an alternating magnetic flux is established in the transformer core. This flux links the turns of both primary and secondary, thereby inducing voltages in them. Because the same flux cuts both windings, the same voltage is induced in each turn of both windings. Hence, the total

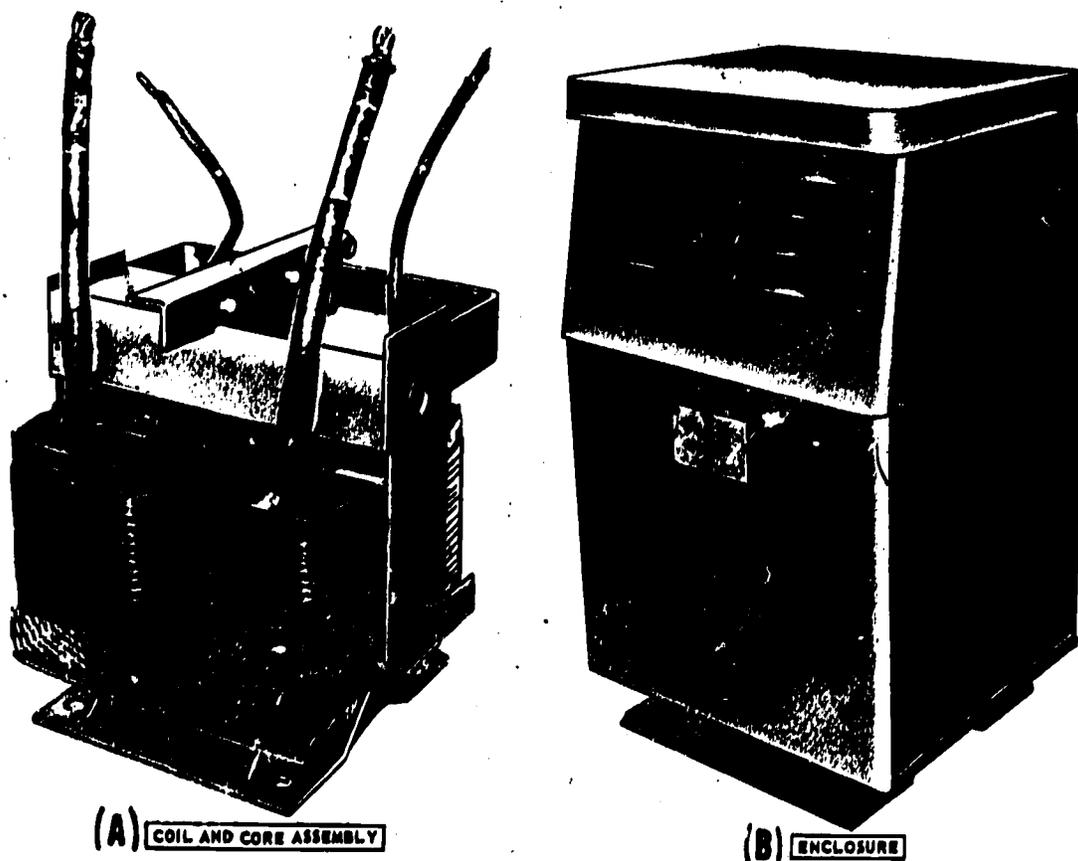


Figure 5-16.—Single-phase transformer.

236.301

5-19

induced voltage in each winding is proportional to the number of turns in that winding; that is,

$$\frac{E_1}{E_2} = \frac{N_1}{N_2}$$

where E_1 and E_2 are the induced voltages in the primary and secondary windings, respectively, and N_1 and N_2 are the number of turns in the primary and secondary windings, respectively. In ordinary transformers the induced primary voltage is almost equal to the applied primary voltage; hence, the applied primary voltage and the secondary induced voltage are approximately proportional to the respective number of turns in the two windings.

A constant-potential single-phase transformer is represented by the schematic diagram in figure 5-17(A). For simplicity, the

primary winding is shown as being on one leg of the core and the secondary winding on the other leg. The equation for the voltage induced in one winding of the transformer is

$$E = \frac{4.44 BSfN}{10^8}$$

where E is the rms voltage, B the maximum value of the magnetic flux density in lines per square inch in the core, S the cross-sectional area of the core in square inches, f the frequency in hertz, and N the number of complete turns in the winding.

For example, if the maximum flux density is 90,000 lines per square inch, the cross-sectional area of the core is 4.18 square inches, the frequency is 60 Hz, and the number of turns in

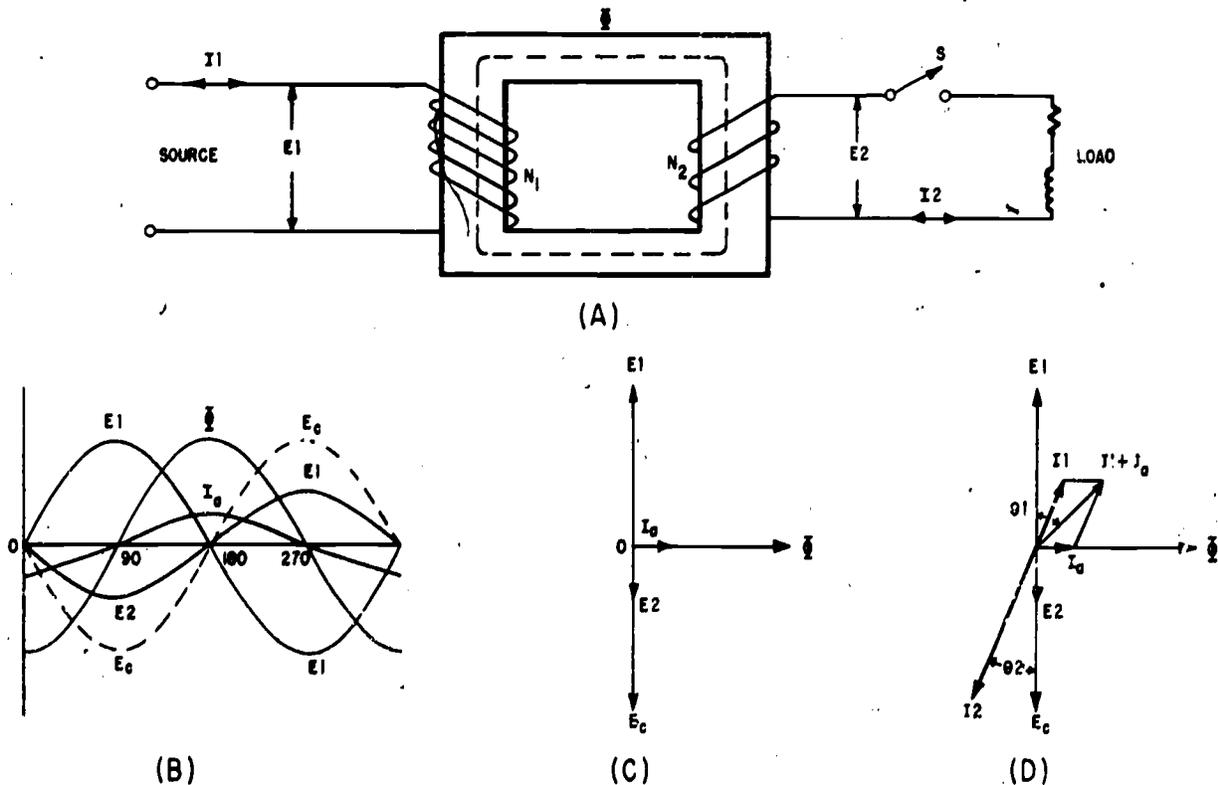


Figure 5-17.—Constant-potential transformer.

233.302

the high-voltage winding is 1,200, the voltage rating of this winding is

$$E_1 = \frac{4.44 \times 90,000 \times 4.18 \times 60 \times 1,200}{10^8}$$

$$= 1,200 \text{ volts}$$

If the primary-to-secondary turns ratio of this transformer is 10 to 1, the number of turns in the low-voltage winding will be

$$\frac{1,200}{10} = 120 \text{ turns}$$

and the voltage induced in the secondary will be

$$E_2 = \frac{1,200}{10} = 120 \text{ volts}$$

The waveforms of the ideal transformer with no load are shown in figure 5-17(B). When E_1 is applied to the primary winding, N_1 , with the switch, S , open, the resulting current I_a , is small and lags E_1 by almost 90° because the circuit is highly inductive. This no-load current is called the exciting, or magnetizing, current because it supplies the magnetomotive force that produces the transformer core flux Φ . The flux produced by I_a cuts the primary winding, N_1 , and induces a counter voltage E_c 180° out of phase with E_1 , in this winding. The voltage, E_2 , induced in the secondary winding is in phase with the induced (counter) voltage, E_c , in the primary winding, and both lag the exciting current and flux, whose variations produce them, by an angle of 90° . These relations are shown in vector form in figure 5-17(C). The values are only approximate and are not drawn exactly to scale.

When a load is connected to the secondary by closing switch S (fig. 5-17(A)), the secondary current I_2 , depends upon the magnitude of the secondary voltage, E_2 , and the load impedance, Z . For example, if E_2 is equal to 120 volts and the load impedance is 20 ohms, the secondary current will be

$$I_2 = \frac{E_2}{Z_2} = \frac{120}{20} = 6 \text{ amperes}$$

If the secondary power factor is 86.6 percent, the phase angle, θ_2 , between secondary current

and voltage will be the angle whose cosine is 0.866, or 30° .

The secondary load current flowing through the secondary turns comprises a load component of magnetomotive force, which according to Lenz's law is in such a direction as to oppose the flux which is producing it. This opposition tends to reduce the transformer flux a slight amount. The reduction in flux is accompanied by a reduction in the counter voltage induced in the primary winding of the transformer. Because the internal impedance of the primary winding is low and the primary current is limited principally by the counter emf in the winding, the transformer primary current increases when the counter emf in the primary is reduced.

The increase in primary current continues until the primary ampere-turns are equal to the secondary ampere-turns, neglecting losses. For example, in the transformer being considered, the magnetizing current, I_a , is assumed to be negligible in comparison with the total primary current, $I_1 + I_a$, under load conditions because I_a is small in relation to I_1 and lags it by an angle of 60° . Hence, the primary and secondary ampere-turns are equal and opposite; that is,

$$N_1 I_1 = E_2 I_2$$

In this example,

$$I_1 = \frac{N_2}{N_1} I_2 = \frac{120}{1,200} \times 6 = 0.6 \text{ ampere}$$

Neglecting losses, the power delivered to the primary is equal to the power supplied by the secondary to the load. If the load power is $P_2 = E_2 I_2 \cos \theta_2$, or $120 \times 6 (\cos 30^\circ = 0.866) = 624$ watts, the power supplied to the primary is approximately $P_1 = E_1 I_1 \cos \theta$, or $1,200 \times 0.6 (\cos 30^\circ = 0.866) = 624$ watts.

The load component of primary current, I_1 , increases with secondary load and maintains the transformer core flux at nearly its initial value. This action enables the transformer primary to take power from the source in proportion to the load demand, and to maintain the terminal voltage approximately constant. The lagging-power-factor load vectors are shown in figure 5-17(D). Note that the load power factor is transferred through the transformer to the primary and that θ_2 is approximately equal to

θ_1 , the only difference being that θ_1 is slightly larger than θ_2 because of the presence of the exciting current which flows in the primary winding but not in the secondary.

The copper loss of a transformer varies as the square of the load current; whereas the core loss depends on the terminal voltage applied to the primary and on the frequency of operation. The core loss of a constant-potential transformer is constant from no load to full load because the frequency is constant and the effective values of the applied voltage, exciting current, and flux density are constant.

If the load supplied by a transformer has unity power factor, the kilowatt (true power) output is the same as the kilovolt-ampere (apparent power) output. If the load has a lagging power factor, the kilowatt output is proportionally less than the kilovolt-ampere output. For example, a transformer having a full-load rating of 100 kva can supply a 100-kw load at unity power factor, but only an 80-kw load at a lagging power factor of 80 percent.

Many transformers are rated in terms of the kva load that they can safely carry continuously without exceeding a temperature rise of 80° C when maintaining rated secondary voltage at rated frequency and when operating with an ambient (surrounding atmosphere) temperature of 40° C. The actual temperature rise of any part of the transformer is the difference between the total temperature of that part and the temperature of the surrounding air.

It is possible to operate transformers on a higher frequency than that for which they are designed, but it is not permissible to operate them at more than 10 percent below their rated frequency, because of the resulting overheating. The exciting current in the primary varies directly with the applied voltage and, like any impedance containing inductive reactance, the exciting current varies inversely with the frequency. Thus, at reduced frequency, the exciting current becomes excessively large and the accompanying heating may damage the insulation and the windings.

EFFICIENCY

The efficiency of a transformer is the ratio of the output power at the secondary terminals

to the input power at the primary terminals. It is also equal to the ratio of the output to the output plus losses. That is,

$$\begin{aligned} \text{efficiency} &= \frac{\text{output}}{\text{input}} \\ &= \frac{\text{output}}{\text{output} + \text{copper loss} + \text{core loss}} \end{aligned}$$

The ordinary power transformer has an efficiency of 97 to 99 percent. The losses are due to the copper losses in both windings and the hysteresis and eddy-current losses in the iron core.

The copper losses vary as the square of the current in the windings and as the winding resistance. In the transformer being considered, if the primary has 1,200 turns of number 23 copper wire, having a length of 1,320 feet, the resistance of the primary winding is 26.9 ohms. If the load current in the primary is 0.5 ampere, the primary copper loss is $(0.5)^2 \times 26.9 = 6.725$ watts. Similarly, if the secondary winding contains 120 turns of number 13 copper wire, having a length of approximately 132 feet, the secondary resistance will be 0.269 ohm. The secondary copper loss is $I_2^2 R_2$, or $(5)^2 \times 0.269 = 6.725$ watts, and the total copper loss is $6.725 \times 2 = 13.45$ watts.

The core losses, consisting of the hysteresis and eddy-current losses, caused by the alternating magnetic flux in the core are approximately constant from no load to full load, with rated voltage applied to the primary.

In the transformer of figure 5-17(A), if the core loss is 10.6 watts and the copper loss is 13.4 watts, the efficiency is

$$\begin{aligned} &\frac{\text{output}}{\text{output} + \text{copper loss} + \text{core loss}} = \\ &\frac{624}{624 + 13.4 + 10.6} = \frac{624}{648} = 0.963 \end{aligned}$$

or 96.3 percent. The rating of the transformer is

$$\frac{E_1 I_1}{1,000} = \frac{1,200 \times 0.5}{1,000} = 0.60 \text{ kva}$$

The efficiency of this transformer is relatively low because it is a small transformer and the losses are disproportionately large.

SINGLE-PHASE CONNECTIONS

Single-phase distribution transformers usually have their windings divided into two or more sections, as shown in figure 5-1. When the two secondary windings are connected in series (fig. 5-18(A)), their voltages add. In figure 5-18(B), the two secondary windings are connected in parallel, and their currents add. For example, if each secondary winding is rated at 120 volts and 100 amperes, the series-connection output rating will be 240 volts at 100 amperes, or 24 kva; the parallel-connection output rating will be 120 volts at 200 amperes, or 24 kva.

In the series connection, care must be taken to connect the coils so that their voltages add. The proper arrangement is indicated in the figure. A trace made through the secondary circuits from X_1 to X_4 is in the same direction as that of the arrows representing the maximum positive voltages.

In the parallel connection, care must be taken to connect the coils so that their voltages are in opposition. The correct connection is indicated in the figure. The direction of a trace


made through the secondary windings from X_1 to X_2 to X_4 to X_3 and returning to X_1 is the same as that of the arrow in the right-hand winding. This condition indicates that the secondary voltages have their positive maximum values in directions opposite to each other in the closed circuit, which is formed by paralleling the two secondary windings. Thus, no circulating current will flow in these windings on no load. If either winding were reversed, a short-circuit current would flow in the secondary, and this would cause the primary to draw a short-circuit current from the source. This action would, of course, damage the transformer as well as the source.

THREE-PHASE CONNECTIONS

Power may be supplied through 3-phase circuits containing transformers in which the primaries and secondaries are connected in various wye and delta combinations. For example, three single-phase transformers may supply 3-phase power with four possible combinations of their primaries and secondaries. These connections are: (1) primaries in delta and secondaries in delta, (2) primaries in wye and secondaries in wye, (3) primaries in wye and secondaries in delta, (4) primaries in delta and secondaries in wye.

Delta and wye connections were described earlier in this chapter under the subject "Three-Phase Generators," and the relations between line and phase voltages and currents were also described. These relations apply to transformers as well as to a-c generators.

If the primaries of three single-phase transformers are properly connected (either in wye or delta) to a 3-phase source, the secondaries may be connected in delta, as shown in figure 5-19. A topographic vector diagram of the 3-phase secondary voltages is shown in figure 5-19(A). The vector sum of these three voltages is zero. This may be seen by combining any two vectors, for example, E_A and E_B , and noting that their sum is equal and opposite to the 3rd vector, E_C . A voltmeter inserted within the delta will indicate zero voltage, as shown in figure 5-19(B), when the windings are connected properly.

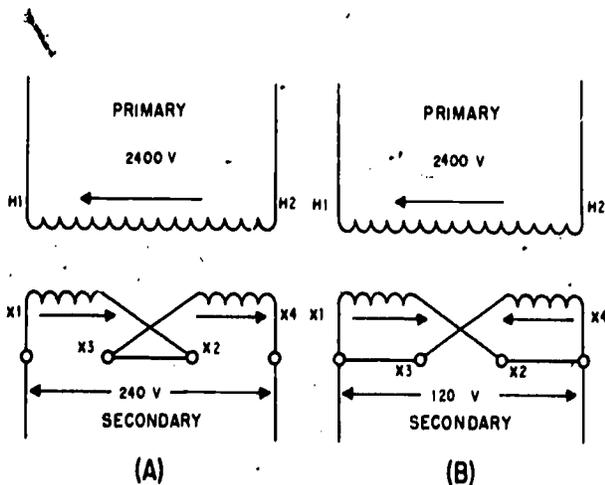

236.303

Figure 5-18.—Single-phase transformer secondary connections.

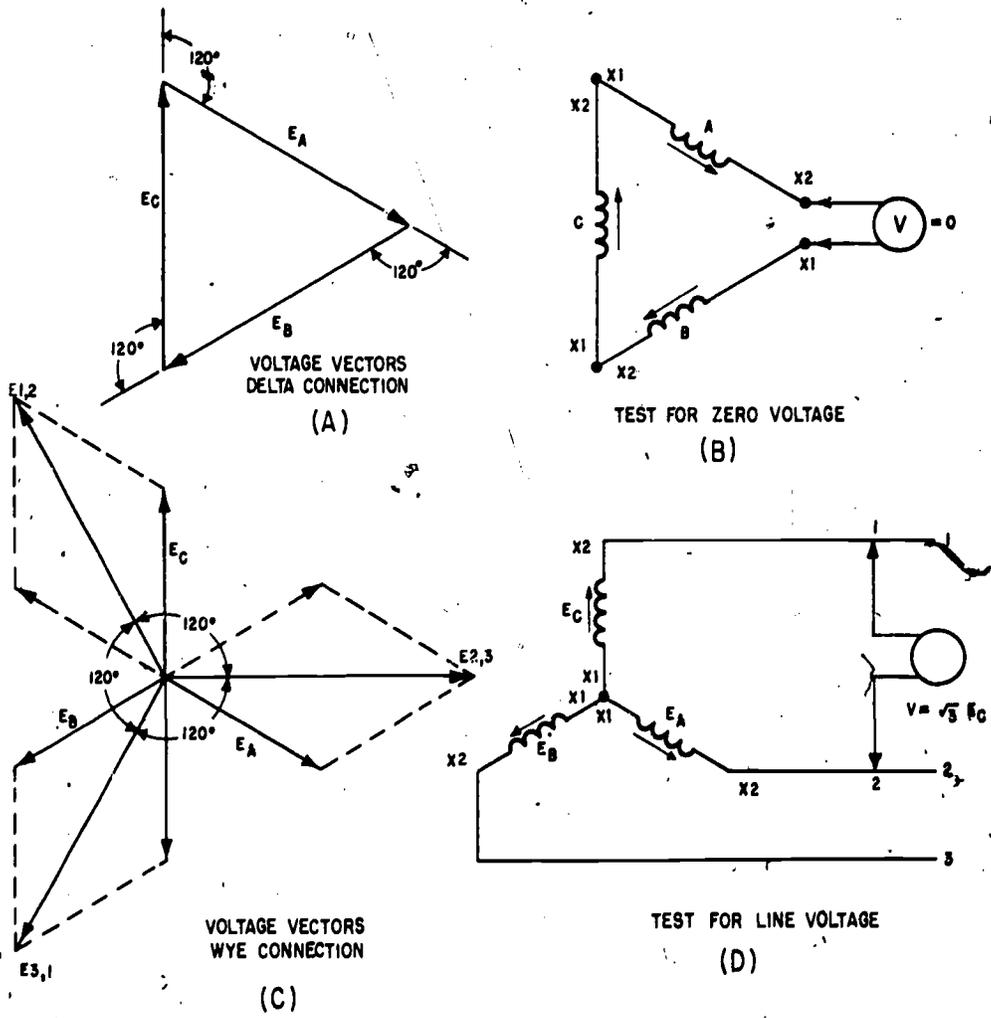


Figure 5-19.—Delta-connected transformer secondaries.

236.304

Assuming all three transformers have the same polarity, the delta connection consists of connecting the X_2 lead of winding A to the X_1 lead of B, the X_2 lead of B to X_1 of C, and the X_2 lead of C to X_1 of A. If any one of the three windings is reversed with respect to the other two windings, the total voltage within the delta will equal twice the value of one phase; and if the delta is closed on itself, the resulting current will be of short-circuit magnitude, with resulting damage to the transformer windings and cores. The delta should never be closed until a test is first made to determine that the voltage within

the delta is zero or nearly zero. This may be accomplished by using a voltmeter, fuse wire, or test lamp. In the figure, when the voltmeter is inserted between the X_2 lead of A and the X_1 lead of B, the delta circuit is completed through the voltmeter, and the indication should be approximately zero. Then the delta is completed by connecting the X_2 lead to A to the X_1 lead of B.

If the three secondaries of an energized transformer bank are properly connected in delta and are supplying a balanced 3-phase load,

the line current will be equal to 1.73 times the phase current. If the rated current of a phase (winding) is 100 amperes, the rated line current will be 173 amperes. If the rated voltage of a phase is 120 volts, the voltage between any two line wires will be 120 volts.

The three secondaries of the transformer bank may be reconnected in wye in order to increase the output voltage. The voltage vectors are shown in figure 5-21(C). If the phase voltage is 120 volts, the line voltage will be $1.73 \times 120 = 208$ volts. The line voltages are represented by vectors, $E_{1,2}$, $E_{2,3}$, and $E_{3,1}$. A voltmeter test for the line voltage is represented in figure 5-21(D). If the three transformers have the same polarity, the proper connections for a wye-connected secondary bank are indicated in the figure. The X_1 leads are connected to form a common or neutral connection and the X_2 leads of the three secondaries are brought out to the line leads. If the connections of any one winding are reversed, the voltages between the 3 line wires will become unbalanced, and the loads will not receive their proper magnitude of load current. Also, the phase angle between the line currents will be changed, and they will no longer be 120° out of phase with each other. Therefore, it is important to properly connect the transformer secondaries in order to preserve the symmetry of the line voltages and currents.

Three single-phase transformers with both primary and secondary windings delta connected

are shown in figure 5-20. The H_1 lead of one phase is always connected to the H_2 lead of an adjacent phase, the X_1 lead is connected to the X_2 terminal of the corresponding adjacent phase, and so on; and the line connections are made at these junctions. This arrangement is based on the assumption that the three transformers have the same polarity.

An open-delta connection results when any one of the three transformers is removed from the delta-connected transformer bank without disturbing the 3-wire 3-phase connections to the remaining two transformers. These transformers will maintain the correct voltage and phase relations on the secondary to supply a balanced 3-phase load. An open-delta connection is shown in figure 5-21. The 3-phase source supplies the primaries of the two transformers, and the secondaries supply a 3-phase voltage to the load. The line current is equal to the transformer phase current in the open-delta connection. In the closed-delta connection, the transformer

phase current, $I_{\text{phase}} = \frac{I_{\text{line}}}{\sqrt{3}}$. Thus, when one

transformer is removed from a delta-connected bank of three transformers, the remaining two transformers will carry a current equal to $\sqrt{3} I_{\text{phase}}$. This value amounts to an overload current on each transformer of 1.73 times the rated current, or an overload of 73.2 percent.

Thus, in an open-delta connection, the line current must be reduced so as not to exceed the


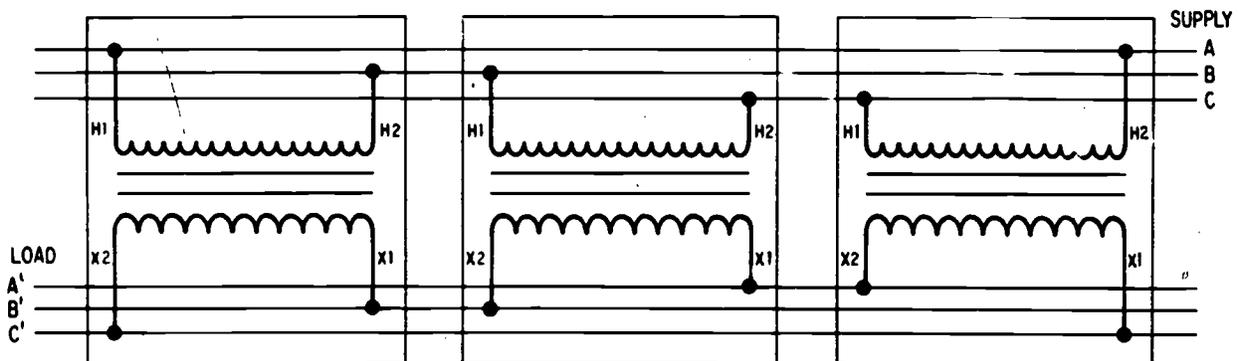


Figure 5-20.—Delta-delta transformer connections.

236.305

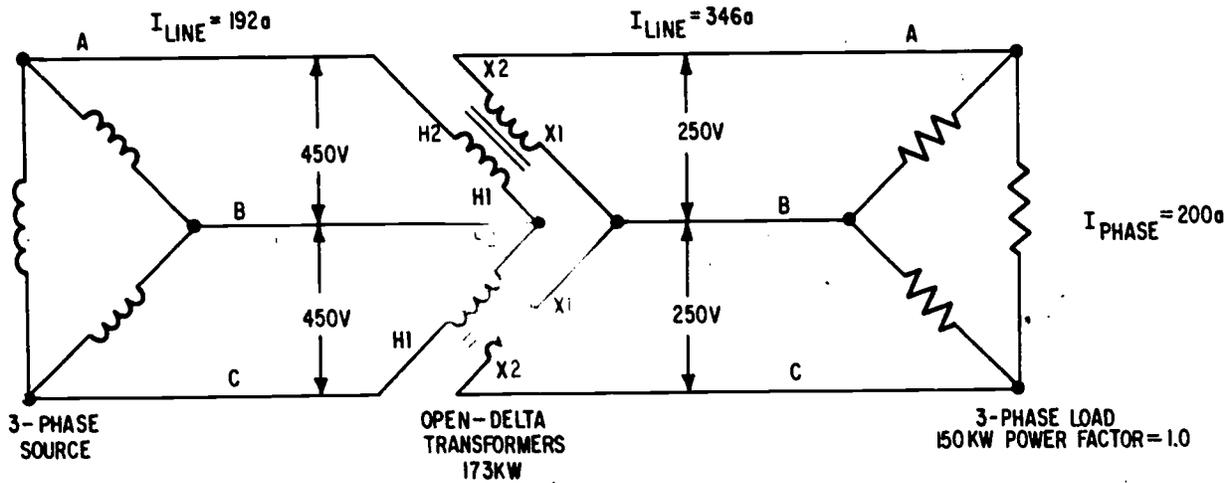

236.306

Figure 5-21.—Open-delta transformer connection.

rated current of the individual transformers if they are not to be overloaded. The open-delta connection therefore results in a reduction in system capacity. The full-load capacity in a delta connection at unity power factor is

$$P_{\Delta} = 3I_{\text{phase}}E_{\text{phase}} = \sqrt{3}E_{\text{line}}I_{\text{line}}$$

In an open-delta connection, the line current is limited to the rated phase current of $\frac{I_{\text{line}}}{\sqrt{3}}$, and the full-load capacity of the open-delta, or V-connected, system is

$$P_{\nu} = \sqrt{3}E_{\text{line}} \frac{I_{\text{line}}}{\sqrt{3}} = E_{\text{line}}I_{\text{line}}$$

The ratio of the load that can be carried by two transformers connected in open delta to the load that can be carried by three transformers in closed delta is

$$\frac{P_{\nu}}{P_{\Delta}} = \frac{E_{\text{line}}I_{\text{line}}}{\sqrt{3}E_{\text{line}}I_{\text{line}}} = \frac{1}{\sqrt{3}} = 0.577, \text{ or } 57.7 \text{ percent}$$

of the closed-delta rating.

For example, a 150-kw 3-phase balanced load operating at unity power factor is supplied at

250 volts. The rating of each of three transformers in closed delta is $\frac{150}{3} = 50$ kw, and the phase current is $\frac{50,000}{250} = 200$ amperes. The

line current is $200\sqrt{3} = 346$ amperes. If one transformer is removed from the bank, the remaining two transformers would be overloaded $346 - 200 = 146$ amperes, or $\frac{146}{200}$

$100 = 73$ percent. To prevent overload on the remaining two transformers, the line current must be reduced from 346 amperes to 200 amperes and the total load reduced to

$$\frac{\sqrt{3} \times 250 \times 200}{1,000} = 86.6 \text{ kw}$$

or

$$\frac{86.6 \times 100}{150} = 57.7 \text{ percent}$$

of the original load.

The rating of each transformer in open delta necessary to supply the original 150-kw load is $\frac{E_{\text{phase}}I_{\text{phase}}}{1,000}$, or $\frac{250 \times 346}{1,000} = 86.6$ kw, and two

transformers require a total rating of $2 \times 86.6 = 173.2$ kw, compared with 150 kw for three transformers in closed delta. The required increase in transformer capacity is $173.2 - 150 = 23.2$ kw, or $\frac{23.2}{150} \times 100 = 15.5$ percent, when two transformers are used in open delta to supply the same load as three 50-kw transformers in closed delta.

Three single-phase transformers with both primary and secondary windings wye connected are shown in figure 5-22. Only 57.7 percent of the line voltage $\left(\frac{E_{line}}{\sqrt{3}}\right)$ is impressed across each

winding, but full-line current flows in each transformer winding.

Three single-phase transformers delta connected to the primary circuit and wye connected to the secondary circuit are shown in figure 5-23. This connection provides 4-wire,

3-phase service with 208 volts between line wires A'B'C', and $\frac{208}{\sqrt{3}}$, or 120 volts, between each

line wire and neutral N. The wye-connected secondary is desirable in installations when a large number of single-phase loads are to be supplied from a 3-phase transformer bank. The neutral, or grounded, wire is brought out from the midpoint of the wye connection, permitting the single-phase loads to be distributed evenly across the three phases. At the same time, 3-phase loads can be connected directly across the line wires. The single-phase loads have a voltage rating of 120 volts, and the 3-phase loads are rated at 208 volts. This connection is often used in high-voltage plate-supply transformers.

The phase voltage is $\frac{1}{1.73}$, or 0.577 of the line voltage.

Three single-phase transformers with wye-connected primaries and delta-connected


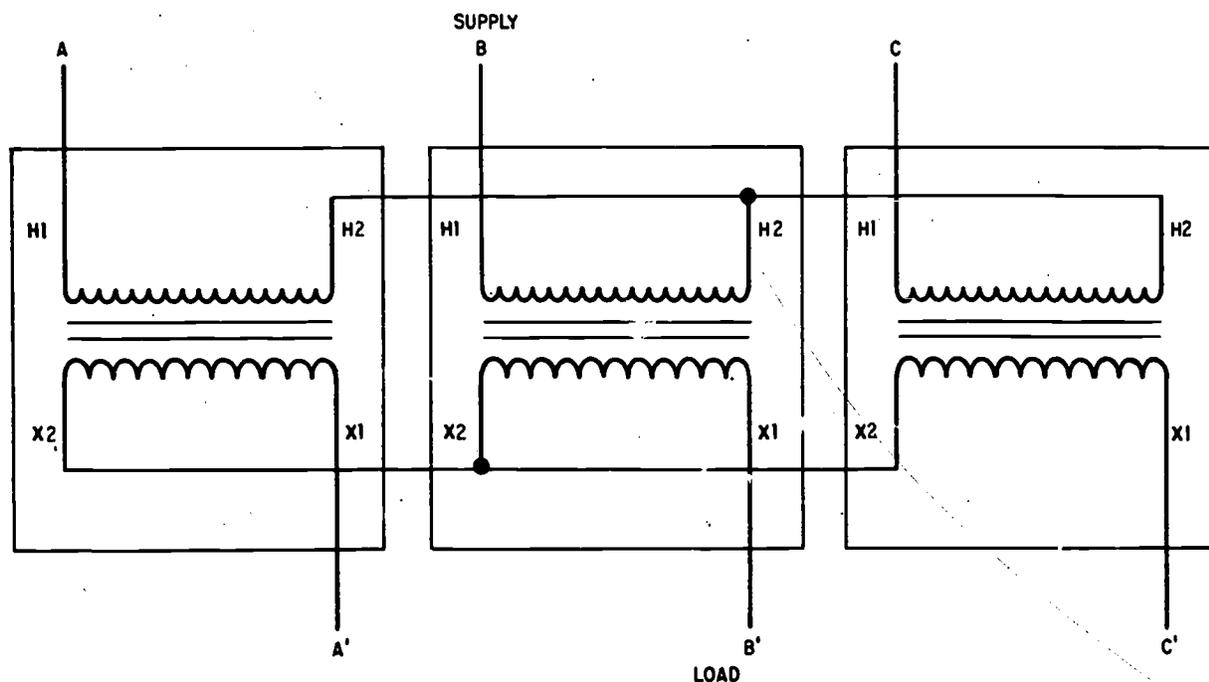


Figure 5-22.—Wye-wye transformer connections.

236.307

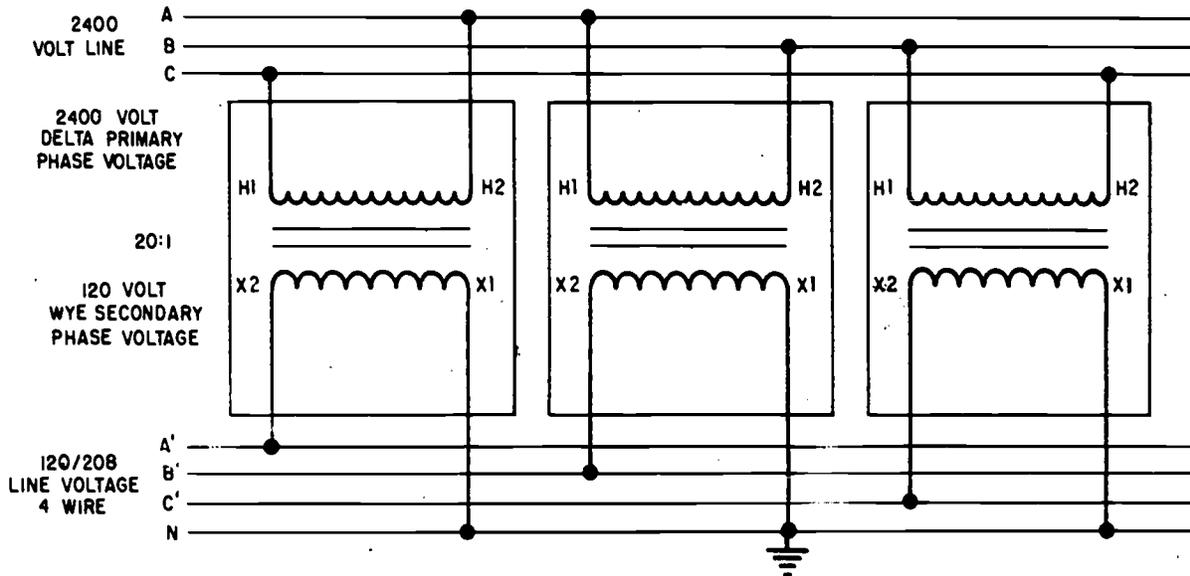

236.308

Figure 5-23.—Delta-wye transformer connections.

secondaries are shown in figure 5-24. This arrangement is used for stepping down the voltage from approximately 4,000 volts between line wires on the primary side to either 120 volts or 240 volts, depending upon whether the secondary windings of each transformer are connected in parallel or in series. In the figure, the two secondaries of each transformer are connected in parallel, and the secondary output voltage is 120 volts. There is an economy in transmission with the primaries in wye because the line voltage is 73 percent higher than the phase voltage, and the line current is accordingly less. Thus, the line losses are reduced and the efficiency of transmission is improved.

POLARITY MARKING OF POWER TRANSFORMERS

It is essential that all transformer windings be properly connected; therefore, it behooves the technician to have a basic understanding of the coding and the marking of transformer leads.

The leads of large power transformers, such as those used for lighting and public utilities, are marked with numbers, letters, or a combination

of both. This type of marking is shown in figure 5-25. Terminals for the high-voltage windings are marked H_1 , H_2 , H_3 , and so forth. The increasing numerical subscript designates an increasing voltage. Thus, the voltage between H_1 and H_3 is higher than the voltage between H_1 and H_2 .

The secondary terminals are marked X_1 , X_2 , X_3 , and so forth. There are two types of markings that may be employed on the secondaries. These are shown in figure 5-25. When the H_1 and X_1 leads are brought out on the same side of the transformer (fig. 5-25(A)), the polarity is called subtractive. The reason this arrangement is called subtractive is as follows: If the H_1 and X_1 leads are connected and a reduced voltage is applied across the H_1 and H_2 leads, the resultant voltage which appears across the H_2 and X_2 leads in the series circuit formed by this connection will equal the difference in the voltages of the two windings. The voltage of the low-voltage winding opposes that of the high-voltage winding and subtracts from it, hence the term "subtractive polarity."

When the H_1 and X_1 leads are brought out on opposite corners of the transformer (fig. 5-25(B)), the polarity is additive. If the H_1 and X_2 leads are connected and a reduced voltage is

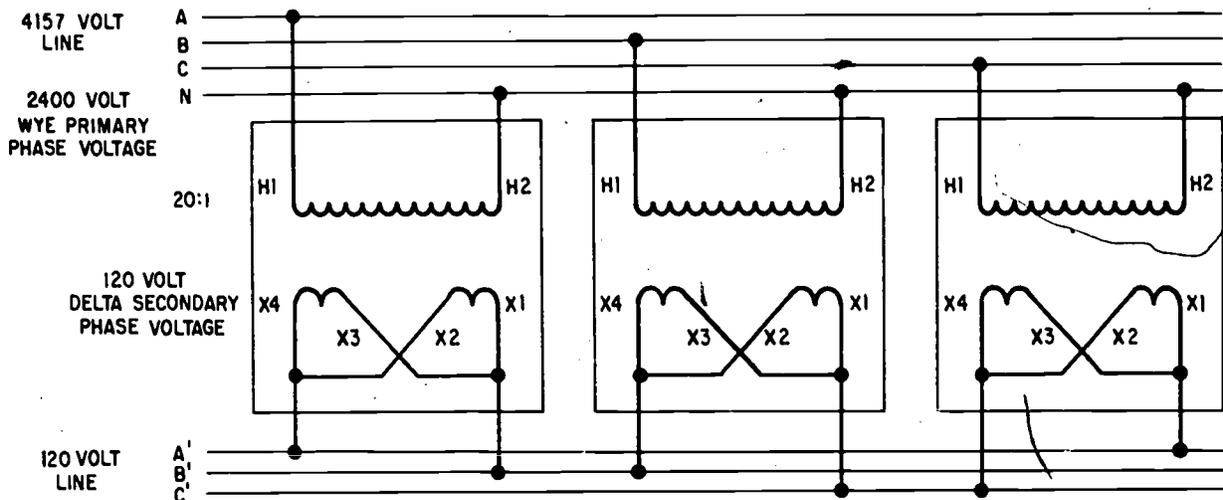


Figure 5-24.—Wye-delta transformer connections.

236.309

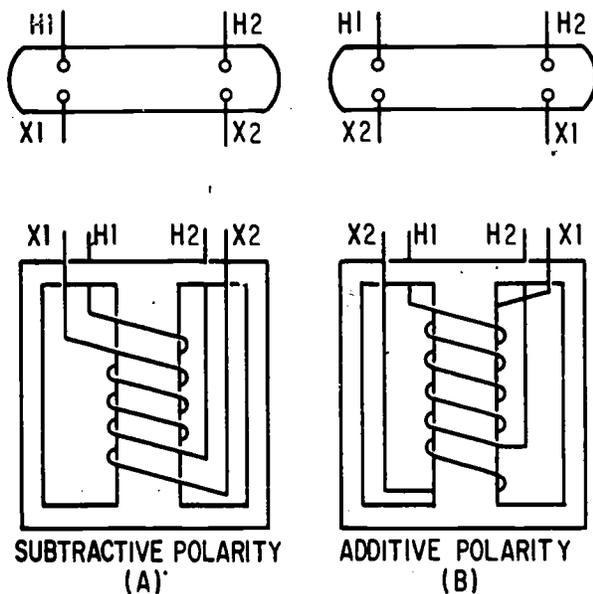


Figure 5-25.—Polarity markings for large transformers.

236.311

applied across the H_1 and H_2 leads, the resultant voltage across the H_2 and X_1 leads in the series circuit formed by this connection will equal the sum of the voltages of the two windings. The voltage of the low-voltage winding aids the

voltage of the high-voltage winding and adds to it, hence the term "additive polarity."

Polarity markings do not indicate the internal voltage stress in the windings but are useful only in making external connections between transformers, as previously mentioned.

SWITCHBOARDS

A-c switchboards may consist of a single section or of several sections physically separated and connected by cables to form a switchgear group. This arrangement of sections provides greater protection from damage. It also provides a means for localizing damage, and removal of a damaged section for repairs or replacement.

The switchboard of figure 5-26 or 5-27 is the 1S or forward section of a DDG-2 class destroyer. This type of switchboard utilizes sheet steel panels or enclosures from which only the meters and operating handles protrude to the front.

The forward ship's service switchgear group is designated as the control switchboard; it contains meters and control equipment for the after generators as well as instruments for the forward generators. In this setup, the Electrician's Mate on watch forward can control

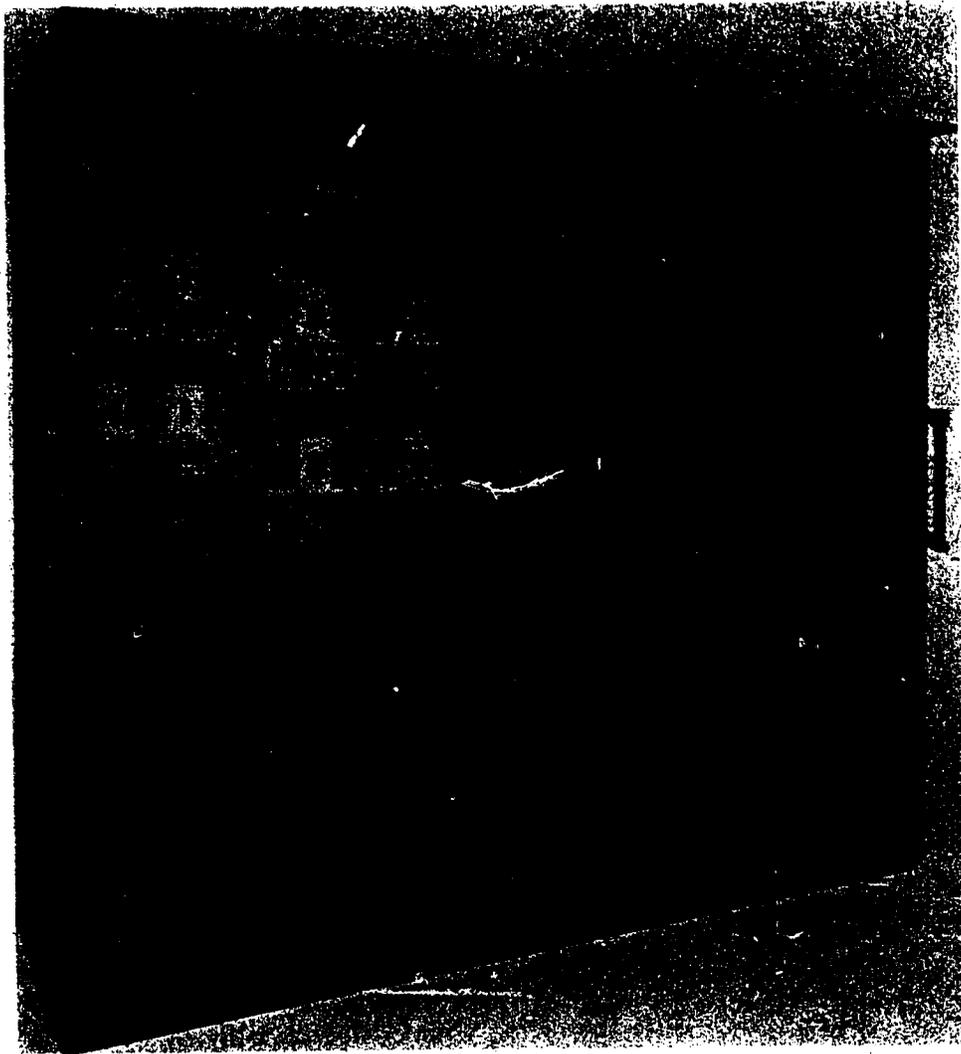


Figure 5-26.—1SA ship service switchboard, DDG-2 class destroyer.

77.322

the after generators as well as the forward generators by means of the remote governor motor control switch. The after ship service switchgear group is similar to the forward group, consisting of the same number of panels correspondingly designated.

A separate control benchboard (fig. 5-28) is provided in the switchgear groups for cruisers and carriers. This benchboard mounts all the generator control equipment, all measuring instruments, and all controls for electrically

operated equipment. The arrangement provides for centralized control of the generators and major switching operations. The control benchboards in ships having four or more ship service switchgear groups are provided with a mimic bus whose indicating lights show which generator circuit breaker or bus tie breaker is closed throughout the ship. In ships not provided with a control benchboard, the metering and control equipment is mounted on the front panels of the units in the switchboards or switchgear groups.



Figure 5-27.—1SB ship service switchboard, DDG-2 class destroyer.

77.323

CONTROL EQUIPMENT

Generator switchboards are equipped with meters to indicate the generator voltage, current, power, frequency, and power factor (new construction ships do not have power factor meters). Synchrosopes and synchronizing lamps are also provided for paralleling a-c generators. Indicator lamps show the operating conditions of various circuits.

The frequency is controlled by generator speed which, in turn, is automatically controlled

by the speed governor of the prime mover. The speed governors for large machines can be set to the required speed by a control device mounted on the switchboard.

When running in parallel with other generators, a generator is prevented from operating as a motor by a reverse power relay. This relay trips the generator breaker and takes the generator off the line when power is fed from the line to the generator instead of from the generator to the line.

A voltage regulator is mounted on each switchboard and operates automatically to vary

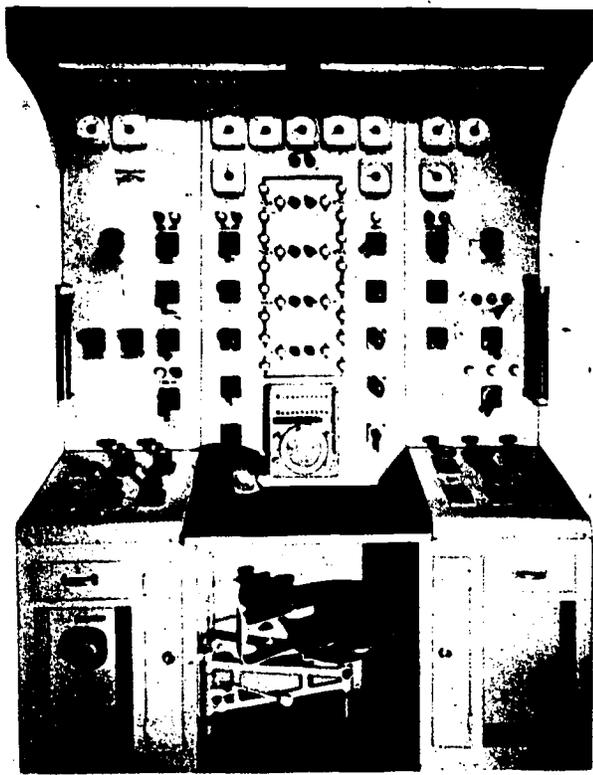


Figure 5-28.—Control benchboard.


27.65.1

the field excitation in order to maintain the generator voltage constant throughout normal changes in load.

Some ships are provided with a standby regulator and transfer switch to provide automatic voltage regulation if the regulator in service fails. In recent construction the standby regulator has been deleted. In all installations a means is provided to manually adjust the voltage if the automatic regulator fails.

GROUND DETECTOR LAMPS

A set of three ground detector lamps (fig. 5-29), connected through transformers to the main bus of each ship service switchgear group and to the emergency bus, provides a means to check for grounds on any phase of the 3-phase system.

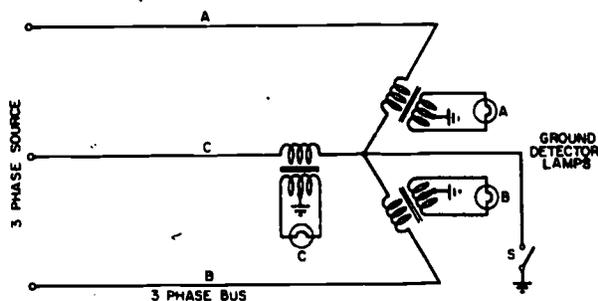

77.172

Figure 5-29.—A.c. ground detector lamp circuit.

To check for a ground, turn switch S on and observe the brilliancy of the three lights. If the lights are equally bright, all lights are receiving the same voltage, and no ground exists. If lamp A is dark and lamps B and C are bright, phase A is grounded. In this case, the primary of the transformer in phase A is shunted to ground and lamp A receives no voltage. Similarly, if lamp B is dark and lamps A and C are bright, a ground exists on phase B. If lamp C is dark and lamps A and B are bright, a ground exists on phase C.

VOLTAGE REGULATORS

A voltage regulator consists of a control element and associated mechanical or electrical means to produce the changes in the generator field current that are necessary to maintain a predetermined constant generator terminal voltage. The functions performed by voltage regulators and their auxiliary equipment are to maintain the generator terminal voltage within specified limits, and to provide for proper division of the reactive current between generators operating in parallel. The types of voltage regulators used in naval ships are the direct acting rheostatic type, the rotary amplifier type, or the combined static excitation and voltage regulation team. The type used depends on which is considered most suitable for a particular application.

One regulator is provided for each generator that is to be regulated. In some ship service

installations a spare voltage-sensitive (control) element is installed on the switchboard. The switchboard is provided with a transfer switch so that a spare element can be placed in service if the normal control element becomes deranged. Spare control elements are not installed for voltage regulators used on emergency generators.

The static excitation and voltage regulator system furnishes the a-c generator field current by rectifying a part of the a-c generator output. This output is fed to the field as a self-excited generator, after initial flashing from a battery or other source of low voltage direct current, to build up the voltage. The control element is a network of capacitors, reactors, and resistors, and it controls the field current by means of magnetic amplifiers. This system eliminates the rotating exciter and other moving parts and replaces them with an assembly of static components.

Static voltage regulators using silicon-controlled rectifiers and transistors has reduced the size and weight of regulators (as compared with designs using magnetic amplifiers) and are now furnished for all new ship service generators.

The SILVERSTAT, a direct and quick-acting voltage regulator is used for both ship service and emergency generators (fig. 5-30). In large alternators the regulating resistance is connected in the shunt-field circuit of the exciter. In small machines that use these regulators the resistance may be connected directly in series with the alternator field. The torque element of the Silverstat regulator consists of a control coil operated by a direct current obtained from a Rectox rectifier. A movable core is mounted on an aluminum armature in such a manner that it can move in the air gap of the magnetic circuit of the control coil. The magnetic pull on the

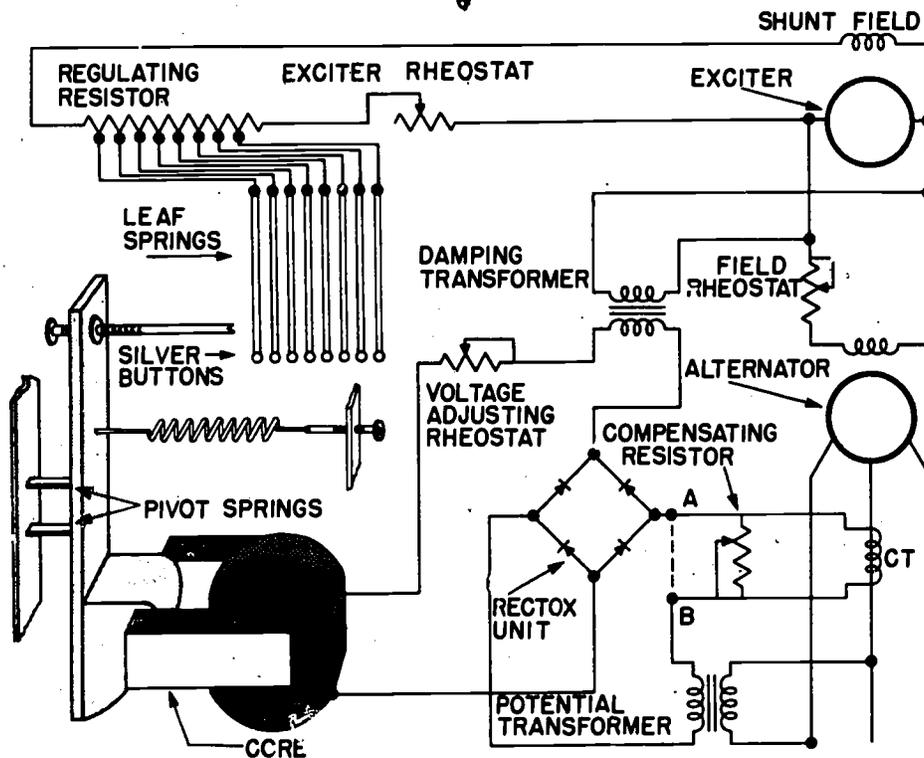


Figure 5-30.—A silverstat voltage regulator on an a.c. generator.

armature is balanced by the adjusting spring. A driving member is mounted on the upper end of the armature and bears against an assembly of silver buttons. Each silver button is mounted at the free end of an individual leaf spring of conducting material. The leaf springs are individually insulated. A connection is made from the fixed end of each leaf spring to a tap on the regulating resistance, which is in series with the shunt field of the exciter.

When the top of the moving arm is at the left-hand end of its travel, the driving member allows the free ends of the leaf springs, which carry the silver buttons, to rest against a stop of insulating material. In this position the free ends and the silver buttons are separated from one another. As the moving arm travels to the right, the driving member bears against the silver-button assembly, which closes the silver buttons together successively and in sequence. When the moving arm reaches the right-hand limit of travel, all the buttons are in firm contact with one another. As the driving member travels back to the left, the buttons successively move apart, in sequence, from one another. Only a travel of a fraction of an inch is required to close or open all the buttons in sequence. Although the operation of the silver buttons in sequence appears to cut small steps of resistance in or out in a definite step-by-step manner, its operation does not actually do so. As the buttons are operated by the moving arm, there is a progressive change in pressure between the faces of the buttons. This change in pressure between the silver surfaces varies the effective resistance, which amounts to varying the field resistance in almost infinitesimal steps.

For a given value of regulated voltage and load on the machine being regulated there is a corresponding value of regulating resistance required in the field circuit and a corresponding position of the moving arm and silver buttons which will give this value of resistance. Under such conditions the magnetic pull on the moving arm is balanced against the spring pull at the position of its travel. When a load change occurs on the regulated machine, a corresponding change in terminal voltage occurs. To restore the

voltage to its correct regulated value, the moving arm and the silver buttons take a new position because of the unbalance between the spring pull and the magnetic pull on the moving arm.

If the voltage of the alternator rises, the armature is drawn further into the air gap of the magnet. This causes the driving member to reduce its pressure on the leaf springs, opens some of the short-circuiting silver buttons, inserts more resistance in the exciter field, and restores the voltage to its correct value. Should the alternator voltage drop, the process is reversed.

PHASE SEQUENCE

The phase sequence in naval ships is ABC; that is, the maximum positive voltages on the three phases are reached in the order: A, B, and C. Phase sequence determines the direction of rotation of 3-phase motors. Reversal of the phase sequence reverses the direction of rotation of 3-phase motors. The phase sequence of the power supply throughout a ship is always ABC (irrespective of whether power is supplied from any of the switchboards or from the shore power connection) to ensure that 3-phase, a-c motors will always run in the correct direction.

Phase identification is denoted by the letters, A, B, and C in a 3-phase system. Switchboard and distribution-panel bus bars and terminals on the back of switchboards are marked to identify the phase with the appropriate letters, A, B, or C. The standard arrangement of phases in power and lighting switchboards, distribution panels, feeder distribution boxes, feeder junction boxes, and feeder connection boxes is in the order A, B, C from top to bottom, front to back, or right to left when facing the front of the switchboard, panel, or box and left to right when facing the rear of the switchboard, panel, or box.

SHORE POWER CONNECTION

The number and locations of shore power connections vary on different types of ships. Shore power connections are provided at, or near, a suitable weather-deck location to which

portable cables from the shore or from ships alongside can be connected to supply power for the ship's distribution system when the ship service generators are not in operation. This connection also can be used to supply power from the ship service generators to ships alongside.

EMERGENCY POWER DISTRIBUTION

The emergency power distribution system supplies an immediate and automatic source of electric power to a limited number of selected vital loads in the event of failure of the normal ship service power distribution system. The system, which is separate and distinct from the ship service power distribution system, includes one or more emergency distribution switchboards. Each emergency switchboard is supplied by its associated emergency generator. The emergency feeders run from the emergency switchboard and terminate in manual or automatic bus transfer equipment at the distribution panels or loads for which emergency power is provided. The emergency power distribution system is a 450-volt, 3-phase, 60-hertz system with transformer banks at the emergency distribution switchboards to provide 120-volt, 3-phase power for the emergency lighting system.

The emergency generators and switchboards are located in separate spaces from those containing the ship service generators and distribution switchboards. The emergency feeders are located near the centerline and higher in the ship (above the waterline) than the normal and alternate ship service feeders. This arrangement provides for horizontal separation between the normal and alternate ship service feeders and vertical separation between these feeders and the emergency feeders, thereby minimizing the possibility of damaging all three types of feeders simultaneously.

The emergency switchboard is connected by feeders to at least one and usually to two different ship service switchboards. One of these switchboards is the preferred source of ship service power for the emergency switchboard

and the other is the alternate source (fig. 5-31). The emergency switchboard and distribution system are normally energized from the preferred source of ship service power. If this source of power should fail, bus transfer equipment automatically transfers the emergency switchboard to the alternate source of the ship service power. If both the preferred and alternate sources of ship service power fails, the prime mover of the emergency generator starts automatically (within 10 seconds after power failure) and the emergency switchboard is automatically transferred to the emergency generator.

When the voltage is restored on either the preferred or alternate source of the ship service power, the emergency switchboard is automatically retransferred to the source that is available, or to the preferred source if voltage is restored on both the preferred and alternate sources. However this is only on certain types of ships. Some systems require the emergency generator to be tripped manually before the ABT will transfer back to the available preferred or alternate source. The emergency generator must be manually shut down. Hence, the emergency switchboard and distribution system are always energized either by a ship service generator or by the emergency generator. Therefore, the emergency distribution system can always supply power to a vital load if both the normal and alternate sources of the ship service power to this load fails. The emergency generator will not start automatically if the emergency switchboard is receiving power from a ship service generator.

EMERGENCY SWITCHBOARDS

The forward and after emergency switchboards are located in the forward and after emergency generator rooms respectively. The emergency switchboards provide electric power to vital auxiliaries and a limited amount of lighting in the event of failure of the ship service power.

The emergency power system is arranged for automatic transfer of the circuit for the steering power panel to the emergency generator. The



Figure 5-31.—Emergency switchboard from a DDG-2 type destroyer.


77.324

forward and after emergency switchgear groups are normally energized from the forward and after ship service switchgear groups respectively.

The forward emergency switchgear group (fig. 5-32) controls the forward emergency generating unit; the forward ship service and emergency bus transfer equipment; the local emergency power bus feeders; the remote emergency power bus feeders; and the emergency lighting feeders.

The after emergency switchgear group (not shown) controls the after emergency generating unit; the after ship service and emergency bus transfer equipment; the special emergency power bus feeder; the emergency power bus contactor; the local emergency power bus; the remote emergency power bus feeders; and the emergency lighting feeders.

The generator panels of both the forward and after emergency switchboards are provided

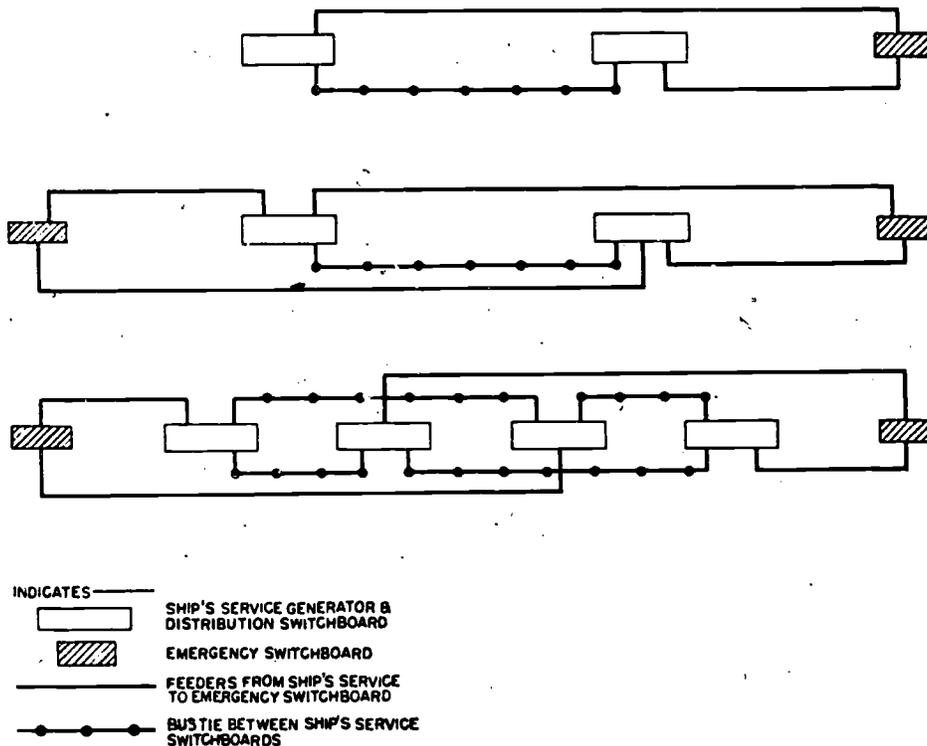

77.165

Figure 5-32.—Emergency and ship service distribution systems interconnections.

with an a-c voltmeter to permit reading at least one phase-to-phase voltage of the a-c generators. An a-c watt-meter for reading the power of the emergency generator, a frequency meter for reading the frequency of the local power bus, and an a-c ammeter to permit reading the current in at least one phase of the emergency generator.

INTERCONNECTIONS

The connections between the ship service and the emergency generating units and their associated switchboards and the interconnections between the switchboards bus tie breakers enable one generating unit to supply power to both ship service switchboards when the other unit is out of service and also provides for parallel operation of the two ship service generating units. However, when operating split-plant, the generators are operated

separately, each unit supplying power to its own section of the ship. In recent construction the emergency switchboards have only one bus; however, older types may have two, one local and one remote.

Each emergency switchboard (fig. 5-32) has a normal, alternate and emergency supply. The emergency supply would be supplied by its respective emergency generator. Under normal operating conditions the emergency switchboard would be supplied from its normal source and the alternate supply would be available at the switchboard in case of loss of the normal source. In the event normal supply is lost the transfer switch would automatically select the alternate source. If both normal and alternate sources are lost the emergency diesel would start automatically and would feed its own switchboard.

This system is provided with feedback circuit breakers so that either the forward or

ELECTRICIAN'S MATE 3 & 2

after ship service switchgear group may be provided with limited power from either emergency switchboard.

AUTOMATIC OPERATION

To set up the emergency switchboard for automatic operation, main contacts SLC on device 83E and generator circuit breaker 52E (fig. 5-33) must be closed manually. If the normal source is the preferred source, selector switch 10 is turned to the NORMAL position, which closes its contact in coil circuit of relay CR₁. The alternate source automatically becomes the standby source.

When power is available at 382 or more volts from the normal source, voltage relay V1 is energized. Its normally open contacts close and its normally closed contacts open, thereby completing a circuit to relay CR₁ through contacts V1/2 and 10 (nor); also, a circuit is completed to timing relay TR1 through contact V1/1. When energized, relay CR₁ opens its normally closed contacts and closes its normally open contacts to complete a circuit to the motor of device 83N, through the contacts of LS1, CR1, and 43. This motor then operates, closing main contacts SSC1 after a delay of about three seconds. Since it is energized through contact V1/1 when the main bus is energized, TR1

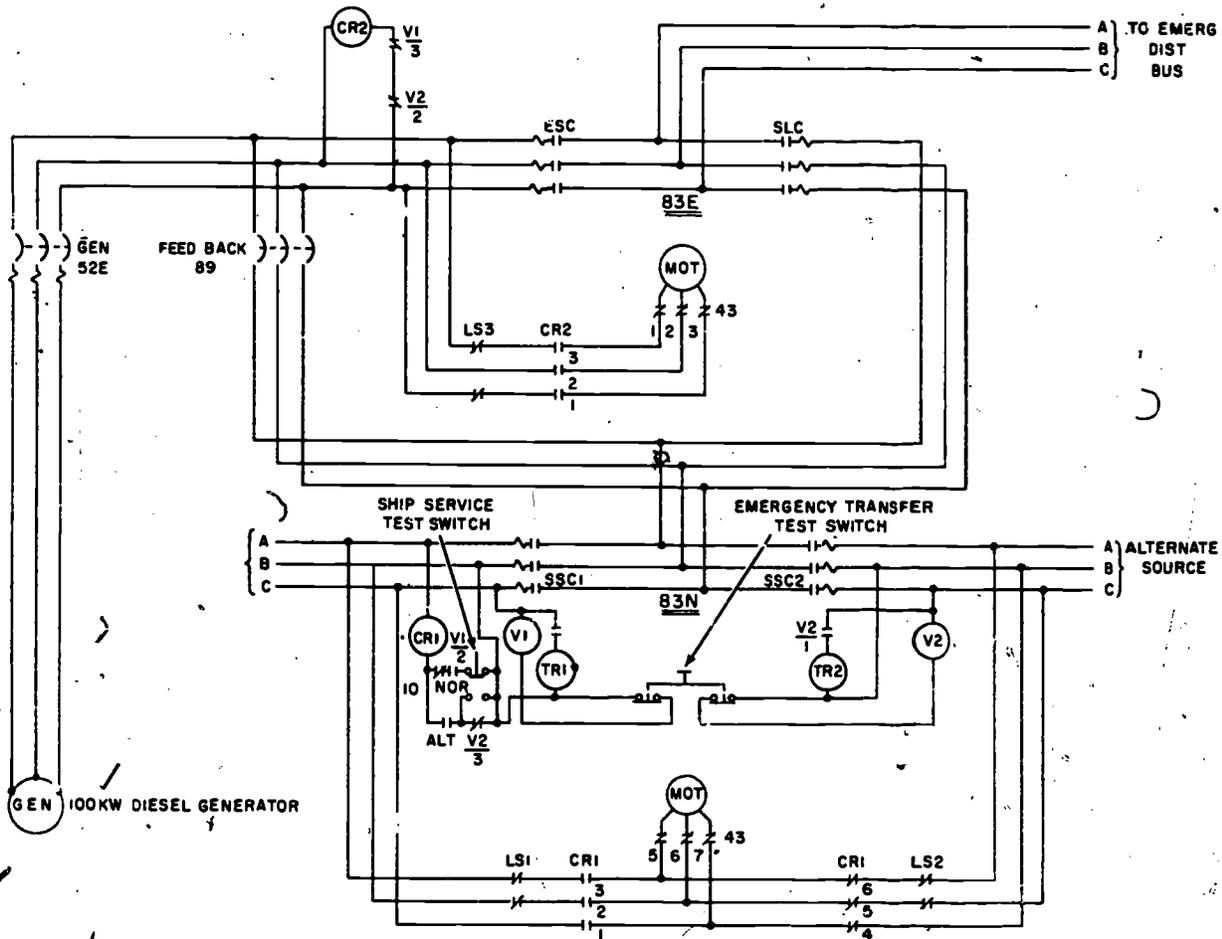


Figure 5-33.—Emergency switchboard layout.

77.325

5-38-164

opens its normally closed contact (not shown) in the diesel starting circuit, to prevent starting of the emergency diesel generator. Contacts SSC2 and ESC will not close, nor will transfer occur, while power is available from the normal source with selector switch 10 on the NORMAL position. The closing sequence of contacts SSC2 is blocked by the open contacts of CR1. Also, contacts ESC are blocked by an open contact of TR1 in the diesel starting circuit. Therefore no power is available to close contacts ESC.

When the alternate source is available and voltage from the normal source falls below 315 volts, voltage relay V1 will drop open by opening its normally open contacts and closing its normally closed contacts. Thus, it deenergizes the circuit to relay CR1 and timing relay TR1. At the same time, relay CR1 opens its normally open contacts and closes its normally closed contacts to complete a circuit to the motor of device 83N through the contacts of LS2, CR1, and 43. This motor then operates in the reverse direction to open main contacts SSC1 after a delay of nearly one-half second, and close main contacts SSC2 after a total delay of about three seconds. Voltage relay V2, energized when there is power available at the alternate source, closes its contact V2-1 in the timing relay circuit. The timing relay then functions as did TR1 by opening its contact in the diesel starting circuit.

If voltage is restored to the normal source, there is an automatic retransfer to the normal source, because the position of selector switch 10 determines which voltage relay takes precedence. If the alternate source is selected as the preferred source, selector switch 10 is turned to the ALTERNATE position, which opens contact 10 (nor) and closes contact 10 (alt). Now the normal source is the standby source.

With the alternate source at the proper voltage, the motor of device 83N operates to close the main contacts SSC2 after a delay of about three seconds. When energized, voltage relay V2 opens its contact V2/3 deenergizing or opening relay CR1 circuit. The 83N motor circuit is then completed through the contacts of LS2, CR1, and 43. Energizing the main bus completes the timing relay circuit through contact V2/1. The timing relay then opens its contact in the diesel starting circuit to prevent starting of the emergency diesel generator.

Contacts SSC1 and ESC will not close, nor will transfer occur, while power is available from the alternate source with selector switch 10 on the ALTERNATE position. The closing sequence of contacts SSC1 is blocked by the open contacts of CR1. Also, contacts ESC are blocked by open contacts of TR2 in the diesel starting circuit.

Assume an undervoltage or voltage failure on the alternate source while it is selected as the preferred source, with power available on the normal source. If voltage from the alternate source falls below 315 volts, voltage relay V2 will drop open thus opening its normally open contacts and closing its normally closed contacts. A circuit to relay CR1 is then completed through contacts V2/3 and 10 (alt). With relay CR1 now energized, its normally closed contacts open and its normally open contacts close to complete a circuit to the motor of device 83N through the contacts of LS1, CR1, and 43. This motor then operates as described previously, except that main contacts SSC1 and SSC2 are interchanged. The diesel starting circuit is again blocked by operation of the TR2 contacts. If voltage is restored to the alternate source, there is an automatic retransfer to the alternate source, as previously described.

Next, assume an undervoltage or voltage failure on both ship service sources, with the switchboard set up for automatic operation. In this case, voltage relays V1 and V2 drop out by opening their normally open contacts and closing their normally closed contacts. When contacts V1/1 and V2/1 open, timing relays TR1 and TR2 are deenergized. After a delay of approximately six seconds, timing relay contacts close in the diesel starting circuit which will complete the circuit to the starter motor and start the diesel. When the diesel generator raises the operating voltage to between 382 and 450 volts, relay CR2 is energized through the normally closed contacts V1/3 and V2/2 of the deenergized relays V1 and V2. Relay CR2 then closes its contacts, completing a circuit to the motor of device 83E, through the contacts of LS3, CR2, and 43. This motor then operates to open main contact SLC after a delay of nearly one-half second, and close main contact ESC after a total delay of about three seconds.

RETRANSFER TO SHIP'S SERVICE FROM EMERGENCY

When ship service voltage is restored, retransfer to the ship service supply must be made manually by turning the handwheel of device 83E to the SHIP'S position. This position opens main contacts SLC, and permits the emergency bus to be energized from the desired ship service supply.

TEST OPERATION

A preferred source transfer test switch is provided to simulate a voltage failure on the preferred source, whichever one is selected, causing a transfer to the other ship service supply. An emergency transfer test switch is provided to simulate a voltage failure on both ship service supplies, causing a transfer to the emergency supply. A diesel test switch (not shown) is provided to test the function of the starting controller. The diesel engine starts without causing any transfer of load, after generator circuit breaker 52E opens. Devices 83N and 83E are operated manually by engaging and turning their handwheels after the diesel start switch (not shown) is turned to its LOCKOUT position, and the manual-automatic switch (not shown) is turned to its MANUAL position, in the order given. The diesel generator may be started manually by turning the diesel start switch to its START position. The START position must be maintained during the entire cranking period.

FEEDBACK OPERATION

Emergency generator power is fed back to a ship service switchboard only when this switchboard is deenergized. The procedure for feeding back is:

- Turn the manual-automatic switch to its MANUAL position to keep device 83E or 83N from operating automatically.
- Turn the operating handwheel of device 83E to its EMER position.
- Position the operating handwheel of device 83N for the ship service source it is desired to energize.

- Start the diesel generator.
- Close generator circuit breaker 52E and feedback circuit breaker 89.

POWER DISTRIBUTION ON A DLG

The a-c power distribution system of a DLG-23 class destroyer is shown in figure 5-34. This diagram shows in simplified form the electrical system with its interlinking power circuits and emergency connections. All ship service 60-hertz power utilized on this class of ship passes through switchgear groups 1S and 2S and the emergency switchboards 1E and 2E.

SHIP SERVICE ELECTRIC PLANTS

The forward electric plant consists of ship service generators 1A, and 1B, and ship service switchgear group 1S, located in the forward (No. 1) engine room.

The after electric plant consists of ship service generators 2A, 2B, and ship service switchgear group 2S, located in the after (No. 2) engine room.

The four ship service generators are 1000-kw, 450-volt, 1604-ampere, 3-phase, 60-hertz, steam turbine-driven, totally enclosed units.

EMERGENCY ELECTRIC PLANTS

The forward emergency plant consists of the emergency generator 1E and the emergency switchboard 1E. The emergency generators are physically separated as far as possible from the ship service generators, and each other, to protect against simultaneous damage to the ship's electrical system from a single source. Both the forward emergency generator 1E, and the after emergency generator 2E, are rated 300-kw, 450-volt, 60 hertz, 3-phase. The forward emergency generator is driven by a gas turbine and the after emergency generator is driven by a diesel engine. In figure 5-34 the normal and alternate supplies of the emergency switchboards are labeled, to show these bus feeders from the ship service switchgear groups. The three circuit breakers shown on 1E emergency switchboard are electrically

Chapter 5—A-C POWER DISTRIBUTION SYSTEMS

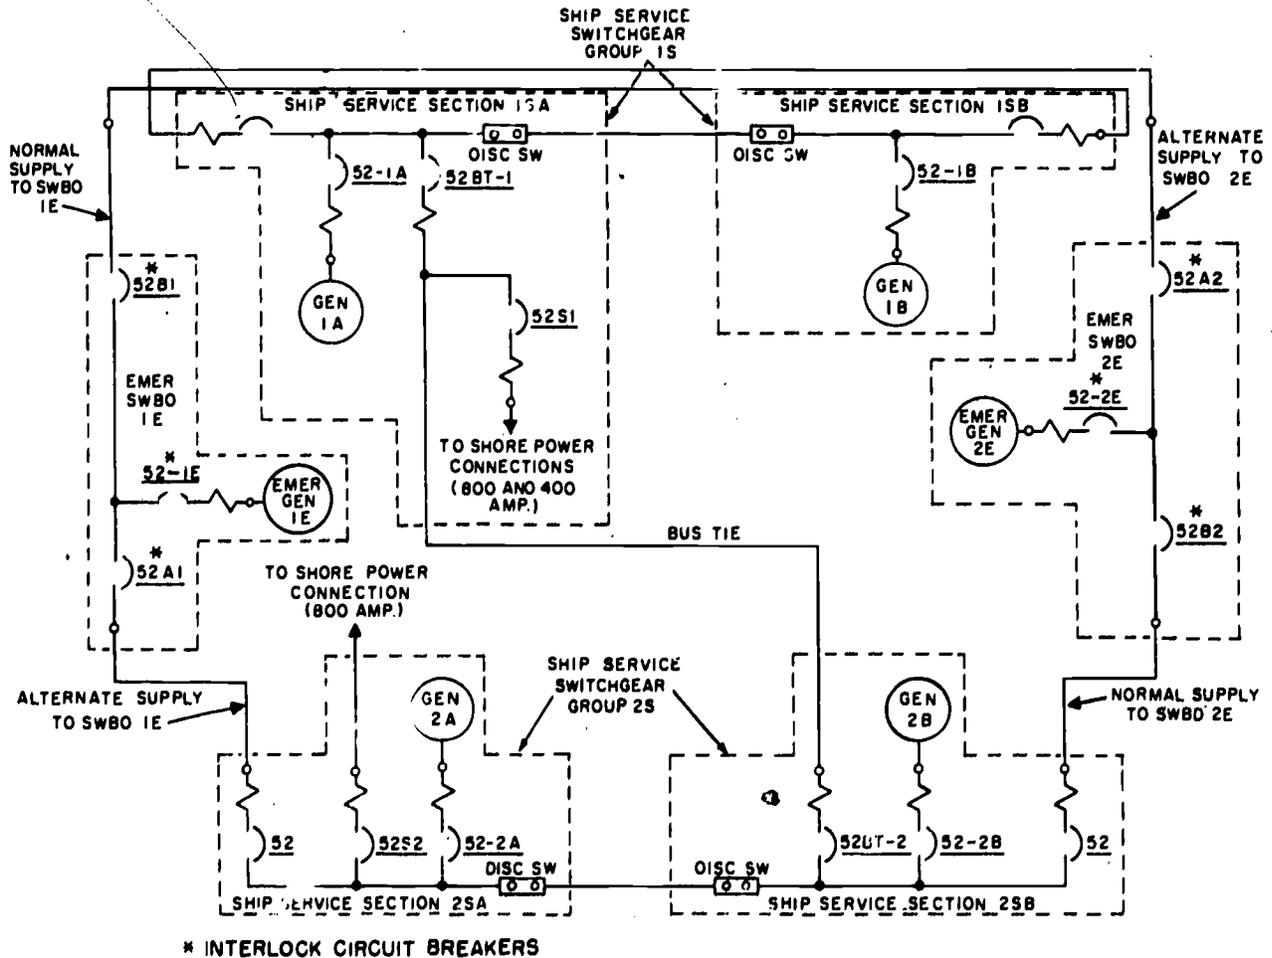



Figure 5-34.—Power distribution (60 hertz) system on the DLG-23.

77.252

interlocked when the emergency switchboard is set up for automatic operation. While 1E or 2E is set up for automatic transfer, if the normal ship service supply drops to 300 volts or below, the load is automatically transferred to the alternate supply if 400 volts or above are available from the alternate source. If 400 volts or above are restored to the normal supply the load will automatically retransfer to the normal supply. If both ship service supplies fail or their voltages drop below 300 volts, the transfer operates automatically through relays to start the emergency generator and connect it to the emergency switchboard. If the emergency generator is supplying the emergency switchboard and ship service power is restored, retransfer will not take place, but can be

accomplished by manually tripping the emergency generator circuit breaker. The operation of 1E or 2E is the same.

When the ship service plants are secured and shore or tender power is not available, the emergency generators can feed power back to either switchgear group by means of a bus transfer selector switch on the emergency switchboards. The bus transfer selector switch when placed in the manual position, allows manual operation of the circuit breakers on the emergency switchboards. While the bus transfer selector switch is in the normal preferred or alternate preferred position, the three circuit breakers on the emergency switchboards are interlocked and only one of them can be closed at a time. The feedback circuits should only be

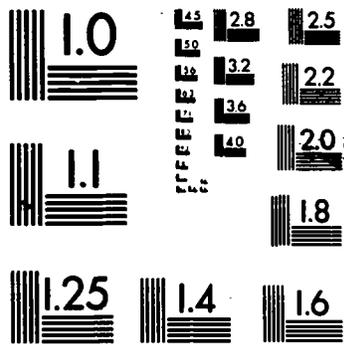

MICROCOPY RESOLUTION TEST CHART
NATIONAL BUREAU OF STANDARDS

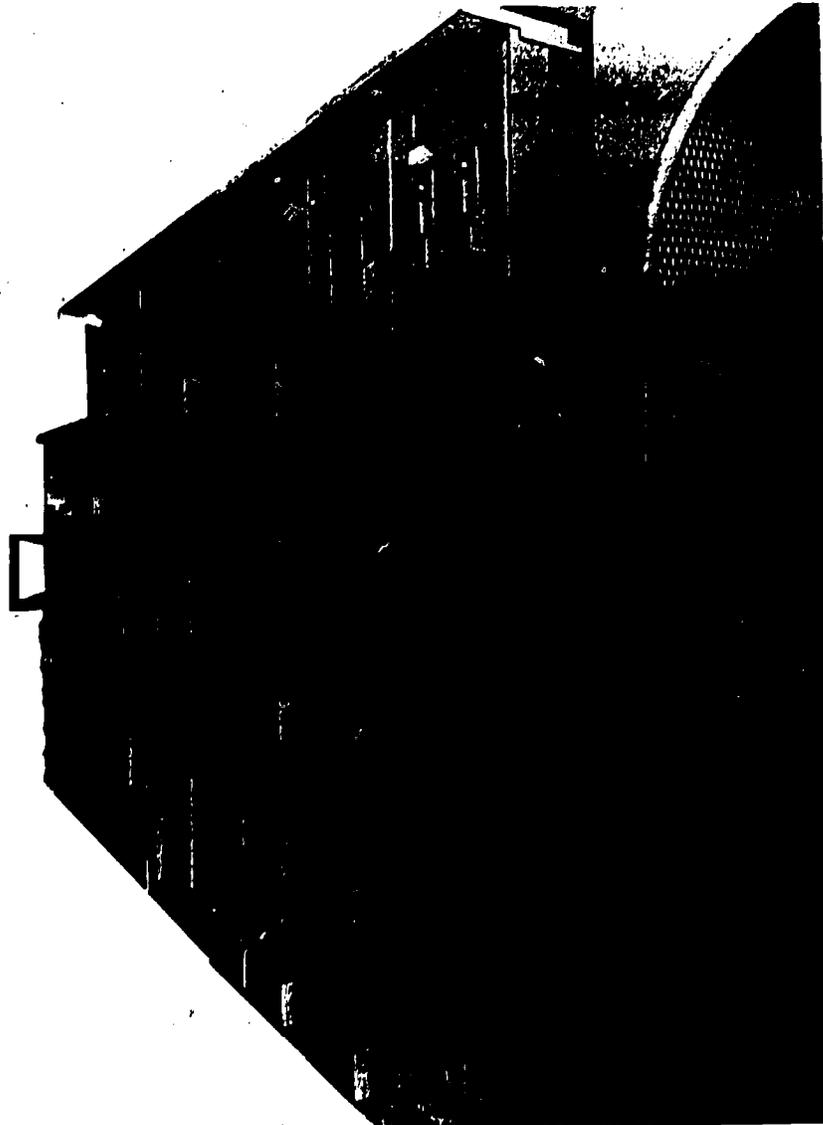


Figure 5-36.—Ship service switchgear group No. 18; Section 18B.

77.254

in parallel (parallel 1S and 2S via the bus tie), however no more than three generators can be safely operated in parallel without exceeding the interrupting capacity of the circuit breakers. The ship service generators should never be paralleled with the emergency generators.

Ship service switchgear groups are represented by showing the 1SA section of the 1S switchgear group in figure 5-35 and the 1SB section in figure 5-36. If one section is damaged, it may be isolated from the undamaged section by using the disconnect switches.

Figure 5-37 shows a disconnect device in both the open and closed position. The disconnect devices should NEVER be opened or closed on a hot bus. When operating a disconnect device it should always be either completely open or completely closed. The locking springs lock the device to prevent accidental opening or closing due to vibration. The device is operated completely in either direction until the locking spring is compressed.

SHORE POWER CONNECTIONS

- The DLG is equipped with three topside shore power terminal boxes. Two of the shore power terminals (one 800 and one 400 amperes) connect to the bus tie circuit between 1S and 2S as shown in figure 5-36. The other shore power

connection (800 amperes) is connected to the 2SA section of switchgear 2S via an AQB-A800 ampere frame circuit breaker.

CASUALTY POWER

The back of each emergency switchboard (fig. 5-38) is provided with one casualty power terminal and each ship service switchgear group is provided with four casualty power terminals installed on the back of the units (two for each section (fig. 5-39) and connected to the buses through 250-ampere frame size AQB circuit breakers.

400-HERTZ POWER DISTRIBUTION

In addition to the 60-hertz power supplied by the ship service and emergency generators,

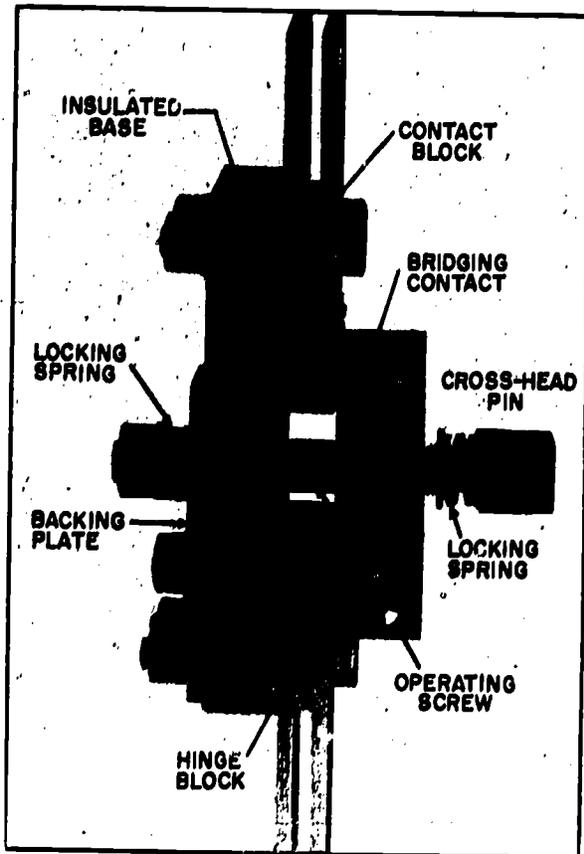
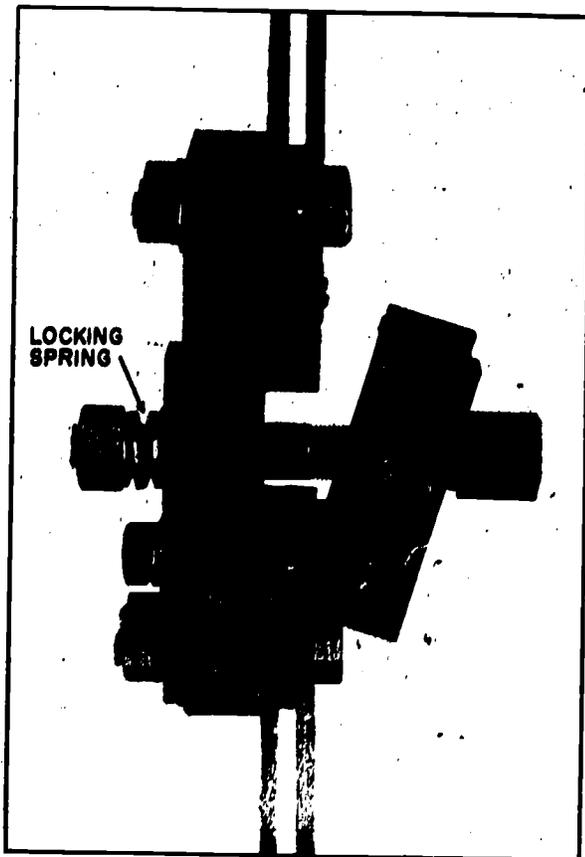


Figure 5- Disconnect device.

77.255


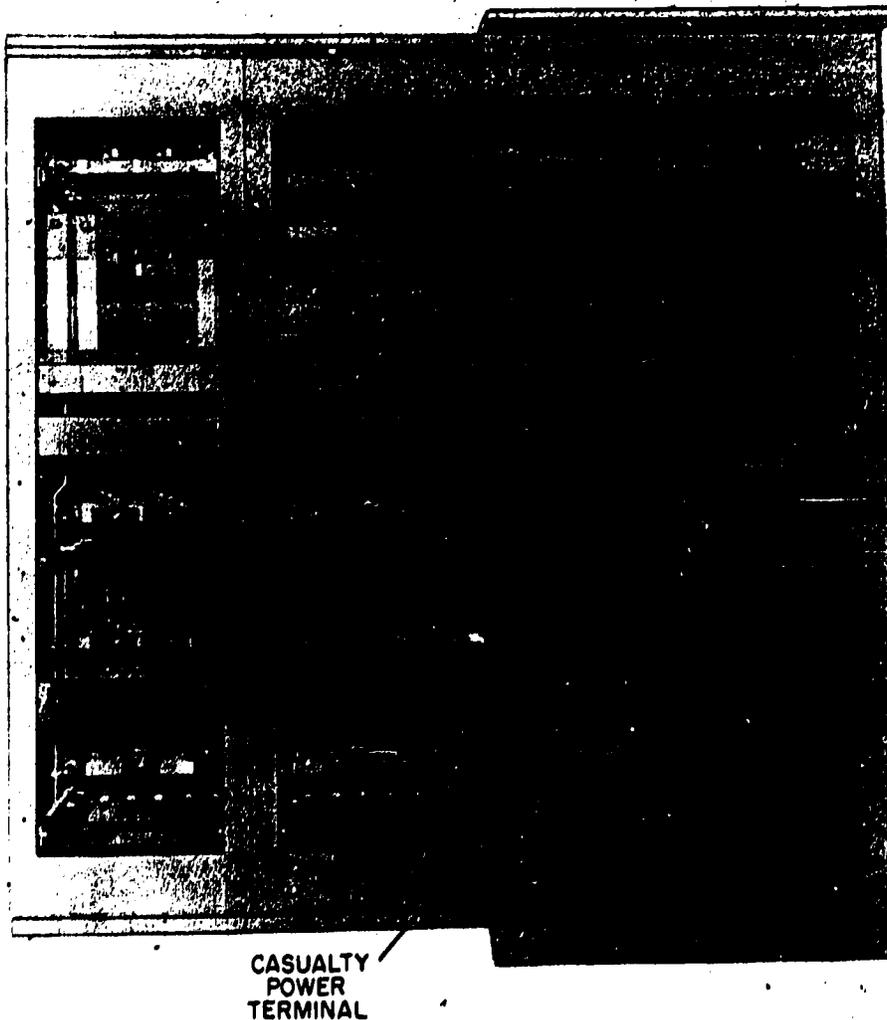


Figure 5-38.—Emergency switchboard 1E, rear view.

77.268

the DLG also has 400-hertz systems. The 400-hertz power is generated by motor generator sets and distributed via special frequency switchboards (fig. 5-40) to the various 400-hertz equipments. The DLG has three 200-kw, 400-hertz, 450-volt, 3-phase motor generators which supply the ship service 400-hertz power. These three motor generators, numbered M/G 1, M/G 9, and M/G 13 in figure 5-41, supply power to ship service special frequency switchboards 1SF, 5SF, and 6SF, respectively. Motor-generator M/G 9 is

considered a standby set which can supply 1SF or 6SF, or can be operated in parallel with M/G 13. M/G 9 or M/G 13 may be paralleled momentarily with M/G 1 when transferring the load. Figure 5-41 is a simplified line diagram of the 400-hertz ship service bus tie interconnections. The circuits being fed from the 400-hertz ship service switchboards are deleted from the figure for simplicity. Switchboard 1SF supplies the missile, fire control, ASROC and IC circuits in the forward part of the ship, and 6SF supplies the weapons

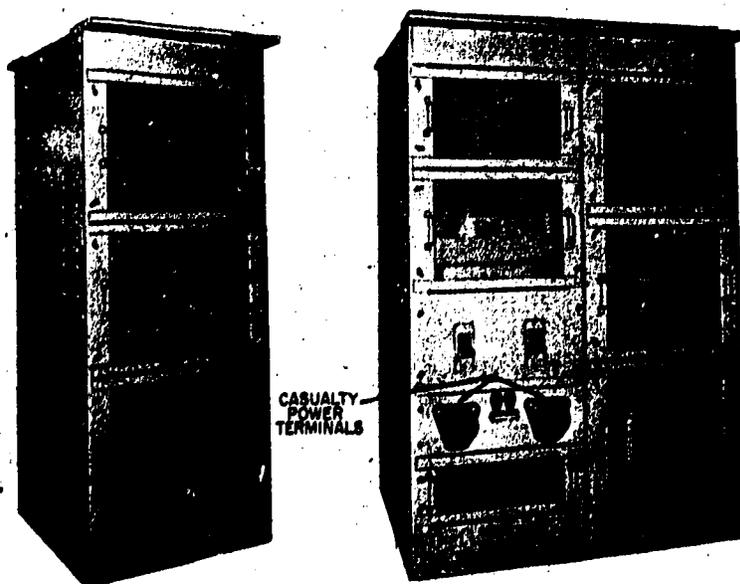

77.2b

Figure 5-39.—Ship service switchgear group 28, a.c. generator No. 2A, and distribution section, rear view.

circuits in the after part of the ship. The DLG also has six 60-kw, 450-volt, 3-phase, 400-hertz motor generator sets for missile fire control radar. Three of these sets (numbered 5, 7, and 8) feed the missile illuminator power switchboard (2SF) forward, and three sets (numbered 10, 11, and 12) supply the missile illuminator power switchboard (4SF) aft. Motor generator number 8 is the forward standby set and number 12 is the after standby set. The weapons control IC switchboard receives its normal 400-hertz power from a separate 60-kw motor generator set (M/G 14) via switchboard 3SF and automatic bus transfer equipment. In the event of a power loss from MG/ 14, the weapons IC switchboard power supply is transferred by automatic bus transfer to its alternate power supply, which is from 6SF.

CLOSELY REGULATED POWER SUPPLIES


Certain weapons, interior communications, and other electronics systems aboard modern

Navy ships require closely regulated electrical power for proper operation. Special closely regulated MG sets supply the greater part of this power. Static type converters are also used in some installations.

30-KW MOTOR GENERATOR SET

The closely regulated MG set (fig. 5-42), consists of a 450-volt, 3-phase, 60-Hz, 50-hp, wound rotor induction motor driving a 450-volt, 3-phase, 400-Hz, 30-kw generator. The set is regulated and controlled by a voltage and frequency regulating system housed in the rotor resistor and regulator unit control cabinets, and a magnetic controller with associated pushbuttons and switches located in the control cabinet.

The magnetic controller is a conventional size 3 across-the-line semiautomatic motor controller (starter). The voltage regulating system functions to supply the proper field current to the generator so as to maintain the generator output voltage within plus or minus one-half of one percent of rated output voltage for all load

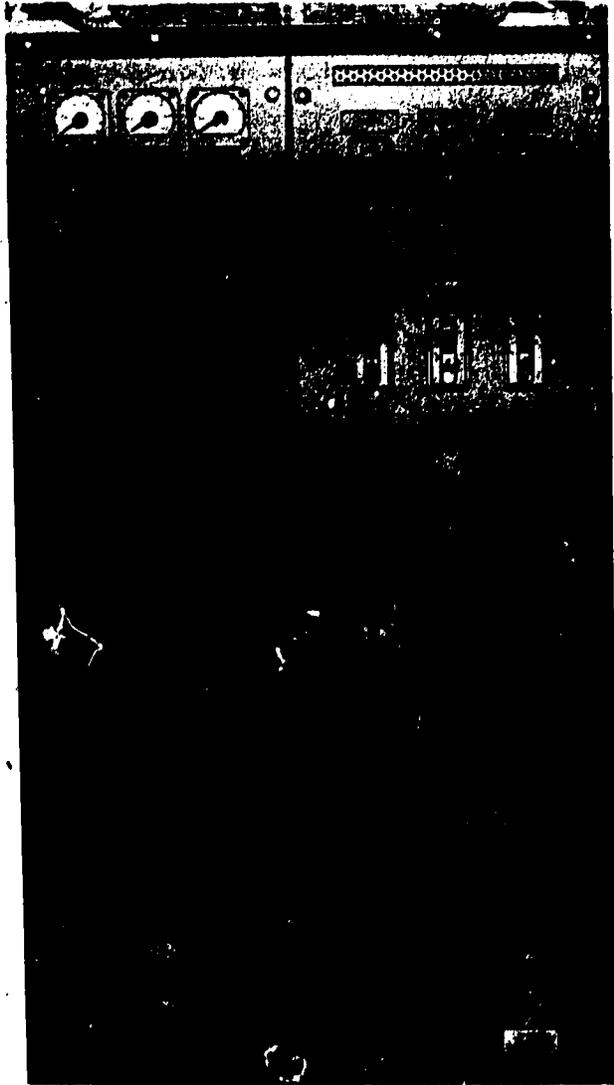

77.261

Figure 5-40.—400 hertz switchboard—18F.

conditions. The frequency regulating system functions to control the speed of the drive motor so as to maintain the output frequency of the generator within plus or minus one-half of one percent of its rated value for all load conditions. In addition, power sensing networks that function to eliminate speed droop with increased generator loads and to maintain equal sharing of the load between paralleled generators are included.


Voltage Regulating System

The voltage regulating system consists of a voltage regulator and a static exciter as shown in figure 5-43. The output from the power section of the regulator, in conjunction with windings within the static exciter, control the static exciter output. The static exciter output in turn supplies d-c (excitation current) to the generator field of the proper magnitude so as to maintain the generator output voltage within specified limits under all load conditions.

The static exciter consists of a saturable current-potential transformer (SCPT), three linear reactors (chokes), and a 3-phase bridge rectifier unit. The SCPT contains (1) a primary winding consisting of both voltage and current windings, (2) a d-c control winding, and (3) a secondary winding. The voltage primary windings are connected in series with the chokes across the generator output. The current primary windings are connected in series with the load and thus carry load current. The secondary winding output is connected to the bridge rectifier unit which supplies the d-c for the generator field. The SCPT control winding is connected to the output of the voltage regulator.


The voltage regulator consists of a detector circuit, a pre-amp and trigger circuit, and a power section. The detector circuit includes a sensing circuit and a 3-phase bridge rectifier. The sensing circuit consists of three voltage sensing transformers with their primary windings connected to the generator output and their secondary windings connected to the bridge rectifier. The bridge rectifier provides a d-c output voltage that is proportional to the average of the 3-phase voltage outputs from the generator. This d-c voltage is filtered and fed to a Zener reference bridge in the pre-amp and trigger circuit.

The d-c output from the detector is compared with a constant Zener voltage in the reference bridge and the difference (error) voltage output from the bridge is amplified by transistor amplifiers and fed to a unijunction transistor circuit which provides the pulses to trigger the silicon controlled rectifiers (SCRs) in the power section. The SCR output from the

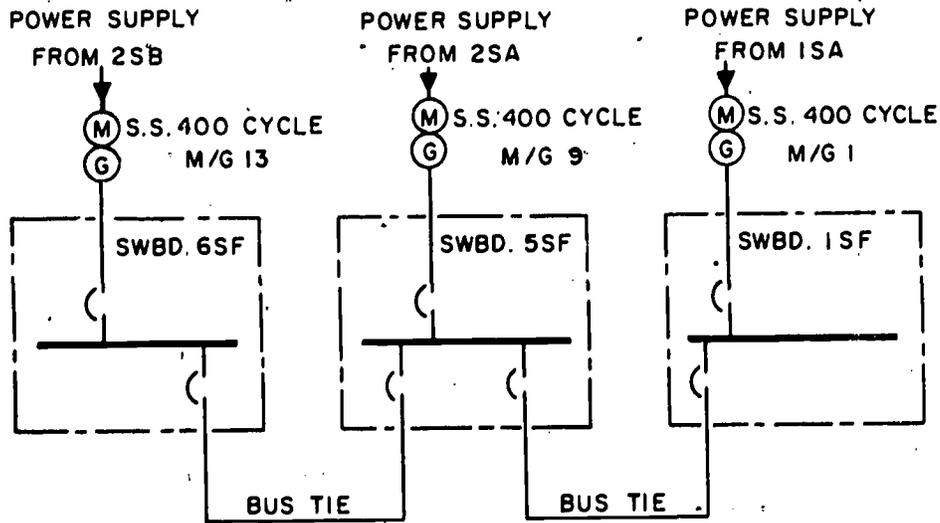

77.262

Figure 5-41.—Bus tie connections on 400 hertz ship service system.

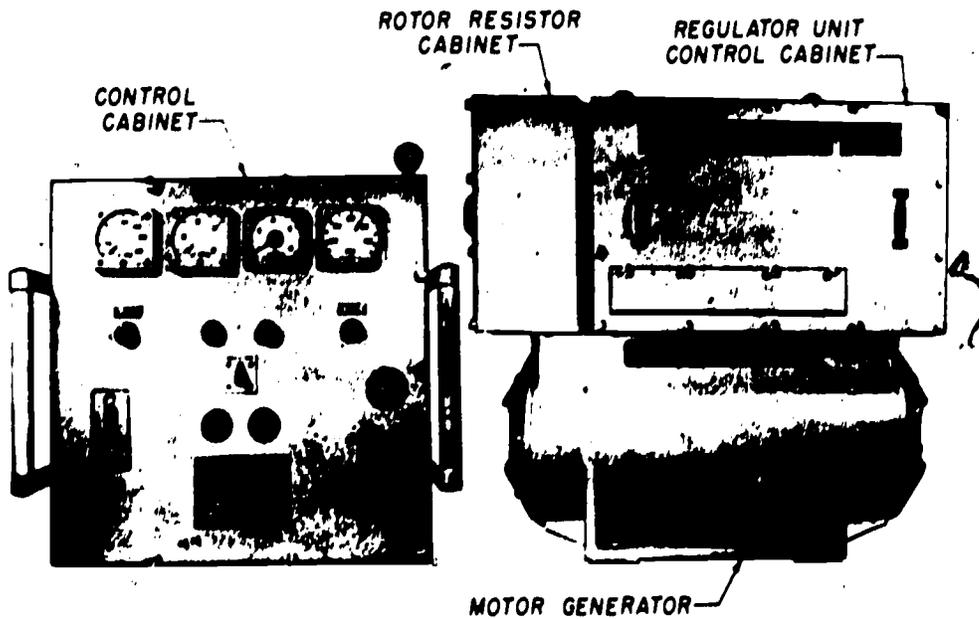


40.111

Figure 5-42.—Motor-generator set wjth control equipment.

power section is fed to the control winding of the SCPT in the static exciter.

During starting, generator field current is supplied by a field flashing circuit which is cut

out after the generator builds up an output voltage. At no-load voltage the primary windings of the SCPT are energized through the choke coils and induce a voltage in the SCPT secondary windings. The rectified output of the secondary

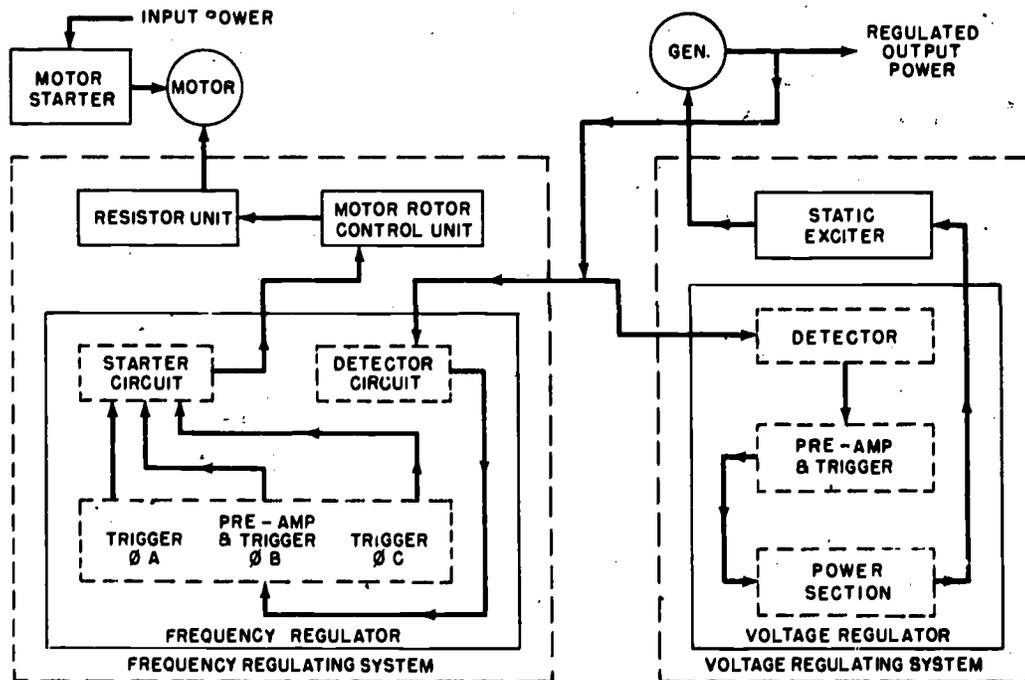

40.113

Figure 5-43.—Motor-generator set, simplified block diagram.

windings supply the generator field. This is the no-load field excitation.

When a load is applied to the generator, load current flows through the SCPT primary current windings causing a flux which combines vectorially with the primary voltage windings flux to induce a voltage in the secondary windings. Thus any change in generator load or load power factor is automatically compensated for. This arrangement, without the use of the voltage regulator, would hold the generator output voltage fairly constant under all load conditions. The voltage regulator is necessary, however, for the high degree of regulation required. The voltage regulator acts as a fine control by effectively varying the coupling between the SCPT primary and secondary windings.

Frequency Regulating System

The frequency regulating system consists of a motor rotor control and resistor unit and a

frequency regulator. The detector circuit of the frequency regulator receives its input from a special type frequency sensing transformer whose voltage output varies linearly on changes in generator output frequency. This input is rectified, filtered, compared in a Zener reference bridge, and the bridge output amplified by transistor amplifiers. The amplified detector output (which represents the output frequency of the generator) is fed to the pre-amp and trigger section.

The detector output is further amplified in the pre-amp and trigger section and this amplified output is used to control three pulse forming networks which provide trigger pulses for SCRs located in the starter circuit.

The SCRs in the starter circuit (controlled by the weak trigger pulses from the pre-amp and trigger section) provide output pulses of sufficient magnitude to fire other SCRs located in the motor rotor control unit. The output of

the SCRs in the motor rotor control unit is fed through three large (about 3000 watt) resistors which are connected in the wound rotor circuit of the drive motor.

Any change in the generator output frequency from normal will cause the frequency regulating system to function to increase or decrease the rotor current, and hence the speed of the drive motor, to compensate for the change. Thus the output generator frequency is maintained constant by maintaining the speed of the directly connected drive motor.

STATIC CONVERTER

The static converter (fig. 5-44) converts 450-volt, 3-phase, 60-Hz power to 120-volt, 3-phase, 400-Hz power for use as a shipboard closely regulated power supply. The converter automatically maintains the output voltage and frequency within plus or minus one-half of one percent of rated value for all load conditions. This high degree of regulation is maintained even though the input voltage and frequency may vary as much as plus or minus five percent of rated value. The 450-volt, 60-Hz input is stepped

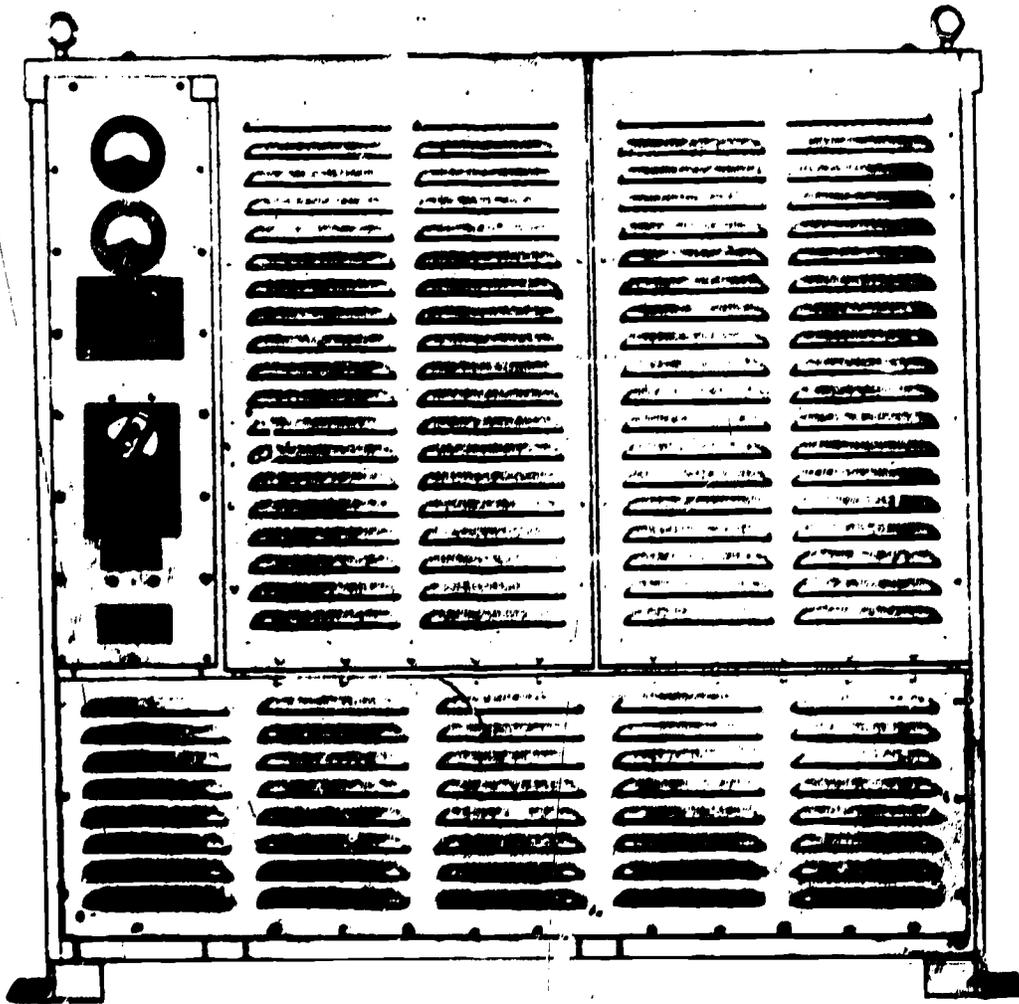


Figure 5-44.—Converter, front view.

27.315

5-50 176

down, rectified, and fed to two static inverters. Each static inverter contains two main SCR groups consisting of two SCRs in series. The inverter outputs are fed to Scott-connected transformers to produce the 3-phase output. A simplified block diagram of the converter is shown in figure 5-45.

Transformer Rectifier

The transformer rectifier unit (fig. 5-45) is an autotransformer and a 3-phase, full-wave, bridge rectifier. The rectifier output is filtered and fed through choke coils to the static inverters. The choke coils limit the voltage appearing across the inverter SRCs.

Oscillator Circuit

The oscillator circuit provides the pulses for firing the SCRs in the main inverter. This circuit consists of a unijunction transistor oscillator which provides pulses at a repetition rate of 800 per second. These pulses switch a bistable

(flip-flop) transistor multivibrator circuit whose output supplies the primary of a transformer. The transformer output (which is a square wave) is amplified by a transistor push-pull circuit and fed to the primary of the oscillator output transformer. This transformer has a separate secondary winding for each main SCR in the main inverter. The output of these secondary windings fed through a differentiating circuit (which converts the square waves to pulses), is used to fire the SCRs. Each SCR being fired from a separate secondary winding ensures simultaneous firing of the SCRs in series. Also the phasing of the secondaries allows firing of opposite SCRs at 180° intervals for proper inverter action.

Phase Control Circuit

The phase control circuit contains components and circuits (similar to those in the oscillator circuit) which function to control the firing of the SCRs in the teaser (secondary) inverter and maintain the proper phase

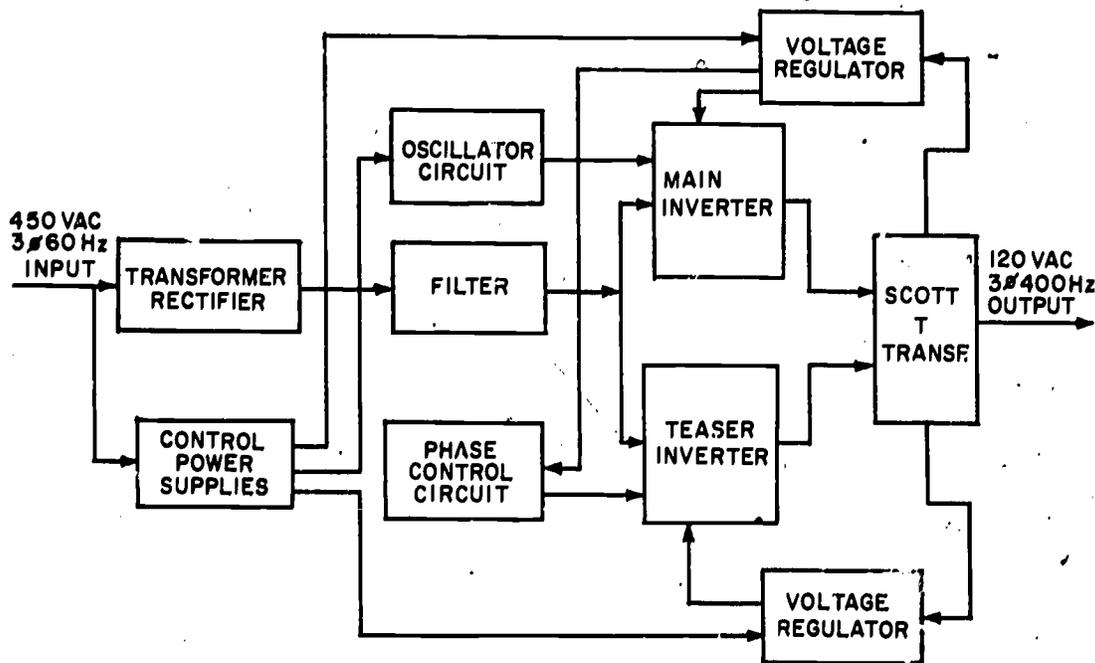


Figure 5-45.—Static converter, simplified block diagram.

27.318

relationship between the outputs of the two inverters.

Voltage Regulators

The voltage regulator circuits regulate the converter output voltage by controlling the firing time of the main SCRs in each inverter. The output of a transformer connected across the converter output is rectified to produce a d-c signal that is proportional to the converter output voltage. This signal is filtered and compared in a Zener reference bridge to produce an error signal when the converter output voltage varies from normal. This error signal is used to fire the inverter control SCRs which in turn control the firing time of the main SCRs.

Control Power Supplies

The converter contains two control power supplies (one for each inverter) which supply regulated +30 volts d-c to the various converter circuits. The input to the power supply transformer is taken from the 450-volt a-c line. The power transformer output is rectified by a full wave bridge rectifier and regulated by a Zener diode regulator to produce the +30 V. output.

NO-BREAK POWER SUPPLY SYSTEM

A no-break power supply system is designed to provide an uninterruptable electrical power supply that is relatively constant in voltage and frequency under all load conditions. The no-break supply will automatically take over the power supply to a load when the normal supply is interrupted, off-frequency, or off-voltage. This type of system is required by ships with equipment, control, or computer systems which need an uninterrupted electrical power supply for effective operation. It is presently being used with ships using the Central Operations Systems.

The system uses a motor-generator set, batteries, and associated controls to provide its regulated output. Either unit of the motor-generator set can perform as a motor with


the other as generator, thus permitting two modes of operation.

MOTOR-GENERATOR MODE 1

In mode 1 operation of the motor-generator set (fig. 5-46A), the a-c end of the set is being driven from the ship service power supply; the d-c end is a generator providing power to the system batteries. This motor-generator condition exists when the ship service power supply is meeting the voltage and frequency requirements of the critical load.

MOTOR-GENERATOR MODE 2

Mode 2 operation of the motor-generator set (fig. 5-46B) represents the condition by which the set receives power from the batteries and the a-c end of the set provides the power requirements for the critical load. Mode 2 is referred to as the Stop Gap Operation.

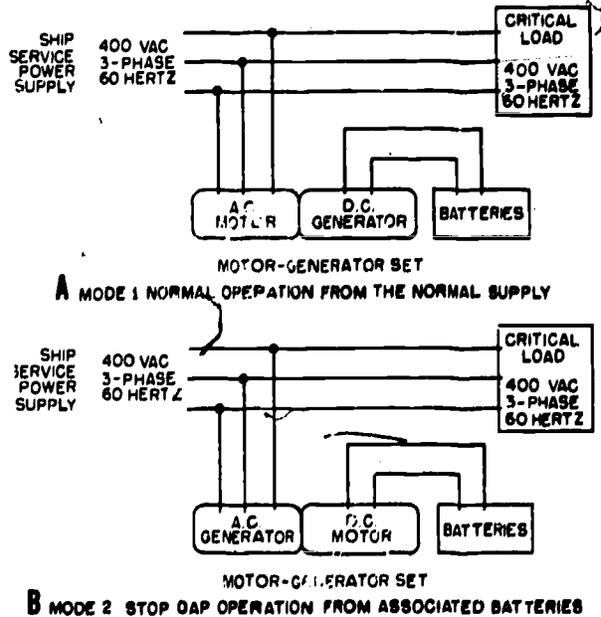

77.297

Figure 5-46.—No break power supply, block diagram.

OPERATION OF ELECTRIC PLANTS

The ship's electric power and lighting systems are designed to provide a high degree of flexibility to ensure continuity of service to vital power and lighting loads under normal and casualty conditions. The distribution systems in most naval ships are arranged so that the electric plants can be operated in parallel (cross plant) or separately (split plant).

CROSS PLANT OPERATION

The setup for cross plant operation is to CLOSE all the bus ties between the ship service switchboards with the generators running in parallel so that any switchboard or several switchboards can supply electric power to any other switchboard. However, when the plant is operating CROSS PLANT, a casualty to one switchboard or load center may cause a short circuit that could trip all the generators off the line and result in temporary loss of all ship service power.

SPLIT PLANT OPERATION

The setup for split plant operation is to OPEN the bus ties between the ship service switchboards so that each switchboard with its generators and loads forms a system that is independent of the others. When the plant is operating SPLIT PLANT, a casualty to one switchboard will result in loss of power for the loads fed from this switchboard but will not affect the loads fed from the other switchboards. Hence, split plant operation should be used under battle (general quarters) or other conditions where maximum assurance against loss of all ship service power is desired.

If auxiliaries are provided with normal and alternate power supplies, the feeder circuit breakers are CLOSED for both the normal and alternate supplies. Thus, if there is a casualty to one generator plant, power will be immediately available at the manual transfer switch for this vital equipment means of the alternate power supply from the other generator plant. Battle loads that are not provided with alternate feeders can be supplied through the bus tie

feeder if a generator casualty occurs, after isolating the damaged equipment.

OPERATION OF A-C GENERATORS

The a-c generator may be operated separately as a single unit or in combination with other generator units in paralleling operation. The advantages of having generator sets paralleled together are that more current or power is available in a system, an electric load can be transferred without interruption of power, and that there is greater efficiency under a varying load condition. The basic requirements for paralleling are that the generators must be in phase with each other, have the same phase rotation (ABC), and have the same voltage and frequency.

Nonparallel Operation

The nonparallel operation of a single a-c generator consists of connecting the generator to a nonenergized bus for operation. The generator should be inspected before starting for any machinery derangements that may be caused by operating or repair personnel. Routine checks and inspections are made during generator operation according to operating instructions.

The Machinist's Mate and Electrician's Mate have operating instructions to follow when operating generator equipment. Before starting and during idling (warmup time), there are many checks to be made. The EM must be sure he has positioned all switches in the correct position before starting the generator. After starting, he must check his instruments and gages for proper operation. Before connecting the generator to the bus he must be sure the generator is running at operating speed. He then manually adjusts the voltage and frequency to the correct rating and places the generator voltage regulator in automatic operation and again checks the voltage and frequency. When he is satisfied that all operating conditions are normal, he closes the generator circuit breaker connecting the generator to the bus and load. In some installations, it may be necessary to open certain power and lighting circuit breakers before connecting the generator to the bus so that the

generator will not pick up the entire load at one time.

When watchstanding on the a-c generator during operation, the EM is required to note the voltage and frequency readings and adjust, when necessary, check warning lights, and be aware of lube oil alarms, odors, and other abnormalities. He may be required to control the voltage manually during emergency operations.

To secure an a-c generator which is connected alone to a bus, reduce the load on the generator as much as practicable by opening feeder circuit breakers on the power and lighting circuits. Trip the generator circuit breaker, turn the voltage regulator control switch to the manual position, and place the manual voltage control as far as it will go in the DECREASE VOLTAGE direction.

Parallel Operation

Parallel operation of a-c generators consists of connecting a generator to a bus that is already energized by one or more generators. Again, it is very important to follow the operating instructions.

Synchronizing monitors are now being used on 60-hertz ship service systems to prevent the paralleling of generators which are not synchronized. On systems using this type of monitoring, it is not possible to close the circuit breaker on the incoming generator unless the phase angle, frequency, and voltage are within predetermined limits as follows:

1. Phase angle between -30° and $+40^{\circ}$.
2. Frequency difference less than 0.2 hertz.
3. Voltage difference less than 5%.

On this type of system, the above conditions must be met to complete the circuit breaker closing control circuit.

To synchronize generators for parallel operation, bring the incoming generator up to normal speed and voltage. Adjust the incoming generator frequency and voltage to that of the bus. Use the synchroscope to make the fine adjustment. In operation the synchroscope will rotate in one direction or the other. Adjust the speed of the generator by means of the governor motor control switch until the synchroscope

rotates very slowly in the clockwise direction. Be certain that the voltages of the bus and the incoming generator are still equal, and close the generator circuit breaker just before the synchroscope pointer passes very slowly through the zero position (pointing vertically upward).

When synchronizing lamps are used instead of the synchroscope, close the circuit breaker just before the midpoint of the dark period of the lamps is reached. The midpoint of the dark period corresponds to the vertical position of the synchroscope pointer. Then turn the synchronizing switch to the OFF position.

When a-c generators are operated in parallel, the kilowatt and reactive kva load should be divided between them in proportion to the generator ratings. The desired division of the kilowatt load is obtained by adjusting the governor, which controls the generator speed. To balance the reactive kva load, the generator line currents should be equal for equally rated generators and divided in proportion to generator ratings for unequally rated generators. Where power factor meters are provided, the power factors for all generators in parallel should be equal. Equality of power factor or correct division of generator line currents is obtained by adjusting the voltage-adjusting rheostats of the voltage regulators.

Techniques of Operation

During watchstanding there are a few simple operating rules which should be observed on all installations.

Watch the switchboard instruments. They show how the system is operating, reveal overloads, improper division of kilowatt load or of reactive current between generators operating in parallel and other abnormal operating conditions.

Keep the frequency (on a-c systems) and voltage at their correct values. Departure from either affects, to some extent at least, the operation of all equipment supplied with electric power. Low or high voltage has a particularly pronounced effect on lights since low voltage results in a marked decrease in illumination, while high voltages materially shorten lamp life. The operation of vital electronic, interior communications, and fire control equipment is

also seriously affected. This sensitive equipment requires careful adjustment of voltage regulators and prime mover governors to obtain satisfactory performance.

Use judgment when reclosing circuit breakers after they have tripped automatically. If a circuit breaker trips immediately upon the first reclosure, it is desirable to investigate before again reclosing. The circuit breaker may, however, be closed a second time without investigation if the immediate restoration of power to the circuit is important and the interrupting disturbance when the breaker tripped was not excessive. It should, however, be kept in mind that repeated closing and tripping may result in damage to the circuit breaker and, hence, may increase the repair or replacement work needed to get the circuit back in operation again.

Use the hold-in device on circuit breakers with judgment and only when necessary. The hold-in device enables an operator to hold a circuit breaker closed when the current is in excess of the tripping value. The circuit breaker will open automatically as soon as the hold-in device is released if the current is above the tripping current. In an emergency it may be vitally important to obtain power even at the risk of burning out equipment. The hold-in device makes it possible to do this. However, when holding a circuit breaker closed, it must be kept in mind that the circuit is deprived of protection against damage by excessive current and the longer the circuit breaker is held closed, the greater is the chance of permanent damage to circuits or equipment.

A circuit breaker should never be held closed unless there is an emergency which justifies the risk.

Never parallel ship service generators until they have been synchronized.

Never close the bus tie circuit breakers to parallel the buses on two energized switchboards until the buses have been synchronized.

Never close the bus tie circuit breaker to restore power to a switchboard which has lost power because of failure of a local generator that was supplying power to the switchboard prior to the generator failure, unless the generator circuit breaker has first been tripped by hand, or unless it has been definitely

established that the generator circuit breaker is in the open position.

Never parallel ship service generators with shore power except for the short interval required to transfer the load from one source of power to the other. Never parallel ship service generators with shore power of a different frequency, such as 50 Hz. Never parallel with shore power without the use of synchroscope or synchronizing lights. On ships where a synchroscope is not provided for synchronizing between shore power and the bus, the generator breakers shall be opened first and then the shore power breaker shall be closed. On some ships, shore power may be connected to the bus tie with the bus tie breakers open and synchronizing can be accomplished across the bus tie breakers. When placing the shore power and the ship service generators in parallel, the normal synchronizing process is reversed. The incoming shore power is the controlling source and the voltage and frequency of the ship service generators must be made to match the shore power voltage and frequency. There are several precautions to be taken when paralleling with shore power in addition to the usual ones when paralleling two ship service generators. The shore power connection phase rotation must be the same as the ship phase rotation. This is easily determined with a phase-sequence indicator. If there is to be more than one shore power connection and they are to be paralleled, the actual phases of the shore power should not only be in the same rotation but must be connected to match the ship's phases in order to avoid a short circuit through the ship's system. When paralleling with shore power for purposes of transferring the load, bring the ship's voltage up to the shore power voltage or as close thereto as possible. In some cases, the shore power voltage may be around 480 volts.

Increase the ship's generator to 480 volts. Now bring the ship's frequency to that of the shore power. Turn on the synchroscope, synchronize the ship's power with the shore power, and close the shore power breaker. Quickly transfer load to the shore power. Trip the ship service generator breakers.

Always check phase sequence before making connection to a shore power supply and be sure to make connections so that the phase sequence

on the shore power will be A, B, C. If the shore power connection is made so that it gives the wrong phase sequence on the ship, motors will run in the wrong direction.

Never parallel an emergency generator with any other generator except on certain ships where the emergency generator also serves as a "standby set" and, as such, provisions have been made for paralleling with the ship service power system.

Always observe electrical safety precautions. Never adjust a ventilation opening for personal comfort of watchstanders to a position where spray or solid water entering the system through weather openings can be discharged onto switchboards, distribution panels, bus bars, or other electrical equipment.

Always operate switchboards and distribution system equipment as if no automatic protective devices were installed. Trouble will sooner or later be the inevitable consequence of careless and slipshod operating practices based upon the assumption that automatic protective devices either will prevent incorrect operation or will prevent damage from incorrect operation. They will not because they are not designed or intended to do so. The protective devices used with the distribution system are intended to afford protection against damage as a consequence of equipment failure, not of operator failure. The intelligence which is needed for the operation of the distribution system is not built into the system but must be furnished by the operator. You must, therefore, read and follow the instructions on warning plates and indicator lights, must know the system and operate it correctly, and must never depend upon automatic devices to keep you from making a mistake or to save you from the consequences of a mistake.

To secure an a-c generator that is operating in parallel with another generator or other generators: (1) turn the governor motor control switch of the generator being secured in the DECREASE SPEED direction and the governor motor control switch (C switches) of the other generator (or generators) in the INCREASE SPEED direction until all the load is shifted from the generator being secured, (2) trip the circuit breaker of the generator being secured, and (3) return the automatic voltage regulator

control to the manual position, and the manual voltage control rheostat to the decrease voltage position.

OPERATING RECORDS

An operating record that will concern you is the Electrical Log-Ship's Service Electric Plant, NAVSHIPS 3649 (fig. 5-47). It is a complete daily record (from midnight to midnight) of the operating conditions of the ship service electric plant. The log sheet must be kept clean and neat. Any corrections or changes to entries for a watch must be made by the person who signs the log for that watch. However, corrections or additions must not be made after the log sheet has been signed by the engineer officer without his permission or direction. The station logs are turned in to the log room every morning for the engineer officer's signature and for filing.

The back of the log (not shown) is a continuation of the front, and also provides spaces for the engineer officer's and senior Electrician's Mate's signatures.

Other operating records are covered in chapter 11, Electrical Propulsion and Controls.

PARALLEL OPERATIONAL DIFFICULTIES WITH A-C GENERATORS

Trouble with parallel operation of a-c generators of similar characteristics is not a common occurrence. When trouble is experienced, it is usually associated with unsatisfactory division of kilowatt (kw) load between the generators operating in parallel, or with unsatisfactory division of reactive kilovolt-ampere (kva) load.

Division of Kilowatt Load

The division of kw load between two or more a-c generators operating in parallel is determined by the settings and characteristics of the prime mover governors and is not affected by the generator field currents, hence, is not affected by the operation of the voltage regulators.

ELECTRICIAN'S MATE 3 & 2

and source of ship service power by means of a transfer switch near the load.

If both the normal and alternate sources of the ship power fail because of a generator, switchboard, or feeder casualty, the vital auxiliaries can be shifted to an emergency feeder that receives power from the emergency switchboard.

If the ship service and emergency circuits fail, temporary circuits can be rigged with the casualty power distribution system and used to supply power to vital auxiliaries if any of the ship service or emergency generators can be operated.

The casualty power system includes suitable lengths of portable cable stowed on racks throughout the ship. Permanently installed casualty power bulkhead terminals form an important part of the casualty power system. They are used for connecting the portable cables on opposite sides of bulkheads, so that power may be transmitted through compartments without loss of watertight integrity; also included are permanently installed riser terminals between decks. The vital equipment selected to receive casualty power will have a terminal box mounted on or near the equipment or panel concerned and connected in parallel with the normal feeder for the equipment.

Sources of supply for the casualty power system are provided at each ship service and emergency generator switchboard. A casualty power riser terminal is installed on the back of the switchboard or switchgear group and connected to the busses through a 225- or 250-ampere AQB circuit breaker. This circuit breaker is connected between the generator circuit breaker and the generator disconnect links so that by pulling the disconnect links the generator may be isolated from the switchboard and used exclusively for casualty power purposes, if desired.

RIGGING CASUALTY POWER

In order to eliminate the necessity of handling live cables and to reduce the hazards to personnel and equipment, there are definite procedures that must be followed and safety precautions that must be observed in rigging casualty power. Only qualified Electrician's

Mates should do the actual connecting; however, the portable cables may be laid out by other repair party personnel. The repair party electrician must wear rubber gloves and rubber boots, and stand on a rubber mat (if available), while making connections. He must further test each casualty power riser or bulkhead terminal with a voltage tester before making a connection to that terminal. It is the duty of the repair party Electrician's Mate to determine that all sources of power to the equipment concerned are lost before rigging casualty power. The portable cable connections for casualty power should always be made by first connecting at the load, then working back to the source of power.

On large ships, casualty power runs will involve more than one repair party. All repair parties should rig simultaneously, but the rule of "rig from load to source" should always be observed. Each repair party must report the section rigged from riser or bulkhead terminal number to riser or bulkhead terminal number to damage control central, which reserves the authority to order the system energized. In making casualty power connections at a load where there are no circuit breakers or transfer switches to interrupt the incoming feeder cable, it must be disconnected or cut at the equipment. It is quite possible that this cable may be damaged by the casualty which caused the loss of power, and such a damaged cable if energized would probably trip the casualty power circuit breakers. If not disconnected, this incoming feeder cable may be reenergized, presenting a hazard to personnel handling the casualty power cables. Care should be exercised, in making all connections, to keep the phase sequence correct in a-c systems. The riser terminals, bulkhead terminals, and portable cable ends are marked to identify the A, B, and C phases either visually by color code or in darkness by touching wrapped around twine or "O" rings.

Ordinarily portable casualty power cables should be tied to the overhead. High voltage signs should be attached at each connection and the word passed over the ship's 1 MC system, informing all hands to stand clear of the casualty power cables while they are energized.

As previously stated, power panels supplying equipment designated for casualty power service will have a power terminal box mounted on the

5-5984

Chapter 5-A-C POWER DISTRIBUTION SYSTEMS

panel so that power may be fed into the panel. It is well to remember that these panels also can be used as a source of power for the casualty power system should power still be available from the permanent feeder or feeders to the panel. Some judgment should be exercised, however, in the choice of panels to be used for supplying casualty power loads. Heavy loads should be connected to power panels having large incoming feeders for greater assurance that circuit breakers will not trip and that the cable will not be overheated. For casualty power purposes, a current loading which will allow the cable to be grasped by the hand without burning is not considered excessive. Portable cable used in a-c casualty power systems is Navy THOF 42, and while the normal current carrying capacity of this cable is 93 amperes, its casualty rating is 200 amperes. Under normal conditions this cable will carry 200 amperes for 4 hours without damage to the cable. Cables may be run in parallel to circuits which overload a single cable.

Recommended SAFE procedures to be used in rigging casualty power include:

- Upon report of loss of power, damage control central orders the repair party nearest the equipment concerned to investigate.

- The repair party Electrician's Mate in the investigating team tests immediately to determine if all sources of power to the equipment are lost.

- Upon determining that all power is lost, the Electrician's Mate opens all supply switches to the equipment and reports all power lost to damage control central.

- Upon receiving report of all power lost, damage control central requests main engine control to designate a source of casualty power for the equipment concerned. The request for a casualty power source may be made to the electrical officer on ships having a combined main engine control and damage control central or where the electrical officer is stationed in damage control central to control generators and power distribution.

- Main engine control or the electrical officer as appropriate, informs damage control central of the casualty power source to be utilized (giving riser terminal number) and at the same time informs the Electrician's Mate on the appropriate switchboard that his board has been designated as a source of casualty power to the riser terminal by number.

- Upon receiving this information, damage control central orders the repair parties concerned to rig casualty power from the equipment to the designated source.

- Repair parties rig casualty power and report each section as completed, to damage control central.

- When all sections have reported rigging completed, damage control central then requests the main engine control electrical officer to "energize casualty power."

- Upon receiving the request to energize, main engine control or the electrical officer directs the designated switchboard to "connect and energize casualty power," and to report compliance.

- The Electrician's Mate on the designated switchboard rigs the first cable from the source of the system, closes the casualty power circuit breaker, and reports "casualty power energized," to main engine control or the electrical officer. Main engine control then reports compliance to damage control central.

UNRIGGING CASUALTY POWER

Unrigging casualty power can be hazardous if not handled correctly. To unrig casualty power lines proceed as follows:

- Damage control central requests main engine control to deenergize the casualty power system.

- Main engine control directs the designated switchboard to "deenergize and disconnect casualty power," and to report compliance.

ELECTRICIAN'S MATE 3 & 2

- The Electrician's Mate at the switchboard opens the casualty power circuit breaker, unrigs both ends of the first portable cable, and reports "casualty power deenergized," to main engine control. Main engine control reports compliance to damage control central.

- Upon receiving the deenergized report, damage control central then orders casualty power disconnected at the equipment.

- The repair party Electrician's Mate then disconnects both ends of the last portable cable in the system at the load and reports, when completed, to damage control central.

- Damage control central now requests main engine control to energize normal circuits to the equipment and orders repair parties concerned to unrig and restow the remainder of the portable cables.

- Main engine control directs the designated switchboard to energize all normal circuits to the equipment and to report compliance. Main engine control reports compliance to damage control central. The exercise is considered completed when damage control central receives the report that the equipment is operating on normal power, and that all portable cables are restowed on their proper racks.

Speed is desirable in all casualty power operations; however, safety precautions must never be sacrificed to attain speed. A thorough knowledge of the casualty power system and frequent drills by all personnel involved are necessary for safe and expeditious results.

INSPECTION AND MAINTENANCE

Casualty power systems require proper inspection and maintenance to ensure safe and dependable operation.

The insulation of casualty power cables should receive close inspection at least once a year. These cables are exposed to shipboard ambient temperatures and perhaps oil, oil fumes, and accidental damage. After an exposure period

of 5 years or more, the conductor insulation may have aged and lost elasticity to the extent that it will crack open when bent during handling incident to emergency use. The best method of detecting overage insulation of the exposed ends of individual conductors is to sharply bend each conductor by hand. If no visual cracks develop the insulation is satisfactory. If cracking is noted, the cable ends should be cut back and new terminations prepared in accordance with chapter 4 of this manual.

The casualty power cables should be checked after any repairs to ensure they are still of sufficient length to make proper connections to designated risers and equipments.

During the annual inspection of the portable casualty power cables, all risers and terminals should be checked and cleaned of all foreign matter.

DAMAGE CONTROL CHARTS

Numerous damage control charts and diagrams that are very helpful to damage control personnel are prepared for all ships. Among these charts and diagrams there should be a casualty power supply and emergency communication system chart for your ship. This chart will show the ship's casualty power and emergency communication systems in detail. Another chart that should be available to all personnel concerned with electrical damage control is one for vital damage control electrical equipment and power supply. This chart supersedes the electric wiring table that was included in damage control diagrams and charts at the end of World War II. Figure 5-48 shows a portion of a vital damage control electrical equipment chart for a representative ship. These charts and diagrams are usually prepared by the building activity when a ship is built, however, extra copies are available upon request to Naval Sea Systems Command.

PREVENTATIVE MAINTENANCE

The purpose of preventative maintenance is to ensure that the equipment is ready for service at all times. Three fundamental rules for the maintenance of electrical equipment are: (1) keep

5-69 86

Chapter 5—A-C POWER DISTRIBUTION SYSTEMS

PANEL		SWITCH		ENERGIZED FROM				EQUIPMENT ENERGIZED									
NO.	COMPT. NO.	ABT	MBT	MAIN DISTR		EMER DISTR		MULTI-PURPOSE OUTLET	VENT SYS	PUMPS	GUNS OR DIRECT	ELEC TRONIC	ELEV OR HOISTS	CIRCUIT		MISC	VALVES
				FWD	AFT	FWD	AFT							IC	FC		
A08	A-406-3E		3-45-1	FB 403(N)	FB 404(A)	XFE-403				FIRE #1							
3-35-2	A-303L		2-28-1	FB 407(N)	FB 408(A)	XFE-407					GUN #51		5" AMN HOIST #1 & 2				
2-48-2	A-204-5L		1-45-1	FB 409(N)	FB 410(A)	XFE-409					GUN #52		5" AMN HOIST #3 & 4				
2-60-2	A-205L			FB 413				2-18 1-83 (E) 1-80 2-45 2-84 (E) 1-85 1-72 2-84 (E) 1-71									
2-77-2	B-1-1			FB 423				(S) 2-78 (E) 1-83		FOS #1							
2-97-2	B-2			FB 425						FW #1							
2-99-2	B-2			FB 425						F&F #1							TORPEDO TUBE TRAIN MOTOR
2-105-1	B-2			FB 427(N)	FB 428(A)			(S) 2-84 (S) 2-104 (E) 1-83-3 (E) 1-108-1									

27.121

Figure 5-48.—Section of vital damage control electrical equipment and power supply chart.

equipment clean and dry, (2) keep electrical connections and mechanical fastenings tight, and (3) inspect and test at sufficiently short intervals to ensure that the equipment is in operating condition.

GENERATORS

Generator maintenance is directed primarily to keeping the electrical insulation in good condition. It must be clean, dry, and of high resistance.

The insulation resistance of each ship service, emergency and exciter generator should be measured in accordance with ship's PMS schedule. When measuring a-c revolving fields, make the ground connection to a metallic part of the rotor to eliminate the insulating effect of

the bearings. Normally the insulation resistance is measured immediately after a generator is shut down. Periodic measurements on idle generators will detect any moisture absorption in the windings.

Portable electric lights (with guard) may be placed inside idle generators not provided with space heaters to keep the insulation dry. Only enough heat to keep the temperature inside the generator, about 5° to 10° above ambient temperature is required.

SWITCHBOARDS

Numerous derangements of electrical equipment have been caused by loose electrical connections or mechanical fastenings. Loose



connections can be readily tightened, but a thorough inspection is necessary to detect them.

Inspection

~~At least once a year and during each~~ overhaul, each switchboard, propulsion control cubicle, distribution panel, and motor controller should be deenergized for a complete inspection and cleaning of all bus work equipment. The inspection of deenergized equipment should not be limited to visual examination but should include grasping and shaking electrical connections and mechanical parts to be certain that all connections are tight and that mechanical parts are free to function. Be certain that no loose tools or other extraneous articles are left in or around switchboards and distribution panels.

Check the supports of bus work and be certain that the supports will prevent contact between bus bars of opposite polarity or contact between bus bars and grounded parts during periods of shock. Clean the bus work and the surfaces of insulating materials, and be certain that creepage distances (across which leakage currents can flow) are ample. Check the condition of control wiring and replace if necessary.

Be certain that the ventilation of rheostats and resistors is not obstructed. Replace broken or burned out resistors. Temporary repairs can be made by bridging burned out sections when replacements are not available.

Check all electrical connections for tightness and wiring for frayed or broken leads. Check all meters for up-to-date calibration tags. Meters may be calibrated at a calibration laboratory or a tender during a regular availability.

Be certain that fuses are the right size; that clips make firm contact with the fuses; that lock-in devices (if provided) are properly fitted; and that all connections in the wiring to the fuses are tight.

In addition to the foregoing inspections, switchboards and distribution panels should be deenergized after firing of the guns, if practicable, and thoroughly inspected for tightness of electrical connections and mechanical fastenings. Emergency switchboards should be tested regularly in accordance with

the instructions furnished with the switchboard in order to check the operation of the automatic bus transfer equipment and the automatic starting of the emergency generator. This test should be made in connection with the weekly operating test of emergency generators.

Control circuits should be checked to ensure circuit continuity and proper relay and contactor operation. Because of the numerous types of control circuits installed in naval ships, it is impracticable to set up any definite operating test procedures in this training manual. In general, certain control circuits, such as those for the starting of motors or motor-generator sets, or voltmeter switching circuits, are best tested by using the circuits as they are intended to operate under service conditions.

Protective circuits, such as overcurrent, reverse power, or reverse current circuits, usually cannot be tested by actual operation because of the danger involved to the equipment. These circuits should be visually checked, and, when possible, relays should be operated manually to be certain that the rest of the protective circuit performs its intended functions. Exercise extreme care not to disrupt vital power service or to damage electrical equipment.

Cleaning

Bus bars and insulating materials can usually be cleaned sufficiently by wiping with a dry cloth. A vacuum cleaner, if available, can also be used to advantage. Be certain that the switchboard or distribution panel is completely dead and will remain so until the work is completed; avoid cleaning live parts because of the danger to personnel and equipment.

In cleaning the contact buttons of rheostats, use a fine grade of sandpaper.

The insulated front panels of switchboards can be cleaned without deenergizing the switchboard. These panels can usually be cleaned by wiping with a dry cloth. However, a damp, soapy cloth can be used to remove grease and fingerprints. Then wipe the surface with a cloth dampened in clear water to remove all soap and dry with a clean, dry cloth. Cleaning cloths must be wrung out thoroughly so that no water runs down the panel. Clean a small section

at a time and then wipe dry. NEVER RUB A METER FACE WITH A DRY CLOTH. Rubbing can cause static electricity to build up on glass faces and affect meter readings. Breathing on a meter face can help dispel a charge of static electricity.

Bus Transfer Equipment

Bus transfer equipment should be tested in accordance with ship's PMS schedule. For manual bus transfer equipment, manually transfer a load from one power source to another and check the mechanical operation and mechanical interlocks. For automatic bus transfer equipment, check the operation by means of the "test" switches. The test should include operation initiated by cutting off power (opening a feeder circuit breaker) to ascertain if an automatic transfer occurs.

CORRECTIVE MAINTENANCE

When it is necessary to perform electrical repair on energized switchboards be sure to first obtain the approval of the commanding officer. Men should be stationed at switches or circuit breakers and telephone so the switchboard can be deenergized immediately and help called in case of emergency. The person doing the work should wear rubber gloves and should not wear loose clothing or metal articles.

To achieve maximum system reliability and continuity of electrical power under combat conditions on naval ships, ungrounded 450- and 120-volt a-c distribution systems are provided. If one line of the distribution system is grounded, such as might be caused by battle damage or deterioration of system insulation resistance, the circuit protective devices (circuit breakers, fuses, etc.) will not deenergize the grounded circuit, and electrical power will continue to be delivered to vital load equipment without further damage to the system. Frequent and proper use of the ground detectors provided on the ship service switchboards and certain power panels will allow maintenance personnel to locate the ground, and make repairs to remove the ground from the system as operating conditions permit. The primary advantage of an ungrounded system is that power can be

maintained to a piece of vital load equipment (such as fire control equipment) during a battle condition, even when a ground occurs on one line of the electrical circuit supplying power to the equipment. If the system were designed as a grounded system, the above mentioned ground on one power line would result in immediate tripping of the circuit protective devices, possibly deenergizing a piece of vital equipment when it is most needed. When troubleshooting, remember the electrical hazards that are inherent in ungrounded systems due to leakage currents.

Current Transformers

The secondary of a current transformer should NEVER be open while the primary is carrying current. Failure to observe this precaution could result in damage to the transformer, and the generation of a secondary voltage which may be of sufficient magnitude to injure personnel or damage insulation. Furthermore, a current transformer energized with an open-circuited secondary will overheat due to magnetic saturation of the core, and even though the overheating has been insufficient to produce permanent damage, the transformer should be carefully demagnetized and recalibrated to ensure accurate measurements. The secondary should, therefore, always be short-circuited when not connected to a current coil.

Potential Transformers

The secondary of a potential transformer should NEVER be short-circuited. The secondary should be closed only through a high resistance such as a voltmeter or a potential coil circuit or should be open when the primary is energized. A short-circuited secondary allows excessive current to flow which may damage the transformer.

Distribution Circuitry

The main power supply has the total electrical load divided into several feeder circuits and each feeder circuit is further divided into several branch circuits. Each final branch circuit

ELECTRICIAN'S MATE 3 & 2

is fused to safely carry only its own load while each feeder is safely fused to carry only the total current of its several branches. This reduces the possibility of one circuit failure interrupting the power for the entire ship.

The distribution wiring diagram showing the connections that might be used in a ship's lighting system is illustrated in figure 5-49. A ship's installation might have several feeder distribution boxes, each supplying six or more branch circuits through branch distribution boxes.

Fuses F1, F2, and F3 protect the main feeder supply from heavy surges such as short circuits or overloads on the feeder cable. Fuses A-A1 and B-B1 protect branch No. 1. If trouble develops and work is to be done on branch No. 1, switch S1 may be opened to isolate this branch. Branches 2 and 3 are protected and isolated in the same manner by their respective

fuses and switches. Usually, receptacles for portable equipment and fans are on branch circuits separate from lighting branch circuits.

LOCATING A DEFECTIVE CIRCUIT.—Suppose that, for some reason, several of the lights are not working in a certain compartment. Because several lights are out, it will be reasonable to assume that the voltage supply has been interrupted on one of the branch circuits.

To verify this assumption, you must first locate the distribution box feeding the circuit that is inoperative. Then make sure that the inoperative circuit is not being supplied with voltage. Unless the circuits are identified in the distribution box, you will first need to measure the voltage at the various circuit terminations. For the following procedures, use the circuits shown in figure 5-49 as an example circuit.

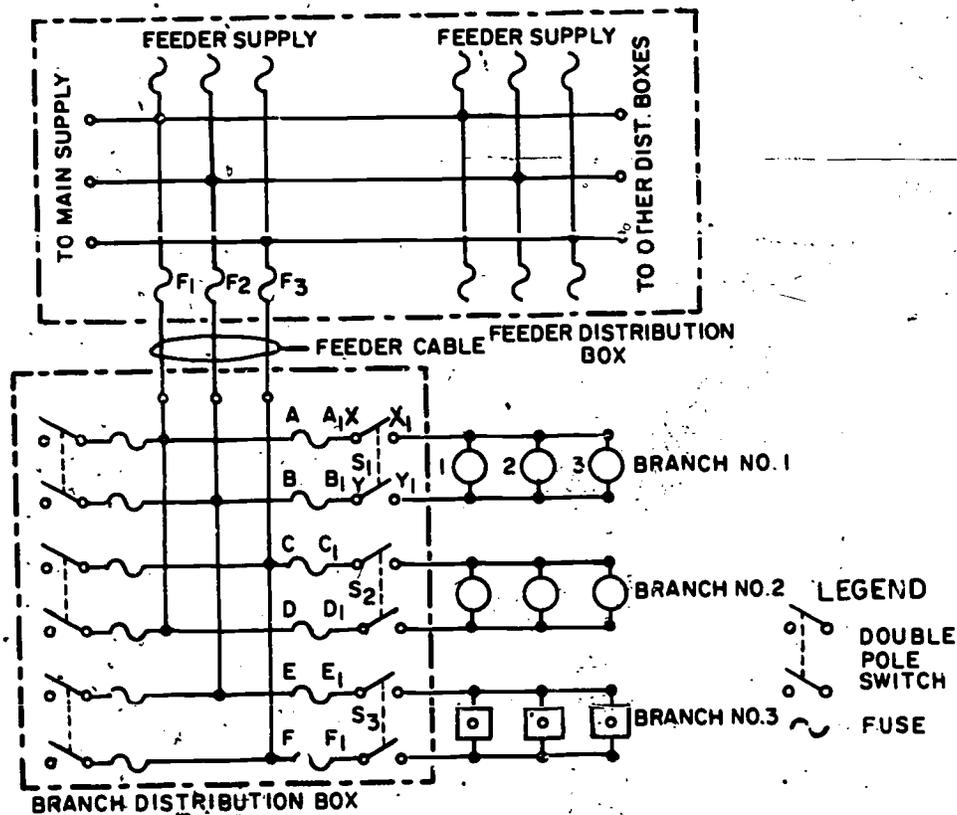


Figure 5-49.—Three-phase distribution wiring diagram.

65.57

5-64 190

Assume that you are testing at terminals A-B and that normal voltage is present. Move the test lead from A to A1. Normal voltage between A1 and B indicates that fuse A-A1 is in good condition. To test fuse B-B1, place the tester leads on A and B, and then move the lead from B to B1. No voltage between these terminals indicates that fuse B-B1 is open. Full-phase voltage between A and B1 indicates that the fuse is good.

This method of locating blown fuses is preferred to the method in which the voltage tester leads are connected across the suspected fuse terminals because the latter may give a false indication if there is an open circuit at some point in the branch circuit.

Always use a fuse puller when removing fuses and be sure to replace with fuses of the proper rating and capacity.

VOLTAGE TESTING.—The most commonly used voltage tester now available to the fleet is the multifrequency tester which utilizes electronic circuitry and glow lamps to indicate voltage, frequency, and polarity. This tester may be used on 60- or 400-hertz or d.c. systems. Testers should be checked on a known source just prior to testing the circuit in question (not back at the shop. The testers could be damaged in transit). After checking the circuit in question the testers should be rechecked on a known voltage source. (If the tester failed during the pretest or during the check of the circuit in question it would indicate deenergized when in fact the circuit may be energized.) Never use a lamp in a "pigtail" lamp holder as a voltage tester. Lamps designed for use on low voltage (120 v) may explode when connected across a higher voltage (440 v). In addition, a lamp would only indicate the presence of voltage, not the amount of voltage. Learn to use and rely on standard test equipment.

TESTING FOR GROUNDS.—When preparing to test a circuit for grounds, first determine what type of circuit it is: lighting, portable equipment, receptacles, or other. Also determine whether there is any low voltage equipment in the circuit that could be damaged by the 500-volt output of the megohmmeter.

Transistors, diodes, capacitors, and some rectifiers can be damaged by this high voltage, and therefore must be removed or short-circuited prior to testing for grounds.

To test for grounds with a megger, find or prepare a spot on the bare metal of the ship's hull to avoid the insulating effect of paint or enamel. This spot should be on a bulkhead or overhead to ensure a good ground. To protect yourself while making tests, leave BOTH fuses out of the holder. Then, close switch S1 in order to make the ends of the circuit accessible inside the cabinet. In addition, if you close the unfused switch, its contacts and internal connections are included in the tests.

Connect one test lead of the megger to the bare spot prepared on the metal and the second test lead to terminal X (fig. 5-49).

A resistance of 1 megohm or more is tolerable and it indicates that the lead from terminal X to the end of the circuit is free from grounds. The next part of the test is to move the test lead from terminal X to terminal Y. The second test lead should remain connected to ground. If the resistance from Y to ground is 1 megohm or more, the lead from Y to the end of the circuit may be considered free from grounds.

If both leads are found to be free from grounds, check for overloading. This might happen if a machine tool had been connected to a circuit that was already near maximum loading. The additional load will cause the fuse to blow. Therefore, move that tool to an underloaded circuit.

OTHER TROUBLESHOOTING TECHNIQUES.—Make it a part of your circuit-testing steps to check if any additional loads were connected when the fuse opened. If you find an overload, remove it. If no overload is present, go back to the branch distribution box, open S1, and replace A-A1 and B-B1 fuses. Then, close S1. If the fuse does not blow, you can assume that the first fuse failure was due to aging or some other transient effect.

However, if the replacement fuse blows, the overload may be due to a short circuit between conductors, which would not show up in a megger test for grounds. A megger is not suitable for checking low resistance, and it will be necessary to use an ohmmeter (lowest range

scale) in making further tests. Because an ohmmeter can be damaged by connecting it in a circuit that is carrying current, open S1 and remove fuses A-A1 and B-B1 before starting the tests. Then close S1 so that it will be included in the tests.

The ohmmeter test leads should be connected to terminals A1 and B1. Zero resistance between these terminals indicates a direct short circuit across the line. However, you should be careful in interpreting the results of this test. For example, consider a case where 10 lamps are connected in parallel.

The number of lamps and the individual wattage of the lamps will determine the circuit resistance measured between A1 and B1. The resistance checked in this manner is the "cold" resistance of the lamp filaments. This resistance is not the same value that you would obtain in an Ohm's law calculation, using rated voltage and power because for this condition the filament is hot, and for tungsten, resistance increases as the temperature increases.

For example, the cold resistance of a 40-watt, 120-volt lamp may vary between 40 and 50 ohms; whereas, the hot resistance is of the order of 360 ohms. Ten of these lamps connected in parallel will have a "cold" resistance between 4 and 5 ohms. These low values are difficult to measure unless you use considerable care in setting up the ohmmeter and in reading the indicated value. Unless these precautions are taken, you may easily mistake the normal "cold" resistance of a parallel connected group of lamps for a short circuit.

Assume that your resistance tests have shown a short circuit. How do you locate the trouble?

Although branch No. 1 (fig. 5-49) shows three lamps, an actual circuit may contain more or less than this number. Choose a lamp that appears to be near the center of the affected group and open the housing to expose the leads.

The wire leads are attached to the fixture with screw-type fasteners. The socket shell screws are inserted in metal bars, which serve to connect the lamp socket terminals to the line. Two other screws anchored in the socket insulation serve as feed-through terminals for line wires entering and leaving the outlet box. Therefore, it will be easy to "pick up" the leads

for testing. Disconnect each pair of leads from the fixture terminals.

As a safety precaution, when you open a box or outlet, always check for voltage at that location; never assume that the circuit is dead.

It is possible to determine the direction of the fault from the opened outlet box. To do this, connect the ohmmeter to the pair of leads that go back to the distribution box. If the meter indicates a short circuit, the fault is in that direction. If an open circuit is indicated, the ohmmeter leads should be removed and connected to the pair of wires running toward the end of the circuit. Remember to take lamp resistance into account or remove the lamps from the sockets.

If no short circuits show up when you make this test, the short is in the fixture that has been disconnected. The trouble will naturally disappear when the defective fixture is disconnected.

Assuming that your tests at the opened box have shown a fault toward the end of the line, open another outlet box at a point approximately halfway between the first opened outlet box and the end of the line. The leads in the second opened outlet should be disconnected from the fixture. Each pair of wires should be tested for a short circuit. This will show whether the trouble is between the two open boxes or between the second open box and the end of the circuit.

If the trouble is found to be between the two opened outlet boxes, open any boxes between them, disconnect the fixture, and make the tests for short circuits at each box and at the end of the line. Bear in mind that the trouble may be in the cable running between the two boxes. When it is, usually it is necessary to pull in new cable. However, some cables have a spare wire, which might be used to save running a new cable.

On circuits for portable equipment, disconnect each item. If a short circuit disappears, the trouble is in some of the portable equipment. In this case, the defective fuse can be replaced and the circuit energized. If the short remains with the portable equipment disconnected, the circuit should be tested, as described for lamp circuits.

Of course, if the trouble is due to defective portable equipment, each item should be carefully checked before it is reconnected to the line. Any defective equipment should be repaired.

To test a circuit for portable devices, it is sometimes helpful to connect an ohmmeter at the distribution box and watch the meter (or have someone watch it for you) as each portable device is disconnected from the line. If the short circuit disappears when one item is disconnected, it is safe to assume that this item was the cause of the trouble.

Three-Phase Fused Circuits

The tests previously described relate to individual branch circuit troubles. However, branch circuit faults may not always be confined to an individual branch. Instead, the trouble may be in the feeder distribution system.

The feeder supply circuit is 3-phase, and the lighting branches are single-phase circuits. The changeover from 3-phase to single-phase is made in the branch distribution box by connecting the various branch circuits to the proper feeders. Figure 5-49 illustrates how these connections are made.

Now, assume that a fuse in the feeder distribution box opens. This fuse will open one leg of the 3-phase supply. When this happens, the loads will then form two branch circuits in series across a single-phase branch circuit. It will be easier to visualize this condition by examining figure 5-50, which is a simplification of the figure shown in figure 5-47.

In this circuit, consider that fuse F1 is open. Branch circuit 3 still has normal connections to phases B-C. Therefore, it will receive normal voltage, and all lamps on this circuit will light to normal brilliancy. However, because of the open fuse, F1, branches 1 and 2 cannot receive normal voltage. They do, however, receive voltage from terminals B and C. The supply path is from terminal B through fuse F2, branch 1 to branch 2, to fuse F3 and terminal C. Therefore, branches 1 and 2 are in series across the

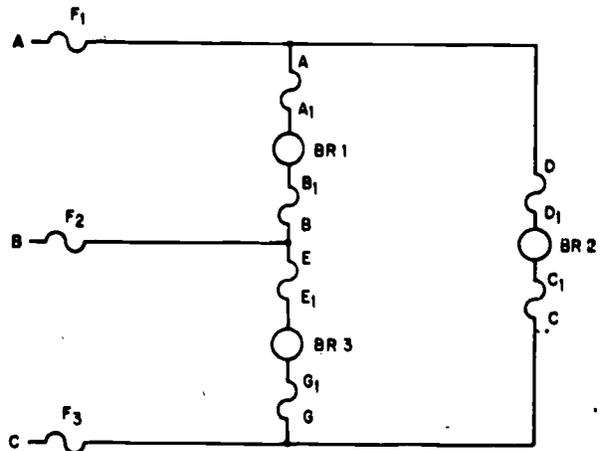


Figure 5-50.—Simplified main and branch wiring.

77.97

terminals (E and G in fig. 5-50) that supply branch 3.

If the wattages of the series-connected lamps are equal, the voltages will divide equally across each load, and lights connected in these circuits will light to about half brilliancy. However, any load unbalance will cause unequal voltage division in the branch circuits so that, in an actual case, there may be several degrees of lamp brilliancy in lighting circuits connected to the same distribution box.

The same action will be noted if fuse F3 opens, except that branch 1 will have normal voltage, and the voltage of this branch will divide across branches 2 and 3 because they will be in series across the supply voltage.

If fuse F2 opens, branch 2 will receive normal voltage, and branches 1 and 3 will be in series across the voltage supply.

Thus, you can see that an open fuse in any leg of the 3-phase supply mains will give an immediate indication as to the cause of the trouble. In this example, the first clue is the dimming of lights on some circuits and full brilliancy of lights on others. Suspicions of an open-phase fuse can then be confirmed by voltage measurements.

CHAPTER 6

D-C POWER DISTRIBUTION SYSTEMS

Electrical power distribution systems are designated as either a-c or d-c systems. Present practice is to install a-c systems in new construction ships. Though not being installed on the newer ships, d-c systems still exist on landing craft, transports, submarines, service craft, and other ship types built before the general adoption of a-c ship service systems.

The purpose of the d-c distribution system is to transmit power from one place to another. It has circuit breakers and fuses which protect the generators and the distribution system from damage which might be caused by defects in the system or connected equipment.

Before proceeding further in the chapter, you are encouraged to review Module 4 NEETS, NAVEDTRA 172-04-00-79, which contains information on generator construction and characteristics, voltage regulation and control, and operation of generators in parallel.

SHIP SERVICE DISTRIBUTION SYSTEM

The electric plant in transport ship (AP) consists of three turbine-driven ship service generating units located in the main engine-room. The schematic diagram of connections for a typical generator and distribution switchboard shown in figure 6-1 illustrates the following features of control and protection:

- Generators are connected to the power distribution system through circuit breakers which are designed to automatically disconnect them from the bus under predetermined conditions of overload or short circuit.

- Reverse current trips, integral with the circuit breaker, protect the generators against motorizing when operating in parallel.

- Disconnecting switches permit the circuit breakers to be isolated from the bus for service and repair.

- Circuit breakers with automatic tripping devices are provided on all distribution circuits to isolate circuit faults.

- Voltmeters are connected through selector switches to measure generator and bus voltages.


- Two ammeters are provided with three-wire generators to measure the current in the positive and negative leads. These ammeters are connected into the line through suitable shunts.

- Generator field rheostats are connected in series with the shunt field circuits for purposes of adjusting generator voltage.

- Indicating devices include circuit breaker indicating lights and ground detector lights.

The main generator and distribution switchboard consists of three combined generator and power-feeder panels, one feeder panel, one backup ACB panel, and two combined lighting and power feeder panels (fig. 6-2). The switchboard provides for single and parallel operation of the main generators and for control of the power and lighting feeders emanating from the backup power and lighting buses.

The generators are controlled from panels I, II, and III and furnish 120/240-volt power to the ACB backup circuit breakers B1, B2, B3, and B4 on panels I and VI. Panels I and VI furnish 120/240-volt, 120-volt, and 240-volt power to panels IV, V, and VII and the lower portions of panels I and III. All circuits are protected with manually operated circuit breakers. These circuit breakers are equipped with overcurrent

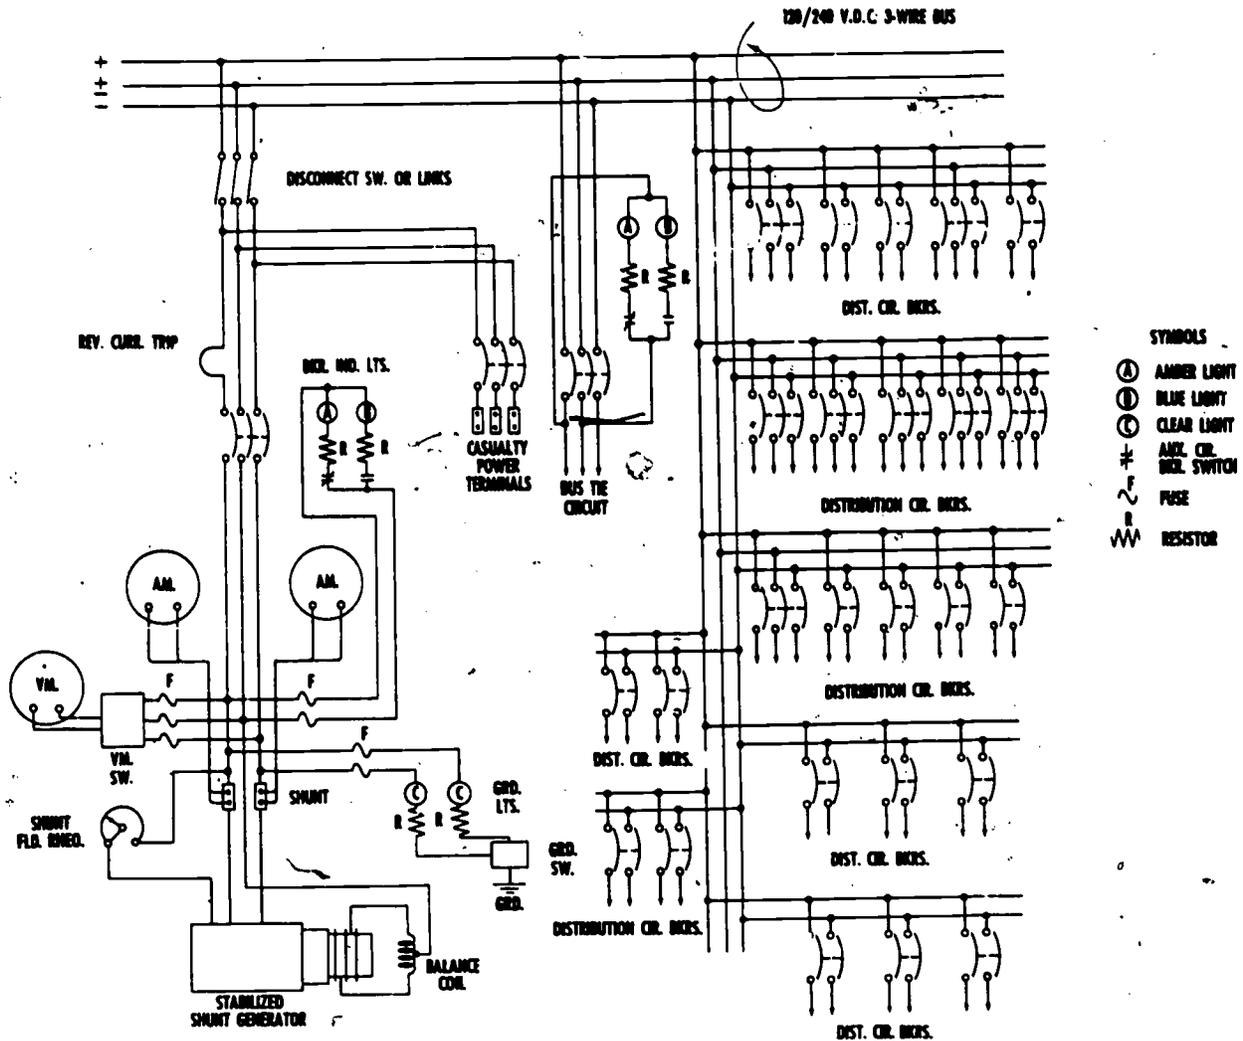

27.66

Figure 6-1.—Simplified schematic wiring diagram of d-c switchboard.


devices that operate to open the respective breaker on short circuit or sustained overload. In addition to the overcurrent devices, each generator breaker is equipped with a direct-acting reverse current device, an undervoltage device, and an overspeed device to trip the breaker on current reversal, undervoltage, or overspeed, respectively.

The backup circuit breakers should be closed at all times. If the feeder breaker and backup breaker open on a short circuit, the feeder breaker should be checked to determine that

it is in satisfactory operating condition before closing the backup breaker.

The switchboard meters installed for observing the performance of the generators usually include only voltmeters and ammeters. The generator speed is controlled by the governor of the prime mover. Remote speed control is not required, and no governor motor control switch is used on the switchboard as with a-c generators. Manual voltage control is obtained by a rheostat in the shunt field. This rheostat is operated at the switchboard. Disconnect links, located on the back of the switchboard are

Chapter 6—D-C POWER DISTRIBUTION SYSTEMS

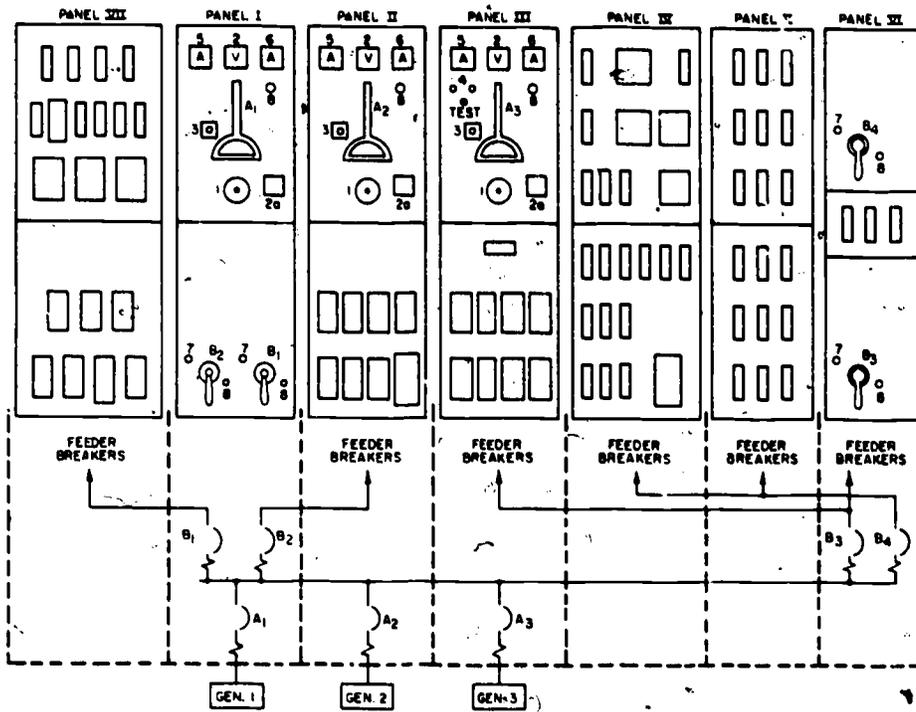

LEGEND

- | | | | |
|----------------------------------|----------------|---|---|
| 1. Generator field rheostat | A ₁ | Circuit breaker for Panel I | Gen. 1 control and 120/240-volt power |
| 2. Generator voltmeter | A ₂ | Circuit breaker for Panel II | Gen. 2 control and 120/240-volt and 240-volt power |
| 2a. Voltmeter switch | | | |
| 3. Trip and hold-in device | A ₃ | Circuit breaker for Panel III | Gen. 3 control and 120/240-volt and 240-volt power |
| 4. Ground detector lamps | B ₁ | Backup breaker for feeder breakers on panel VII | 120/240-volt, 120-volt, and 240-volt power |
| 5. Negative gen. ammeter | B ₂ | Backup breaker for feeder breakers on panel II | 120/240-volt lighting and 120/240-volt and 240-volt power |
| 6. Positive gen. ammeter | B ₃ | Backup breaker for feeder breakers on panels III and VI | 240-volt backup panel |
| 7. Trip button | B ₄ | Backup breaker for feeder breakers on panels IV and V | 120/240-volt lighting and power |
| 8. Mechanical position indicator | | | |

Figure 6-2.—D-c generator and distribution switchboard.

77.176

When there is an unbalanced load on the three-wire system, the difference between positive and negative values of current will flow in the neutral. The neutral, therefore, offers a return circuit for the amount of unbalance through the low resistance of the impedance coil back to the generator armature winding. The magnitude of unbalance allowed with most ship's service three-wire systems is 25 percent of the full-load current. The present Navy practice is not to ground the neutral (or either leg) of a 3-wire system. The positive, neutral, and negative polarities of bus bars and terminals are indicated + (black), \pm (white), and - (red) respectively.

Figure 6-5 shows a three-wire, 120/240-volt, 300-kw, stabilized shunt, d-c generator with the drip-proof shield removed. Note the collector rings for bringing out the neutral.

TYPES OF DRIVE

Direct-current ship service generators are driven by steam turbines or diesel engines. Because of the high operating speeds of steam turbines, the generators are driven through reduction gears rather than being directly coupled to the turbine shaft. Generators driven by steam turbines range in speed from 900 to 1800 rpm depending upon generator size and design. Generators driven by diesel engines operate at

speeds from 400 to 3000 rpm and are usually directly connected to the engine shaft.

OPERATION OF D-C GENERATORS

The preoperational checks of a d-c generator are essentially the same as for an a-c generator (see chapter 5). After the d-c generator is advanced to operating speeds the shunt field switch is closed and the field resistance is gradually cut out until normal voltage is obtained. The line switch (if provided) and generator circuit breaker are closed. This will place the d-c generator on a nonparallel bus for load conditions.

To secure a d-c generator which is connected alone to a bus, first reduce the load by opening the feed circuit breakers. Then trip the generator circuit breaker, open the line switch, and shut down the prime mover according to operating instructions. All the shunt field resistance is cut in and heaters (if installed) are turned on.

When paralleling d-c generators, instead of obtaining normal voltage as above, raise the voltage 1 to 4 volts higher than the bus voltage by cutting out more of the field resistance. Then the line switch and generator circuit breaker are closed and the generator goes on line. Check the voltage and adjust the field rheostat until the generator is taking its proper share of the load.

To secure a d-c generator that is operating in parallel with another generator or generators, gradually cut in the shunt field resistance to reduce generator load, trip the generator circuit breaker, and follow the shutdown procedures as above.

PARALLEL OPERATIONAL DIFFICULTIES

The difficulties which are sometimes experienced in parallel operation of d-c generators are usually not due to deficiencies in the inherent characteristics of the generators and their prime movers, but to failure to adjust the generating units so that they satisfy certain conditions which must be fulfilled before satisfactory parallel operation is possible.

If d-c generators will not parallel satisfactorily into a distribution system, the EM must

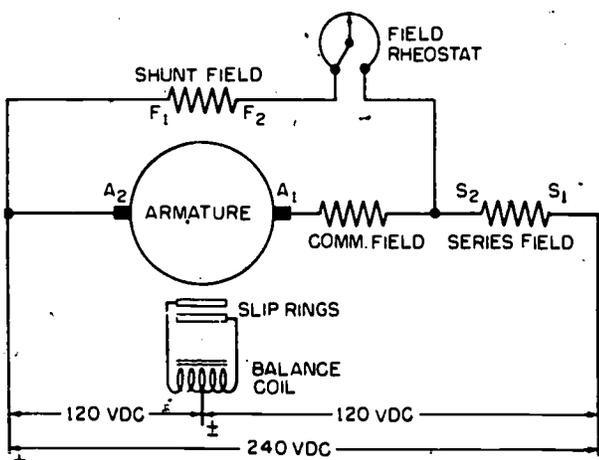


Figure 6-4.— Three-wire generator connections.

77.298

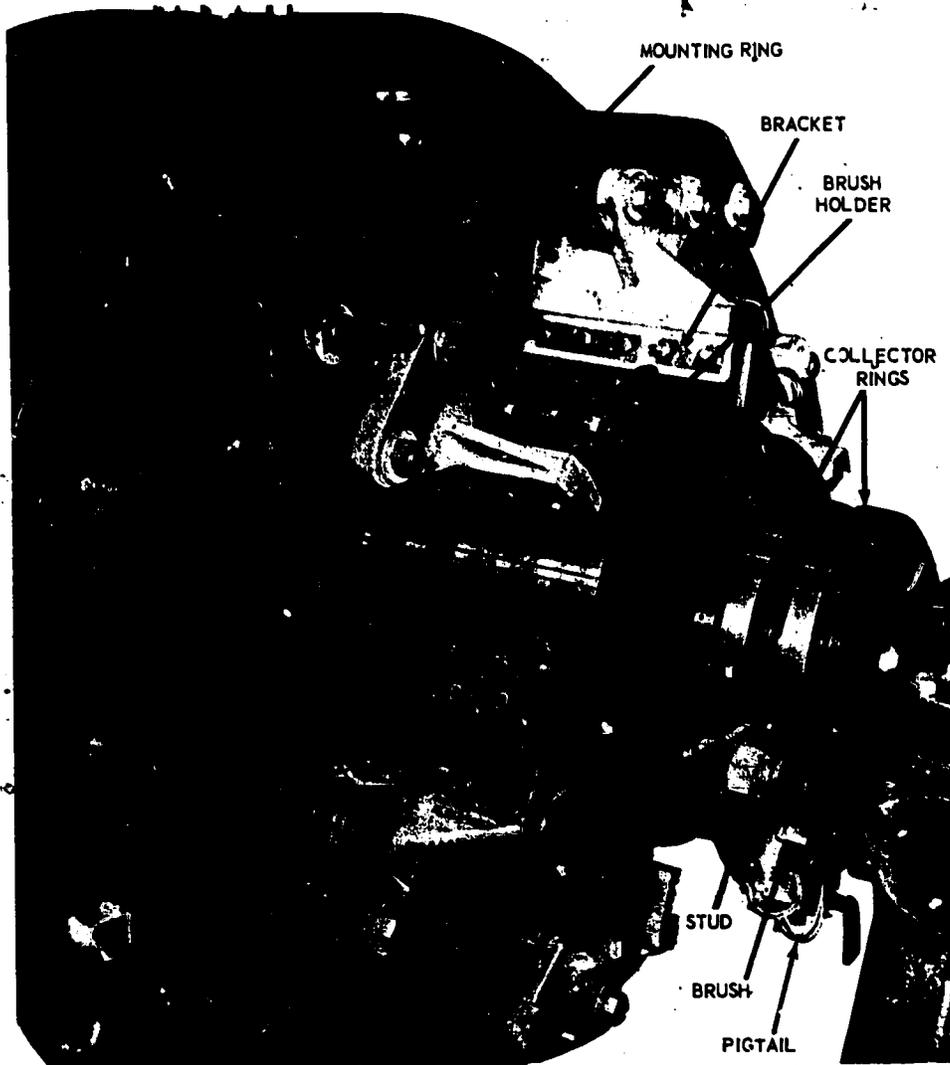


Figure 6-5.— Brush holder and brush-rigging assembly.

77.70

find the cause. With the generator operating at the normal operating temperature, without a load, check to see that the fluctuation generator terminal voltage does not vary from the average voltage by more than 1 1/2 volts for a 120-volt generator, nor more than 3 volts for a 240-volt generator. If the voltage fluctuation is greater, it is possible that prime mover governor adjustments are required.

However, before you cause the Enginemen undue work, there are a few additional checks

to be performed. The first step is to apply a constant load of about 20 percent of full load. Then check to see that the average terminal voltage does not fluctuate by more than 1/2 volt for a 120-volt generator, nor more than one volt for a 240-volt generator. Then apply a full-load and recheck. Next, gradually reduce the load on the generator to zero without changing the governor or the field rheostat settings. Note the no-load speed and no-load voltage.


Adjust the shunt field rheostat until the voltage at no-load is equal to the rated full-load voltage.

Again increase the load to full-load without changing the governor or field rheostat settings. Note the full-load speed and voltage.

If the voltage fluctuations at no-load and at full-load are still in excess of required limits, the prime mover governor should be adjusted, if necessary, until the speed at full

load is equal to the speed recommended by the manufacturer.

If, after the speed adjustment has been completed, the voltage rise and drop are not within the operating limits, further checks are required. These include the checking for an unbalanced rotor, unequal air gaps, poorly aligned bearings or shaft, or diesel engine malfunction.

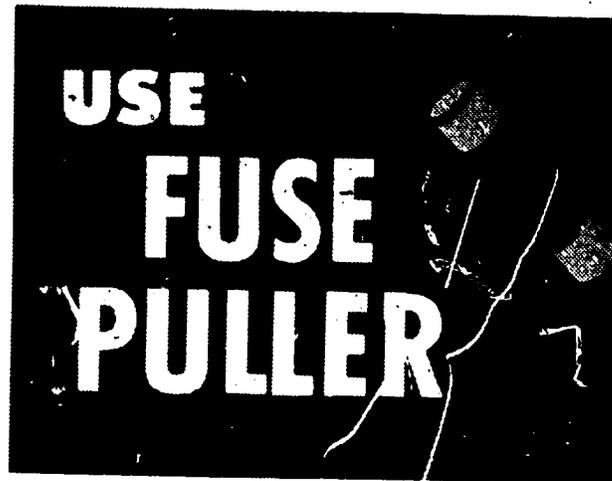

CHAPTER 7

MOTOR CONTROLLERS

Controllers are commonly used for starting large motors aboard ship to reduce the amounts of current they require when started. The amounts are normally several times greater than the amounts the same large motors use once they are started and running. If these controllers are not used for starting, the motors and the equipment they drive may be damaged, or the operation of other equipment in the same distribution system may be affected adversely. By definition, a motor controller is a device or set of devices which serves to govern, in some predetermined manner, the operation of the d-c or a-c motor to which it is connected. This chapter describes the characteristics, uses, and operating principles of various kinds of shipboard motor controllers, including their relays and switches. The chapter also contains the fundamentals of operation of electric brakes and techniques of troubleshooting motor controllers.

TYPES OF MOTOR CONTROLLERS

Basically, a motor controller regulates the speed of its motor and protects it from damage. The controller functions to start the motor, stop it, increase or decrease its speed, or reverse its direction of rotation.

A **MANUAL** or nonautomatic controller is operated by hand directly through a mechanical system. The operator closes and opens the contacts that normally energize and deenergize the connected load. In a **MAGNETIC** controller these contacts are closed and opened by electromechanical devices that are operated by local or remote master switches (defined later). Magnetic controllers may be semiautomatic, automatic or full and semiautomatic. Normally, all the functions of a semiautomatic magnetic controller are governed by one or more manual master switches; those of an automatic controller are governed by one or more automatic master switches after it is energized initially by means

of a manual master switch. A full and semi-automatic controller can be operated either as an automatic or as a semiautomatic controller.

An **ACROSS-THE-LINE** controller throws the connected load directly across the main supply line. The motor controller may be either a manual or magnetic type, depending on the rated horsepower of the motor. Across-the-line d-c controllers are used for starting small (fractional horsepower) motors only. Across-the-line d-c controllers may be used to start average-sized, squirrel-cage induction motors without damaging effect because the motors can withstand the high inrush currents due to starting with full-line voltage applied. Most squirrel-cage motors that drive pumps, compressors, fans, lathes, and other auxiliaries can be started "across the line" without producing excessive line-voltage drop or mechanical shock to a motor or auxiliary.

A d-c **RESISTOR** motor controller inserts a resistor in series with the armature circuit of the d-c motor to limit current during starts, thereby preventing motor damage and overloading of the power system. In some resistor controllers, the same resistor also helps regulate the speed of the motor after it is started. Other d-c controllers may use a rheostat in the motor shunt field circuit for speed control.

An a-c primary resistor controller inserts resistors in the primary circuit of an a-c motor for starting, or starting and speed control. Some of these controllers only limit the starting currents of large motors; others control the speeds of small motors as well as limit their starting currents.

An a-c secondary resistor controller inserts resistors in the secondary circuit of a wound-rotor a-c motor for starting or speed control. Though sometimes used to limit starting current, secondary resistor controllers usually function to regulate the speeds of large a-c motors.

A motor **STATIC VARIABLE-SPEED** controller consists of solid state and other devices which regulate motor speeds in infinite increments

through a predetermined range. Speed is controlled by manual adjustment or actuation of a sensing device that converts a system parameter, such as temperature, into an electric signal. This signal sets the motor speed automatically.

The AUTOTRANSFORMER controller, or compensator, is an a-c motor controller. It starts the motor at reduced voltage through an autotransformer, then connects the motor to line voltage after the motor accelerates. There are two types of compensators: open transition and closed transition. The open-transition compensator cuts off power to the motor during the time (transition period) that the motor connection is shifted from the autotransformer to the supply line. In the short transition period, the motor may coast and slip out of phase with the power supply. When the motor is connected directly to the supply line, the resulting transition current may be high enough to cause circuit breakers to open. The closed-transition compensator keeps the motor connected to the supply line during the entire transition period. In this way, the motor cannot slip out of phase and no high transition current can develop.

A REACTOR controller inserts a reactor in the primary circuit of an a-c motor during starts, and later short circuits the reactor to apply line voltage to the motor. Though not widely used for starting large a-c motors, the reactor controller is smaller than the closed-transition compensator and does not have the high transition currents that develop in the open-transition compensator.

TYPES OF MASTER SWITCHES

A master switch is a device, such as a pressure or thermostatic switch, which governs the electrical operation of a motor controller. The switch can be manually or automatically actuated. Drum, selector, and pushbutton switches are examples of a manual master switch. The automatic switch functions through the effect of a physical force, not an operator. Examples of automatic master switches include float, limit, or pressure switches.

Depending on where it is mounted, a master switch is local or remote. A local switch is mounted in the controller enclosure; a remote switch is not. Local master switches are usually operable from outside the controller.

Master switches may start a series of operations when their contacts are closed or when their contacts are opened. In a momentary contact master switch, the contact is closed (or opened) momentarily; it then returns to its original condition. In a so-called maintaining contact master

switch, the contact does not return to its original condition after closing (or opening) until again actuated. The position of a normally open or normally closed contact in a master switch is open or closed, respectively, when the switch is deenergized. The deenergized condition for a manual controller is considered the off position.

OVERLOAD RELAYS

Nearly all shipboard motor controllers provide overload protection when motor current is excessive. This protection is provided by THERMAL or MAGNETIC overload relays which disconnect the motors from their power supply, thereby preventing them from overheating.

Overload relays in magnetic controllers have a normally closed contact which is opened by a mechanical device that is tripped by an overload current. Opening the overload relay contact breaks the circuit through the operating coil of the main contactor, causes the main contactor to open, and cuts off power to the motor. Overload relays in manual controllers operate mechanically to trip the main contacts and allow them to open.

Overload relays for naval shipboard use can usually be adjusted to trip at the right current to protect the motor if it is found that the rated tripping current of the relay does not fit the motor it is intended to protect. They can be reset after tripping so the motor can be operated again with overload protection. Some controllers feature an emergency-run button that enables the motor to be run without overload protection in an emergency.

THERMAL OVERLOAD RELAYS

The thermal overload relay has a heat-sensitive element and an overload heater which is connected in series with the motor load circuit. When the motor current is excessive, heat from the heater causes the heat-sensitive element to open the overload relay contact. This breaks the circuit through the operating coil of the main contactor and disconnects the motor from the power supply. Since it takes time for parts to heat up, the thermal overload relay has an inherent time delay to permit the motor to do maximum work at any reasonable current but only as long as the motor is not being overheated. When it is, the overload relay disconnects the motor.

Coarse adjustment of the tripping current of thermal overload relays is made by changing the heater element. Fine adjustment is made in different ways, depending upon the type of overload

relay. One form of fine adjustment consists of changing the distance between the heater and the heat-sensitive element. Increasing this distance will increase the tripping current. Another form consists of changing the distance a bimetal strip has to move before the overload relay contact is opened. See the technical manual furnished with the equipment on which the controller is used for details on the particular kind of adjustment provided.

Thermal overload relays must be compensated, that is, constructed so the tripping current is unaffected by variations in the ambient (room) temperature. Different means are used for different types. See the technical manual furnished with the equipment on which the controller is used for information on the particular form of compensation provided.

Types of Thermal Overload Relays

There are four types of thermal overload relays: solder pot, bimetal, single metal, and induction. The heat-sensitive element of a SOLDER-POT type is a cylinder inside a hollow tube. The cylinder and tube are normally held together by a film of solder. In case of an overload, the heater melts the solder (thereby breaking the bond between the cylinder and tube) and releases the tripping device of the relay. After the relay trips, the solder cools and solidifies. The relay can then be reset.

In the BIMETAL type, the heat-sensitive element is a strip or coil of two different metals fused together, along one side. When heated, the strip or coil deflects because one metal expands more than the other. The deflection causes the overload relay contact to open. The heat-sensitive element of the SINGLE-METAL type is a tube around the heater. The tube lengthens when heated and opens the overload relay contact.

The heater in the INDUCTION type consists of a coil in the motor load circuit and a copper tube inside the coil. The tube acts as the short-circuited secondary of a transformer and is heated by the current induced in it. The heat-sensitive element is usually a bimetal strip or coil. Whereas the other three types of thermal overload relays are for either a-c or d-c use, the induction type is for a-c use only.

MAGNETIC OVERLOAD RELAYS

The magnetic overload relay has a coil connected in series with the motor load circuit and a

tripping armature or plunger. When motor current exceeds the tripping current, the armature opens the overload relay contact. Though limited in application, one type of magnetic overload relay operates instantly when the motor current exceeds the tripping current. This type must be set at a tripping current higher than the motor starting current, otherwise, the relay would trip each time you try to start the motor. One use of the instantaneous magnetic overload relay is in motor controllers for reduced voltage starting in which starting current peaks are less than the stalled rotor current.

The operation of a second type of magnetic overload relay is delayed a short time when motor current exceeds tripping current. This type is essentially the same as the instantaneous relay except for the time-delay device, which is usually an oil dashpot with a piston attached to the tripping armature of the relay. Oil passes through a hole in this piston when the tripping armature is moved by an overload current. The size of the hole can be adjusted to change the speed at which the piston moves for a given pull on the tripping armature. For a given size hole, the larger the current, the faster the operation. The motor is thus allowed to carry a small overload current longer than a large overload current. The relay can be set to trip at a current well below the stalled rotor current because the time delay gives the motor time to accelerate to full speed before the relay operates. By this time the current will have dropped to full load current which is well below the relay trip setting.

In either the instantaneous or time-delay magnetic overload relays, the tripping current is usually adjusted by changing the distance between the series coil and the tripping armature. More current is needed to actuate the armature when the distance is increased. Compensation for changes in ambient temperature is not needed for magnetic overload relays because they are practically unaffected by changes in temperature.

OVERLOAD RELAY RESETS

After an overload relay has operated to stop a motor, it must be reset before the motor can be run again with overload protection. Magnetic overload relays can be reset immediately after tripping. Thermal overload relays must be allowed to cool a minute or longer before they can be reset. The form of overload reset is manual, automatic, or electric.

The manual, or hand, reset is located in the controller enclosure which contains the overload

relay. This form of reset usually has a hand-operated rod, lever, or button that returns the relay tripping mechanism to its original position, resetting interlocks as well, so the motor can be run again with overload protection. An interlock is a mechanical or electrical device actuated by a second device, to which it is connected, to govern succeeding operations of the second or other devices.

The automatic form, usually a spring- or gravity-operated device, resets the overload relay without the help of an operator. The electric reset is actuated by an electromagnet controlled by a pushbutton. This form is used when it is desired to reset an overload relay from a remote operating point.


OVERLOAD RELAYS - EMERGENCY RUN

Motor controllers having an emergency run feature are used with auxiliaries that cannot be stopped safely in the midst of an operating cycle. By means of this feature, the operator of an auxiliary can keep it running with motor overloaded until a standby unit can take over, the operating cycle is completed, or the emergency passes. **USE THIS FEATURE IN AN EMERGENCY ONLY. DO NOT USE IT OTHERWISE.**

The common means of providing emergency run in magnetic controllers are emergency run pushbutton, reset-emergency run lever, and start-emergency run pushbutton. In each case, the lever or pushbutton must be held closed during the entire emergency.

Figure 7-1 is a schematic diagram of a controller showing a separate EMERGENCY RUN pushbutton with normally open contacts in parallel with the normally closed contact of the overload relay. (A schematic diagram uses standard symbols to show the electrical location and operating sequence of the individual elements or devices; the schematic does not indicate their relative physical location.) For emergency run operation, the operator must hold down this pushbutton and press the START button to start the motor. While the emergency run pushbutton is held down, the motor cannot be stopped by opening the overload relay contact.

A RESET-EMERGENCY RUN lever is shown in figure 7-2. As long as the lever is held down, the overload relay contact is closed. The start button must be momentarily closed to start the motor. Figure 7-3 shows a START-EMERGENCY RUN pushbutton. The motor starts when the button is pushed, and continues to run without overload

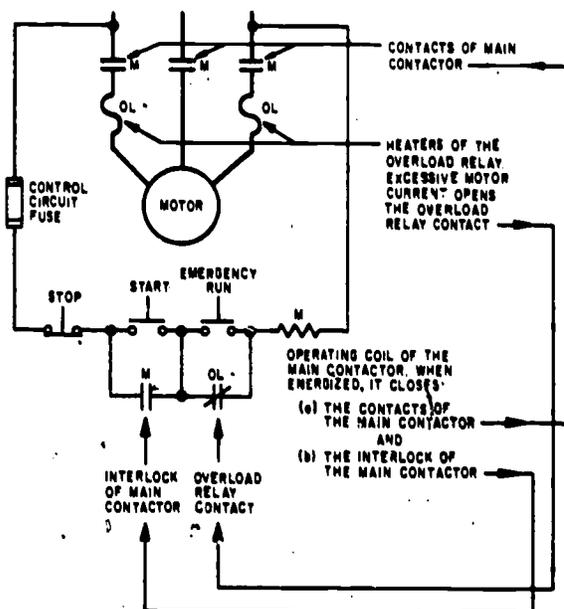

77.314


Figure 7-1.—Schematic of controller with emergency run pushbutton.

protection as long as it is held down. For this reason, pushbuttons which are marked START-EMERGENCY RUN should not be kept closed for more than a second or two unless emergency run operation is desired.

Manual controllers may also be provided with the emergency run feature. The usual means is a START-EMERGENCY RUN pushbutton or lever which keeps the main contacts closed despite the tripping action of the overload relay mechanism.

SHORT CIRCUIT PROTECTION

Overload relays and contactors are usually not designed to protect motors from currents greater than about six times normal rated current of a-c motors or four times normal rated current of d-c motors. Since short-circuited currents are much higher, protection against short circuits in motor controllers is obtained through other devices. Recent Navy practice is to protect against these short circuits with circuit breakers placed in the power supply system. In this way, both the controller and motor are protected, and so are the cables connected to the

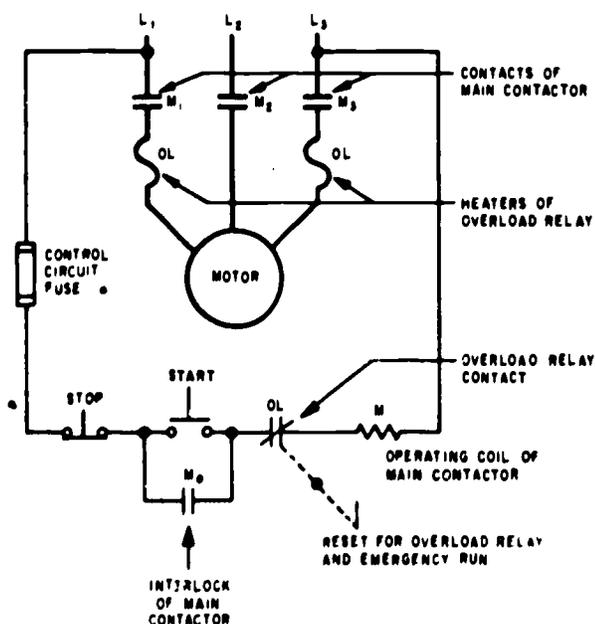

77.315

Figure 7-2.—Schematic of controller with reset-emergency run lever.

controller. However, short-circuit protection is provided in the controller in cases where it is not otherwise provided by the power distribution system or where two or more motors are protected but the circuit breaker rating is too high for protection of each motor separately.

Short-circuit protection for control circuits is provided by fuses in the controller enclosure. The fuses are connected in control circuits which run to remote pushbuttons, pressure switches, etc. In general, each control wire that leaves a controller should be protected by a fuse if the lead is not already protected by a current limiting device, such as a coil or resistor, located in the enclosure.

FULL FIELD PROTECTION

Full field protection is required in the controller for a d-c motor in which a shunt field rheostat or resistor is used to weaken the motor field and obtain motor speeds in excess of 150 percent of the speed at rated field current. Full


field protection is a feature provided automatically by a relay which shunts out the shunt field rheostat for initial acceleration of the motor, and then cuts it into the motor field circuit. In this way, the motor first accelerates to 100 percent or "full field" speed, and then further accelerates to the "weakened field" speed determined by the rheostat settings.

Stepback Protection

The controller for an anchor windlass motor provides this kind of protection by automatically cutting back motor speed to relieve the motor of excessive load.

LOW VOLTAGE RELEASE (LVR)

When the supply voltage is reduced or lost altogether, a low-voltage RELEASE controller disconnects the motor from the power supply, keeps it disconnected until the supply voltage returns to normal, then automatically restarts the motor. This type of controller must be equipped with a maintaining master switch.

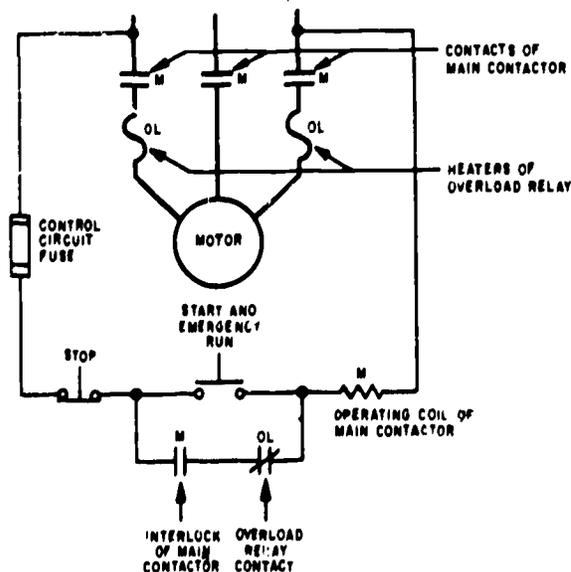

77.316

Figure 7-3.—Schematic of controller with start-emergency run pushbutton.


LOW VOLTAGE PROTECTION (LVP)

With LVP, when the supply voltage is reduced or lost, the controller must be restarted manually. The master switch is usually a momentary switch.

MAGNETIC ACROSS-LINE CONTROLLERS


A typical three-phase across-line controller is shown in figure 7-4. Figure 7-5 shows a small cubical contactor for a 5-hp motor. All are similar in appearance but vary in size. An elementary or schematic diagram of a magnetic controller is shown in figure 7-2.

The motor is started by pushing the START button. The action completes the circuit from L_1 through the control fuse, STOP button, START button, the overload relay contacts, OL, and the contactor coil, M to L_3 . When the coil is energized, it closes line contacts M1, M2, and M3, which connect the full-line voltage to the motor. The line contactor auxiliary contact, MA, also

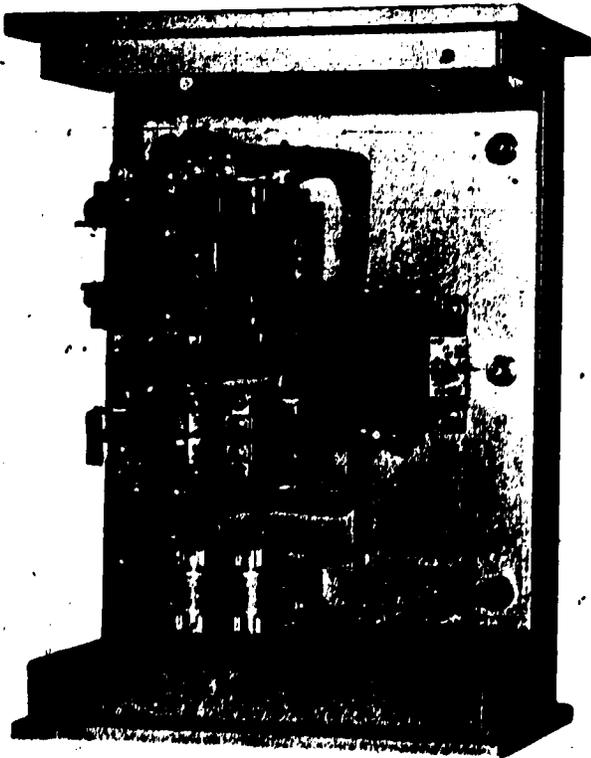

27.319X

Figure 7-4.—Across-line, 3-phase, controller.

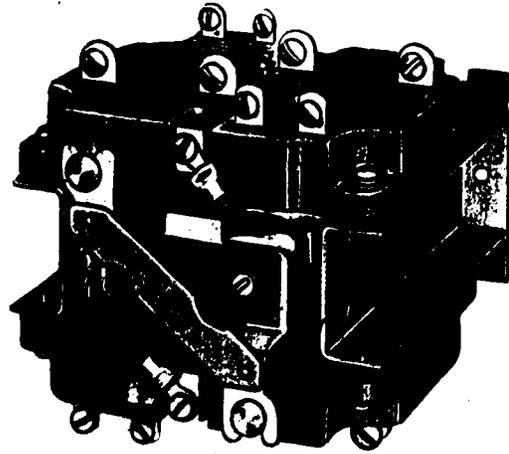

77.147X

Figure 7-5.—Contactor for a 5-horsepower motor.

closes and completes a holding circuit for energizing the coil circuit after the START pushbutton has been released.

The motor will continue to run until the contactor coil is deenergized by the STOP pushbutton, failure of the line voltage, or tripping of the overload relay, OL.

REVERSING


The rotation of a 3-phase induction motor is reversed by interchanging any two of the three leads to the motor. The connections for an a-c reversing controller are illustrated in figure 7-6. The STOP, REVERSE, and FORWARD pushbutton controls are all momentary-contact switches. Note the connections to the REVERSE and FORWARD switch contacts. (Their contacts close or open momentarily, then return to their original closed or opened condition.)

If the FORWARD pushbutton is pressed (solid to dotted position), coil F will be energized and will close its holding contacts, FA. These contacts will remain closed as long as coil F is energized. When the coil is energized, it also closes line contacts, F1, F2, and F3, which applies full-line voltage to the motor. The motor then runs in a forward direction.

If either the STOP button or the REVERSE button are pressed, the circuit to the F contactor coil will be broken and the coil will release and open line contacts F1, F2, F3, and holding contact FA.

7-6

206

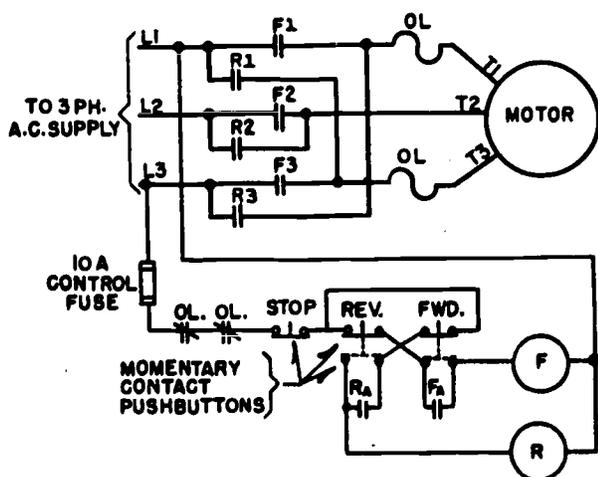

77.148

Figure 7-6.— Reversing a-c controller.

If the REVERSE pushbutton is pressed (solid to dotted position), coil R will be energized and will close, holding contacts RA and line contacts R1, R2, and R3. Note that contacts R1, R2, and R3 reverse the connections of lines 1 and 3 to motor terminals T1 and T3. This causes the motor rotor to rotate in the reverse direction. The F and R contactors are mechanically interlocked to prevent both being closed at the same time.

Momentary contact pushbuttons provide low-voltage protection with manual restart in the circuit shown in figure 7-6. If either the F or R operating coil is deenergized, the contactor will not reclose and start the motor when voltage is restored unless the FORWARD or REVERSE pushbutton is pressed. The circuit arrangement of the pushbuttons constitutes an electrical interlock that prevents energizing both coils at the same time.


SPEED CONTROL

When it is desired to operate an a-c motor at different speeds, use a controller with a circuit as shown in figure 7-7.

An a-c induction motor that has been designed for two-speed operation may have either a single winding or two separate windings, one for each speed. Figure 7-7 is a schematic diagram of the a-c controller for a 2-speed, 2-winding induction motor. The motor slow winding is connected to terminals T1, T2, and T3. The motor fast winding is connected to terminals T11, T12, and T13. Overload protection is provided by the LOL coils and contacts for the slow winding and the HOL contacts and coils for the fast winding. The LOL and HOL contacts are connected in series in the maintaining circuit and must both be closed before the motor will operate on either speed.

The control pushbuttons are of the momentary contact type. Pressing the high-speed pushbutton closes the high-speed contactor by energizing coil HM. This coil remains energized, after the pushbutton is released, through holding contacts HA. The coil, HM also closes main line contacts HM₁, HM₂, and HM₃ which apply full-line voltage to the motor high-speed winding. The motor will then run at high speed until coil HM is deenergized.

Pressing the low-speed pushbutton closes the low-speed contactor by energizing coil LM. The coil remains energized, after the button is released, through holding contacts LA. The coil, LM, also closes mainline contacts LM₁, LM₂, and LM₃ which apply full-line voltage to the motor low-speed winding. The motor will then run at low speed until coil LM is deenergized. The LM and

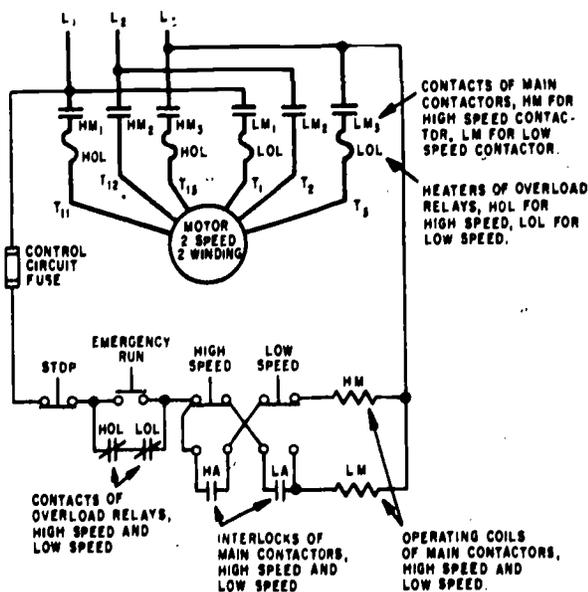

77.317

Figure 7-7.— Two-speed, a-c controller.

HM contactors are mechanically interlocked to prevent both being closed at the same time.


AUTOTRANSFORMER CONTROLLERS

A single-phase autotransformer has a tapped winding on a laminated core. Normally, only one coil is used on each core, but it is possible to have two autotransformer coils on the same core. Figure 7-8 shows the connections for a single-phase autotransformer being used to step down voltage. Part of the winding, that between a and b, is common to both primary and secondary and carries a current that is equal to the difference between the load current and the supply current.

Any voltage applied to the terminals, a and c, will be uniformly distributed across the winding in proportion to the number of turns. Therefore, any voltage that is less than the source voltage can be obtained by tapping the proper point on the winding between terminals a and c.

Some autotransformers are designed so that a knob-controlled slider makes contact with wires of the winding in order to vary the load voltage.

The positive directions for current flow through the line, transformer winding, and load are shown by the arrows in figure 7-8. Note that the line current is 2.22 amperes and that this current also flows through the part of the winding between b and c. In the part of the winding that is between a and b, the load current of 7 amperes is opposed by the line current of 2.22 amperes.

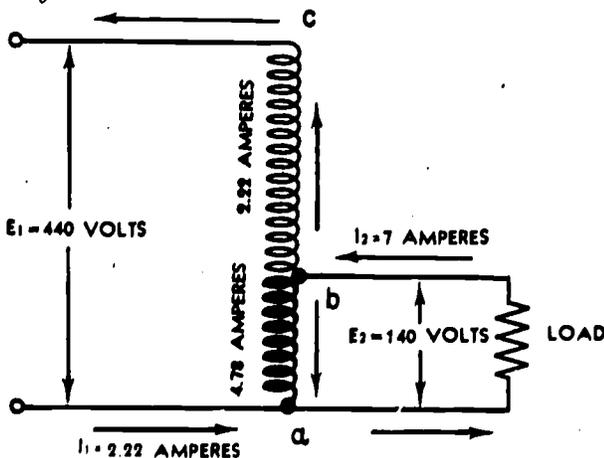

77.143


Figure 7-8.— Single-phase autotransformer

Therefore, the current through this section is equal to the difference between the load current and the line current. If you subtract 2.22 amperes from 7 amperes you will find the secondary current is 4.78 amperes.

Two common uses for autotransformers are to start 3-phase induction and synchronous motors and to furnish variable voltage for test panels. Figure 7-9 shows an autotransformer motor starter, which incorporates starting and running magnetic contactors, an autotransformer, a thermal overload relay, and a mercury timer to control the duration of the starting cycle.

D-C CONTROLLERS

The starting of all d-c motors, with the exception of fractional horsepower sizes, requires a temporary insertion of resistance in series with

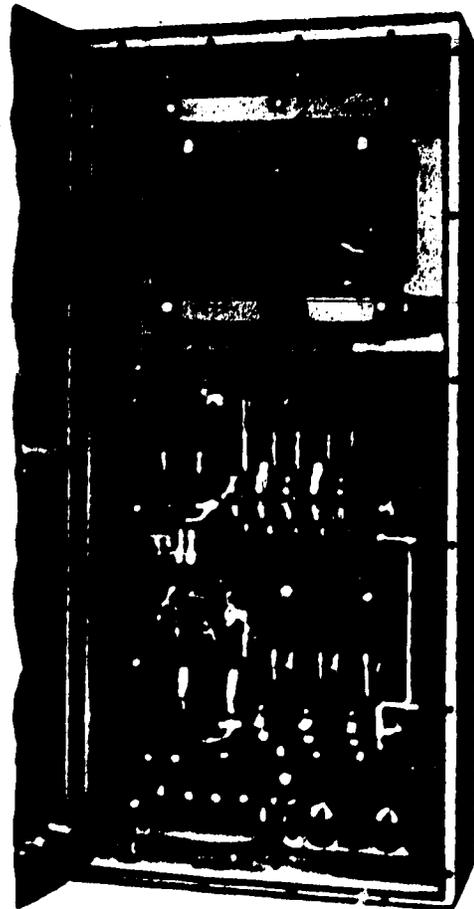

77.144

Figure 7-9.— Autotransformer controller.

7-8

208

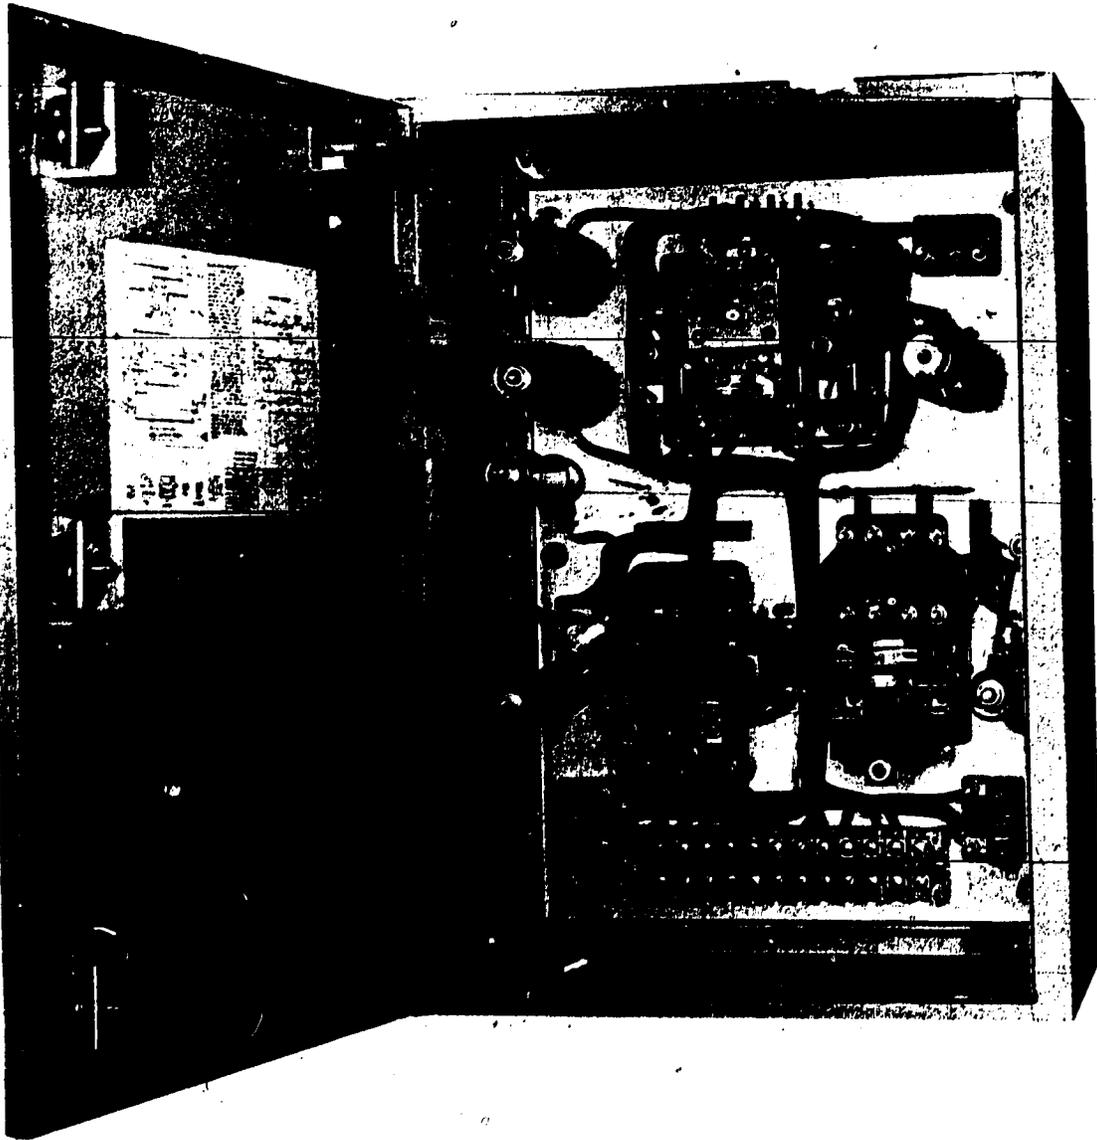


Figure 7-10. — A representative d-c controller.

27.318X

the armature circuit to limit the high in-rush current at standstill. Because of this consideration the starting resistance cannot be safely removed from the line until the motor has accelerated in speed and the counter electromotive force is of sufficient strength to limit the current to a safe value.

Auxiliary motors located below deck generally drive constant-speed equipment. A rheostat in

the shunt field circuit is, however, provided to furnish speed control for motors operating with ventilation fans, forced draft blowers, and certain pumps where conditions may require operation at more than one speed.

With motors of small rating, one stage of starting resistance remaining in the line for a few seconds is generally sufficient to limit the starting current. With the larger motors two or more

stages of resistance are connected in the line at starting and are cut out in steps as the motor accelerates to running speed.

Motors supplied with cargo winches and other deck auxiliaries are required to operate over a wide range of speed. Since the speed of a d-c motor with constant load varies almost directly with the voltage, stages of line resistance are used to make speed changes and also to limit the current at starting. These stages of line resistance are connected in various combinations as manually selected by a master switch operating in conjunction with a magnetic controller. Thus, the operator directly controls the amount of resistance in the line and the resulting speed of the motor at all times.

ONE-STAGE ACCELERATION

Figure 7-10 shows a representative d-c controller. The connections for this motor controller with one stage of acceleration is shown in figure 7-11. When the START button is pressed, the path for current is from line terminal L2 through the control fuse, STOP button, the START button, and the line contactor coil LC to line terminal L1. Current flowing through the contactor coil causes the armature to pull in and close the line contacts, LC1, LC2, LC3, and LC4.

When contacts LC1 and LC2 close, motor-starting current flows through the series field, SE, the armature, A, the series relay coil, SR, the starting resistor, R, and the overload relay coil, OL. At the same time, the shunt field winding, SH, is connected across the line and establishes normal shunt field strength. Contacts LC3 close and prepare the circuit for the accelerating contactor coil, AC. Contacts LC4 close the holding circuit for the line contactor coil, LC.

The motor armature current flowing through the series relay coil causes its armature to pull in, opening the normally closed contacts, SR. As the motor speed picks up, the armature current drawn from the line decreases. At approximately 110 percent of normal running current, the series relay current is not enough to hold its armature in; therefore, it drops out and closes its contacts, SR. These contacts are in series with the accelerating relay coil, AC, and cause it to pick up its armature, closing contacts AC1 and AC2.

Auxiliary contacts AC1 on the accelerating relay keep the circuit to the relay coil closed while the main contacts, AC2, short out the starting resistor and the series relay coil. The motor is then connected directly across the line, and the


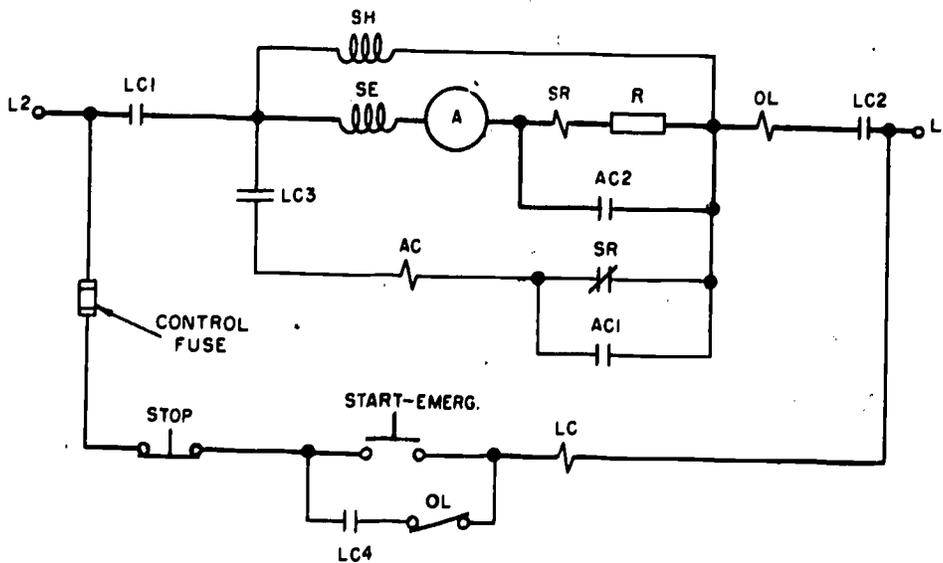


Figure 7-11. — D-c controller with one stage of acceleration.

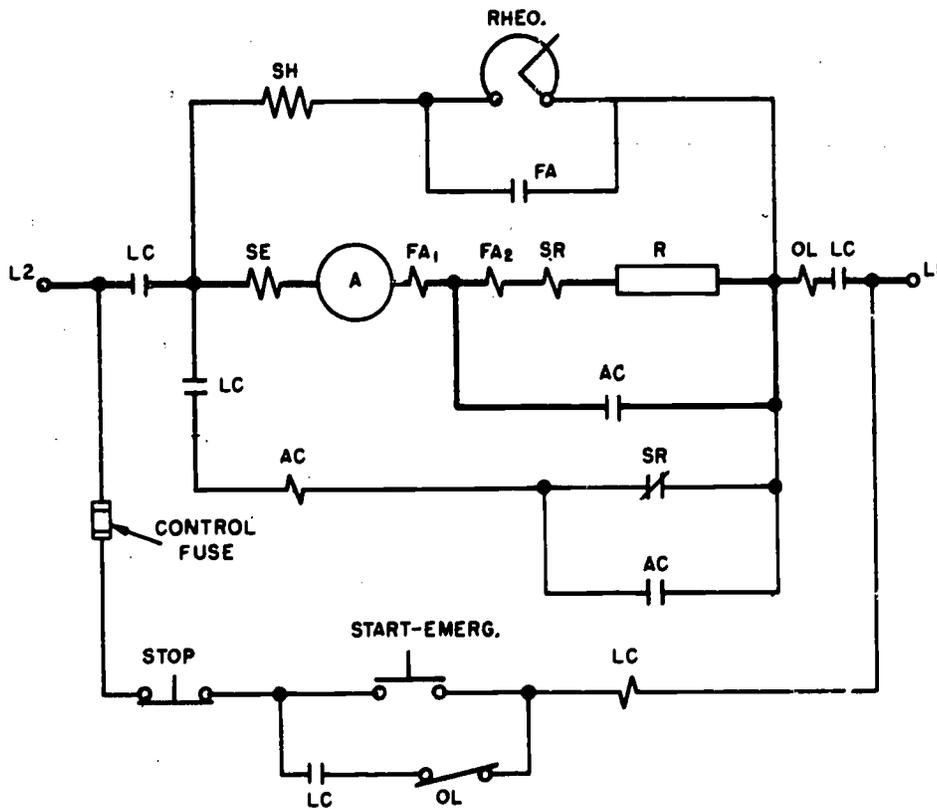

77.142

Figure 7-12. — D-c controller with shunt field rheostat.

connection will be maintained until the STOP button is pressed.

If the motor becomes overloaded, the excessive current through the overload coil (OL at the top right of fig. 7-11) will open the overload contacts (at the bottom of fig. 7-11) to disconnect the motor from the line.

If the main contactor drops out because of an excessive drop in line voltage or a power failure, the motor will remain disconnected from the line until an operator restarts it with the "START" pushbutton. This prevents automatic restarting of equipment when normal power is restored, which is low voltage protection.

SPEED CONTROL

Figure 7-12 illustrates how a rheostat is added to the basic controller circuit to obtain varying speed.

If resistance is added in series with the field, the field will be weakened and the motor will speed up. If the amount of resistance in series with the field is decreased, the field strength will increase and the motor will slow down.

Contacts FA (fig. 7-12) are closed during the acceleration period providing full shunt field strength. After the motor has accelerated to the across-the-line position, contacts FA open placing the rheostat in the shunt field circuit. This is full field protection.

REVERSING

In certain applications, the direction in which a d-c motor turns is reversed by reversing the connections of the armature with respect to the field. The reversal of connections can be done in the motor controller by adding two electrically and mechanically interlocked contactors.

contacts. It may be used to handle the load of an entire bus, or a single circuit or device. However, when heavy currents are to be interrupted, larger contacts must be used. The contacts must snap open or closed to reduce contact arcing and burning. In addition to these precautions, other arc-quenching means are used.

BLOWOUT COILS

When a circuit carrying appreciable direct current is interrupted, the collapse of the flux linking the circuit may induce a voltage, which will cause an arc. If the spacing between the open contacts is small, the arc will continue once it is started. The arc, if it continues long enough, will either melt the contacts or weld them together. Magnetic blowout coils overcome this condition by providing a magnetic field, which blows out the arc in much the same manner as you would blow out a match.

The magnetic blowout operation is illustrated in figure 7-14. It is important that the fluxes

remain in the proper relationship. Otherwise, if the direction of the current is changed, the blowout flux will be reversed and the arc will actually be pulled into the space between the contacts.

When the direction of electron flow and flux are as illustrated in figure 7-14, the blowout force is upward. The blowout effect varies with the magnitude of the current and with the blowout flux. The blowout coil should be chosen to match the current so that the correct amount of flux will be obtained. The blowout flux across the arc gap is concentrated by a magnetic path provided by the steel core in the blowout coil and the steel pole pieces extending from the core to either side of the gap.

ARCING CONTACTS

Because arcing at contacts wears away the usable surface, a second set of contacts (arcing contacts) is shunted across the main contacts.


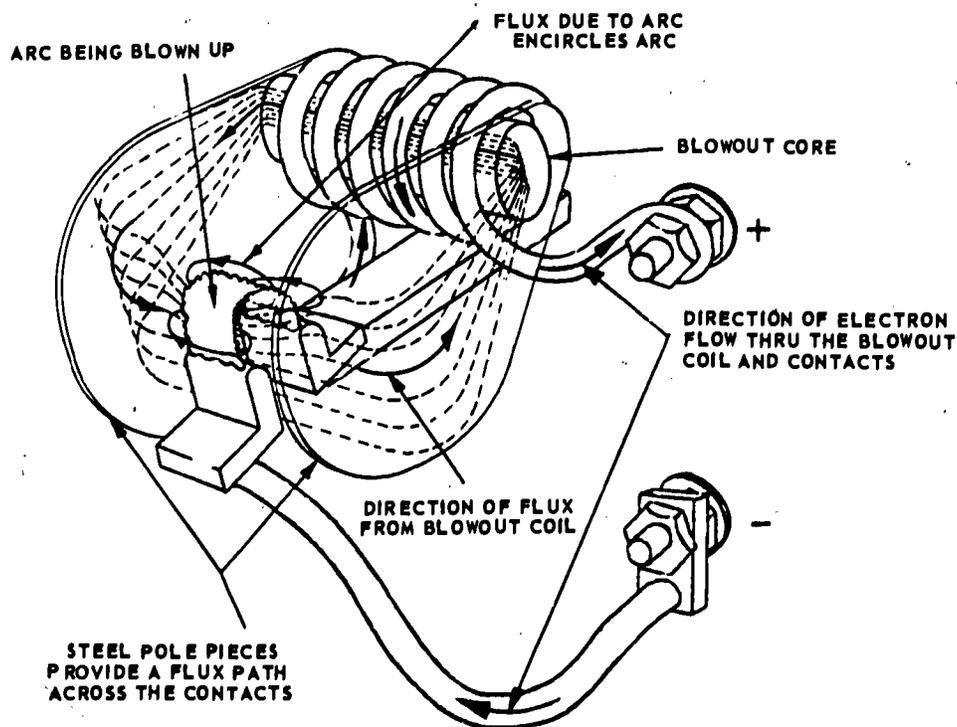


Figure 7-14. — Action of magnetic blowout coil.

77.122

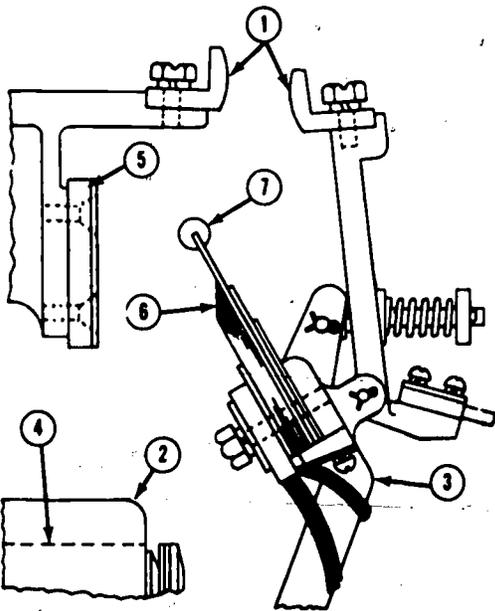

77.318

Figure 7-15.—Detailed view of arcing contacts.

A shunt-type contactor that will handle 600 amperes at 230 volts is pictured in figure 7-15. The blowout shield is removed in the detailed view. The diagram shows the main sections of the contactor. The arcing contacts ① are made of rolled copper, which has a heavy protective coating of cadmium. These contacts are self-cleaning because of a sliding or wiping action after the initial contact is made. The wiping action keeps the surface bright and clean and thus maintains a low contact resistance.

The contactor is operated by connecting the coil ② directly across a source of d-c voltage. When the coil is energized, the movable armature ③ is pulled toward the stationary magnet core ④. This action causes the contacts that carry current ⑤ ⑥ ⑦, and ① to close with a sliding action.

The main contacts, ⑤ and ⑥, are called brush contacts. They are made of thin leaves of copper, which are backed by several layers of phosphor bronze spring metal. A silver brush arcing tip ⑦ is attached to the copper leaves and makes contact slightly before the leaf contact closes. The stationary contact ⑤ consists of a brass plate which has a silver-plated surface. The plating lowers the surface resistance, and therefore the contact

surfaces should never be filed or oiled. If excessive current has caused high spots on the contact, the high places may be smoothed down by careful use of a fine ignition-type file.

Operation and contact spacing may be checked by manually closing the contactor (be sure the power is off). The lowest leaf of brush contact ⑥ in figure 7-15 should just barely touch contact ⑤. If the lower leaf hits the plate too soon, the entire brush assembly should be bent upward slightly.

The contact dimensions should be measured with the contactor in the OPEN position.

Refer to the manufacturer's instruction book when making these adjustments.

ELECTRIC BRAKES

An electric brake is an electromagnetic device whose function is to bring a load to rest mechanically and hold it at rest. Aboard ship, electric brakes are used on motor-driven hoisting and lowering equipment where it is important to stop the motor quickly. The type of electric brakes used depends on whether the motor is a-c or d-c and also whether a d-c motor is series or shunt wound.

A-C SOLENOID BRAKE

The magnetic brake assembly shown in figure 7-16 is the main component of this electric brake. When the coil is energized, two armatures are pulled horizontally into the coil. The armatures are mechanically linked to the levers. The levers pivot on the pins. When the magnetic pull overcomes the pressure of the coil springs, the pressure of brake shoes on the drum releases and allows it to turn. The drum is mechanically coupled to the motor shaft or the shaft of the device driven by the motor. The coil is connected to the voltage supply lines. The method of connecting the coil (series or parallel) is determined by the coil design. The magnetic brakes are applied when the coil is not energized. A spring or weight holds the band, disc, or shoes against the wheel or drum. When the coil is energized, the armature or solenoid plunger overcomes the spring tension and releases the brake.

The a-c solenoid brake frame and solenoid are of laminated construction to reduce eddy currents

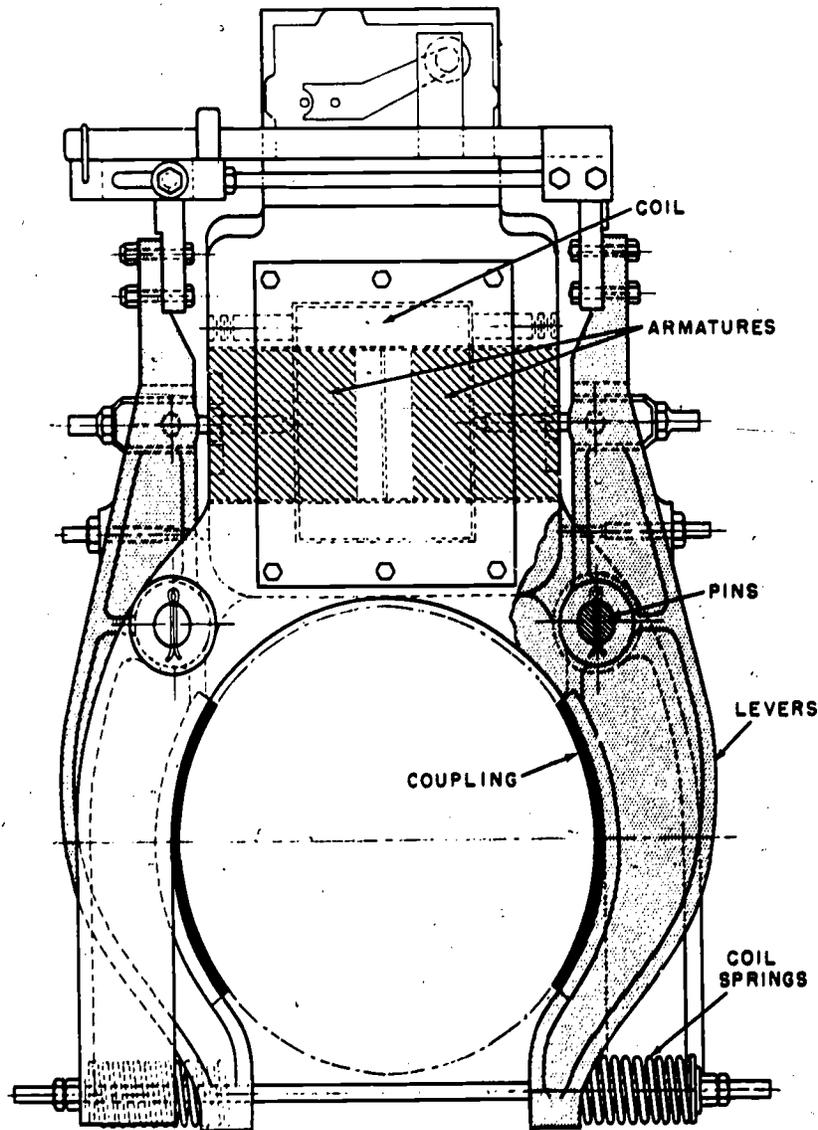


Figure 7-16. — Magnetic brake assembly.

77.138

which are characteristic of a-c systems. Because the magnetic flux passes through zero twice each cycle, the magnet pull is not constant. To overcome this, shading coils are used to provide pull during the change of direction of the main flux. The principal disadvantage of an a-c solenoid is that it draws a heavy current when voltage is first applied.

A-C TORQUE MOTOR BRAKE

The torque motor brake uses a specially wound polyphase squirrel-cage motor in place of the brake release solenoids. The motor may be stalled without injury to the winding and without drawing heavy currents. The mechanical arrangement of a torque-motor brake assembly and the

7-15

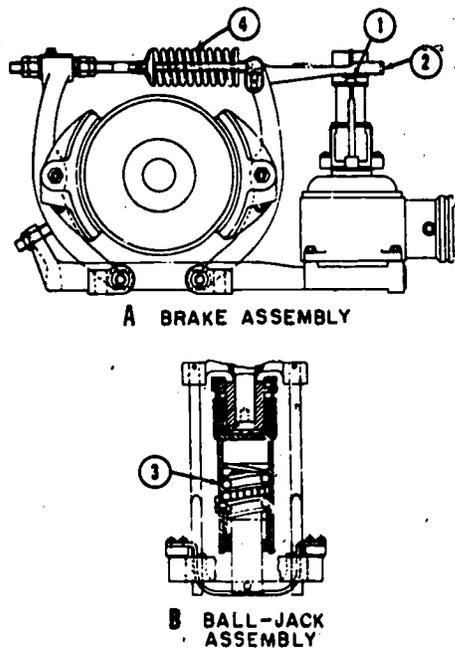


Figure 7-17.—Torque-motor brake and ball jack assembly. 77.139

ball-jack assembly is shown in figure 7-17. This assembly is used with an anchor windlass.

The mechanical connection between the torque-motor shaft and the brake operating lever is through a device called a "ball jack" (fig. 7-17B), which converts the rotary motion of the torque-motor shaft to a straight line motion.

When power is applied to the torque motor, the shaft turns in a clockwise direction resulting in an upward movement of the jack screw ③ (fig. 7-17B). The thrust element ① in the jack pushes upward against the operating lever ② (fig. 7-17A) to release the brake. As soon as the brake is fully released, the torque motor stalls across the line. This holds pressure against the spring ④ in figure 7-17A, and keeps the brake released.

When the voltage supply to the torque motor is interrupted, the torque spring forces the brake shoes against the brake drum. This stops and holds the windlass drive shaft.

The torque motor brake can be released manually by raising lever ②. However, if the lever is not held manually in the UP position, the brake will be applied.

D-C DYNAMIC BRAKE

Dynamic braking is similar to the slowing down of a moving truck by means of the compression developed in its engine. A d-c motor also slows down when being driven by its load, if its field remains excited. In this case, the motor acts as a generator and returns power to the supply, thereby holding the load. In an actual braking system, however, the d-c motor is disconnected from the line; its armature and field are connected in series with a resistor to form a loop. The field connections to the armature are reversed so that the armature countervoltage maintains the field with its original polarity.

Figure 7-18 shows the connections in the dynamic braking system of a series-wound d-c motor. The field switching is carried out by switches S1, S2, and S3, which are parts of a 3TPDT assembly. These switches are magnetically operated from a controller. With the switch arms in position 1, the motor operates from the line. When the switch arms are in position 2, the resistor is connected in series with the field, and, at the same time, the field coil connection to the armature is reversed. Thus, as long as the


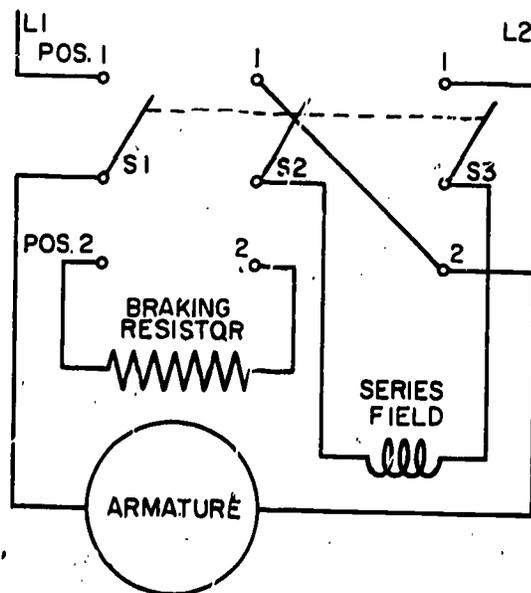


Figure 7-18.—Connections for dynamic braking of a series-wound d-c motor. 77.136

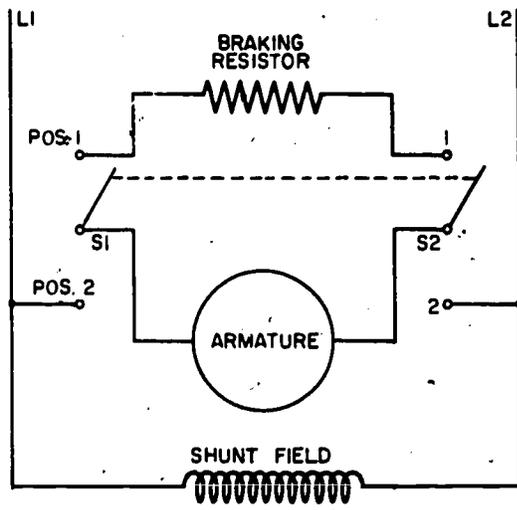

77,137

Figure 7-19.—Connections for dynamic braking of a shunt-wound d-c motor.

armature turns, it generates a countervoltage, which forces current through the resistor and the series field. Although the direction of current flow through the armature is reversed (because of the countervoltage), the direction through the series field coil is not reversed. When operating in this way, the motor is essentially a generator that is being driven by the momentum of the armature and mechanical load. Energy is quickly consumed in forcing current through the resistor, and the armature stops turning.

The time required to stop the motor may be varied by using different resistor values. The lower the resistance, the faster the braking action. If two or more resistors are connected by switches, the braking action can be varied by switching in different load resistors. Usually, the same braking resistors that are used to stop the motor are also used to reduce the line voltage during acceleration.

When dynamic braking is used with a d-c shunt-wound motor, resistance is connected across the armature (fig. 7-19).

Switches, S1 and S2, are parts of a DPDT circuit breaker assembly. When the switch arms are connected to position 2, the armature is across the line, and motor operation is obtained. When the switch arms are in position 1, the armature

is disconnected from the line and connected to the resistor. The shunt field remains connected to the line. As the armature turns, it generates a countervoltage that forces current through the resistor. The remainder of the action is the same as described for the circuit in figure 7-18.

Although dynamic braking provides an effective means of slowing motors, it is not effective when the field excitation fails or when an attempt is made to hold heavy loads; without rotation the countervoltage is zero, and no braking reaction can exist between the armature and the field.

D-C MAGNETIC BRAKE

Magnetic brakes are used for complete braking protection. In the event of field excitation failure, they will hold heavy loads. A spring applies the brakes, and the electromagnet releases them.

Disc brakes are arranged for mounting directly to the motor end bell. The brake lining is riveted to a steel disc, which is supported by a hub keyed to the motor shaft. The disc rotates with the motor shaft.

The band type brake has the friction material fastened to a band of steel, which encircles the wheel or drum and may cover as much as 90 percent of the wheel surface. Less braking pressure is required and there is less wear on the brake lining when the braking surface is large.

D-c brakes are operated by a solenoid which is designed the same as the a-c solenoid brake (fig. 7-16) except the d-c brake construction is of solid metals and requires no laminations as does the a-c magnetic brake.

CONTROLLER TROUBLESHOOTING

Although the Navy maintains a policy of preventive maintenance, sometimes trouble is unavoidable. In general, when a controller fails to operate, or signs of trouble (heat, smoke, smell of burning insulation, etc.) occur, the cause of the trouble can be found by conducting an examination that consists of nothing more than using the sense of feel, sight, and sound. On other occasions, however, locating the cause of the problem will involve more detailed actions.

Troubles tend to gather around mechanical moving parts and where electrical systems are interrupted by the making and breaking of contacts. Center your attention in these areas. See table 7-1 for a list of common troubles, their causes, and corrective actions.

Table 7-1.—Troubleshooting Chart

Contacts		
Trouble	Probable cause	Remedy
Contact chatter	Poor contact in control relay Broken shading coil Excessive jogging	Clean relay contact. Replace Caution operator to avoid excessive jogging.
Overheated contact tips	Dirty contact tips Sustained overloads	Clean and dress, if necessary, in accordance with chapter 300 or manufacturer's instructions. Find and remedy the cause of the overloads.
Weak tip pressure	Insufficient tip pressure Loose connections Wear allowance gone Poor tip adjustment	Clean and adjust. Clean and tighten. Replace contacts and adjust. Adjust "gap" and "wipe".
Short tip life	Low voltage which prevents magnet sealing Excessive filing or dressing Excessive jogging	Correct voltage condition. Follow manufacturer's instructions. Instruct operator in correct operation.
Welding or fusing	Abnormal starting currents Rapid jogging Short circuit currents on contacts	Operate manual controllers slower. Check automatic controllers for correct starting resistors and proper functioning of timing devices or accelerating relays. Instruct operator in correct operation. Find and remedy causes of short circuits. Check feeder fuses for proper size and replace, if necessary.
Failure of the flexible conductors between fixed and moving parts of contactor	Improper installation Worn out mechanically by large number of operations Moisture or corrosive atmosphere Burned by arcing or over-heating from loose, oxidized, or corroded connections	See manufacturer's instructions. Replace. Replace with flexible conductors suitable for application. Clean and tighten connections.

Coils

Trouble	Probable cause	Remedy
Coil failure: (a) Not overheated	Moisture, corrosive atmosphere Mechanical damage Vibration or shock damage	Use correctly insulated coils. Avoid handling coils by the leads. Secure coils properly.
(b) Overheated	Overvoltage or high ambient temperature Wrong coil Too frequent use, or rapid jogging Undervoltage, failure of magnet to seal in Used above current rating Loose connections to coil, or corrosion or oxidation of connection surfaces Improper installation	Check current and application. Use only the manufacturer's recommended coil. Use correct operating procedure. Check circuit and correct cause of low voltage. Install correct coil for the application. Clean and tighten connection. See manufacturer's instructions.

Chapter 7—MOTOR CONTROLLERS

Table 7-1. — Troubleshooting Chart (continued)

Electric brakes, solenoid or motor operated		
Trouble	Probable cause	Remedy
Worn or broken parts	High inertia loads, misapplication, excess temperature	Replace parts and refer to technical manual for correct procedures.
Failure to hold load	Worn parts, out of adjustment, wrong brake lining	Replace parts with correct materials and adjust according to technical manual.
Failure to set	Grease or oil on brake drum Out of adjustment, worn parts	Clean thoroughly with approved solvent. Replace worn parts and adjust in accordance with technical manual.
Failure to release	Mechanical binding Coil not deenergized	Clean and adjust. Check circuit to make sure current is cut off.
	Out of adjustment	Adjust in accordance with technical manual.
	Coil not energized	Check and repair circuit.
	Wrong coil	Replace with correct coil.
	Coil open or short circuited	Replace coil.
	Motor will not run	Refer to technical manual.
	Motor binds	Align correctly, check bearings.

Magnets and mechanical parts		
Trouble	Probable cause	Remedy
Worn or broken parts	Heavy slamming caused by over-voltage or wrong coil Chattering caused by broken shading coil or poor contact in control circuit	Replace part and correct cause
Noisy magnet	Excessive joggling Mechanical abuse Broken shading coil Magnet faces not true, result of mounting strain Dirt or rust on magnet face Low voltage	Replace. Correct mounting. Clean. Check system voltage and correct if wrong.
Broken shading coil	Improper adjustment, magnet overloaded	Check and adjust according to manufacturer's instructions. Replace coil and correct the cause.
Failure to drop out	Heavy slamming caused by over-voltage, magnet under-loaded, weak tip pressure Gummy substances on magnet faces Worn bearings Nonmagnetic gap in magnet circuit Voltage not removed Not enough mechanical load on magnet, improper adjustment	Clean with approved solvent. Replace. Replace magnet. Check coil voltage. Adjust in accordance with manufacturer's instructions.

77.319.1

When a motor-controller system has failed and pressing the START button will not start the system, then press the overload relay reset pushbuttons and again attempt to start the motor. Observe what happens. The system may start and

operation is restored, or you hear the controller power contacts close but the motor will not start, or the system may be dead. If you hear the power contacts close, then the POWER circuit needs to be checked. If the system remains dead

Table 7-1. — Troubleshooting Chart (continued)

Overload relays		
Trouble	Probable cause	Remedy
Magnetic, instantaneous type: High or low trip	Wrong coil	Install correct coil.
	Mechanical binding, dirt, corrosion, etc.	Clean with approved solvent, adjust.
	Shorted turns (High trip)	Test coil, and replace if defective.
Magnetic, inverse time delay type: Slow trip	Assembled incorrectly	Refer to manufacturer's instructions for correct assembly.
	Wrong calibration.	Replace.
Thermal type: Failure to trip	Fluid dirty, gummy, etc.	Change fluid and fill to correct level.
	Mechanical binding, corrosion, etc.	Clean with approved solvent, adjust.
	Worn or broken parts	Replace and adjust.
Trips at too low temperature	Fluid too low	Drain and refill to correct level.
	Wrong size heater	Install correct size.
Failure to reset	Mechanical binding, dirt, corrosion, etc.	Clean with approved solvent and adjust.
	Relay damaged by a previous short circuit.	Replace.
Burning and welding of control contacts	Wrong size heater	Install correct size.
	Short circuits in control circuits with fuses that are too large.	Correct causes of short circuits and make sure that fuses are right size.
Turning relays, flux decay type: Too short time	Assembled incorrectly	See technical manual for correct assembly.
	Wrong calibration.	Replace.
	Broken mechanism or worn parts.	Replace.
Too long time	Corrosion, dirt, etc.	Clean and adjust.
	Dirt in air gap	Clean.
	Shim too thick	Replace with thinner shim.
Gummy substance on magnet face or mechanical binding.	Too much spring or tip pressure	Adjust in accordance with technical manual.
	Misalinement	Correct alinement, and remedy cause of misalinement.
	Shim worn too thin	Replace with thicker shim.
Clean with approved solvent and adjust.	Weak spring and tip pressure	Adjust in accordance with technical manual.


77.319.2

then the CONTROL circuit will have to be checked. An example of troubleshooting a motor-controller electrical system is given in a sequence of steps which may be used in locating a fault (fig. 7-20). First, we will start by analyzing the power circuit.

POWER CIRCUIT ANALYSIS

When no visual signs of failure can be located and an electrical failure is indicated in the power

circuit, you must first check the line voltage and fuses as shown in figure 7-20. Place the voltmeter probes on the hot side of the line fuses as shown at position "A". A line voltage reading tells you that your voltmeter is operational and that you have voltage to the source side of the line fuses L1-L2. You may also check between L1-L3 and L2-L3. To check the fuse in line-1, place the voltmeter across the line fuse as shown

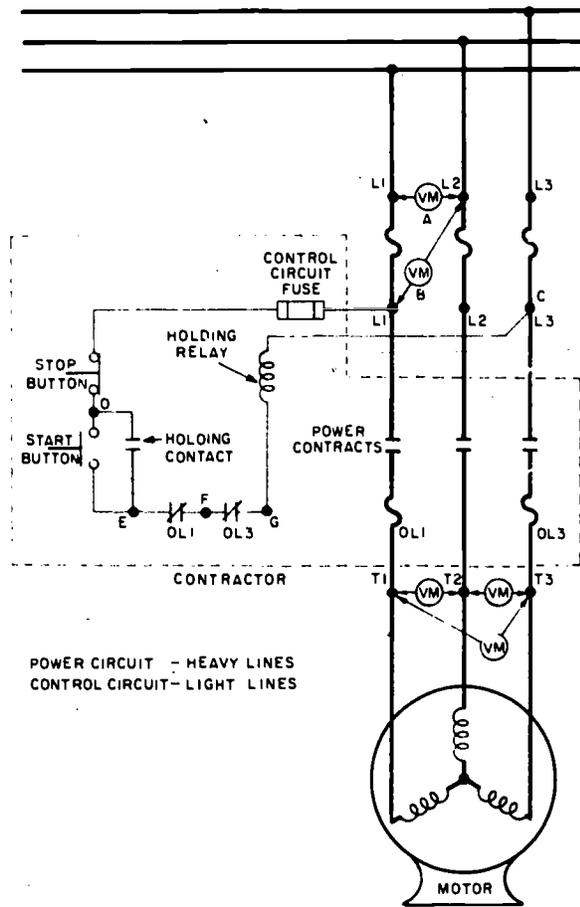

77.299
Figure 7-20.—Troubleshooting 3-phase magnetic line starter.

at position "B" between L1-L2. A voltage reading shows a good fuse in L1. Likewise check the other two fuses between L1-L3 and L2-L3. A no-voltage reading would show a faulty fuse.

If the line fuses check good, then check the voltage between terminals T1-T2, T2-T3, and T1-T3. The controller is faulty if there aren't voltmeter readings on all three of the terminal pairs and you would then proceed to check the power contacts, overloads, and lead connections

within the controller. However, if voltage is indicated at all three terminals, then the trouble is either in the motor or lines leading to the motor.

CONTROL CIRCUIT ANALYSIS

Suppose the overload reset buttons have been reset and the start switch closed. If the power contacts do not close, then the control circuit must be checked. A testing procedure follows.

1. Check for voltage at the controller at lines L1, L2, L3.

2. Place the voltmeter probes at points C and D (fig. 7-20). You should have a voltage reading when the STOP switch is closed and have a no-voltage reading when the STOP switch is open. The conditions would indicate a good STOP switch.

3. Next, check the voltage between points C and E. If you get a no-voltage reading when the START switch is open and a voltage reading when the START switch is closed, then the START switch is good.

4. Place the voltmeter probes at C and F. A voltage reading with the START button closed would indicate a good OL₁, but would also indicate an open OL₃, an open relay coil, or an open connection to line-3.

5. Place the voltmeter probes at points C and G and close the START switch. A no-voltage reading locates the trouble in the control circuit; the OL₃ is faulty.

A faulty holding relay contact will be indicated when the system operates only as long as the START pushbutton switch is held in the ON position but will shut down the system when the switch is released.

When starting a 3-phase motor, if the motor fails to start and gives a loud hum, you should stop the motor by pushing the stop button. These symptoms usually mean that one of the phases to the motor is not energized. You can assume that the control circuit is good since the main operating coil has operated and the maintaining contacts are holding the main operating contactor in. Look for trouble in the power circuit (the main contacts, overload relays, cable, and motor).

CHAPTER 8

MAINTENANCE AND REPAIR OF MOTORS AND GENERATORS

The main objective of shipboard preventive maintenance is the prevention of breakdown, deterioration, and malfunction of equipment. If this objective is not realized, however, the alternative is repairing or replacing the failed equipment. By performing preventive maintenance in accordance with prescribed procedures, you can ensure long satisfactory service of the equipment of the ship's electric plant. Also, there will be occasions when, despite your best efforts, corrective action will be required to restore the electric plant to peak operating conditions.

This chapter describes maintenance practices and procedures for preventing casualties to and for diagnosing, repairing, and testing shipboard electric motors and generators. Additional information may be found in chapters 300, 302 and 310 of NAVSHIPS Technical Manual.

CLEANING MOTORS AND GENERATORS

One of your most important jobs is to keep all electrical machinery clean. Dust, dirt, and foreign matter (carbon, copper, mica, etc) tend to block ventilation ducts and increase resistance to the dissipation of heat, causing local or general overheating. If the particles are conducting, or form a conducting paste through the absorption of moisture or oil, the winding may eventually be short circuited or grounded. Additionally abrasive particles may puncture insulation, iron dust is particularly harmful since the dust is agitated by magnetic pulsations.

The acceptable methods of cleaning motors and generators involve the use of wiping rags or cloths, suction, low pressure air, and solvents.

Wiping with a clean, lint free, dry rag (such as cheesecloth) is effective for removing loose dust or foreign particles from accessible parts of a machine. When wiping, do not neglect the end windings, mica cone extensions at the commutator of d-c machines, slip-ring insulation, connecting leads and terminals.

The use of suction is preferred to the use of compressed air for removing abrasive dust and particles from inaccessible parts of a machine because it lessens the possibility of damage to insulation. If a vacuum cleaner is not available for this purpose, a flexible tube attached to the suction side of a portable blower will make a suitable vacuum cleaner. Always exhaust the blower to a suitable sump or overboard. Grit, iron dust, and copper particles should be removed only by suction methods whenever possible.

The use of clean, dry, compressed air is effective in removing dry, loose dust and foreign particles particularly from inaccessible locations, such as air vents in the armature punchings. Use air pressure up to 30 pounds per square inch to blow out motors or generators of 50 horsepower or 50 kilowatts or less; use pressure up to 75 psi to blow out higher rated machines. Where air lines carry higher pressure than is suitable for blowing out a machine, use a throttling valve to reduce the pressure. Always blow out any accumulation of water in the air pipe or hose before turning the air blast on the machine. Be careful with compressed air particularly if abrasive particles are present, since these may be driven into the insulation and puncture it or be forced beneath insulating tapes. Compressed air should be used only after the machine has been opened up on both ends so as to allow the air and dust to escape. The use of compressed air will prove of small benefit if the dust is not suitably removed from the machine. The most suitable method is to attach a suction blower to an opening in the opposite end from the air jet to remove the dirt-laden air.

The use of solvents for cleaning electrical equipment should be avoided whenever possible. However, their use is necessary for removing grease and pasty substances consisting of oil and carbon or dirt. Alcohol will injure most types of insulating varnishes and should not be used for cleaning electrical equipment. Solvents

containing gasoline or benzine must not be used for cleaning purposes under any circumstances nor is carbon tetrachloride used, because of its extremely high toxicity. Consult Chapter 2 of this training manual for detailed information on the use of solvents for cleaning electrical machinery.

Motors, generators, and other electrical equipment that have been wet with salt water should be flushed out with fresh water and dried. Never let the equipment dry before flushing with fresh water. For complete information on washing and drying procedures refer to NAVSHIPS Technical Manual Chapter 300.

BEARINGS


When a shaft is mounted in a device to hold it during rotation, friction develops at the contact point of the shaft with the device. Friction develops heat, and the amount of friction produced in a shaft housing must be reduced to a minimum to obtain satisfactory performance and longer life of the shaft. Devices which reduce the amount of friction produced by shafts in their housings are called bearings.

The two common types of bearings found in motors and generators are antifriction bearings and friction bearings.

ANTIFRICTION BEARINGS

Rolling, antifriction bearings are of two types: ball and roller bearings. Basically, all rolling bearings consist of two hardened steel rings, hardened steel rollers or balls; and separators. The annular, ring-shaped, ball bearing is the type of rolling bearing used most extensively in the construction of electric motors and generators used by the Navy. This bearing is further divided into three types dependent upon the load it is designed to bear—(1) radial, (2) angular contact, and (3) thrust. Examples of these three bearings are shown in figure 8-1.

The rotating element of an electric motor or generator may subject a ball bearing to any one or a combination of three loads—radial, thrust, and angular. Radial loads are the result of forces applied to the bearing perpendicular to the shaft; thrust loads are the result of forces applied to the bearing parallel to the shaft; and angular loads are the result of a combination of radial and thrust loads. Because the load carried by the bearings in electric motors and

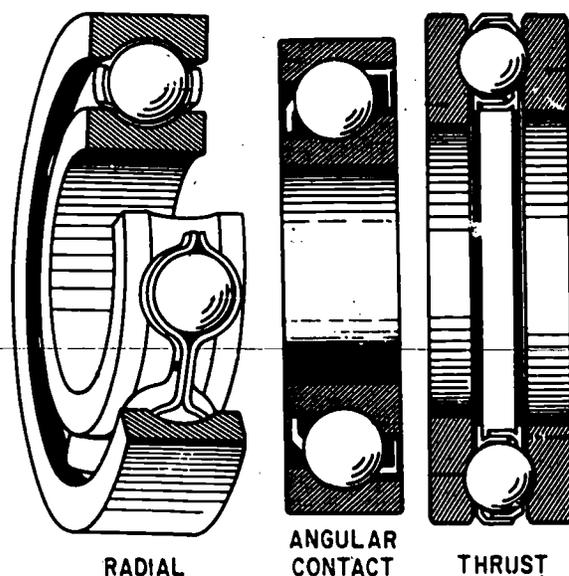

77.326
Figure 8-1.—Representative types of ball bearings.

generators is almost entirely due to the weight of the rotating element, it is apparent that the method of mounting the unit is a major factor in determining the type of bearing employed in its construction. In a vertically mounted unit, the thrust bearing would be used; while the radial bearing is common to most horizontal units.

Wear

It is usually not necessary to measure the air gap on machines with ball bearings because the construction of the machines is such as to ensure proper bearing alignment. Additionally, ball bearing wear of sufficient magnitude as to be readily detected by air-gap measurements would be more than enough to cause unsatisfactory operation of the machine.

The easiest way of determining the extent of wear in these bearings is to periodically feel the bearing housing while the machine is running to detect any signs of overheating or excessive vibration, and to listen to the bearing for the presence of unusual noise.

Rapid heating of a bearing is indicative of danger. Bearing temperature may feel uncomfortable to the hand and might be a sign of dangerous overheating, but it is not always so. The bearing

may be all right if it has taken an hour or more to reach that temperature; whereas, serious trouble can be expected if that same temperature is reached within the first 10 or 15 minutes of operation.


The test for excessive vibration relies to a great extent on the experience of the person conducting the test. He should be thoroughly familiar with the normal vibration of the machine in order to be able to correctly detect, identify, and interpret any unusual vibrations. Vibration, like heat and sound, is easily telegraphed, and a thorough search is generally required to locate its source and to determine its cause.

Ball bearings are inherently more noisy in normal operation than sleeve bearings (discussed later) and this fact must be borne in mind by personnel testing for the presence of abnormal noise in the bearing. A good method for sound testing is to place one end of a screwdriver or steel rod against the bearing housing and the other end against the ear. If a loud, irregular grinding, clicking, or scraping noise is heard, trouble is indicated. As before, the degree of reliance in the results of this test depends on the experience of the person conducting the test.

Checking the movement of a motor or generator shaft can also give a good indication of the amount of bearing wear. In figure 8-2A, if the motor shaft has excessive vertical movement it indicates worn bearings. Figure 8-2B shows how to get a rough approximation of generator end-play movement. Excessive movement is corrected with bearing shims.


Lubrication

One cause of motor and generator failure is overlubrication. Forcing too much grease into

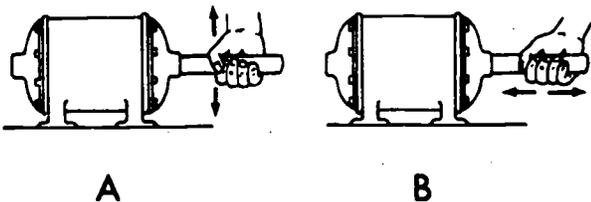

73.300

Figure 8-2.—Checking motor or generator shaft. (A) Vertical movements, (B) end-play movement.

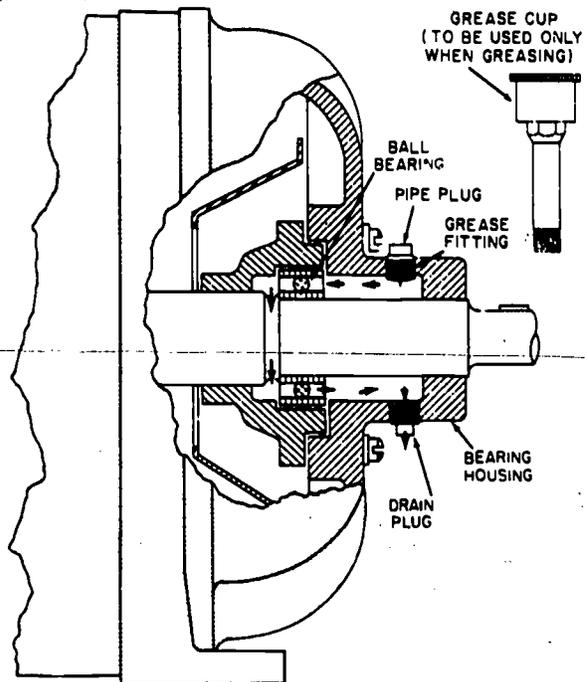

77.68

Figure 8-3.—Grease-lubricated ball bearings.

the bearing housing seals and onto the stationary windings and rotating parts of the machine will cause overheating and deterioration of insulation, and eventually results in electrical grounds and shorts. Overheating will also cause rapid deterioration of the grease and ultimate destruction of a bearing. To avoid the results of overlubrication, add new lubricant only when necessary.

The frequency with which new grease must be added depends upon the service of the machine and the tightness of the housing seals, and should be determined for each machine by the engineer officer. A large quantity of grease coming through the shaft extension end of the housing probably indicates excessive leakage inside the machine.

To prevent greasing by personnel in operating spaces, grease cups are removed from motors and generators. Pipe plugs are inserted in the place of the grease cups. The pipe plugs are replaced temporarily with grease cups during lubrication (fig. 8-3). (Removable grease cups should remain in the custody of responsible

maintenance personnel.) Make sure the grease cups are clean. After the grease is added and before the pipe plugs are replaced, clean the pipe plugs.

The preferred method of adding grease calls for disassembly of the bearing housing. Though not recommended, renewing the bearing grease without at least partially disassembling the housing can be tried under certain conditions (given later).

RENEWAL OF GREASE BY DISASSEMBLING THE BEARING HOUSING.—The extent of disassembly necessary will depend upon the construction of the bearing. For the usual construction, bearings with outer bearing caps should be disassembled as follows:

1. Remove the outer bearing cap after thoroughly wiping all exterior surfaces.
2. Remove old grease from all accessible portions of the housing and clean them thoroughly. Be careful not to introduce dirt or lint into the housing of the bearing.
3. Flush out the bearing cap with clean hot (about 120°F) kerosene, diesel fuel oil, or dry clean fluid. Then flush out with a light mineral oil (not heavier than SAE 10, similar to diesel lubricating oil).
4. Where practical, plug all holes leading into the interior of the machine and flush out the complete housing with the outer bearing cap removed. Use the solvents and procedure described in the preceding step unless the conditions are such that the cleaning fluids may leak into the windings. In such cases, omit this step.
5. Drain the mineral oil thoroughly; then pack the housing half full with fresh, clean grease.
6. Fill the grease cup with fresh clean grease and screw it down as far as it will go. **KEEP THE MACHINE RUNNING CONTINUOUSLY.**
7. Repeat step (6) above until clean grease begins to emerge from the drain hole.
8. At this point stop putting in grease and allow the machine to run until no more grease comes out of the drain hole. **THIS STEP IS VERY IMPORTANT.**
9. Clean any drain pipes which have been removed, and replace.
10. Replace the drain plug.

RENEWAL OF GREASE WITHOUT DISASSEMBLING THE BEARING HOUSING.—Do not try to add new grease without at least partial disassembly of the bearing housing unless the following conditions apply:

1. The machine is horizontal. In vertical machines, there is no adequate means of protecting the windings against displaced lubricant.
2. A suitable fitting is provided for admitting grease. If a grease-gun fitting is provided, it should be replaced by a grease cup.
3. The drain hole on the bearing housing is accessible. Drain pipes do not permit satisfactory escape of displaced grease, and should be removed when renewing grease.
4. The machine is run continuously while renewing grease. If the machine cannot be run continuously during the greasing period without injuring the driven auxiliary or endangering personnel, the bearing housing must be disassembled to renew grease.

If the above conditions apply, renew the grease in assembled bearing housings by the following method:

1. Run the machine to warm up the bearings.
2. Wipe any dirt away from the area around the grease fittings.
3. Remove drain plug and drain pipes from the drain hole in the bearing housing.
4. With a clean wire, screwdriver, or similar tool, clear the drain hole of all hardened grease.
5. Remove the grease cup and clear the grease inlet hole of hardened grease.
6. Pack the grease cup with grease and screw the grease cup down all the way, while the motor is running.
7. Repeat step 6 until grease runs out of the drain hole.
8. Run the motor until the grease stops running out of the drain hole.
9. Replace the pipe plugs.

OIL-LUBRICATED BALL BEARINGS

Lubrication charts or special instructions are generally furnished for electric motors and

generators equipped with oil-lubricated ball bearings. The oil level inside the bearing housing should be maintained approximately even with the lowest point of the bearing inner ring. At this level, there will be enough oil to lubricate the bearing for its operating period, but not enough to cause churning or overheating.

One common method by which the oil level is maintained in ball bearings is the wick-fed method. In this method, the oil is fed from an oil cup to the inside of the bearing housing through an absorbent wick, which also filters the oil and prevents leakage through the cup in the event momentary pressure is built up within the housing. A typical wick-fed, oil-lubricated ball bearing is shown in figure 8-4.

GREASE-LUBRICATED BALL BEARINGS

Ball bearings which normally operate at a temperature of 194°F (90°C) or below should be lubricated with grease in accordance with Military Specification MIL-G-18709, Stock Nos. W9150-235-5544 and W9150-235-5564; ball bearings which normally operate at a higher temperature should be lubricated with a silicone grease in accordance with Military Specification MIL-L-15719A, Stock No. W9150-257-5358. Each machine requiring the silicone grease has a caution plate, **USE HIGH TEMPERATURE GREASE**, attached near the grease fitting.

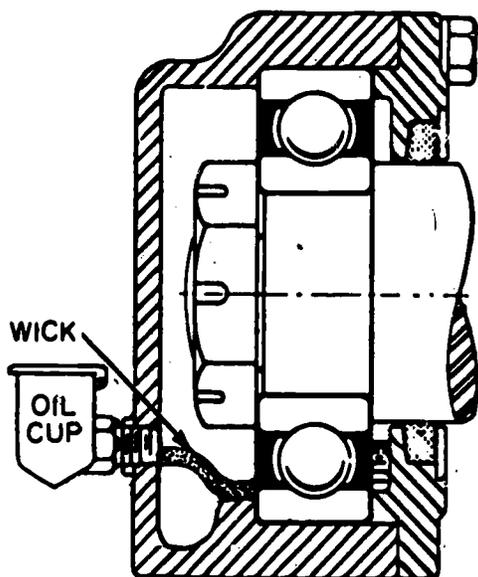


Figure 8-4.—Wick-fed ball bearings.

77.69

DOUBLE SHIELDED OR DOUBLE SEALED BALL BEARINGS SHOULD NEVER BE DISASSEMBLED OR CLEANED. These bearings are prelubricated and cleaning will remove the lubricant from the bearings or at least dilute the lubricant until it no longer possesses its original lubricating qualities.

Permanently lubricated ball bearings require no greasing. Equipment furnished with these bearings can be recognized by the absence of grease fittings or provision for attaching grease fittings. When permanently lubricated bearings become inoperative, they should be replaced with bearings of the same kind. If not already provided, nameplates (**DO NOT LUBRICATE**) should be attached to the bearing housing of machines with sealed bearings.


Cleaning Ball Bearings

Open, single-shielded, or single-sealed ball bearings can be cleaned, but only in an emergency when a suitable replacement is not available. It is difficult to remove dirt from ball bearings. Unless carefully done, more dirt may get into the bearings than is removed.

In cleaning an open, single-shielded, or single-sealed bearing take the bearing off with a bearing puller applied to the inner race of the bearing. Fig. 8-5-A and B shows two types of bearing pullers, both of which apply the pulling pressure to the inner race of the bearing. Removal of bearings by pulling on the outer race tends to make the balls dent the raceway even when the puller is used. In case the bearing was subjected to such extreme temperatures as to distort the race and balls and cause the race to shrink to a shaft more tightly than the original fit, do not damage the shaft when removing the bearing. Use soft centers which are usually provided with a bearing removal kit. If not, they may be fabricated of soft metal, such as zinc or brass.


After removal, the bearing should be thoroughly cleaned. A good cleaner to use is standard solvent or clean oil. Soak the bearing in the cleaner for as long as necessary to dislodge dirt or caked grease from around balls and separators. After the bearing is cleaned, wipe it carefully with a dry, lint free cloth. If compressed air is used for drying, direct the air stream across the bearing so that the bearing does not spin. Because dry bearings rust quickly, protect the bearing at once by coating it with clean, low-viscosity lubricating oil.

8-5

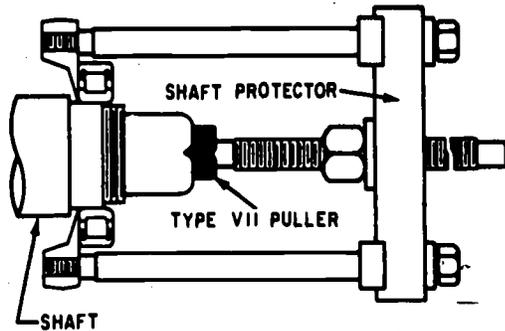

73.325A

Figure 8-5-A.—Bearing puller removal using split puller attachment and shaft protector.

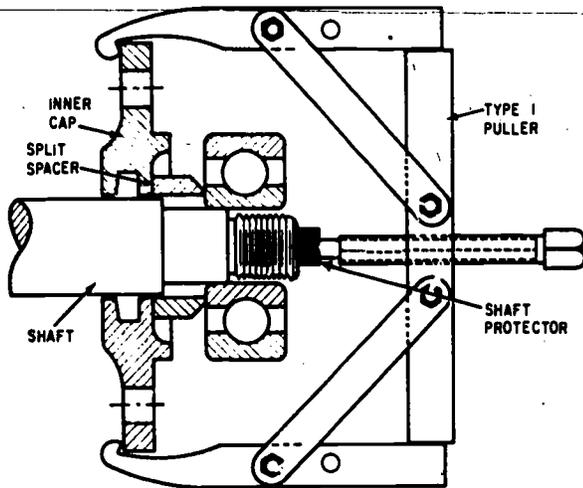

73.325B

Figure 8-5-B.—Split spacer allows use of cover to remove inner ring.

Rotate the inner ring slowly by hand, and if the bearing feels rough, repeat the cleaning. If the bearing still feels rough when turned slowly by hand, it is not fit for use, and must be renewed.

Bearing Installation

There are two acceptable methods for installing bearings: arbor press and heat.

ARBOR PRESS METHOD.—When available and adaptable, an arbor press can be used if proper precautions are taken. Place a pair of flat steel blocks under the inner ring or both rings of the bearing. Never place blocks under the outer ring

only. Then line up the shaft vertically above the bearing, and place a soft pad between shaft and press ram. After making sure the shaft is started straight in the bearing, press the shaft into the bearing until the bearing is flush against the shaft or housing shoulder. When pressing a bearing onto a shaft, always apply pressure to the inner ring; when pressing a bearing into a housing, always apply pressure to the outer ring.

HEAT METHOD.—A bearing can be heated in an oven or furnace to expand the inner ring for assembly. This method ensures uniform heating all around the bearing.

Heat the bearing in an infrared oven or a temperature-controlled furnace at a temperature not to exceed 200°F. The bearing should not be left in the oven or furnace beyond the time necessary to expand the inner race the desired amount, since prolonged heating could possibly deteriorate the grease with which the bearing is prelubricated. The bearing may also be heated in oil at 200°F until expanded, and then it is slipped on the shaft. This method is not as desirable as the others and should not be used unless absolutely necessary. The disadvantages of the hot-oil method are the lack of temperature controls and increased chances of enlarging the bearing, deteriorating the grease or contaminating the grease by use of dirty oil.


Additional methods of bearing installation are explained in NAVSHIPS Technical Manual, Chapter 244.

FRICION BEARINGS

Friction bearings are of three types: **RIGHT LINE** (motion is parallel to the elements of a sliding surface), **JOURNAL** (two machine parts rotate relative to each other), and **THRUST** (any force acting in the direction of the shaft axis is taken up). Turbine-driven ship's service generators and propulsion generators and motors are equipped with journal bearings, commonly called **SLEEVE** bearings. The bearings may be made of bronze, babbitt, or steel-backed babbitt. Preventive maintenance of sleeve bearings requires periodic inspections of bearing wear and lubrication.

Wear

Propulsion generators, motors, and large ship service generators are sometimes provided with a gage for measuring bearing wear. Bearing wear on a sleeve

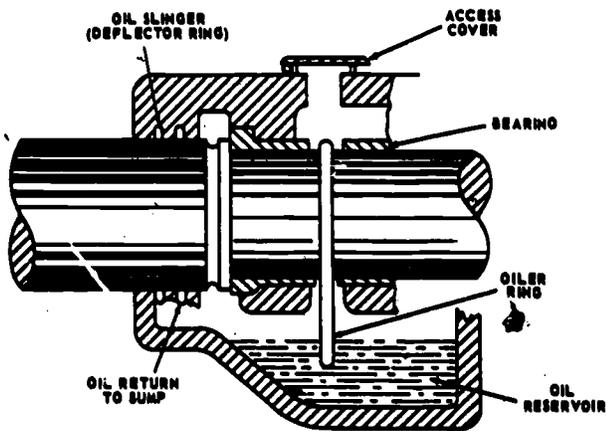

77,239

Figure 8-6.—Diagram of an oil-ring lubricated bearing.

bearing machine not provided with a bearing gage can be obtained by measuring the air gap at each end of the machine with a machinist's tapered feeler gage. Use a blade long enough to reach into the air gap without removing the end brackets of the machine. Before making the measurements, clean the varnish from a spot on a pole or tooth of the rotor. A spot should also be cleaned at the same relative position on each field pole of a d-c machine. For a-c machines, clean at least three and preferably four or more spots spaced at equal intervals around the circumference of the stator. Take the air gap measurement between a cleaned spot on the rotor and a cleaned spot on the stator, turning the rotor to bring the cleaned spot of the rotor in alignment with the cleaned spots on the stator. Compare these readings with the tolerance stated by the manufacturer's instruction book.

Oil Rings And Bearings Surfaces

An opening is provided in the top of the bearing for checking the condition of the oil rings and bearing surfaces (fig. 8-6). Periodic inspections are necessary to make certain that the oil ring is rotating freely when the machine is running and is not sticking due to the motion of the ship. With the machine stopped, the bearing surfaces should be inspected for any signs of pitting or scoring.

Trouble Analysis

The earliest indication of sleeve bearing malfunction normally is an increase in the operating temperature of

the bearing. Thermometers are usually inserted in the lubricating oil discharge line from the bearing as a means of visually indicating the temperature of the oil as it leaves the bearing. Thermometer readings are taken hourly on running machinery by operating personnel. However, a large number of bearing casualties have occurred in which no temperature rise was detected in thermometer readings, and, in some cases, discharge oil temperature has actually decreased. Therefore, after checking the temperature at the thermometer, a follow-up check should be made by feeling the bearing housing whenever possible. Operating personnel must thoroughly familiarize themselves with the normal operating temperature of each bearing so that they will be able to recognize any sudden or sharp changes in bearing-oil temperature. Many large generators are provided with bearing temperature alarm contactors which are incorporated in the ship's alarm system. The contactor is preset to provide an alarm when the bearing temperature exceeds a value detrimental to bearing life. If bearing malfunction is indicated, the affected machinery should be secured as soon as possible. A motor with overheated sleeve bearings should be unloaded, if possible, without stopping the motor. If stopped immediately, the bearing may seize. The best way to limit bearing damage is to keep the motor running at a light load and supply plenty of cool, clean oil until the bearing cools down.

Because the permissible operating temperature is often too high to be estimated by the sense of touch, it is necessary to take temperature measurements to determine whether a bearing is overheated. A thermometer securely fastened to the bearing cover or housing will usually give satisfactory bearing temperature measurements on machines not equipped with bearing temperature measuring devices. A thermometer should not be inserted into a bearing housing; it may break and necessitate disassembly to remove glass and mercury.

Any unusual noise in operating machinery may also indicate bearing malfunction. Whenever a strange noise is heard in the vicinity of operating machinery, a thorough inspection must be made to determine its cause. Excessive vibration will occur in operating machinery with faulty bearings, and inspections should be made at frequent intervals in order to detect its presence as soon as possible.

BRUSHES

The brushes used in electric motors and generators are one or more plates of carbon,

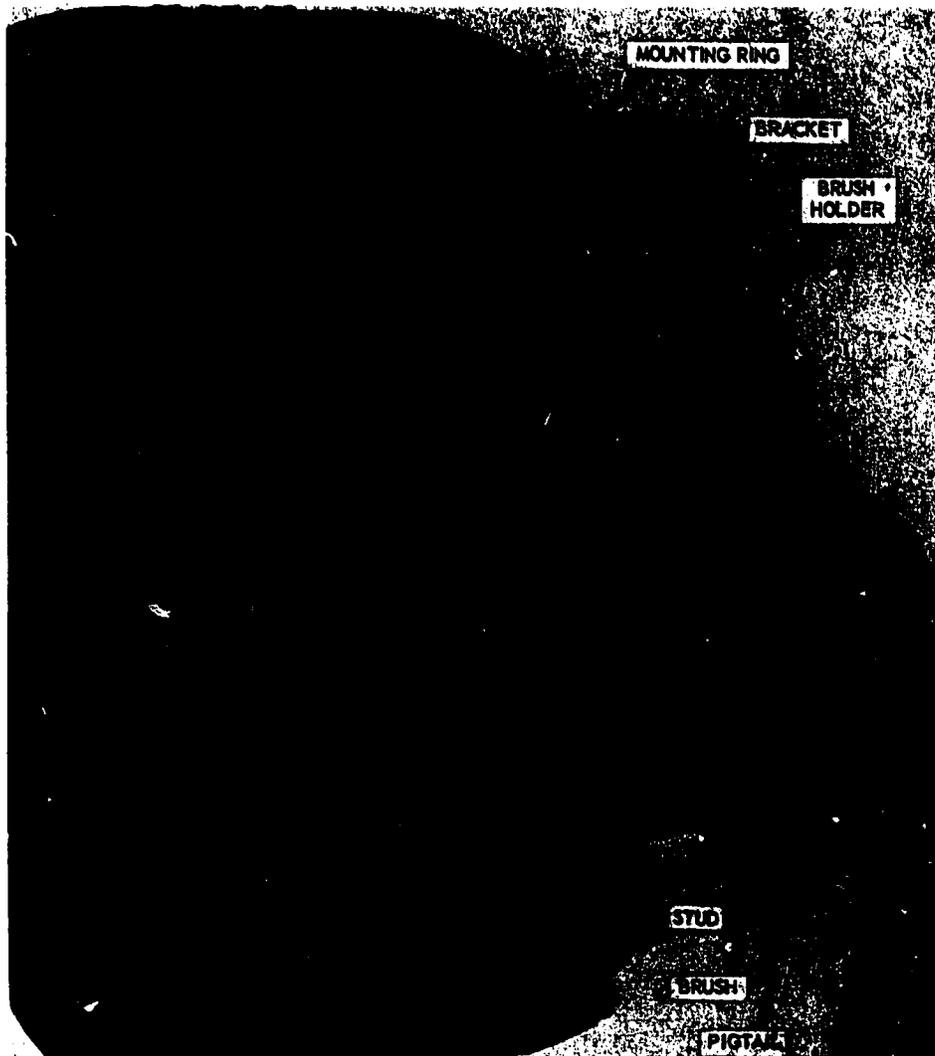


Figure 8-7.—Brush holder and brush-rigging assembly.

77.70

bearing against a commutator, or collector ring (slip ring) to provide a passage for electrical current to an external circuit. The brushes are held in position by brush holders mounted on studs or brackets attached to the brush-mounting ring, or yoke. The brush holder studs or brackets, and brush-mounting ring comprise the brush rigging. The brush rigging is insulated from, but attached to, the frame or one end bell of the machine. Flexible leads (pigtailed) are used to connect the brushes to the terminals of the external circuit. An adjustable spring

is generally provided to maintain proper pressure of the brush on the commutator in order to effect good commutation. A d-c generator brush holder and brush-rigging assembly are shown in figure 8-7.

Brushes are manufactured in different grades to meet the requirements of the varied types of service. The properties of resistance, ampere-carrying capacity, coefficient of friction, and hardness of the brush are determined by the maximum allowable speed and load of the machine in which it is used.

CORRECT BRUSH TYPE

The correct grade of brush and correct brush adjustment are necessary to avoid commutation trouble.

Use the grade of brush shown on the drawing or in the technical manual applicable to the machine, except where Naval Sea Systems Command Instructions issued after the date of the drawing or technical manual (such as the instructions for brushes to be used in electric propulsion and magnetic minesweeping equipment) state otherwise. In such cases, the Naval Sea Systems Command Instructions should be followed. Most of the brushes in shipboard service appear on the Qualified Products List as complying with one of six military grades (S, A, H, D, G, and E). In the case of propulsion and magnetic minesweeping equipment, only one grade of each of two different brush manufacturers is permitted for any machine. The restriction on brush interchangeability is due to the vital nature of the machines involved.


CARE

All brush shunts should be securely connected to the brushes and the brush holders. Brushes should move freely in their holders but should not be loose enough to vibrate in the holder. Before replacing a worn brush with a new one, clean all dirt and other foreign material from the brush holder.

Replace with new brushes, all brushes that

1. are worn or chipped so they will not move properly in their holders;
2. have damaged shunts, shunt connections, or hammer clips;
3. have riveted connections or hammer clips and are worn to within 1/8 inch of the metallic part;
4. have tamped connections, are without hammer clips, and are worn to one-half or less of the original length of the brush; or
5. have spring-enclosed shunts and are worn to forty percent or less of the original length of the brush exclusive of the head which fits into one end of the spring.

Where adjustable brush springs are of the positive gradient (torsion, tension, or compression) type, adjust them as the brushes wear, in order to keep the brush pressure approximately constant. Springs of the coiled band, constant pressure type and certain springs of the positive gradient type are not adjustable except by changing springs. Brush pressure should be in accordance with the manufacturer's technical manual. Pressures as low as 1-1/2 pounds per square inch of contact area may be specified for large machines and as high as 8 pounds per square inch of contact area may be specified for small machines. Where technical manuals are not available, a pressure of 2 to 2-1/2 pounds per square inch of contact area is recommended for integral horsepower and integral kilowatt machines, and about twice that pressure for fractional horsepower and fractional kilowatt machines. To measure the pressure of brushes operating in box type brush holders, insert one end of a strip of paper between the brush and commutator; use a small brush tension gage (such as the 0 to 5 pound indicating scale) to exert a pull on the brush in the direction of brush holder axis as shown in figure 8-8.

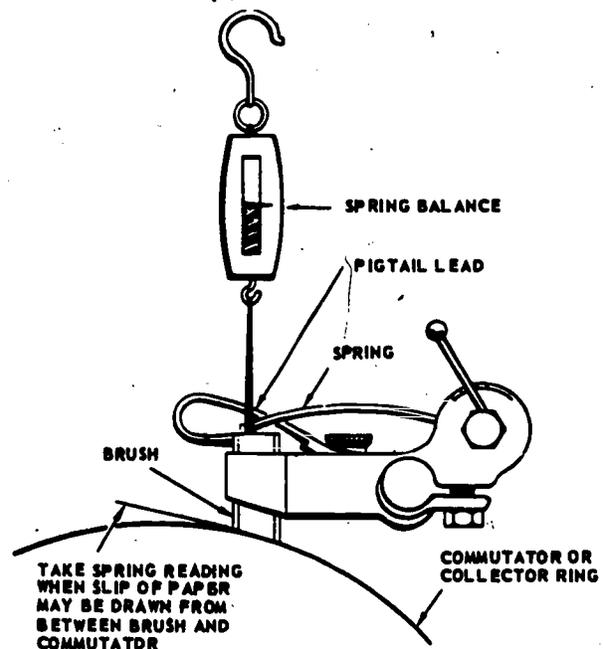

77.72

Figure 8-8.—Measuring brush tension.

Note the reading of the gage when the pull is just sufficient to release the strip of paper so that it can be pulled out from between the brush and commutator without offering resistance. This reading divided by the contact area may be considered to be the unit operating pressure.

The toes of all brushes of each brush stud should line up with each other and with the edge of one commutator segment.

The brushes should be evenly spaced around the commutator. To check brush spacing, wrap a strip of paper around the commutator and mark the paper where the paper laps. Remove the paper from the commutator, cut at the lap, and fold or mark the paper into as many equal parts as there are brush studs. Replace the paper on the commutator and adjust the brush holders so that the toes of the brushes are at the creases or marks.


All brush holders should be the same distance from the commutator, not more than one-eighth inch, nor less than one-sixteenth inch. A brush holder must be free of all burrs which might interfere with the free movement of the brush in the holder. Burrs are easily removed with a fine file.

SEATING

Accurate seating of the brushes must be assured where their surfaces contact the commutator. Sandpaper and a brush seater are the best tools to accomplish a true seat.

All power must be disconnected from the machine, and every precaution must be taken to ensure that the machine will not be inadvertently started before using sandpaper to seat the brushes.

The brushes to be fitted are lifted, and a strip of fine sandpaper (No. 1) approximately the width of the commutator, is inserted (sand side up) between the brushes and the commutator. With the sandpaper held tightly against the commutator surface to conform with the curvature and the brushes held down by normal spring pressure, the sandpaper is pulled in the direction of normal rotation of the machine (fig. 8-9). When returning the sandpaper for another pull, the brushes must be lifted. This operation is repeated until the seat of the brush is accurate. Always finish with a finer grade of sandpaper, No. 0. A vacuum is required for removing dust

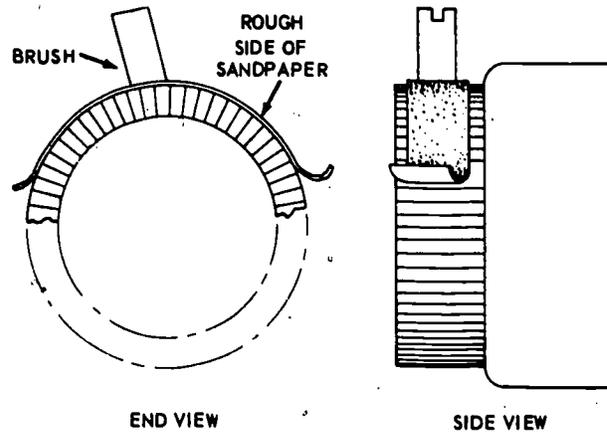


1.52

Figure 8-9.— Method of sanding brushes.

while sanding. After sanding, the commutator and windings must be thoroughly cleaned to remove all carbon dust.

The use of a brush seater will improve the fit obtained by sanding as described above. A brush seater consists of a mildly abrasive material loosely bonded into a stick about 5 inches long. To use a brush seater to fit brushes, install the brushes in the brush holders and start the machine. Press a brush securely against the commutator by using a stick of insulating material or by increasing the brush spring tension to its maximum value. Touch the brush seater lightly to the commutator exactly at the heel of the brush (fig. 8-10) so that

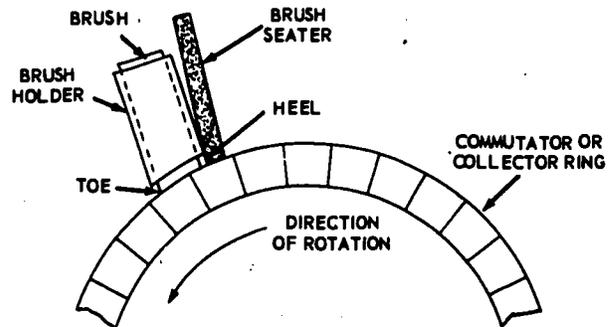


1.53

Figure 8-10.— Using the brush seater.

abrasive material torn from the brush seater will be carried under the brush. If the seater is placed even one-fourth inch away from the heel of the brush, only a small part of the abrasive passes under the brush. The brush seater must be held in turn behind each brush, applying the seater for a second or two depending on brush size. Do not hold the seater steadily against the commutator as the seater will wear away too rapidly and produce too much dust. After seating one or two brushes, examine them to see if the seater is being applied long enough to give a full seat. After seating the brush, if white dust is plainly visible on the seat, insufficient pressure has been applied to the brush or the brush seater has been applied too heavily or too far from the brush. Also, be careful not to remove the copper oxide film from the commutator surface. This film, if removed, must be restored as described later in this chapter.

A vacuum cleaner should be used during the seating operation to prevent dust from reaching the machine windings and bearings. After seating all the brushes, blow out the machine with a power blower or completely dry compressed air or clean thoroughly with a vacuum cleaner.

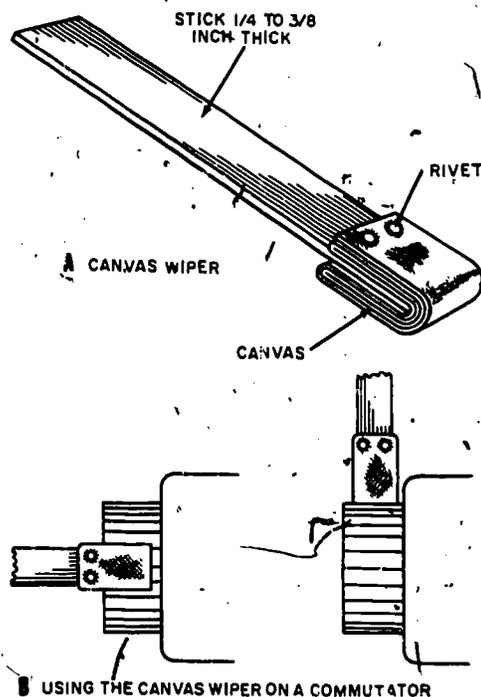

1.54
Figure 8-11.—Cleaning commutator or collector rings.

COMMUTATORS AND COLLECTOR RINGS

After being used approximately two weeks, the commutator of a machine should develop a uniform, glazed, dark brown color on the places where the brushes ride. If a nonuniform or bluish colored surface appears, improper commutation conditions are indicated. Periodic inspections and proper cleaning practices will keep commutator and collector-ring troubles at a minimum.

Cleaning

One of the most effective ways of cleaning the commutator or collector rings is to apply a canvas wiper while the machine is running. The wiper can be made by wrapping several layers of closely woven canvas over the end of a strong stick between one-fourth and three-eighths inch thick (fig. 8-11A). The canvas may be secured with rivets if they, in turn, are covered with linen tape to prevent the possibility of their contacting the commutator. When the outer layer of canvas becomes worn or dirty,

it is removed to expose a clean layer. The wiper is most effective when used frequently. On ship's service generators, it may be desirable to use the wiper once each watch. When using the wiper, exercise care to keep from fouling moving parts of the machine. The manner of applying the wiper to a commutator is illustrated in figure 8-11B.

When machines are secured, a toothbrush can be used to clean out the commutator slots, and clean canvas or lintless cloth may be used for wiping the commutator and adjacent parts. In addition to being cleaned by wiping, the commutator should be periodically cleaned with a vacuum cleaner or blown out with clean, dry air.

Do not sandpaper a commutator if it is operating well, even if long service has developed threading, grooving, pits, burn areas between bars, longitudinal irregularities, etc, unless sparking is occurring or brushes are wearing excessively. In sanding a commutator, use a fine grade of sandpaper (No. 0000 preferred, but in no case coarser than No. 00). Sandpapering may also be used to make emergency

reduction of high mica, or to polish finish a commutator which has been stoned or turned. The sandpaper, attached to a wooden block shaped to fit the curvature of the commutator, is moved slowly back and forth across the surface of the commutator while the machine is running at moderate speed. Rapid movement or the use of coarse sandpaper will cause scratches. Emery cloth, emery paper, or emery stone should never be used on a commutator or collector ring since there is too much danger of causing electrical shorts.

TRUING THE COMMUTATOR

A commutator should be trued in place only if its condition has become so bad it cannot wait until the next shop overhaul for reconditioning. Large commutators in the 125- to 850-rpm range, as fitted on most electric propulsion motors and generators, usually operate satisfactorily with runouts up to 0.003 inch. Under no conditions, should you attempt to true a commutator in place unless there is sparking, excessive brush wear, or brush movement sufficient to fray the brush pigtales and wear the hammer plates. Do not confuse brush chatter with brush movement by runout.

Sandpapering will not correct flat spots, grooves, eccentricity, or out of round. You can correct some or all of these conditions by machine or hand stoning, by turning on a lathe, or by grinding with a rigidly supported stationary or revolving stone. There are a number of grades of commutator stone, from very coarse to very fine, that can be used for hand stoning or grinding with a rigidly supported stone. Use the finest stone that will do the job in a reasonable time. Do not use coarse stones as they tend to produce scratches which are hard to remove. In turning or grinding a commutator, it is essential that the cut be strictly parallel with the axis of the machine; otherwise, a taper on the commutator will result.

Do not disturb the commutator clamping bolts unless the bars are loose (one or more high bars). Then use a calibrated torque wrench and tighten only to the values specified by the manufacturer. For propulsion motors and generators, these values are available in the Naval Sea Systems Command. Make all other needed repairs, such as balancing, rebrasing armature connections, and repairing insulation faults prior to truing the commutator.

After the commutator is trued (whether by stoning, grinding, or turning), finish with a fine grade of stone or sandpaper, undercut the mica, chamfer the commutator bars, clean the commutator and brush holders, and wipe off the brushes with a clean, dry lintless cloth.

Hand Stoning

Hand stoning will remove flat spots, grooves, scoring and deep scratches but will not correct eccentricity, high bars, or an out-of-round condition. The machine should be running at, or slightly below, rated speed. Generators can normally be turned by their prime movers. However, some generator and motors must be turned by a pneumatic or other prime mover.

The stone should be formed or worn to the curvature of the commutator and should have a surface much larger than the largest flat spot to be removed. The stone is held in the hand and moved very slowly back and forth parallel to the axis of the commutator. Do not press too hard on the stone, just enough to keep it cutting. Being hasty or crowding the stone results in a rough surface, and sometimes a noncylindrical-shaped commutator. Avoid jamming the stone between the fixed and moving parts of the machine.

Machine Stoning

Stoning should be done by machine to correct eccentricity, high bars, or an out-of-round condition. In one method of machine stoning a commutator dressing stone tool (fig. 8-12) is mounted on the frame of the machine and holds a commutator stone against the commutator as the armature is rotated. This method works for some of the large open and dripproof machines. Otherwise, the armature may be removed from the machine and mounted in a lathe where it is rotated. Here the commutator stone is mounted in the tool post and fed to the commutator, or a rotating precision grinder is mounted in the tool post and the grinder wheel is fed to the commutator.

Grinding

When practical, the armature should be removed from the machine and placed in a lathe for grinding. If not, the commutator can be

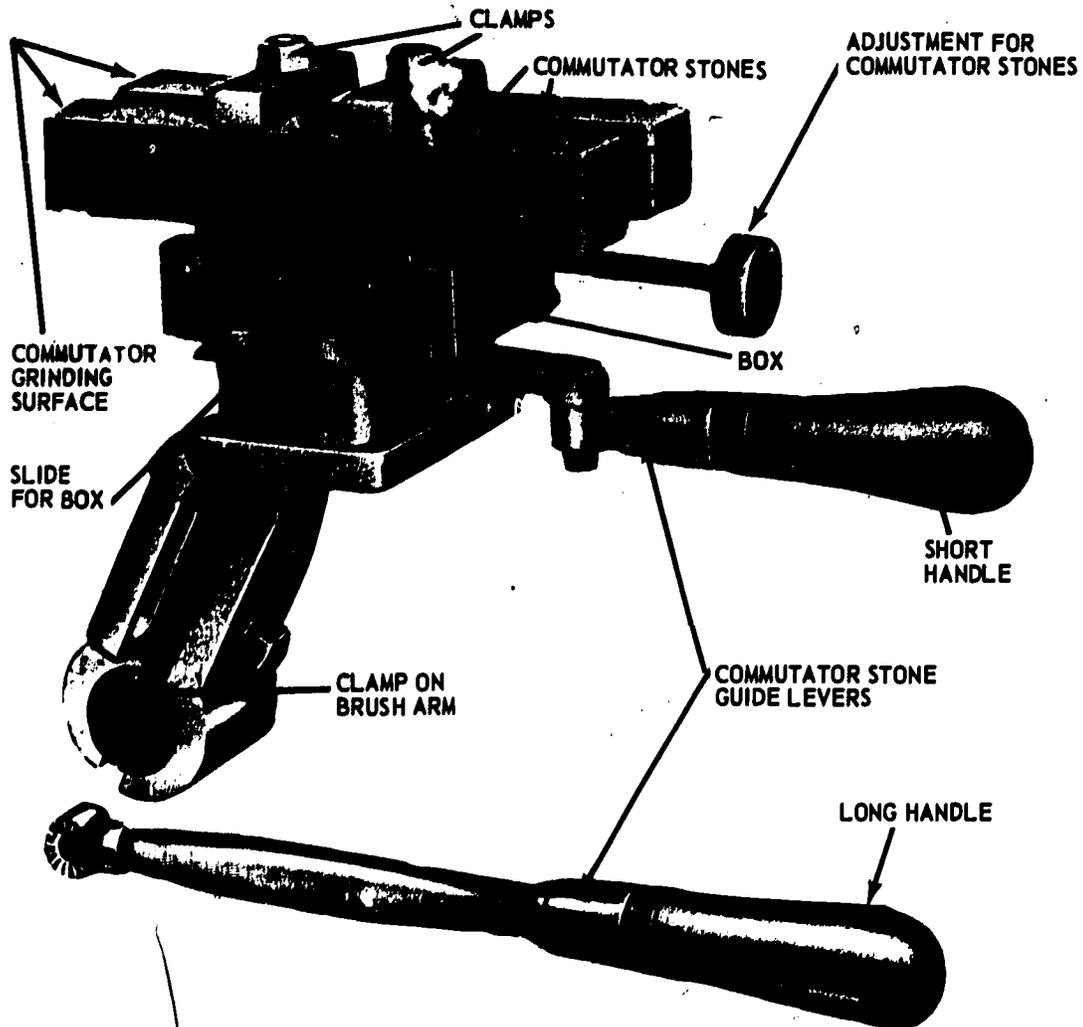


Figure 8-12.—Commutator dressing stone tool.


73.227X

ground in the machine provided there is not too much vibration, the windings can be adequately protected from grit, and suitable supports can be found for the stone.

When grinding the commutator in the machine, rotate the armature by using an external prime mover or, in the case of a motor, by supplying power through just enough brushes to take care of the load. Old brushes may be used for this purpose since they should be discarded after grinding. Whenever grinding is done in a motor, take care to avoid electric shock and fouling

of any of the equipment used with the moving parts of the motor.

When used, a commutator surface stone should be rigidly clamped in a holder and supported to keep the stone from chattering or digging into the commutator. The supports must provide for axial motion of the stone. Heavy cuts must be avoided since the stone wears away as it is moved back and forth. If a heavy cut were taken, the commutator would not have the same diameter at both ends. Commutator surfacing stones with tool post handles are carried in

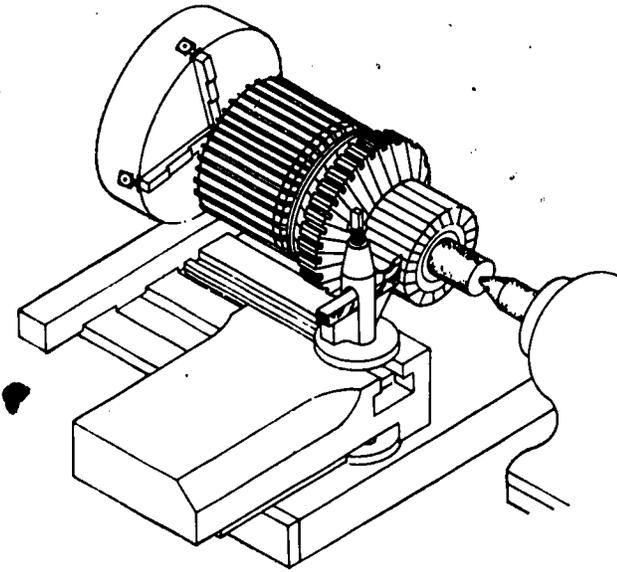

77.74

Figure 8-13.—Truing a commutator by turning.

stock in various sizes and grades (fine, medium, coarse, etc) in the Navy Supply System.

In truing a commutator with a rotating GRINDER, use a medium soft wheel so that the face will not fill up with copper too rapidly. Even if the commutator is badly distorted, use a light cut and take as many as needed. If a heavy cut is used, the commutator may be ground to a noncylindrical shape although initial eccentricity may be retained because of the elasticity of the support. The speed of the wheel should be that recommended by the manufacturer. The speed of the commutator should be one-half to three-fourths normal speed until most of the eccentricity has been removed. After this, the commutator should be rotated at approximately normal speed.

Lathe Turning

When overhauling an armature in the shop, true its commutator by supporting it in a lathe, turning, and cutting (figure 8-13). First make sure the armature shaft is straight and in good condition. With a diamond point tool, cut only enough material to true the commutator. This tool should be rounded sufficiently so that the cuts will overlap and not leave a rough thread

on the commutator. The proper cutting speed is about 100 feet per minute and the feed should be about 0.010 inch per revolution. The depth of cut should be not more than 0.010 inch. The reasons for a light cut are the same as those for grinding. In addition, when you take a heavy cut the turning tool tends to twist the commutator bars and cut deeper at one end than at the other. Do not remove small pits, burn spots between bars, or other mechanical imperfections in the bars unless they interfere with the free sliding of the brushes.


After turning the commutator, finish it with a hand stone and sandpaper. If balancing equipment is available, the entire rotating assembly should be balanced before it is reinstalled in the machine.

RESTORING THE COMMUTATOR FILM

After the oxide film has been removed from the commutator surface by sandpapering, stoning, grinding, or turning, it is necessary to restore the film before the machine is operated at or near full load.

Prior to passing any current through the commutator, the surface should be mechanically smooth and any sharp edges or slivers on the bar edges should be removed by a hand-beveling tool. If there are noticeable scratches or roughness, the commutator should be burnished by very fine sandpaper (no coarser than No. 0000) or by a commercial burnishing stone (Military Specification MIL-S-17346). After burnishing, carefully brush any debris from between the commutator bars. Before reinstalling a shop-overhauled armature in its motor or generator, make sure the commutator surface is smooth, the bar edges are leveled, and the spaces between bars are clean.

Any commutator which has been resurfaced should undergo a seasoning process to restore its oxide film prior to being operated at or near full load. Start with a 25 percent load and operate for 4 hours. Then increase the load by 10 percent increments every hour until full load is reached. To get the machine on full load in the minimum time, run at 25 percent load for 3 hours and then increase the load by 15 percent every hour until full load is reached. The shorter seasoning period is not recommended unless the machine is urgently needed.

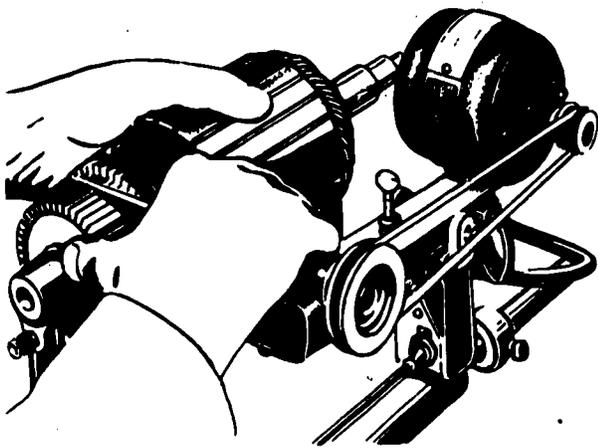

2.87
Figure 8-14.—Undercutting commutator mica with undercutter.

UNDERCUTTING MICA

High mica or feather-edged mica may cause sparking, a rough or uneven commutator surface, streaking or threading, or other difficulties. Rough or uneven commutator surfaces may also be caused by failure to chamfer the commutator segments after undercutting. Tools are available for undercutting, chamfering, and smoothing slot edges. Figure 8-14 shows a rotary, motor-driven tool for undercutting mica. The rotary cutters are either U or V-shaped. U-slots will give long wear and are best suited to slow speed machines or machines which operate in a clean atmosphere and require little maintenance. V-slots, which are more quiet than U-slots, are better where dirt and dust are present. The proper thickness for a U-shaped cutter is equal to the thickness of the mica plus or minus 0.001 inch. In general, it is best not to cut U-shaped slots deeper than 1/32 or at most 3/64 inch. V-shaped slots are cut to a depth which will remove some copper at the top.

If a mica undercutter is not available, use handtools to cut the mica as shown in figure 8-15. Do not use a lubricant. Also, do not widen the commutator slots by removing metal from the bars, nor leave a thin edge of mica next to the bars.

After removing the high mica, smooth off all burrs. Then polish the commutator and test.

Figure 8-16 shows examples of good and poor undercutting.

INSPECTING ARMATURES, ROTORS, AND WINDINGS


Preventive maintenance of an armature, rotor, or winding consists mainly of periodic inspections and tests to determine its condition and proper cleaning practices to preserve insulation.

ARMATURES

Frequent checks must be made of the condition of the banding wire that holds down the windings of the d-c armature to see that the wires are tight, undamaged, and have not shifted. At the same time, the clips securing the wires should be checked to see if solder has loosened.

Some armature troubles may be detected while making inspections of running machines. Heat and the odor of burning insulation may indicate a short-circuited armature coil. In a coil that has some turns shorted, the resistance of one turn of the coil will be very low, and the voltage generated in that turn will cause a high-current flow, resulting in excessive heating, which will cause the insulation to burn. If the armature is readily accessible, the short-circuited coil can be detected immediately after stopping the machine because the shorted coil will be much hotter than the others. In idle machines, a short-circuited coil may be identified by the presence of charred insulation.

An open armature coil in a running machine is indicated by a bright spark, which appears

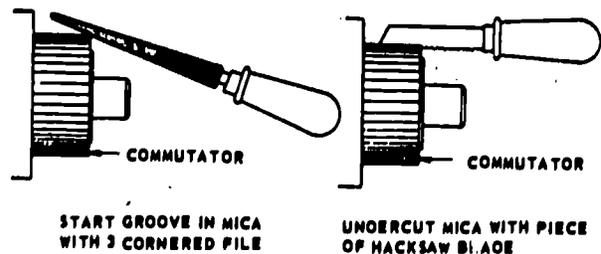

2.88
Figure 8-15.—Undercutting mica with a hacksaw blade.



Figure 8-16.—Example of good and poor mica undercutting.

2.89

to pass completely around the commutator. When the segment to which the coil is connected passes under the brushes, the brushes momentarily complete the circuit; when the segment leaves the brushes, the circuit is broken, causing a spark to jump the gap. Eventually, it will definitely locate itself by scarring the commutator segment to which one end of the open coil is connected.

When a ground occurs in an armature coil of a running machine, it will cause the ground test lamps on the main switchboard to flicker on and off as the grounded coil segment passes from brush to brush during rotation of the armature. Two grounded coils result in the same effect as a short circuit across a group of coils. Overheating will occur in all of the coils in the group and burn out the winding. Grounded coils in idle machines can be detected by measuring insulation resistance. A megger, or similar insulation measuring device can be connected to the commutator and to the shaft

or frame of the machine in order to properly measure the resistance of the insulation of the coils.

Emergency repairs can be effected by cutting out a short-circuited or open-circuited armature coil. This will permit restoration of the machine to service until permanent repairs can be made. However, permanent repairs should be made as soon as possible. The coil is cut out by disconnecting both ends of the coil and installing a jumper between the two risers from which the coil was disconnected. The coil itself is then cut at both the front and rear of the armature to prevent overheating of the damaged coil. A continuity test from one end to the back of the coil will locate the turns of the faulty coil. If a pin or needle is used to puncture the insulation for this test, insulating varnish can be used to fill the tiny hole in the event the wrong coil is pierced. All conducting surfaces exposed by the change in connections

should be insulated and all loose ends should be tied securely to prevent vibration.

A-C ROTORS

Basically, the rotor of an a-c motor is a squirrel cage rotor or a wound rotor. The squirrel cage rotor usually consists of heavy copper or aluminum bars fitted into slots in the rotor frame. These bars are connected to short-circuiting end rings by being cast or brazed or welded together (fig. 8-17). In many cases, the cage rotor is manufactured by die-casting the rotor bars, end rings, and cooling fans into one piece. The cage rotor requires less attention than the wound rotor. However, the cage rotor should be kept clean, and the rotor bars must be checked periodically for evidence of loose or fractured bars and localized overheating.

Wound rotors (fig. 8-18) consist of wound coils insulated from each other and layed in slots in the rotor core. These coils are wye-connected and terminate at three slip rings.

Wound rotors, like other windings, require periodic inspections, tests, and cleaning. The insulation resistance determines if grounds are present. An open circuit in a wound rotor may

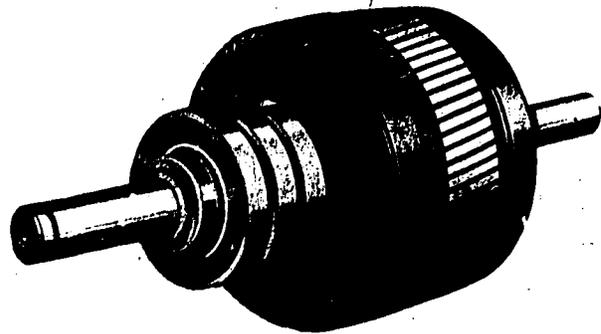


Figure 8-18.—Wound rotor.


77.78

cause reduced torque accompanied by a growling noise, or failure to start under load. In addition to reduced torque, a short circuit in the rotor windings may cause excessive vibration, sparking at the brushes, and uneven collector ring wear. With the brushes removed from the collector rings, a continuity check of the rotor coils will reveal the presence of a faulty coil.

FIELD COILS

The insulation of the field coils should be tested periodically with a resistance-measuring device. If a ground is detected in the field circuits (shunt, series, and interpole) of a d-c machine, the circuits must be disconnected from each other and tested separately to locate the grounded circuit. Then all the coils in that circuit must be opened and tested separately to locate the grounded coil, which can then be repaired or replaced as necessary.

If an open circuit develops in the field windings of an a-c or d-c generator that is carrying a load, it will be indicated by the immediate loss of load and voltage. An open in the shunt field winding of an operating d-c motor may be indicated by an increase in motor speed, excessive armature current, heavy sparking, or stalling of the motor. When an open occurs in the field circuit of a machine, it must be secured immediately and examined to locate the faulty circuit. The open circuit will usually occur at the connections between the coils and can be detected by visual inspection. An open in the coils generally causes enough damage to permit detection by visual inspection.

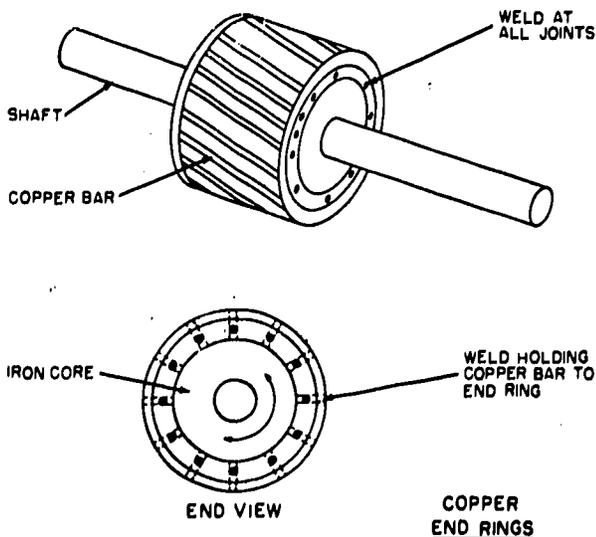

77.77(77C)

Figure 8-17.—Squirrel cage rotor.

It should be noted that the opening of an energized field circuit induces high voltage that can puncture field insulation and could present a safety hazard.

A-C STATOR COILS

A-c stator windings require the same careful attention as other electrical windings. For a machine to function properly, the stator windings must be free from grounds, short circuits, and open circuits.

A short circuit in the stator of an a-c machine will produce smoke, flame, or the odor of charred insulation. The machine must be secured immediately and tests conducted to find the reason for the abnormal condition.

The first and easiest test that should be conducted is to test the insulation resistance of the winding. This test is made with a megohmmeter or similar resistance-measuring instrument. Connect one instrument lead to ground and the other to each motor lead, crank the meter handle and read the scale on the meter face. If the insulation resistance is in the order of one megohm or above, the stator is not grounded and other tests should be made to locate the trouble.

Next test for continuity with an ohmmeter by connecting the test leads to any two motor leads and then to the next two leads, until all leads have been tested for continuity between each other. Whether the motor is wye or delta-connected you should get nearly zero indication on the ohmmeter between any two leads. A high resistance reading between any two leads is a good indication of an open phase winding.

For your next check, determine whether or not there are any mechanical difficulties, such as frozen bearings or a frozen pump. First disconnect the motor from the driven unit. Spin the motor shaft to see if it is free to turn. Then check the driven end for freedom of movement. If the driven end is frozen you need check no further. Inform the maintenance person responsible for the driven end of your findings.

If the stator windings are burned out or opened, the motor must be disassembled. The proper procedure for disassembly is given later in this chapter.

A visual inspection of the stator will usually reveal where the trouble lies. If the stator is burned out, it must be rewound. If just one phase is open, however, it is possible to effect an emergency repair by carefully soldering the

opened leads back together. Be extra careful in soldering these leads as further damage could result if they are inadvertently shorted. After accomplishing this emergency repair, test the stator winding with low voltage to check the phase balance.


DISASSEMBLY AND REASSEMBLY OF MOTORS AND GENERATORS

When it becomes necessary to disassemble and reassemble a large motor or generator, follow the procedures outlined in the manufacturer's instruction book, exercising care to prevent damage to any part of the machine. The machine rotors should be supported, while being moved or when stationary, by slings or blocking under the shaft or by a padded cradle or thickly folded canvas under the core laminations. To lift the rotor, rope slings (separated by a spreader to prevent the slings coming in contact with the a-c rotor or d-c armature coils) should be placed under the shaft, clear of the bearing journals. If construction of the shaft provides no room for a sling except around the journals, they must be protected with heavy paper or canvas before applying the sling. When the whole unit (stator and rotor) is to be lifted by lifting the stator, the bottom of the air gap must be tightly shimmed unless both ends of the shaft are supported in bearings. It is easily possible, by rough handling or careless use of bars or hooks, to do more damage to a machine during disassembly and assembly than it will receive in years of normal service.

Never be hasty or careless in disassembling a generator or motor. Handle the delicate components with care, so as not to damage them, or to create the need for additional adjustment. Use the proper tools; label the parts as you dismantle them, and store them in an orderly arrangement in a safe place. Note down the necessary information so that you will have no trouble in reassembly.

If you have done a careful job of breaking down a machine into its components, the process of reassembling it should be the reverse order of taking it down.

A few simple steps are to be taken when disassembling a motor or generator. Make sure you mark the frame and mating end bells (fig. 8-19), using a different mark for each end. When separating the end bells from the frame, use a mallet or block of wood with a hammer (fig. 8-20) but never pry mating surfaces apart

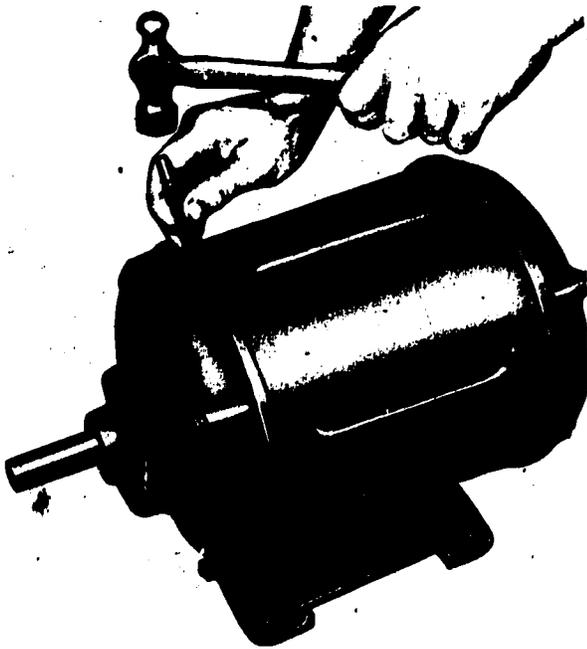

73.223
Figure 8-19.—Marking a motor frame and end bell.



73.223.2
Figure 8-20.—Parting end bells with a hammer and wood block.

with a metal object, such as, a screwdriver. To prevent damaging the brushes, lift them from the commutator and/or slip rings (if present) before removing the rotor. Protect the windings, when necessary, by inserting thin strips of wax paper between rotor and stator.

When removing bearings, an arbor press can be used if proper precautions are taken. Place a pair of flat steel blocks under the inner ring or both rings of the bearing. Never place blocks under the outer ring only. Then line up the shaft vertically above the bearing, and place a soft pad between shaft and press ram. After making sure the shaft is started straight in the bearing, press the shaft into the bearing until the bearing is flush against the shoulder of the shaft. A gear puller may be used to remove a rotor bearing. However, be careful.

Never remove the bearings unless they are in poor condition, or unless they must be removed to allow for removal of the end bells. If you are taking off a ball bearing, and plan to use it again, be careful to apply pressure to the inner race only. If pressure has been applied

to the outer race, you will have to discard the bearing.


Never use a cleaning solvent on a sealed or a semisealed ball bearing. Store these bearings in a clean piece of waxed paper, till you are ready to use them.

Clean the end bells with a brush and an approved solvent. Check them for cracks, burrs, nicks, and excessive paint, as well as for dirt.


ARMATURE TESTING AND REPAIRING

An armature is bench tested for grounds, opens, and shorts at disassembly in order to help determine a d-c motor or generator failure, and if repairs are required.

Locating armature grounds (fig. 8-21) may be done with a test lamp, an ohmmeter, or a growler (if it is equipped with test probes and a meter). The d-c armature is checked for grounds by placing one probe on the armature shaft and the other probe on successive bars of the commutator until all commutator segments are checked.

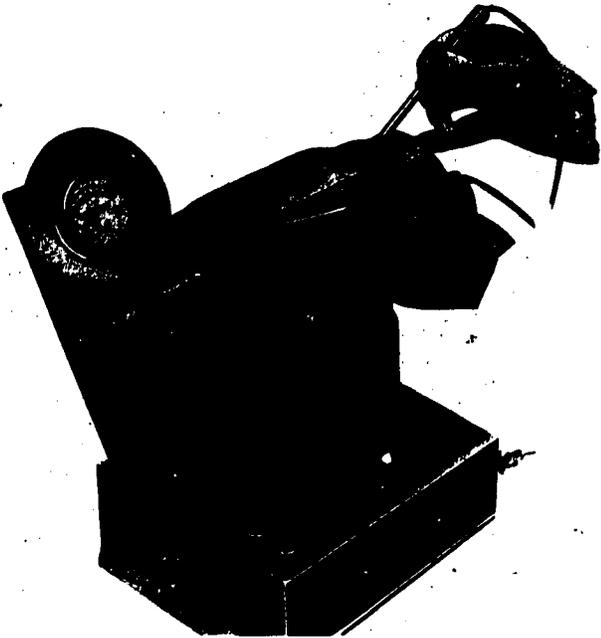

2.92
Figure 8-21.—Testing armature for grounds.

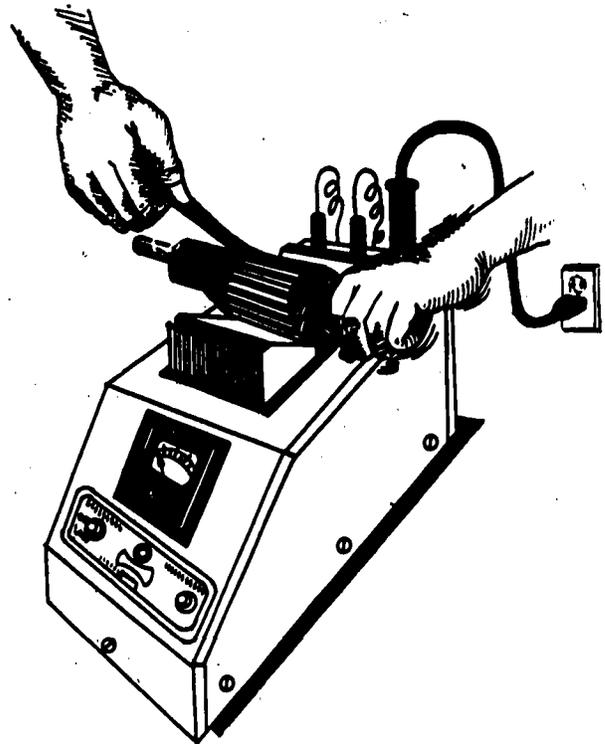

2.90
Figure 8-23.—Checking armature shorts with growler.



2.93
Figure 8-22.—Testing armature coils for open circuit.

Armature opens may be determined with test equipment having test probes to make commutator bar-to-bar contact around the armature (fig. 8-22). Test equipment may be an incandescent lamp with a low voltage source, a low reading ohmmeter, a millammeter with a rheostat and a 6-volt battery, or a growler.

An armature coil internally shorted within itself is determined with a growler. The external growler (fig. 8-23 and 8-24) is plugged into a 120-volt, 60-hertz power supply and switched to ON position. A hacksaw blade is held parallel to the windings and run across the top of the armature. The armature is continually rotated in the growler and the hacksaw blade test made until the complete armature has been checked. If a short exists in the winding below the hacksaw blade, the blade will vibrate noticeably and will cause a chattering noise. Larger armatures, which do not fit in an external growler, may be checked by moving an internal growler over the outside surface of the armature. Internal

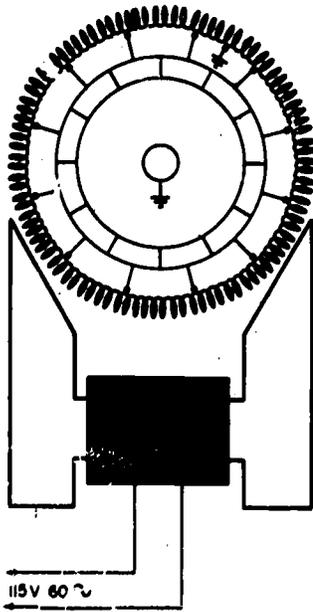


Figure 8-24.— External growler construction. 2.92.2(77C)

growlers are used primarily to check stator windings and are covered later under three-phase stator repair.

Armature commutators should not be out-of-round more than one mil (.001 inch). A dial indicator is used to give commutator radius checks (figure 8-25).

TYPES OF ARMATURE WINDINGS

You must be able to identify armature windings to interpret trouble indications and to make the necessary repairs.

Lap and Wave Windings

Armature windings, irrespective of how the elements are placed on the armature core, are generally classified as LAP or WAVE windings. The classification designates the method of connecting the ends of the elements, or coils, to the commutator (fig. 8-26). If the ends



Figure 8-25.— Measuring commutator out-of-round with dial indicator. 2.85

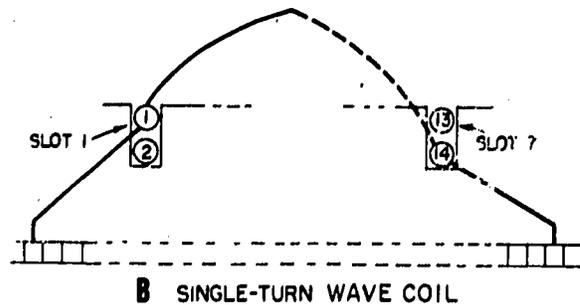
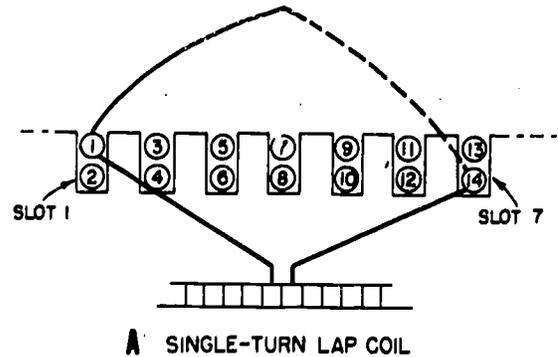


Figure 8-26.— Classification of armature windings. 111.1

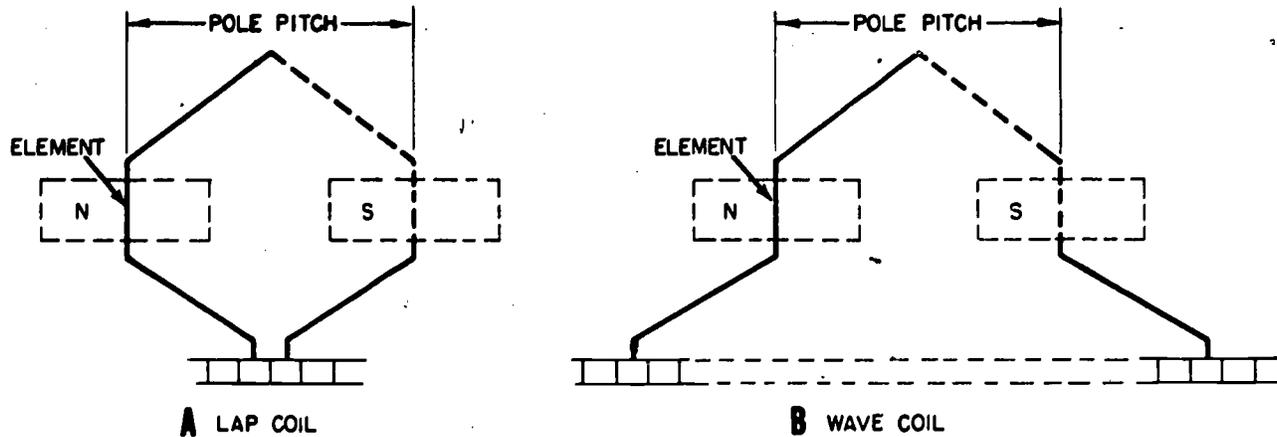


Figure 8-27.—Full-pitch coils.

111.2

of the coil are connected to adjacent commutator segments, or to segments that are close together, the coil is designated as a lap-connected coil, and the winding is a lapwinding (fig. 8-26A). On the other hand, if the ends of a coil are connected to commutator segments approximately two pole pitches apart, the coil is designated as a wave-connected coil, and the winding is a wave winding (figs. 8-26B and 8-27B).

sides of a single-coil type of winding (fig. 8-26). Thus one side of the winding element is placed in the top of a slot, and the other side is placed in the bottom of another slot. It is immaterial which side of the element is placed in the top or bottom of the slot. In practice (observing the armature from the commutator end) the right side of the coil is usually placed in the bottom of one slot and the left side is placed in the top of another slot. The coil sides are arbitrarily numbered so that all

PITCH.—Both lap and wave windings are placed on the armature core so that the two sides of an element occupy slots that are influenced by adjacent poles of opposite polarity, and the emf's generated in the two sides add together. In other words, if the left side of a coil momentarily occupies a position under the center of a north pole, the right side of the same coil will occupy a position under approximately the center of an adjacent south pole. The distance between the centers of two adjacent poles is the pole pitch. The span of one coil should be equal or nearly equal to one pole pitch. If a coil spans exactly one pole pitch, the winding is **FULL PITCH** (fig. 8-27), and if a coil spans less than one pole pitch, the winding is **FRACTIONAL PITCH**. **COIL PITCH** is recorded and identified by the number of slots spanned by the coil in the armature (fig. 8-28).

NUMBERING.—D-c armature windings are usually two-layer windings in which each slot contains two coil

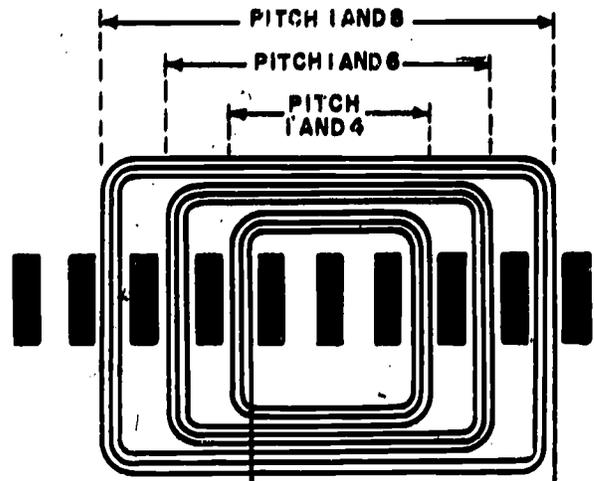


Figure 8-28.— Pole pitch.

73.132

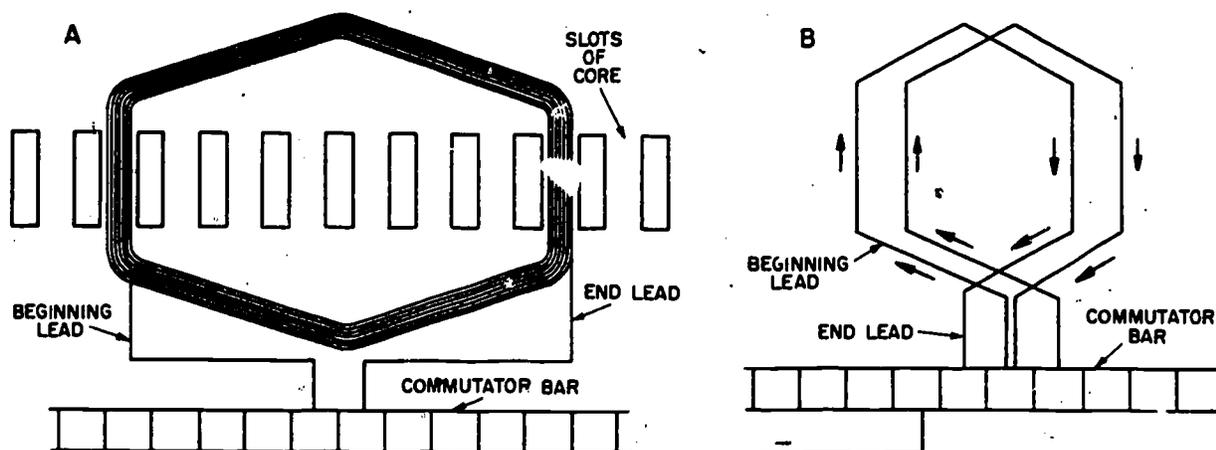


Figure 8-30.— Simplex lap windings; (A) progressive, (B) retrogressive.

73.230

lap winding is one in which the beginning and ending leads of a lap wound coil are connected to adjacent commutator bars. Duplex and triplex lap windings have their leads connected two or three bars apart, respectively.

Progressive and retrogressive simplex lap windings are shown in figure 8-30. As you can see, the progressive lap winding is one in which the current flowing in the coil terminates in the commutator bar clockwise adjacent to the starting bar as you view the armature from the commutator end. A retrogressive simplex lap winding is one in which the current in the coil terminates in the bar counterclockwise adjacent to the starting bar.

Simplex progressive and retrogressive wave windings are shown in figure 8-31. Compare these with the lap windings shown in figure 8-30.

TEST PROCEDURES


Use of an organized test procedure will enable you to distinguish the types of armature windings. One method is to use a low-reading ohmmeter to indicate variations in the resistance reading as the test probes are shifted around on the commutator. If a low-reading ohmmeter is not available, a milliammeter connected in series with a rheostat and a 6-volt battery can be used (fig. 8-32).

Simplex Lap


A schematic diagram of a simplex lap winding is illustrated in figure 8-33. With the test probes placed on adjacent segments, the ammeter will indicate a maximum because the resistance of only one coil shunts the remainder of the winding, and the resistance added to the test circuit is at minimum. Move one test probe to the next segment, and the ammeter reading decreases because the resistance between the probes has increased. With one probe stationary and the other probe contacting each segment in succession around the commutator, the ammeter indications will decrease steadily until the test probes are directly opposite each other, and then start increasing steadily as the other half of the winding is tested. These indications are obtained because of the method of connecting the coils to the commutator, which is determined by the type of winding. A simplex lap winding is the only winding that gives these indications.

Simplex Wave

An important rule to remember for all wave windings is that the ends of each coil are connected to commutator segments that are approximately two pole pitches apart. Using the test procedure described previously, the maximum ammeter reading is indicated when the test probes are connected across that portion

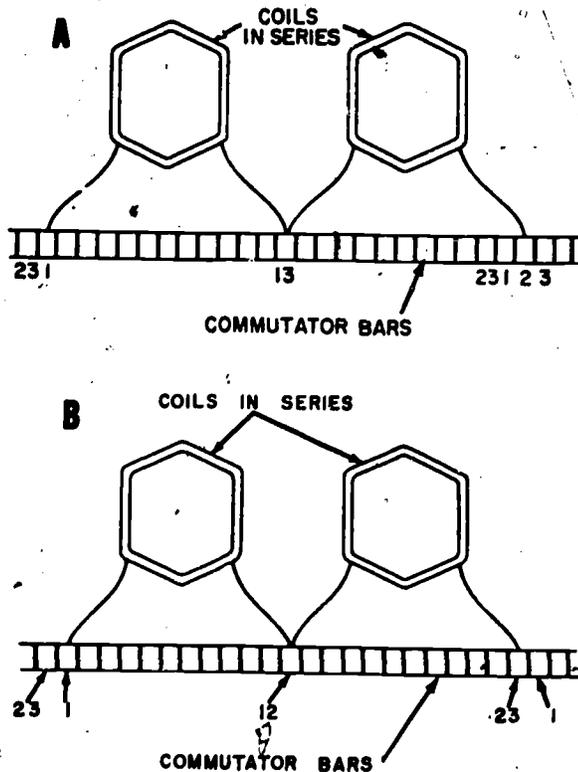

73.231
Figure 8-31.—Four-pole simplex wave windings; (A) progressive, (B) retrogressive.

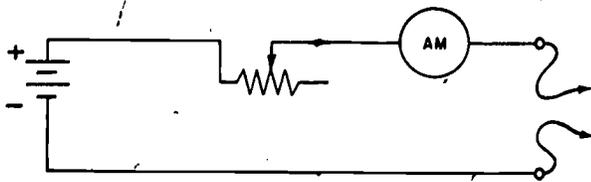

111.6
Figure 8-32.—Test circuit for measuring armature resistance.


of the winding in which one coil shunts the remaining portion of the winding. Hence, in all wave windings the maximum reading will be indicated when the probes are placed on commutator segments that are approximately two pole pitches apart. The minimum ammeter reading will occur when the probes are placed on segments approximately one pole pitch apart.

With one probe stationary on segment 1 (fig. 8-34) and the other probe moved around the commutator from segment to segment (2, 3, 4, and so forth), the ammeter readings steadily decrease until the probes are approximately one pole pitch apart, and then the readings steadily increase until the probes are approximately two pole pitches apart.


If the probe is circled around the remainder of the commutator, the readings will decrease and then increase once for each pair of poles. In the identification of a 6-pole, simplex wave winding there will be three successive decreases and increases in the meter readings as the commutator is circled once. Similarly, in a 4-pole simplex wave winding there will be two successive decreases and increases in the meter readings. Thus, a simplex wave winding can be readily distinguished from a simplex lap winding by measuring the resistances of the armature coils.

ARMATURE REWINDING

When tests or observation shows that a d-c armature or field needs replacing and there is no replacement available, then rewinding is necessary.

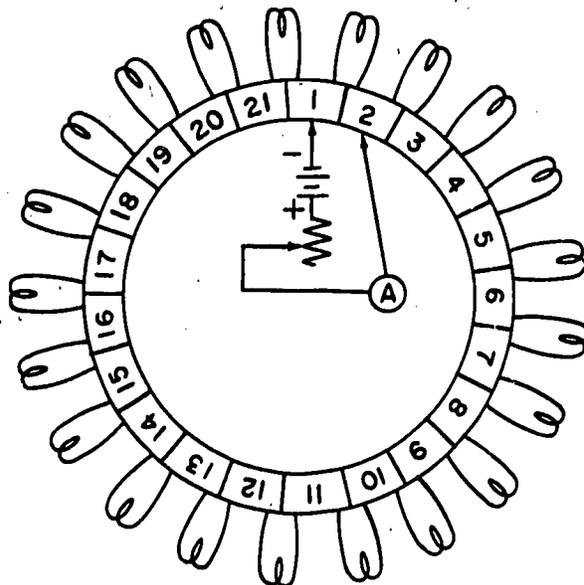

111.7
Figure 8-33.—Schematic of simplex lap winding.

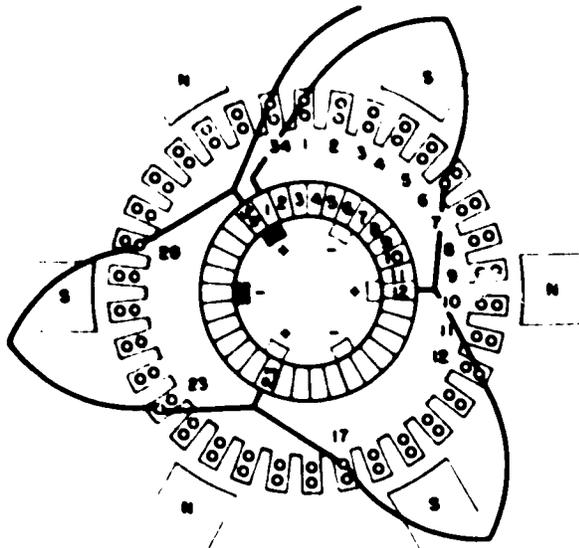

111.12
Figure 8-34.—Portion of 6-pole, simplex wave winding.

The complete process of armature rewinding involves stripping the armature, insulating the core, placing in machine wound coils or rewinding the coils into the slots by hand, connecting the commutator, testing, varnishing, baking and balancing.

HANDTOOLS

The handtools used in rewinding armatures are relatively few and simple. In fact, they are usually handmade by Electrician's Mates engaged in this work. Figure 8-35 shows the following tools: (1) fiber horn for shaping the coil ends after the coils are placed in the slots, (2) steel slot drift, or tamping tool, for driving the coils to the bottom of partly closed slots, (3) lead lifter for lifting the coil leads from the commutator risers, (4) hacksaw blades for removing the fiber wedges that hold the coils in the slots, (5) saw for undercutting the commutator mica between the segments, (6) wedge driver for driving the fiber wedges out of the slots, (7) lead drift for cutting off the leads at the risers, (8) rotation indicator as an aid to determine the proper connections of the windings, (9) wire scraper for removing the insulation from the ends of the coil leads, and (10) wedge

insertor for driving the wedges into partly closed slots.


Stripping

Before stripping an armature, record all available winding data on an armature data card, as shown in figure 8-36 for use in rewinding and for future reference.

After recording the initial winding data, perform a bar-to-bar test to determine if the winding is lap or wave and record this information on the armature data card and proceed to disconnect and remove the coils.

During this process, accumulate the winding data that was impossible to obtain before stripping the armature. Remove the banding wires by filing them in two places. If banding wires are not used, remove the wedges in the slots. A simple means of removing the wedges is to place a hacksaw blade, with the teeth down, on the wedge. Tap the top of the blade to set the teeth in the wedge and then drive out the wedge by tapping the end of the blade.

Next, unsolder the coil leads from the commutator and raise the top sides of the coils the

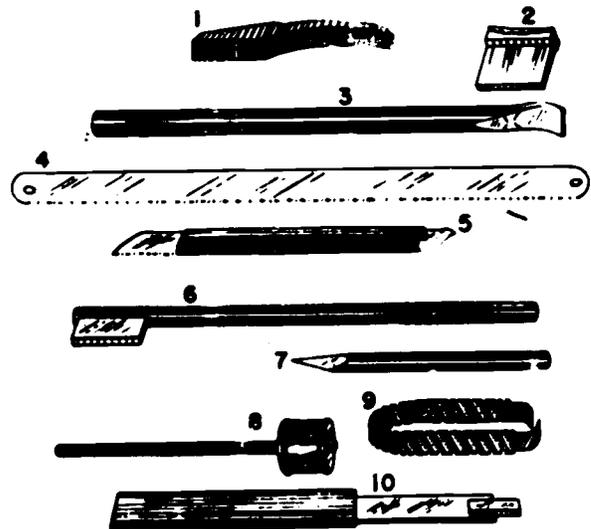

111.17
Figure 8-35.—Armature rewinding handtools.

DC GENERATOR-MOTOR DATA			
NAME PLATE DATA			
Make	Serial #		
Volts	Amps	KW/HP	
RPM	Temp Rise	Motor Type	
Model	Style	Frame #	
ARMATURE DATA			
Lap, or Wave Winding		
No. of Segments		
Type of Connection or Duplex, or Triplex Winding		
Coil Pitch	Coils per Slot		
Progressive, or Retrogressive Winding	Wire Size		
Turns per Coil	Commutator Pitch		
No. Active Coils	No. Dummy Coils		
Name	Date		

Figure 8-36.—D-c motor or generator data card.

77.300.1

distance of a coil throw (distance between the two halves of a coil). The bottom side of a coil is now accessible, and the other coils can be removed one after the other. Exercise care to preserve at least one of the coils in its original shape for use as a guide in forming in the new coils. Next, record the wire size, number of turns in a coil, and type of insulation on the coils and in the slots.

To raise the coils without damaging the insulation, use a small block of wood as a fulcrum resting on the armature core and a steel bar or piece of wood as a lever.

After the coil is partly raised, drive a tapered fiber wedge between the top and bottom coils within the slot to finish raising the top coil from the slot. After stripping the armature, remove all dirt, grease, rust, and scale by sand blasting. File each slot to remove any burrs or slivers and clean the core thoroughly with compressed air. Immerse the cleaned armature core in a varnish and bake in accordance with the steps in table 8-1, using a dilute varnish (20 percent solution) of the same type of varnish to be used after winding.

This treatment prevents the formation of oxides and forms a base for the adherence of the final varnish treatment.

Winding Armature Coils

Formed coils are wound on a coil-winding machine and pulled into the desired shape on

the forming machine. The shape of the coil is determined by the old coil. The two wires forming the leads are taped with cotton or reinforced mica tape. The binder insulation, consisting of cotton or glass tape, is applied to the entire coil surface.

The coil is now sprayed with a clear air-drying varnish (grade CA), which conforms to Military Specification, MIL-V-1137. After the varnish has dried, the coil ends are tinned to ensure a good connection to the commutator.

Preformed windings should be used on large armatures, but it is more practical to wind small armatures by hand. End room is very limited, and windings must be drawn up tightly to the armature core. Figure 8-37 shows the method of winding an armature by hand. One armature in the figure is small enough to be hand-held. The other, too heavy for this, rests on a support.

Placing Coils in Slots

Before assembling the coils insulate the armature core. This step is of extreme importance; if the armature contacts the coils, you will have to do your work over. Clean the core slots and ends and true up the laminations. Use polyamide paper, and let it extend 1/4 inch beyond the slots, to prevent the edges of the

ELECTRICIAN'S MATE 3 & 2

Table 8-1.—Varnishing Procedure

Typical Treating schedule.—The following treating schedule may be used as a guide in processing electrical windings. The baking time and temperature may vary depending on the type and grade of varnish used and the size of the winding being processed:

Armature coils, armatures, stators and field coils

Procedure	Processing Rebuilt Armature Coils, Armatures, Stators, and Field Coils	
	Class A, B, and F	Class H and N
Step 1 Prebaking	Put into oven at 150°C (302°F). Hold at temperature for 2-4 hours depending on size of equipment. Cool to approximately 40°C (104°F).	
Step 2 Dipping	Immerse hot coils or wound apparatus (40°C) (104°F) in organic varnish, clear baking until bubbling ceases. Viscosity should be held between 250-350 centipoises. Thin with xylene if necessary to maintain viscosity.	Immerse hot coils or wound apparatus (40°C) (104°F) in silicone varnish, clear baking for not over 5 minutes. Viscosity should be held between 125-225 centipoises. Thin with xylene, if necessary to maintain viscosity.
Step 3 Draining	Drain and air-dry for 1 hour. Rotate wound apparatus during draining to prevent pocketing the varnish.	
Step 4 Cleaning	After draining but before baking, the metal surfaces of the armature, the bore of the stator, and the pole faces of the field structure should be cleaned by wiping with a cloth moistened with solvent.	
Step 5 Baking	Put into circulating type, forced exhaust, baking oven at temperature of 150°C (302°F) for 6-8 hours.	Put into circulating type, forced exhaust, baking oven at temperature of 200°C (392°F) for 2 hours.
Step 6 Cooling	Remove from oven and cool to approximately 50°C (122°F).	
Step 7 Second treatment	Repeat steps 2 (for 1 minute immersion) 3, 4, 5, and 6.	
Step 8 Third treatment	Repeat steps 2 (for 1 minute immersion) 3, 4, 5, and 6.	Repeat steps 2 (for 1 minute immersion) 3, 4, 5 (bake additional 8 hours at 232°C (450°F), and 6.

Varnishing procedures are revised periodically. For the most recent procedures consult *Naval Ship's Technical Manual Chapter 300*.

8-282.19

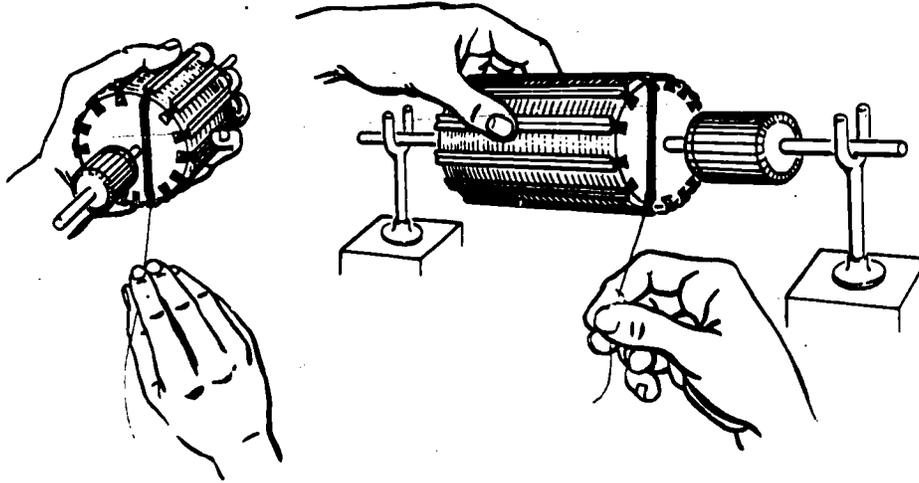



Figure 8-37.—Winding armatures by hand.

73.233

laminations from injuring the coils. Figure 8-38 shows a method of insulating the slots.

The ground insulation, consisting of flexible mica wrappers or layers of reinforced mica tape is applied to the coil sides that lie in the slots. The formed coils are next placed in the slots, the lower side first and then the upper side, until all the coils are inserted and the winding is completed. Be certain that the coil pitch is correct. A strip of rigid laminate, type GME-MIL-P-15037, is placed in each slot between the lower and upper coil sides, and a similar strip is placed at the back and front of the armature where top and bottom sides cross each other. If the slots have straight sides, they are filled up with a strip of rigid laminate type GME-MIL-P-15037 on the tops of the coils so that they can be held down by the banding wires. In some armatures the slots are shaped so that fiber wedges can be driven in each slot from one end to hold the coils in place.

Before soldering the coil ends to the commutator segments, test the winding for grounds, opens, and shorts. Exercise care (when soldering) to prevent solder from falling or running down the back of the commutator, as this would result in a short circuit. Tip the armature so that the solder will not flow down the back of the commutator. Place the tip of the soldering iron on the commutator near the riser and wait until the iron heats the riser sufficiently to

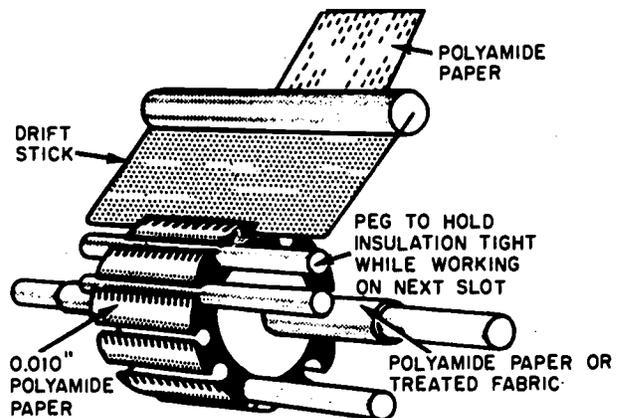

77.232

Figure 8-38.—Continuous strip method of insulating slots.

melt the solder. Touch the solder to the riser and allow it to flow down and around the lead and into the wire slot, and then remove the iron.

The ordinary soldering iron cannot supply sufficient heat fast enough to perform a satisfactory soldering job on a large armature.

Therefore, apply a soft flame from an acetylene torch to the outside end of the commutator segments to the riser ends where connections are made. Tin the coil ends (to be connected to the commutator risers) with the soldering iron. Next, tin the slots in the commutator risers with heat from the torch. Then make the connections while applying the flame to the outside end of the commutator segments. Wrap the winding in appropriate tape for protection (when making the commutator connections) because too much heat can damage the winding insulation. The completed armature winding is checked electrically for continuity and for shorted turns.

To prevent centrifugal force from throwing the coils outward, wind a band of high-grade steel piano wire on a strip of leatheroid, which is placed around the armature and over the coils about 2 inches from the edge of the core. This is done before the armature has been dipped and after prebaking.

It is preferable to place the banding wires on the armature while the windings are hot because the insulation shrinks when heated, is more flexible, and can be pulled down tightly much easier than when the armature is cold. When the first banding wire is wound on the armature, small tin clips, with insulation under them, are inserted under the wire. When the required number of turns has been applied, the ends of these clips are turned up over the wires to hold them tightly side by side. The clips are then soldered with a tin solder, and a thin coat of solder is run over the entire band to secure the wires together.

The end windings are secured, if necessary, by groups of wire wound on insulating hoods to protect the coils. On the commutator end, strips of thin mica with overlapping ends are usually placed on the commutator neck and held by a few turns of cord. On large armatures, banding wires are sometimes placed over the laminated portion of the armature. The laminations on these armatures have notches in which the banding wire is placed.

If it is necessary to rebuild a commutator, use molding micanite to insulate between the spider and the commutator. Commutator mica is used as insulation between the segments. After the commutator is assembled, it is heated and tightened with a clamping ring.

If shrink rings are provided, they are not put on until the commutator has been tightened (while hot) and the banding wires tightly placed around it. If defective, small commutators are usually completely replaced.

Insulating Materials

Current-carrying conductors require insulation for various reasons. An understanding of the different types of insulation used will be of help to you in the repair of electrical equipment. The different classes of insulation materials are listed in table 8-2.

There are certain conditions when the re-winding of Class A and B insulated motors with Class H insulation becomes necessary. This is done to prevent a recurrence of insulation breakdown and ultimate failure. Here are examples of such conditions.

1. Where the location's ambient temperature exceeds the equipment design ambient (usually 50°C).
2. Where excessive moisture (usually condensate) is present and the windings are exposed.
3. Where the service life of existing equipment is shortened by overload, heat moisture, or a combination of these factors.

Silicone insulation is not a "cure all" for motor and generator failures. Before deciding to use silicone insulation the installation should be checked to determine the cause of failure. Misalignment of bearings, mounting bolts dislocated, a bent shaft, failure or inoperativeness of overload devices or similar causes may have initiated the failure rather than the insulation itself.

Consideration must be given to the conditions to which the windings will be subjected during winding, varnishing, and drying out or baking. Class A, B, and F materials are generally tough and will take a lot of abuse. Class H and N materials are considered somewhat fragile and should be handled with care in order not to damage the resin film.

Varnishing

Prior to varnish treating, the windings or coils should be prebaked to remove all moisture. The windings or coils should be left to cool to a temperature not less than 10°C above room temperature prior to immersion in varnish. The windings or coils should remain in the varnish until bubbling ceases. After dipping, the windings or coils should be allowed to drain and then are baked at the prescribed temperature for the time shown in table 8-1. A maximum of three dips and bakes shall be used. The baking ovens shall be rated at 350°F for Class A,

Table 8-2.—Classes of Insulation.


CLASS INSULATION SYSTEM	CLASS MATERIAL	MATERIALS OR COMBINATION OF MATERIALS	REQUIRED THERMAL LIFE
A	105	cotton, silk, and paper when suitably impregnated or coated, or when immersed in a dielectric liquid such as oil.	105°C
B	130	mica, glass fiber, asbestos, etc., with suitable bonding substances.	130°C
F	155	mica, glass fiber, asbestos, etc., with suitable bonding substances.	155°C
H	180	silicone elastomer, mica, glass fiber, asbestos, etc., with suitable bonding substances such as appropriate silicone resins.	180°C
N	200	mica, glass fiber, asbestos, etc. with suitable bonding substances.	200°C

11.132

B, and F windings and 500°F for higher temperature windings and shall be of sufficient capacity to maintain these temperatures at a full exhaust rate of two air changes per minute.

Separate dip and storage tanks should be provided for the silicone varnish, because silicone varnish is not compatible with other varnishes. No solder joints should be used on the tanks as solder may gel the varnish.

D-c armatures should be dipped with the commutator end down to seal behind commutator neck. Commutator can be wrapped to prevent varnish buildup. When draining, have the commutator upright. If the assembled winding cannot be immersed, it can be slowly rotated in a horizontal position in a shallow pan to allow the varnish to flow into the winding interstices (fig. 8-39). All winding parts should be all soaked during the immersion. At least two complete revolutions should be made, each revolution taking about 10 minutes. In the baking operation allowances should be made for the time necessary to bring the armature up to

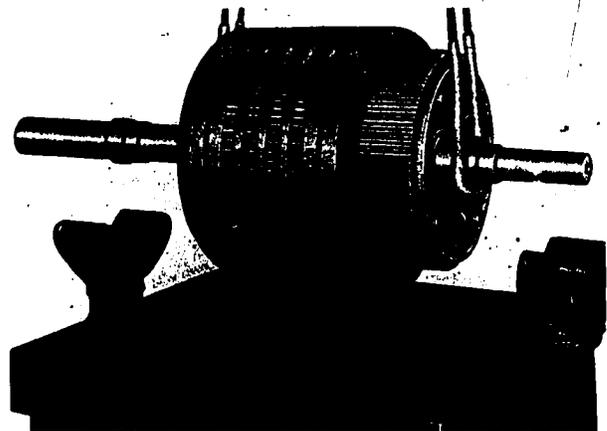

5.143
Figure 8-39.—Applying insulating varnish to armature windings.

temperature. If possible, d-c armatures should be baked with the commutator end up.

The completed armature is now placed in a lathe and a very light cut taken over the surface of the commutator and over the face and side of the commutator risers to make the assembly perfectly true. Next, the commutator mica should be undercut so that the carbon brushes will not be damaged by the high mica.

You must remember that all armature stator and field windings must be checked for shorts, grounds, and opens after each step of being wound, formed, taped (if necessary), installed, connected, dipped, and baked.

HIGH-POTENTIAL TEST

A high-potential test is made by applying (between insulated parts) a test potential that is higher than the rated operating voltage. High-potential tests are frequently used in connection with the repair, or reconditioning of naval equipment ashore.

The purpose of the test is to break down the insulation if it is weak, thereby indicating defective material and workmanship, and permitting replacement prior to actual use.

The application of each high-potential test tends to weaken insulation even though it does not produce actual failure at the time. Also, the use of high-potential tests requires special equipment and safety precautions.

When making high-potential tests on electrical equipment that has been reconditioned or rewound in a shop, keep from coming in contact with any part of the circuit or apparatus. Never touch the winding after a high-potential test has been made until it has been connected to ground to remove any static charge it may have retained.

A high-potential test should not be made on a d-c generator or motor until after the reconditioning or rewinding is completed, including the application of varnish, and the insulation resistance has been measured and found to be higher than the value in the last column of table 8-3.

All leads to the circuit being tested should be connected to one terminal of the source of test voltage. All leads to all other circuits and all metal parts should be connected to ground. No leads are to be left unconnected for a high-potential test as this may cause an extremely severe strain, at some point of the winding. For example, to make a high-potential test on

Table 8-3.—Minimum Direct Current Generator and Motor Insulation Resistances for High-Potential Tests

Circuit	Insulation Resistance in Megohms at 25° C ¹ , After Reconditioning in Shop.
Complete armature circuit ²	1
Armature alone	2
Armature circuit less armature ²	2
Complete shunt field circuit ²	2.5

(Footnotes for Table 8-3)

¹The figures given are for machines rated at 250 volts or less. For machines having a rated voltage, E, greater than 250 volts, multiply all figures given in the table by E/250.

²Small machines usually have one of the shunt field leads connected internally to the armature, circuit. To avoid disassembly in such cases, the complete armature circuit and complete shunt field circuit may be measured without breaking this connection. If necessary, the armature can then be isolated by lifting all brushes.

(a) With the brushes left in place, the complete armature circuit will include armature, armature circuit, and the permanently connected shunt field circuit. The values given in the table for the complete armature circuit will apply.

(b) With the brushes lifted, the armature circuit less armature and the complete shunt field circuit will be measured. The values given in the table for armature circuit less armature will apply.

111.83

a rewound armature, short circuit the commutator segments by wrapping one or more turns of bare wire around the commutator and apply the high-potential test voltage across the common connection of all the commutator segments and the grounded armature shaft.

The high-potential test voltage is obtained from a 60-hertz a-c source that should have a capacity of 1 kilowatt. When making a test, increase the voltage as rapidly as possible without exceeding the correct value, as indicated on the voltmeter. The full voltage should be maintained for 1 minute. The voltage should

then be reduced at a rate that will bring it to one-quarter of the correct value or less in not more than 15 seconds.

REWINDING FIELD COILS


The old field coil is removed from the pole piece and, if spare coils are available, a new one is installed. If a new coil must be made, record all pertinent coil data as the old coil is stripped down.

This data should include the (1) dimensions of the coil, both with the tape on and with the tape removed, (2) weight of the coil without the tape, (3) size of wire, and (4) type of insulation.

The two general classes of coils are (1) shunt field coils, which consist of many turns of fine wire and (2) series and commutating field coils, which consist of fewer turns of heavy wire.


SHUNT COILS

The equipment for rewinding shunt coils includes a lathe or suitable face plate, which can be turned at any desired speed, and an adequate supply of the proper size wire wound on a spool, which can be supported on a shaft so that it is free to turn. Friction should be applied to the spool to provide tension on the wire. A coil form having the exact inside dimensions of the coil is secured to the lathe or face plate. The form for shaped field coils can be made from a block of wood shaped exactly to the required size and provided with flanged ends to hold the wire in place (fig. 8-40). One

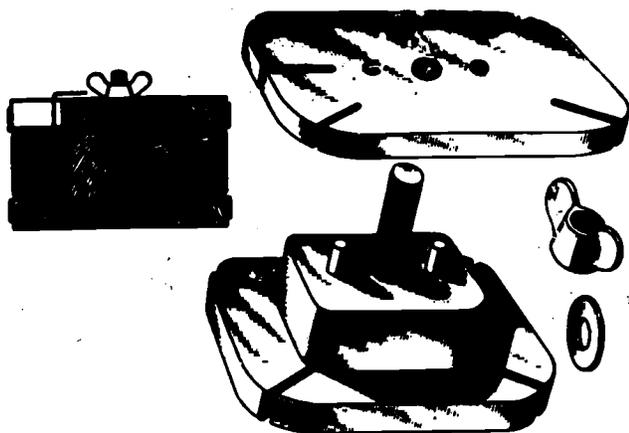

77.81

Figure 8-40.—Coil form for field coils.

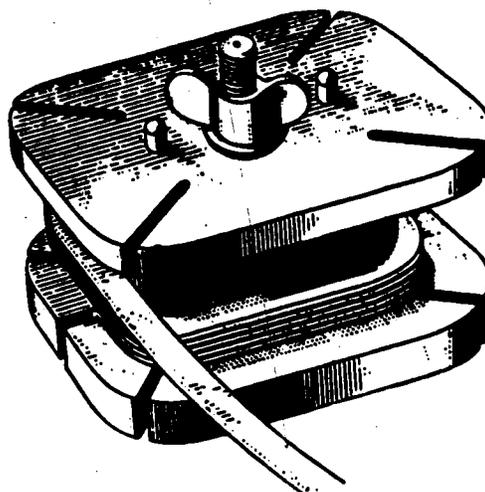

77.84

Figure 8-41.—Edge-wound series coil.

of the flanges should be removable so that the finished coil can be taken from the forming block.

The wire is now wound from the spool onto the forming block for the required number of turns. The turns must be evenly spaced, one against the other, until the winding procedure is completed. The turns of the completed coil are secured by tape, and the wire leading to the spool is cut, leaving sufficient length to make the external connections. The completed coil must be checked electrically for continuity and for shorted turns.

The coil is now prebaked and varnish treated. When varnish treated, the finished field coil should withstand a high-potential test of twice the rated excitation voltage +1,000 volts.

SERIES AND COMMUTATING COILS

Series and commutating field coils are frequently wound with strap (rectangular) or ribbon copper instead of round wire. These coils have only a few turns that are wound in a single turn per layer.

A series coil wound (with ribbon copper) on edge is illustrated in figure 8-41. It is more difficult to bend the copper ribbon, but it has an advantage in that both terminal leads protrude on opposite sides of the coil. Thus, the connections can be made very easily compared to the strap-wound coils, which have one coil end at the center and the other coil end at the outside of the coil. The strap-wound construction requires

leading the inside coil end over the turns of strap in the coil.

After the winding is completed, the coil is tested electrically for continuity and shorted turns. It is then probaked, varnished, and tested for polarity, grounds, opens, and shorts as described previously, at each stage in turn.

TESTING FIELD COIL


Before installing a new or repaired coil, it should be tested for shorts, opens, and grounds and its polarity determined. The same precautions that were observed during removal of the coil must be observed when installing it. All of the shims originally removed from the pole-piece must be in position when it is replaced. With the coil in position in the machine, it should be temporarily connected to the other coils in the field circuit and a compass and battery again used to check its polarity. For this test, connect the battery to the proper field leads and check the polarity of all the coils with the compass (fig. 8-42). Adjacent poles must be of opposite polarity. If need be, polarity of the new coil can be reversed by reversing its leads. When the polarity is correct, the coil is connected, and the pole-piece bolts are tightened. Air gaps should be measured to ensure uniformity.

REVERSING DIRECTION OF ROTATION OF D-C MOTORS

After repairing d-c motors, check the motor rotation. If the direction of rotation needs to be reversed, the two methods for reversing are (1) changing the direction of current flow through the armature leads and (2) changing the direction of current flow through the motor fields. In compound motors the reversing of current is easier using the first method since a single element is involved. If the second method is used it becomes necessary to reverse the current through both the series field and shunt field windings.

CHECKING MOTOR AND GENERATOR SPEEDS AFTER REWINDING

Tachometers indicate in revolutions per minute (rpm) the turning speed of motors, generators, and

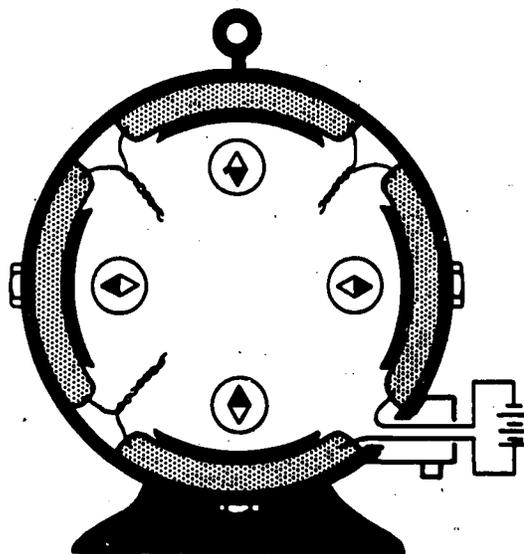

77.80

Figure 8-42.—Testing polarity of field coils.

other rotating machines. Use a portable tachometer, as explained in Chapter 3 of this manual, to measure the speed of a motor or generator after rewinding.

SETTING ON NEUTRAL

When a machine is running without load and with only the main-pole field windings excited, the point on the commutator at which minimum voltage is induced between adjacent commutator bars is the no-load neutral point. This is the best operating position of the brushes on most commutating-pole machines. Usually, the brush studs are doweled in the proper position, and the correct setting is indicated on a stationary part of the machine by a chisel mark or an arrow. In some cases commutation may be improved by shifting the brushes slightly from the marked position.

The correct neutral position can be found by the use of a mechanical, reversed rotation, or inductive kick method. The mechanical method is an approximate method. Turn the armature until the two coil sides of the SAME armature

coil are equidistant from the center line of one MAIN field pole. The commutator bars to which the coil is connected give the position of the mechanical neutral.

Use of the reversed rotation method is possible only where it is practicable to run a machine in either direction of rotation, with rated load applied. This method differs for motors and generators. For motors, the speed of the motor is, at first, accurately measured when the field current becomes constant under full load at line voltage with the motor running in the normal direction. Then, the rotation of the motor is reversed, full load is applied, and the speed is again measured. When the brushes are shifted so that the speed of the

motor is the same in both directions, the brushes will be in the neutral position. Generators are run at the same field strength and same speed in both directions, and the brushes are shifted until the full-load terminal voltage is the same for both directions of rotation. To ensure accuracy, a reliable tachometer must be used to measure the speed of the machines for this method.

The kick method should be used only when the other methods are inadequate and the conditions are such as to warrant the risks involved, and then only when sufficient resistance is connected in series with the field coils to reduce the field current to approximately 10 percent of normal value.

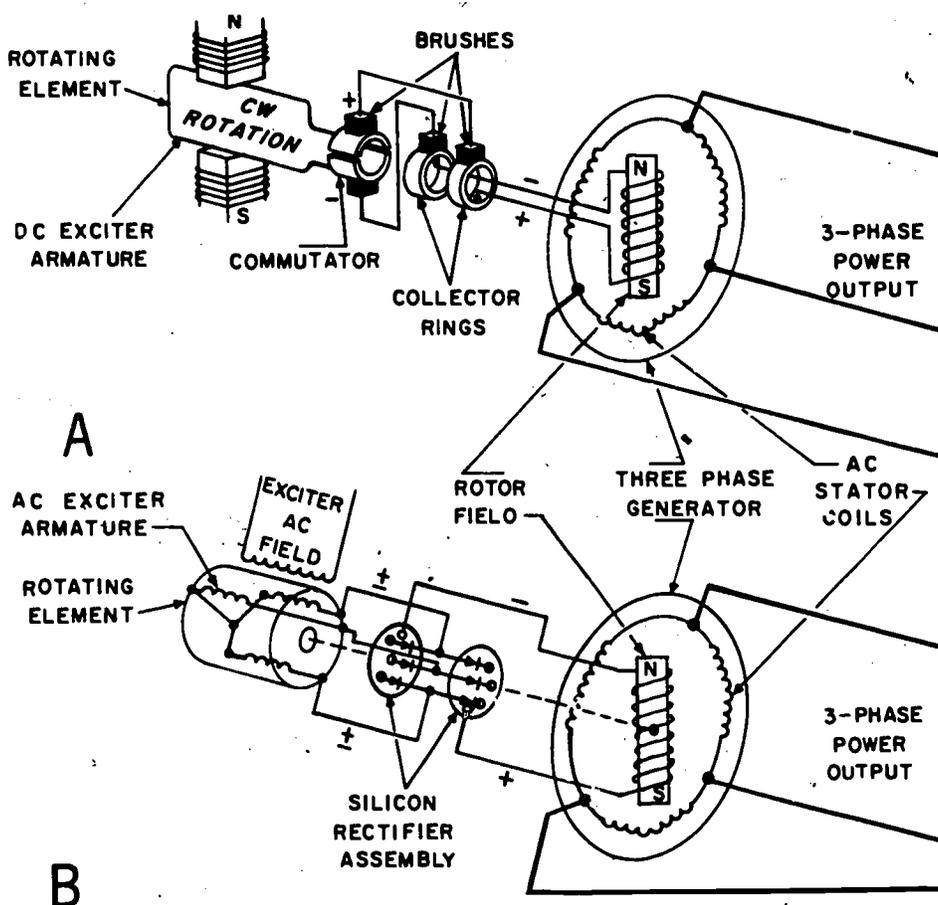


Figure 8-43.—A-c generator. (A) Brush type, (B) brushless.

73.308:309



Figure 8-44.—Internal growler.

77.304

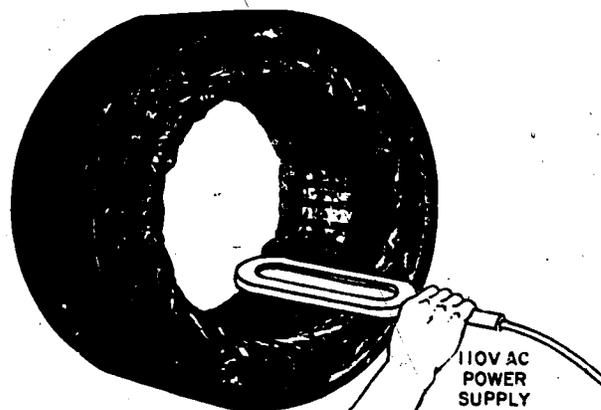


Figure 8-45.—Testing a three-phase stator for shorted coils.

73.147

BRUSHLESS GENERATORS

Brushless a-c generators are used in the fleet for ship service and emergency power. Figure 8-43 compares the brush type and brushless a-c generators. In the brush type a-c generator (fig. 8-43A) the current is transferred from the rotating member of the machine to the stationary member and vice versa by the use of commutator, collector rings and brushes. Brushless a-c generators, on the other hand (fig. 8-43B), have a silicon rectifier assembly which replaces this coupling. This development is simple, compact, free of sparking and greatly reduces the maintenance of generators. Silicon rectifiers are mounted on the rotating shaft to furnish direct current to the a-c generator rotor field. In the brush type a-c generator the commutator serves as a rectifier to perform this function. Feedback from the three-phase power output through a voltage regulator control (not shown) furnishes the correct amount of excitation to the exciter field for a-c generator voltage control.

THREE-PHASE STATOR TESTING AND REPAIR

In testing stator coils, as in testing d-c armatures, you will find the most common troubles to be grounds, opens, and shorts.

The internal growler (fig. 8-44) is used to check for shorts and opens on the inside of stators and stationary fields, or on large armature surfaces where an external growler cannot be used.

MAKE

H.P.	R.P.M.	VOLTS	AMPS.
HERTZ	TYPE	FRAME	STYLE
TEMP.	MODEL	SERIAL	PHASE
NO. OF COILS	NO. OF SLOTS	CONNECTION	
SIZE WIRE	NO. OF TURNS	NO. OF GROUPS	
COILS-GROUP	NO. OF POLES	PITCH OF COIL	

Figure 8-46.—Stator data sheet.

111.65

To make such checks connect the internal growler to rated a-c source. Run the internal growler over the coils of a motor or generator and listen for a buzz (fig. 8-45). When a shorted coil exists, transformer action causes the growling noise. Coils may be tested for opens by deliberately shorting each coil. A buzz at any of the coils means a closed circuit.

If you use a meter-indicating internal growler (fig. 8-44) a pointer deflection indicates a short;

no deflection of the pointer indicates an open circuit.

THREE-PHASE STATOR REWINDING

When tests or observation determine that a three-phase stator needs rewinding, certain data are recorded.

It is most important to keep an accurate record of all the pertinent data concerning the winding on the stator data sheet, as shown in figure 8-46. If possible this information should be obtained before stripping; if not, it can be obtained during the stripping operation.

An a-c stator is stripped in the same manner as a d-c armature.



Figure 8-47 shows coil sides being placed in a stator.

When all the coils have been inserted in the stator slots, the ends insulated, and the slot wedges driven in place, there will be two free ends for each coil (top and bottom) from one side of the stator winding. The free ends must be connected to form a series of groups of coils.

In arranging these coils into pole-phase groups, start by bending (forming) the inside lead of the first coil in toward the center and then bend the outside lead of that coil and the inside lead of the next coil together. Connect the outside lead of the last coil with the inside lead of the next coil and bend the outside lead of this coil away from the center. Repeat this procedure for each of the pole-phase groups all around the stator. Do not solder the connection at this time.

After twisting the ends together, check individual groups to determine that the proper number of coils have been connected together in each pole-phase group and that they have the proper polarity. Then solder the twisted connections and cut off the ends so that the soldered stubs are about three-quarters of an inch long. Insulate the stubs with acrylic glass.

If the distance to the bearing brackets (frame of the machine) is small, bend the insulated stub in between the coils so that they do not come in contact with the frame when the stator is assembled in the machine.

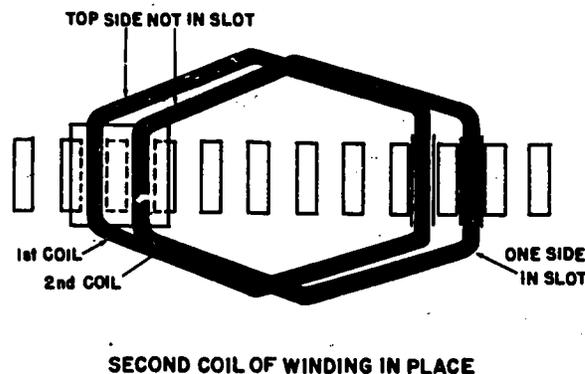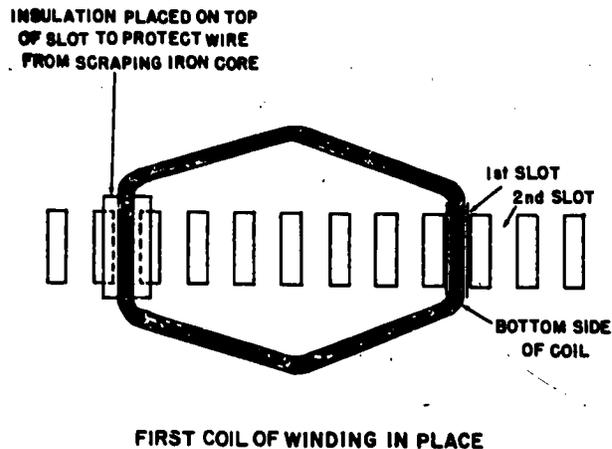


111.66
Figure 8-47.— Placing coil sides in slots.


In practice, the coils that comprise the pole-phase groups are usually gang wound. Gang wound coils eliminate the need for stubbing because the coils are wound with a continuous length of wire.

Series-Wye Winding

Before connecting the pole-phase groups together construct a diagram containing the pole-phase groups in each phase and the number of poles for the particular machine, as illustrated in figure 8-48. Be certain that the pole-phase groups for each phase are connected properly to produce alternate north and south

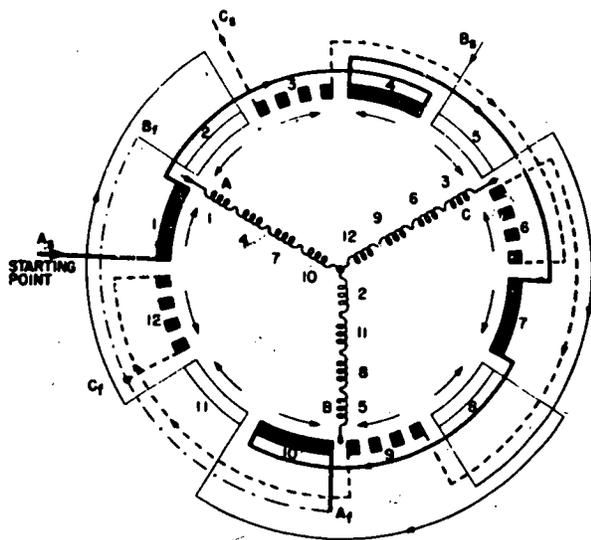

111.68.1
Figure 8-48.— Three-phase, 4-pole, series-wye winding.

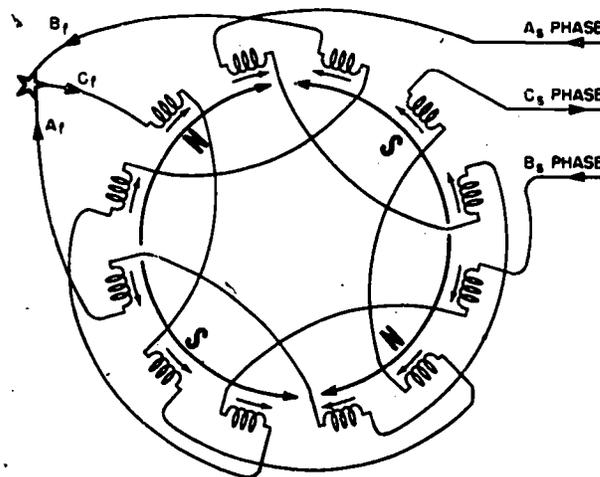


111.68.2
Figure 8-49.— Three-phase, 4-pole, series-wye winding showing the 4-poles

poles by indicating the direction of current flow through each pole-phase group by arrows that must reverse direction for each successive group now connected.

The A_S , B_S , and C_S phase leads (s stands for start) are all connected to one polarity of a small battery and the A_f , B_f , and C_f phase leads (f stands for finish) are all connected to the other polarity of the battery. If connections are correct a compass will give opposite polarity as it is moved from one coil group to another. Note the changing polarity in figure 8-48.

All the arrows on the line leads (fig. 8-48) indicate current in the same direction toward the center of the wye. Actually, the current at one instant may enter the phase A lead and leave by the other two leads. At the next instant current may enter through phases A and B and leave by phase C (fig. 8-49). At any instant, current is flowing into and leaving the wye by at least one lead. This illustrates how a four-pole motor or generator actually functions. In rewinding, however, having the current going in at all phases and ending at the internal star connection (fig. 8-48) is best for bench testing the stator.

The series-wye connection (figs. 8-48, 49) is employed in a-c machines designed to operate at a comparatively high voltage. Machines that

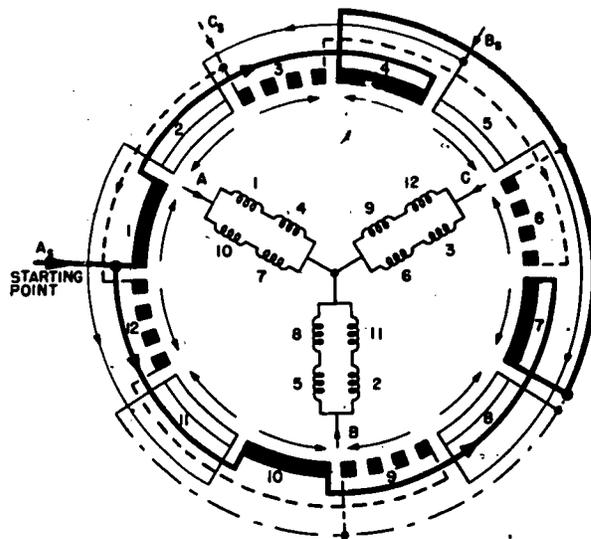

111.69
Figure 8-50.— Three-phase, 4-pole, parallel-wye winding.

require a relatively high current usually are wound in a multiple or parallel arrangement.

Parallel-Wye Winding

To connect the machine for 3-phase, 4-pole, parallel-wye operation, use the diagram shown in figure 8-50 with the same number of pole-phase groups and the same assumed directions of current flow through the groups as in the series-wye connection, the pole-phase groups of the three-phase must be connected so that the current flows through the various groups in the directions indicated to obtain alternate north and south poles. Again connect the battery as previously described by connecting A, B, C start phases to one side of battery and A, B, C finish phases to the other side. Again the 12 compass polarities should be indicated in one revolution of the stator.

The only difference between the parallel-wye winding (fig. 8-50) and the series-wye winding (fig. 8-48) is that the four pole-phase groups, which were originally in series in any one of the phases, are now split into two parallel groups of two each. In phase A the same coil groups are used, but the series group 1 and 4 is placed in parallel with the series group 10 and 7, resulting in an increase in the current-carrying capacity and a corresponding decrease

in voltage of that phase without changing the number of pole-phase groups or without changing the groups themselves.


Series-Delta Winding

The same machine connected for 3-phase, 4-pole, series-delta operation is illustrated in figure 8-51. The same pole-phase group numbers are allotted to the same phase windings and the directions of current flow through the groups are the same as for the other examples.

Note the difference in the series-wye winding (fig. 8-48) and the series-delta winding (fig. 8-51). In the series-delta winding the three phases are connected so that they form a delta, and the external connections are made at the three corners of the delta.


Parallel-Delta Winding

The machine used in the other examples, connected for 3-phase, 4-pole, parallel-delta operation, is illustrated in figure 8-52. The phase windings contain the same pole-phase group numbers, and the polarities of the pole-phase groups are the same as in the previous cases.

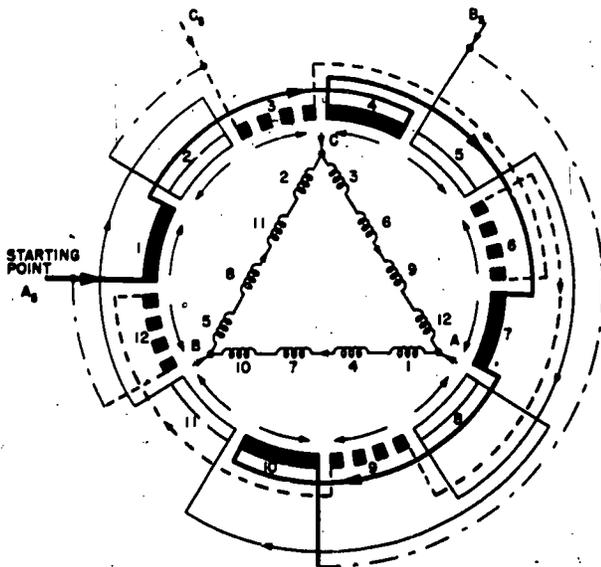

111.70

Figure 8-51.— Three-phase, 4-pole, series-delta winding.

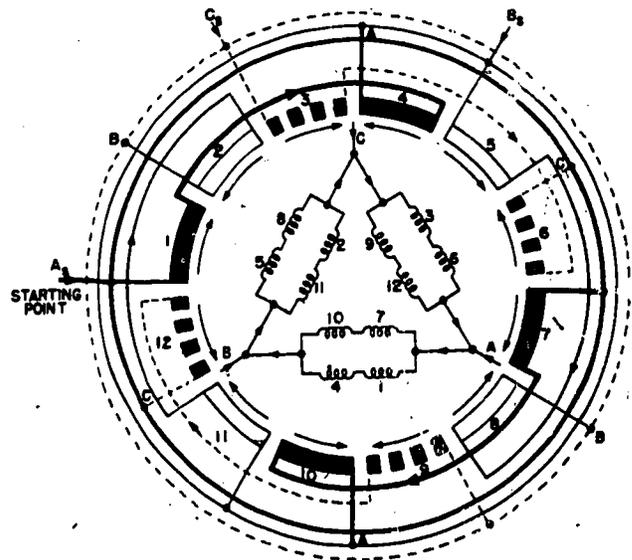

111.71

Figure 8-52.— Three-phase, 4-pole, parallel-delta winding.


POLYPHASE STATOR TROUBLES

The methods of locating and correcting the common troubles encountered in rewind and reconnected polyphase stator windings are included for the convenience of Electrician's Mates engaged in this work.

Shorted Pole-Phase Group


An entire pole-phase group may be shorted in a polyphase stator. Such a defect is usually indicated by excessive heat in the defective part. The trouble can be readily located by a compass test. To conduct a compass test, excite the stator windings with a low-voltage, direct current that will set up the poles in the stator (fig. 8-53). When the windings are excited, a compass is moved around the inside circumference of the stator core. As each pole group is approached, the polarity is indicated by the compass. There should be the same number of alternate north and south poles in a 3-phase winding.

In testing a 3-phase, wye-connected winding (fig. 8-53), test each phase separately by impressing the d-c voltage successively on each of the phase leads and the midpoint of the wye connection. If there is no trouble in the winding, the compass will indicate alternately north and south for each pole-phase group around the stator. If a complete pole-phase group is shorted, the compass needle will not be deflected at this point.

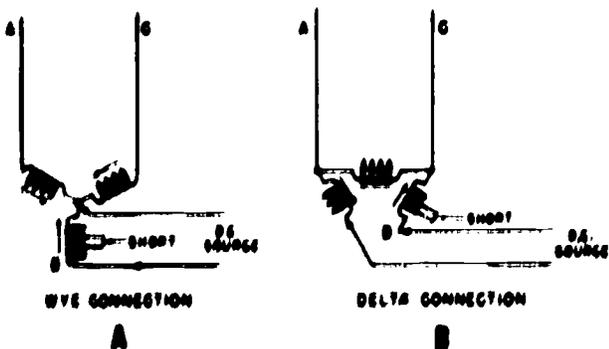

111.76

Figure 8-53.—Compass test for shorted pole-phase groups.

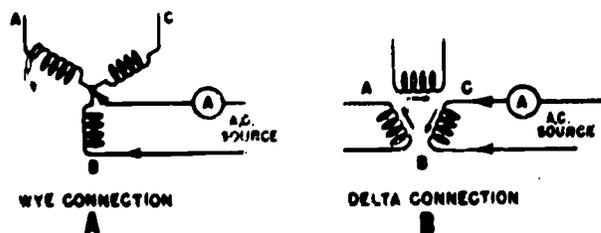

111.77

Figure 8-54.—Balanced current test for shorted phase.

In testing a 3-phase delta-connected winding (fig. 8-53B), open one of the delta connections and apply the direct current to the winding. The current will flow through the three phases in series. If the pole-phase groups are connected properly, the compass will indicate alternate north and south poles around the stator frame. As in the wye-connected winding a shorted pole-phase group is indicated by no deflection of the compass needle.

Shorted Phase


When an entire phase of a 3-phase winding is shorted, the defect is most readily located by a balanced-current test made with a type TA industrial analyzer.

This test can also be made with an ammeter and low-voltage a-c source (fig. 8-54).

In testing a 3-phase wye-connected winding (fig. 8-54A), test each phase separately by impressing the a-c voltage successively on each of the phase leads and the midpoint of the wye connection. If there is no trouble in the windings, and if the impedance of the winding of each phase is the same, the ammeter will indicate approximately the same value of current for each of the three phases. If one phase is shorted, the ammeter will indicate a higher current reading for this phase than those of the other two phases because the impedance is less.

In testing a 3-phase delta-connected winding (fig. 8-54B) open each delta connection and test each phase separately. As in the wye-connected winding, the shorted phase will be indicated by a much higher current reading on the ammeter.

SINGLE PHASE MOTOR REPAIR

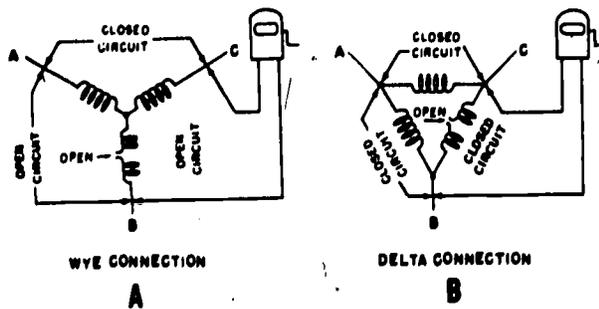

111.78

Figure 8-55.—Ohmmeter test for open circuits.

Open Circuits

An open circuit in a 3-phase winding can be readily located by means of an ohmmeter (fig. 8-55).

In testing a 3-phase wye-connected winding (fig. 8-55A), connect the ohmmeter leads across each of the phases to locate the defective phase. When the ohmmeter leads are placed on terminals A and C, no open circuit (a low reading) is indicated. However, when the leads are placed on terminals C and B, and then on terminals B and A, an open circuit (a high reading) is indicated in both positions, thus denoting an open in phase B. After the defective phase has been located, test each stub connection of the pole-phase groups with the ohmmeter until the open coil is located.

In testing a 3-phase, delta-connected winding (fig. 8-55B), it is necessary to open one delta connection to avoid shunting the phase being tested. Test each phase separately until the open is located. After the faulty phase is located, test each stub connection of the pole-phase groups, as in the wye-connection, until the open coil is located.

If the windings are parallel, it is necessary to open each parallel group and test each group separately.


REVERSING DIRECTION OF ROTATION OF A THREE PHASE MOTOR

To reverse the direction of rotation of a three-phase motor all that needs to be done is to reverse the connections of any two of the three leads of the motor. That is, reverse either the A and B, A and C, or B and C phase leads.

There are many applications for single phase motors in the Navy. They are used in interior communication equipment, refrigerators, fans, drinking fountains, portable blowers, portable tools, and in many other applications. Single phase motors are considerably cheaper in fractional horsepower sizes, but above 1 horsepower the three-phase motors are less expensive. The use of single phase motors also eliminates the need of running three-wire service to supply small loads.

Usually it is the starting winding that burns out in single phase motors. The centrifugal switch (8-56) cuts the starting winding out of the system when the motor reaches approximately 75 percent of full speed. When the motor is overloaded the speed decreases and allows the centrifugal switch to energize the starting windings, then the motor speeds up enough so that the centrifugal switch opens the starting circuit again. This constant opening and closing of the starting winding circuit will cause failure of the winding.

Steps in analyzing motor troubles should proceed, as previously mentioned, following a logical sequence to determine what repairs are required for reconditioning the motor: (1) inspect motor for defects, such as, cracked end plates, bent shaft, broken or burned wiring, (2) check motor for bearing troubles, (3) test the motor for grounds, opens and shorts (see armature

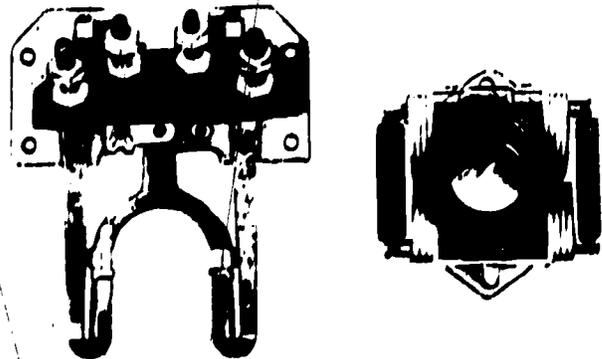

73.130
Figure 8-56.—Two major parts of a centrifugal switch.

ELECTRICIAN'S MATE 3 & 2


A

Single Phase				Capacitor <input type="checkbox"/>				Split Phase <input type="checkbox"/>									
H.P.		Cyc.		Type		Style											
R.P.M.		Volts		Model		Ser. No.											
Make		Amps		Frame		Cap MFD											
Rotation facing shaft				Clockwise <input type="checkbox"/>				Counter-Clockwise <input type="checkbox"/>									
Winding		No. Coils Per Pole		Turns Per Pole		Inside Coil Span		Sl. Wts.		Type Wire		No. Coils		Coil Extension		No. Slots	
Running																Stator Dimensions	
Starting																Inside Diameter	
																Length of Core	
																Depth Iron Behind Slot	

Running																			
Slot No.		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
Starting																			

Name and Cl. No. Date

B

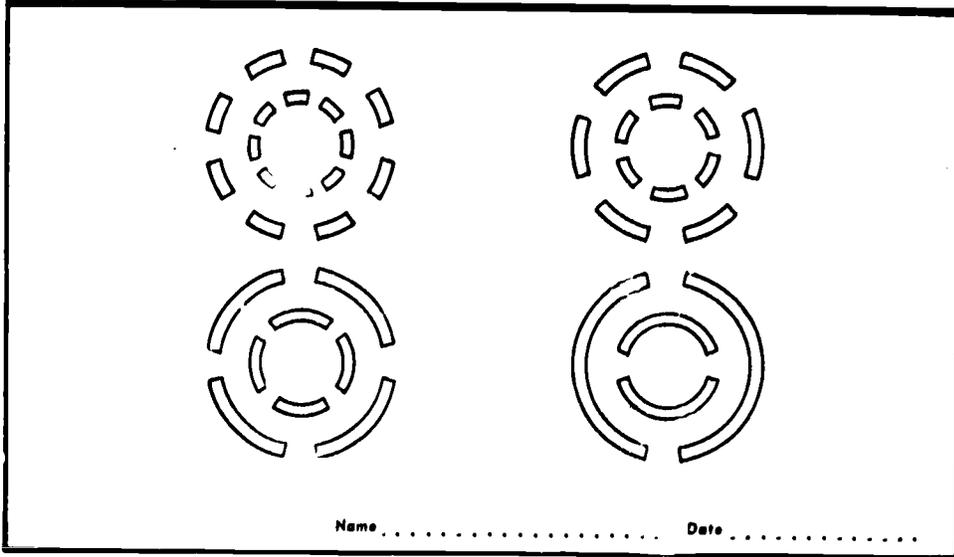

77.300.2


Figure 8-57.—Single-phase motor data card. (A) Front side; (B) back side.

and 3-phase stator sections). If rewinding is required record the necessary data on a single phase motor data card (fig. 8-57).

A single phase motor connection is shown in figure 8-58. When the motor is to be connected to a power source of 110 volts a-c the motor run windings are connected in parallel by placing the two connecting bars as shown in figure 8-59A. Note the bar terminals in figure 8-59.

When the motor is to be connected to a power source of 220 volts a-c the run windings must be connected in series by placing the two connecting bars one superimposed on the other as shown in figure 8-59B.

By tracing through the two above series and parallel bar connected circuits you will note that the starting winding operates on 110 volts regardless of a parallel or series connection.

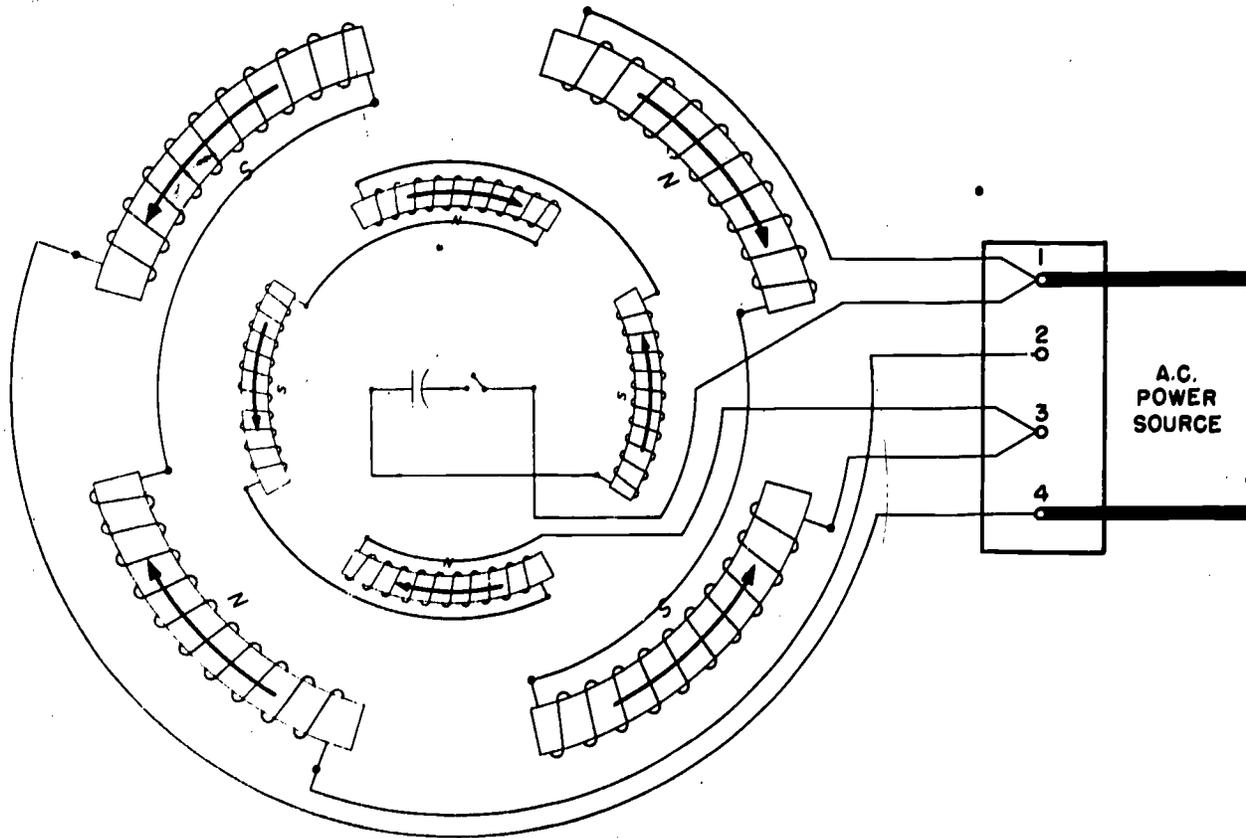

77.305

Figure 8-58.—Single phase capacitor-start, induction-run motor diagram.


Figure 8-60 is a diagram of a four-pole single phase motor. The type of winding used on both the running and starting winding is the spiral winding. The difference between the two windings is their impedance and position in the stator slots. The running winding has a low resistance and a high reactance (because of many turns of large wire), whereas, the starting winding has a high resistance and a small reactance (being wound of small or high resistance wire).

The running winding is placed in the bottom of the slots, and the starting winding is placed on top of the running winding. Both windings are energized in parallel at starting. The currents are out of phase with each other, and the combined effects produce a rotating field that starts the motor (some motors use capacitors


for starting). When the motor has almost reached normal speed the centrifugal switch opens the starting winding circuit, and the motor operates as a single-phase induction motor.

A pole for the running or the starting winding in a single phase motor is made up of more than one coil. These coils differ from each other in size and, depending on the winding specifications, in the number of turns per coil. When coils are placed in stator slots they can be wound in place by hand or wound in a coil winder on forms and then placed in the slots of the stator.

Capacitors used with single-phase motors for starting should be checked by means of a capacity tester. This also applies to the capacitor-start capacitor-run type motors.

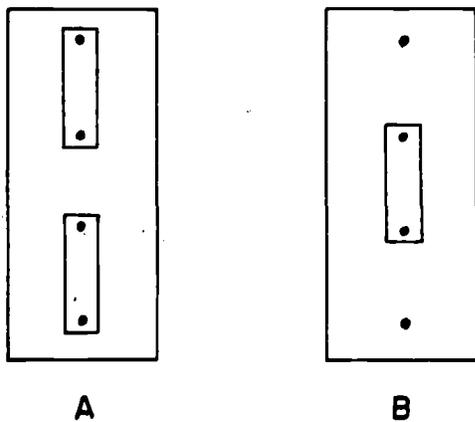

77.306
 Figure 8-59.—Connecting bars for A, low voltage input; B, high voltage input.

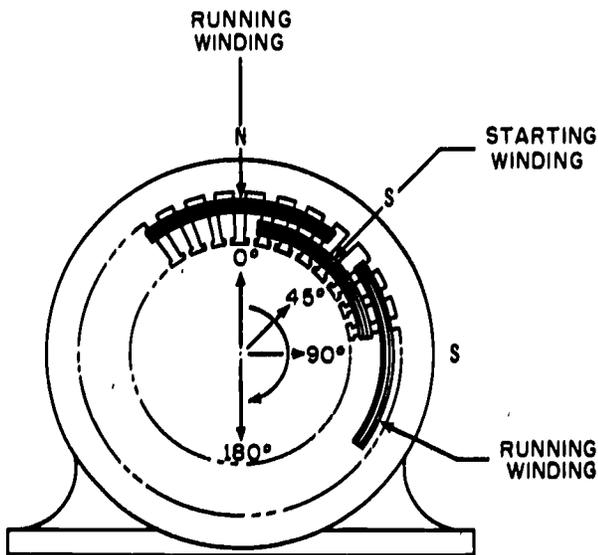

111.92
 Figure 8-60.—A four-pole split phase motor.

REVERSING THE DIRECTION OF ROTATION OF A SINGLE PHASE MOTOR

Rotation of the single phase motor is usually reversed by reversing the starting winding leads


only. If these leads are brought outside the motor, a switch may be used to reverse the rotation. The direction of rotation is from a starting winding pole to a running winding pole of the same polarity, as shown in figure 8-60.

MOTOR AND GENERATOR AIR COOLERS

Some large electric motors and generators, such as propulsion generators and motors, are equipped with surface-type air coolers. In this system the air is circulated by fans on the rotor in a continuous path through the machine windings and over the water-cooled tubes of the cooler. The cooler is of double-tube construction (one tube inside another) to minimize the possibility of damage due to water leakage. The location of the air cooler in a generator is shown in figure 8-61.

The air and water sides of air cooler tubes must be kept as clean as possible because foreign deposits will decrease heat transfer. When the air side of the tubes requires cleaning, the individual tube bundles may be removed and washed with hot water or cleaned with a steam jet. The water side of cooler tubes must be cleaned in accordance with instructions contained in the NavShip's Technical Manual, chapter 254.

When a leak between an inner tube and the tube sheet occurs, water will seep from the cooler head through the leaky joint into a leak-off compartment and out the leakage drain. If a leak occurs in an inner tube, water will seep

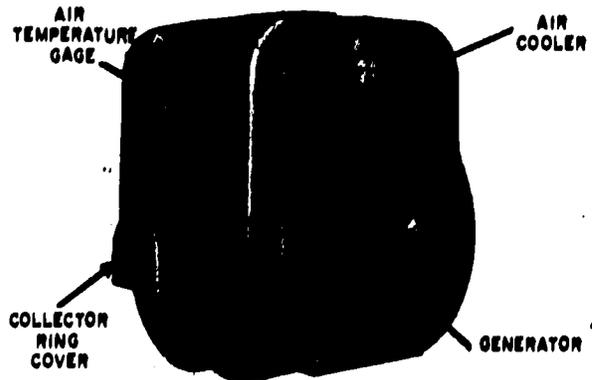

77.85
 Figure 8-61.—Generator equipped with an air cooler.

into slots in the outer tube where it is carried to a leak-off compartment and out the leakage drain. The leakage drain line is equipped to give a visual indication of the presence of water in the line.

When a leaky tube is found, both ends of the tube should be plugged with plugs provided as spare parts or with condenser plugs. When the number of plugged tubes in a cooler section becomes large enough to adversely affect the heat-dissipating capacity of the cooler, the cooler section must be removed and replaced.

MANDATORY TURN-IN REPAIRABLES

Since you will no doubt encounter the terms "mandatory turn-ins" and "repairables" in the process of obtaining replacement parts from supply, you should understand the purpose of the repairables program and your responsibilities to it.

When a component fails, your primary concern is to locate the trouble, correct it, and get the equipment "back on the line." In most cases this involves troubleshooting the equipment and tracing the trouble to the defective component, drawing a replacement from supply, installing it and discarding the old one.

The repairables program enters the picture when defective parts are expensive, and can be economically repaired at the factory. In these

cases time and money are saved since it is quicker and cheaper to repair an item than to contract to a manufacturer to have a new one built. The old part should be promptly turned into supply so there is always recycling of that part in the supply system.

For the repairables program to work as intended, you and others have certain responsibilities. At the time you turn in your request for a replacement part, supply must inform you at that time whether or not it is a mandatory turn-in item. At this point proceed as follows:

- Remove the defective part without damaging it.
- Provide adequate protection for the part to prevent additional damage. Use the same container in which the new one was packaged if at all possible.
- Return the defective part to supply as soon as practicable.

DO NOT CANNIBALIZE THE PART FOR COMPONENTS YOU THINK YOU MAY NEED FOR FUTURE USE.

When the required part is not in the storeroom, supply must take appropriate action to obtain it. The failed part should be turned-in to supply prior to receiving the new one, unless its removal will cause limited or reduced operating capabilities.

CHAPTER 9

SHIPBOARD LIGHTING

The EM is charged with the responsibility of maintaining the lighting distribution system aboard naval vessels. This system comprises the ship's service general lighting, navigational lights, and signal lights, including searchlights.

The lighting system must maintain continuity of power to selected vital lighting circuits by means of separate power sources and switching equipment that selects, in an orderly fashion, a power source suitable for proper system operation.

At times you will be directed to install new lighting circuits or equipment and may find yourself without installation plans or drawings. Other times you will be correcting deficiencies found while conducting PMS checks, routine tests, or inspections. For these and various other reasons you should be intimately familiar with the lighting system aboard your ship. Always refer to applicable blueprints, drawings, and the Ships Installation Book before attempting repairs on the system. Additional information is found in NavShips' Technical Manual, Chapters 330 and 422.

LIGHTING DISTRIBUTION SYSTEMS

The lighting distribution system in naval vessels is designed for satisfactory illumination, optimum operational economy, maximum continuity of service, and minimum vulnerability to mechanical and battle damage. Many ships have two sources of power supply for lighting fixtures. Normal supply is from the ship service bus. A designated number of fixtures can also be supplied from the emergency distribution system. Additionally, there is a third lighting system that consists of battery-powered, relay-operated, hand lanterns.

The first two systems consist of feeders from the ship's service or emergency power switchboards, switchgear groups, or load centers to distribution panels or feeder distribution fuse boxes, located at central distribution points from which power is distributed to the local lighting circuits.

The s-c ship's service power feeders are either 450-volt or 120-volt, 3-phase, 60-hertz circuits. The lighting supply circuits are 450-volt, 3-phase, 60-hertz, 3-wire circuits supplied from the power distribution system to 450/120 volt transformer banks (fig. 9-1).

A typical vital lighting load has access to two switchboards (fig. 9-1). Selection to either of these sources is automatically accomplished through an automatic bus transfer (ABT) switch. Additionally, the emergency switchboard has three power supplies that are independent of each other. As a result of this arrangement, the vital lighting load can be automatically supplied from several primary sources.

The system shown in figure 9-1 operates as follows. If an undervoltage condition develops on switchboard 2SA, which is the normal supply for ABT switch #1, then the ABT switch will transfer the lighting load center panel to the emergency lighting load center panel. The power source for the latter panel is emergency switchboard 2E.

Emergency switchboard 2E is energized either from its normal or alternate ship service supply feeders, or the local emergency generator. Transfer between these supplies is accomplished automatically by three electrically operated circuit breakers. The circuit breakers are electrically and mechanically interlocked to

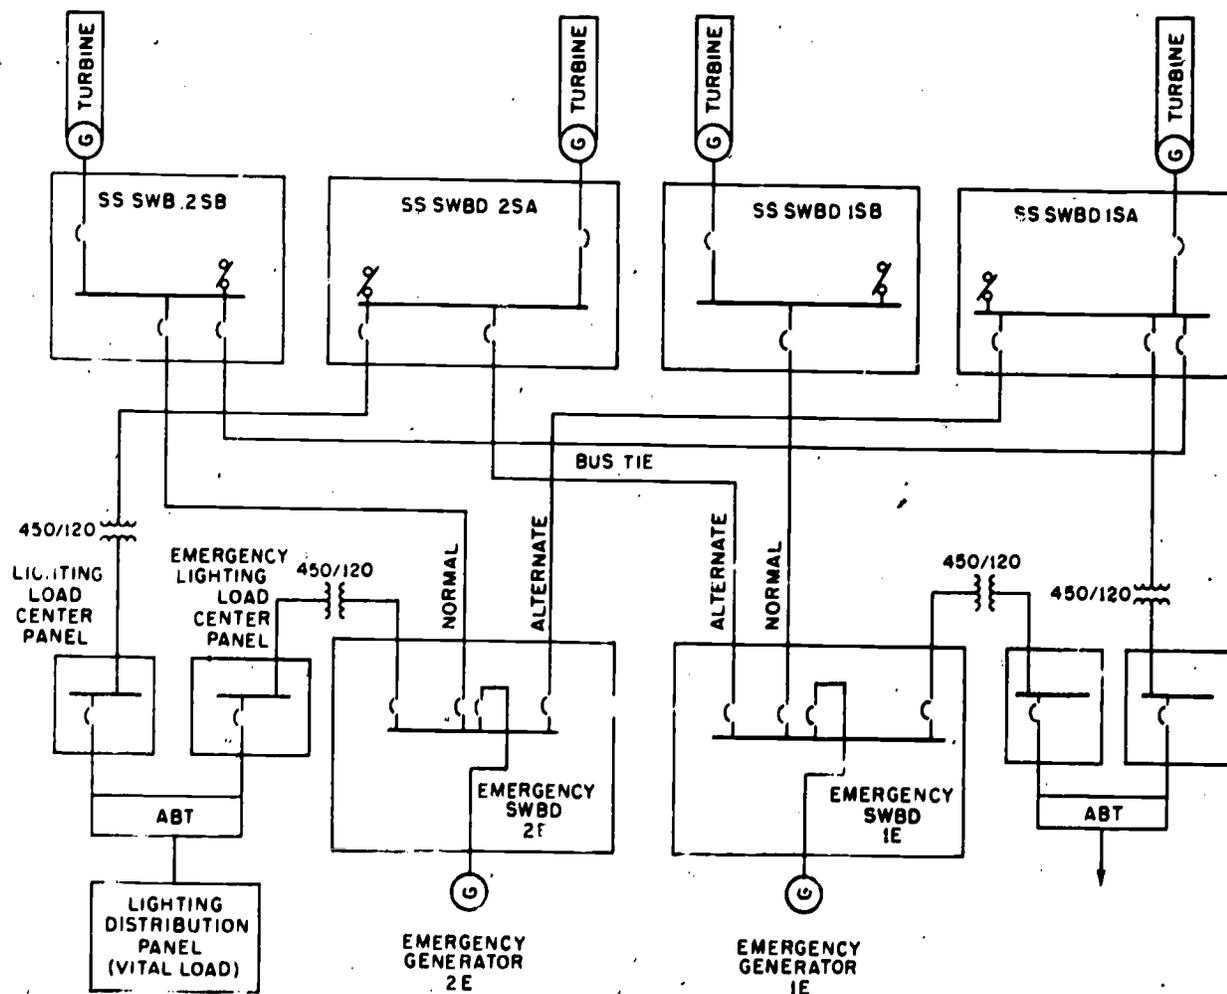


Figure 9-1. — Lighting distribution system.

77.48(77C)

prevent closing of more than one breaker at a time. Normally, the emergency switchboard is energized from one of the two ship service supplies. If voltage on the normal ship service supply bus drops to 300 volts, or below, the load is automatically transferred to the alternate supply if 450 volts or above is available at this source. (If 400 volts or above is restored to the normal supply, the load will automatically retransfer to the normal supply.) Should both ship service supplies fail completely, or their voltage drop below 300 volts, the transfer system will operate automatically to start the emergency generator and connect it to the emergency switchboard.

Three small transformers are used instead of one large transformer because the loss of a composite unit would result in a loss of power. By using three separate

transformers reliability is increased. In the event of an enemy hit or failure to one of the bank of three single-phase transformers the remaining two will still carry about 58 percent of the initial bank capacity. By simply disconnecting the defective transformer the remaining two transformers will be connected open delta. In an open delta connection, the line current must be reduced so as to not exceed the rated current of the individual transformers. Each transformer bank consists of three single-phase, delta-delta connected transformers (fig. 9-2).

AUTOMATIC BUS TRANSFER SWITCHES

The A2 Model Automatic Bus Transfer Unit is designed to handle smaller loads and operate

Chapter 9—SHIPBOARD LIGHTING

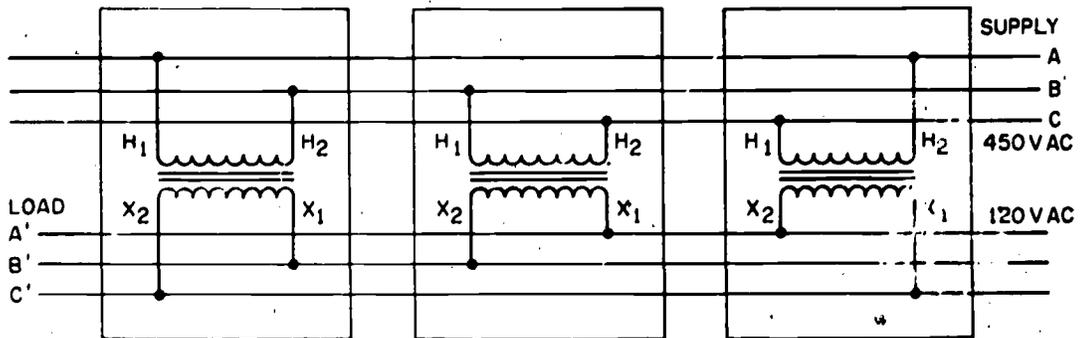


Figure 9-2.—Delta-delta transformer connections.

73.94

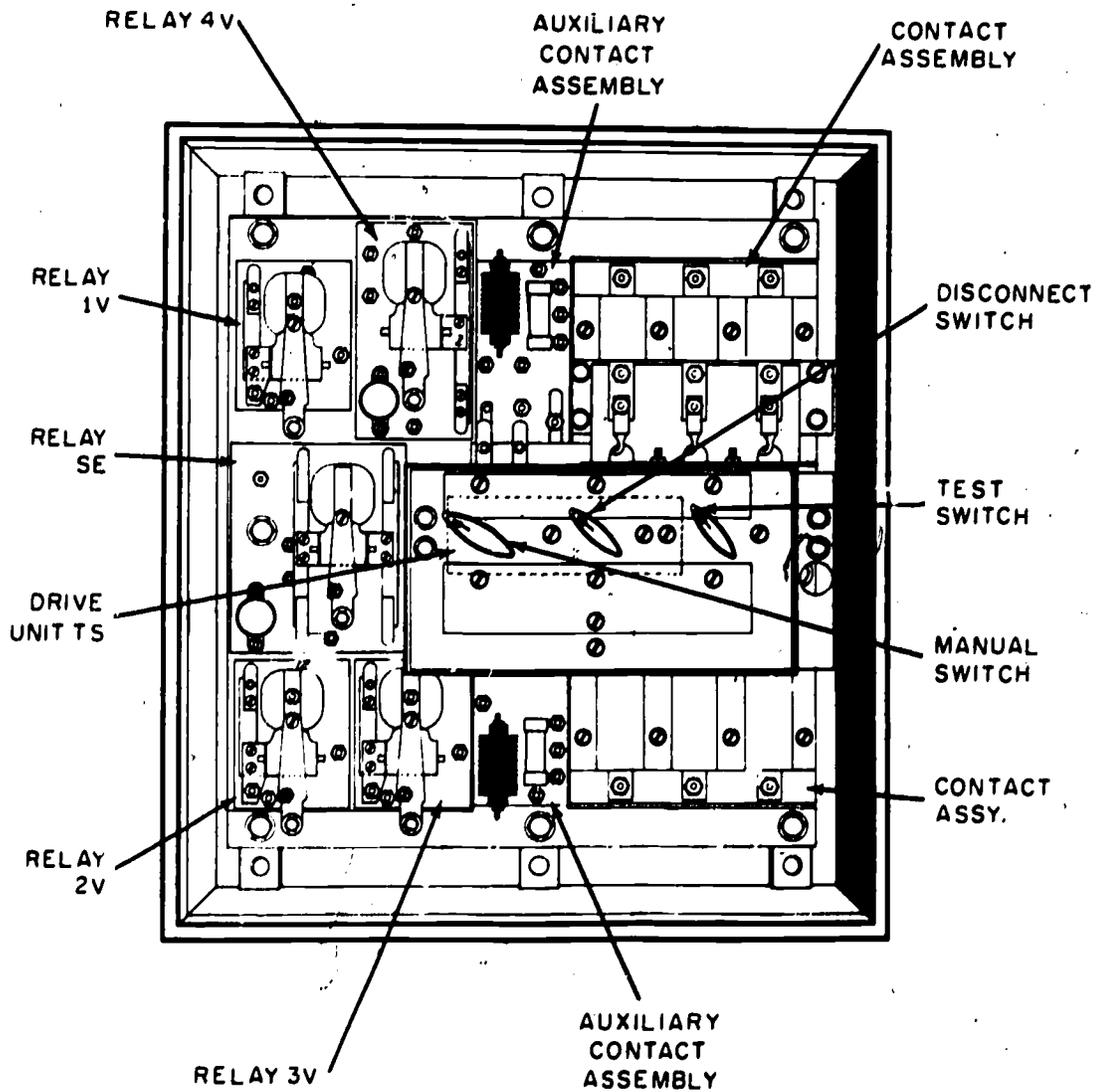


Figure 9-3.—Pictorial view of A-2 ABT.

140.70

on 120-volt, 60-hertz circuits. This unit (fig. 9-3) may be used on single- or 3-phase circuits. For purposes of explanation the 3-phase unit will be discussed.

The A2 ABT is designed to transfer automatically from normal to emergency supply upon a decrease in voltage to within the 81/69-volt range across any two of its three phases. Upon restoration of the voltage to the range of 98/109 volts the unit is adjusted to retransfer to the normal source of supply. An intentional time delay is included in the circuitry of from 0.3 to 0.5 seconds for both transfer and retransfer to allow for surges in line voltage and short duration losses in power.

The A2 unit shown in figure 9-4 is equipped for manual operation by placing the control disconnect in the manual position and operating the manual handle.

Automatic operation is accomplished when the normal supply voltage drops to the dropout range and relay 1V, 2V, and 3V drop out. Contact 1 Val opens disconnecting relay SE. After a time delay of from 0.3 to 0.5 seconds, relay SE opens closing its SEb1 and SEb2 contacts and energizing relay 4V from the emergency source. Contact 4 Val in closing connects the emergency source to coil TS of the transfer switch which in turn operates, transferring the load to the emergency source.

Presently, contacts TSa4 and TSa5 open disconnecting coil TS from its operating circuit. TS is now held in the operated condition mechanically, however and the transfer is now complete to the emergency supply.

Upon restoration of the normal power to the selected range the retransfer is begun by the energizing of relays 1V, 2V, and 3V which close energizing relay SE. Contacts SEb1 and SEb2 now open, disconnecting relay 4V from the emergency source. After the time delay, relay

4V opens, closing its 4Vb1 contact and completing the normal supply circuit to the transfer switch coil, TS, which again operates transferring the load back to the normal supply. Presently the transfer coil contacts TSb4 and TSb5 open, disconnecting the coil from the circuit. The coil is again mechanically held and the retransfer is now complete.

Care must be exercised when testing the ABT units to ensure that they do not include in their load vital and sensitive electronic circuitry which will be adversely affected by the loss and almost instant return of power. Electrician's Mates must ensure that all other groups are adequately informed of power supply system tests to be performed.

LIGHT SOURCES

The sources of electric light used in naval vessels are the (1) incandescent, (2) fluorescent, and (3) glow lamps. A complete list of lamps used by the Navy is contained in federal item identification number sequence in the Illustrated Shipboard Shopping Guide (ISSG), carried aboard all ships. This list includes the electrical characteristics, physical dimensions, applications, ordering designation, and an outline of each Navy-type lamp.

INCANDESCENT LAMPS

The incandescent lamp consists of a tungsten filament supported by a glass stem. The glass stem is mounted in a suitable base that provides the necessary electrical connections to the filament. The filament is enclosed in a transparent, or translucent glass bulb from which the air has been evacuated. The passage of an electric current through the filament causes it to become incandescent and to emit light.

All Navy-type, 115- or 120-volt lamps (up to and including the 50-watt sizes) are of the vacuum type and all lamps above 50 watts are of the gas-filled type. The use of an inert gas, which is a mixture of argon and nitrogen gases allows it to be operated at higher temperatures that result in higher efficiencies. Lamps under 50 watts are of the vacuum type because the effectiveness of the inert gas in increasing the luminous output is less pronounced in the lower-wattage lamps.

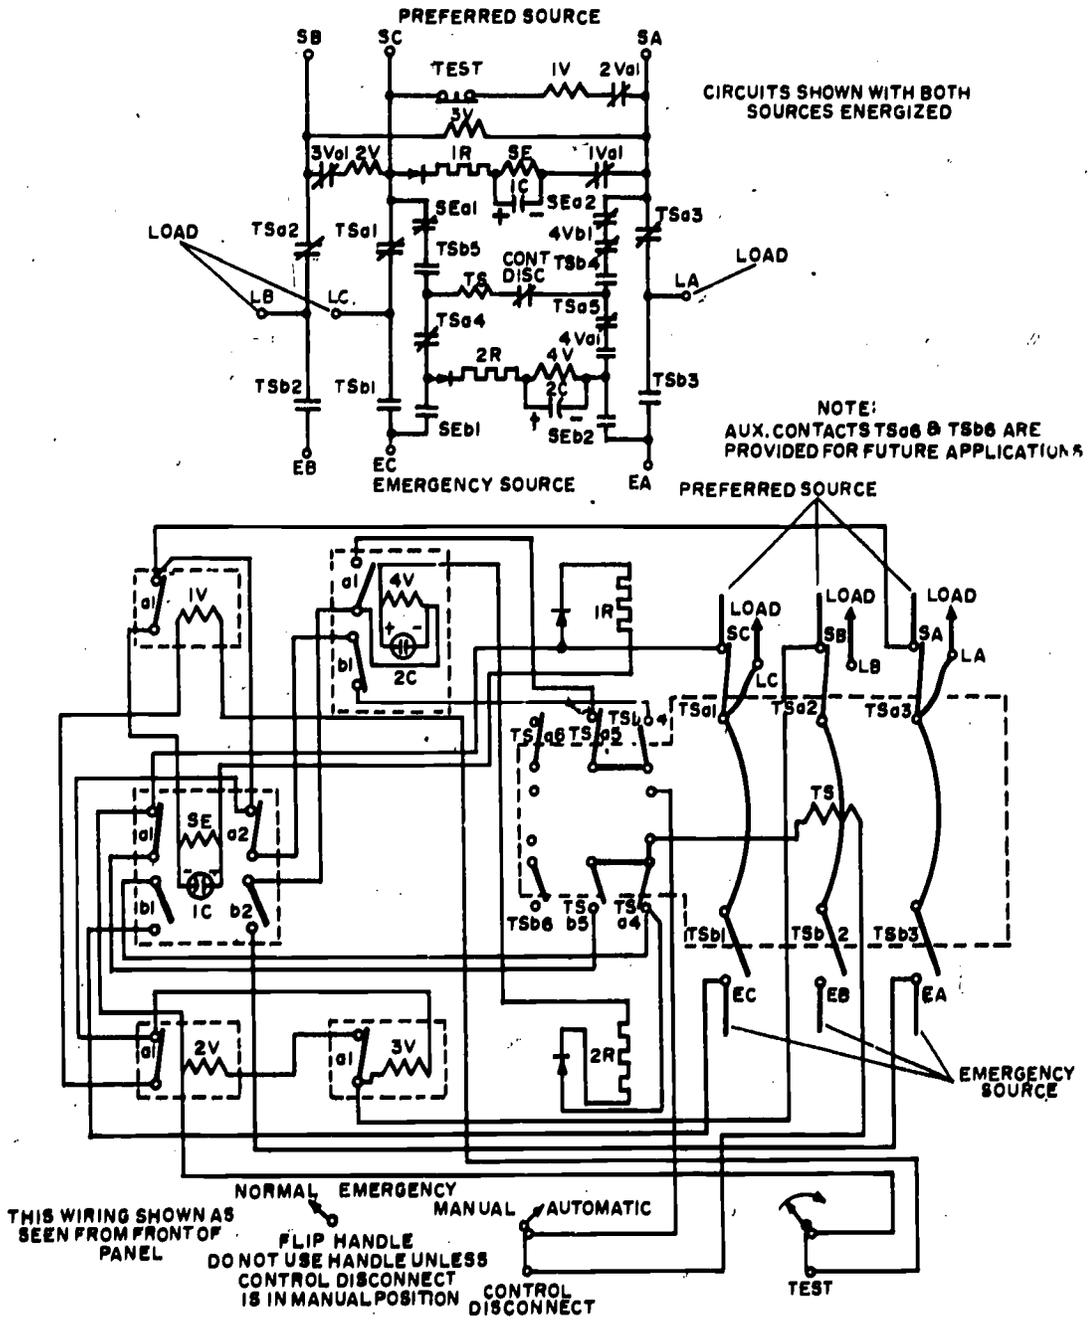


Figure 9-4. — Schematic and wiring diagram of A-2 ABT.

140.89

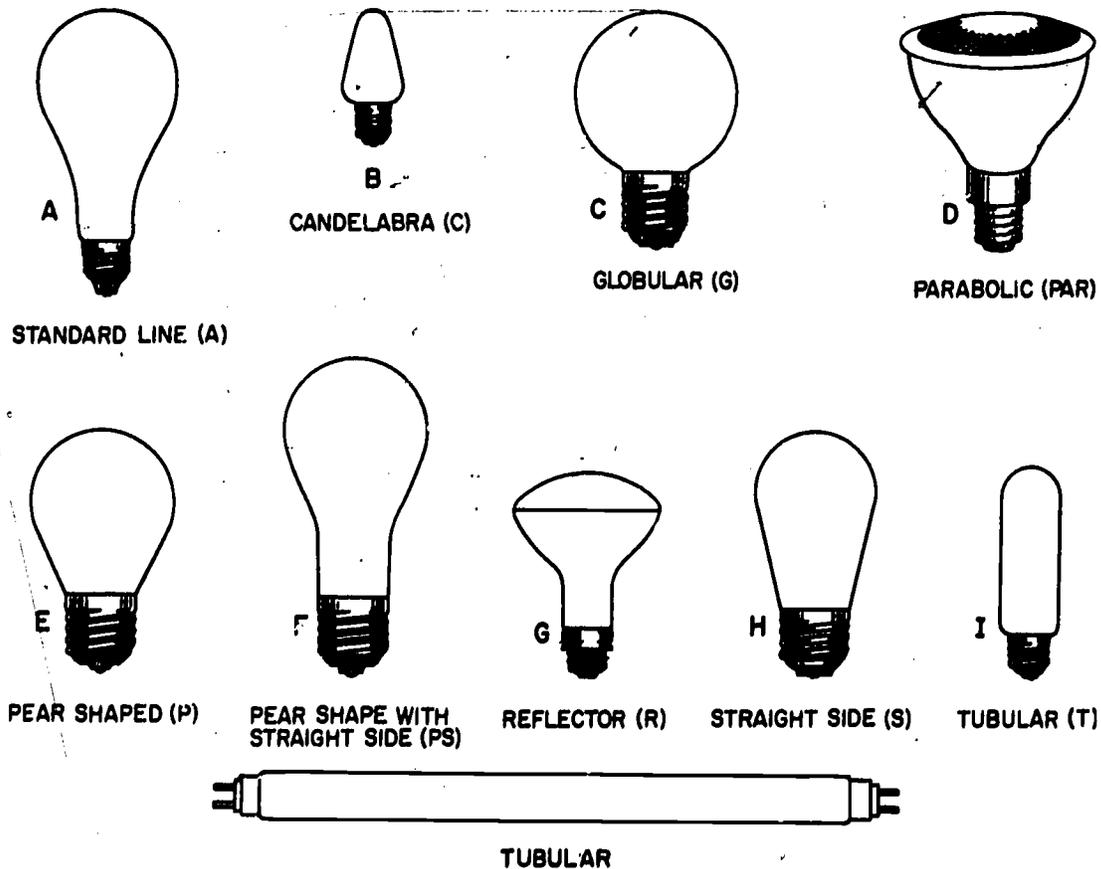


Figure 9-5. — Classification of lamps according to shape of bulbs.

12.80

The incandescent lamp is further subdivided into tungsten- and carbon-filament types. The tungsten-filament lamps comprise most of those listed in this group.

Rating

Incandescent lamps are rated in watts, amperes, volts, candlepower, or lumens, depending on their type. Generally, large lamps are rated in volts, watts, and lumens. Miniature lamps are rated in amperes for a given single voltage and in candlepower for a voltage-range rating.

Classification

Standard incandescent lamps are classified according to the (1) shape of bulb, (2) finish of bulb, and (3) type of base.

The classification of lamps according to the shape of bulb with the corresponding letter designation is illustrated in figure 9-5. The designation letter, which denotes the shape of the bulb, is followed by a numeral (not shown) that denotes the diameter of the bulb in eighths of an inch. For example, if the lamp illustrated in figure 8-3F, is designated PS-52, it is a lamp with a pear-shaped bulb and straight sides having a diameter of $52/8$, or 6-1/2 inches.

The clear lamp consists of a bulb that is made of unclouded or luminous glass, which exposes the filament to view. These lamps are used with reflecting equipment that completely conceals the lamps to avoid glare. Clear lamps can be used with open-bottom reflecting equipment when the units are mounted sufficiently high for the lamps to be out of the line of vision.

9-6
272

Chapter 9 — SHIPBOARD LIGHTING

The inside frosted lamp consists of a glass bulb that has the entire inside surface coated with a frosting, which conceals the filament and diffuses the light emitted from the lamp. These lamps can be used with or without reflecting equipment.

The white bowl lamp is equipped with a glass bulb that has the lower portion sprayed with a white enamel. The white bowl finish increases the size of the visible light, reduces the brilliancy, and diffuses the light rays to reduce glare. These lamps, which are usually over 120 watts, are used with open-bottom reflecting equipment.

The silvered bowl lamp is provided with a glass globe that has a coating of mirror silver

on the lower half, which shields the filament and provides a highly efficient reflecting surface. The upper portion of the bulb is inside frosted to eliminate shadows of the fixture supports. These lamps are used with units that are designed for indirect lighting systems.

The colored lamp may consist of a colored-glass bulb. These lamps are used for battle and general lighting, and safety lights.

The classification of lamps according to the type of base is illustrated in figure 9-6. The size of the base is indicated by name, including miniature, candelabra, and intermediate; the type of the base provided with the different sizes is also denoted by name, including screw, bayonet, prefocus, and bipin.

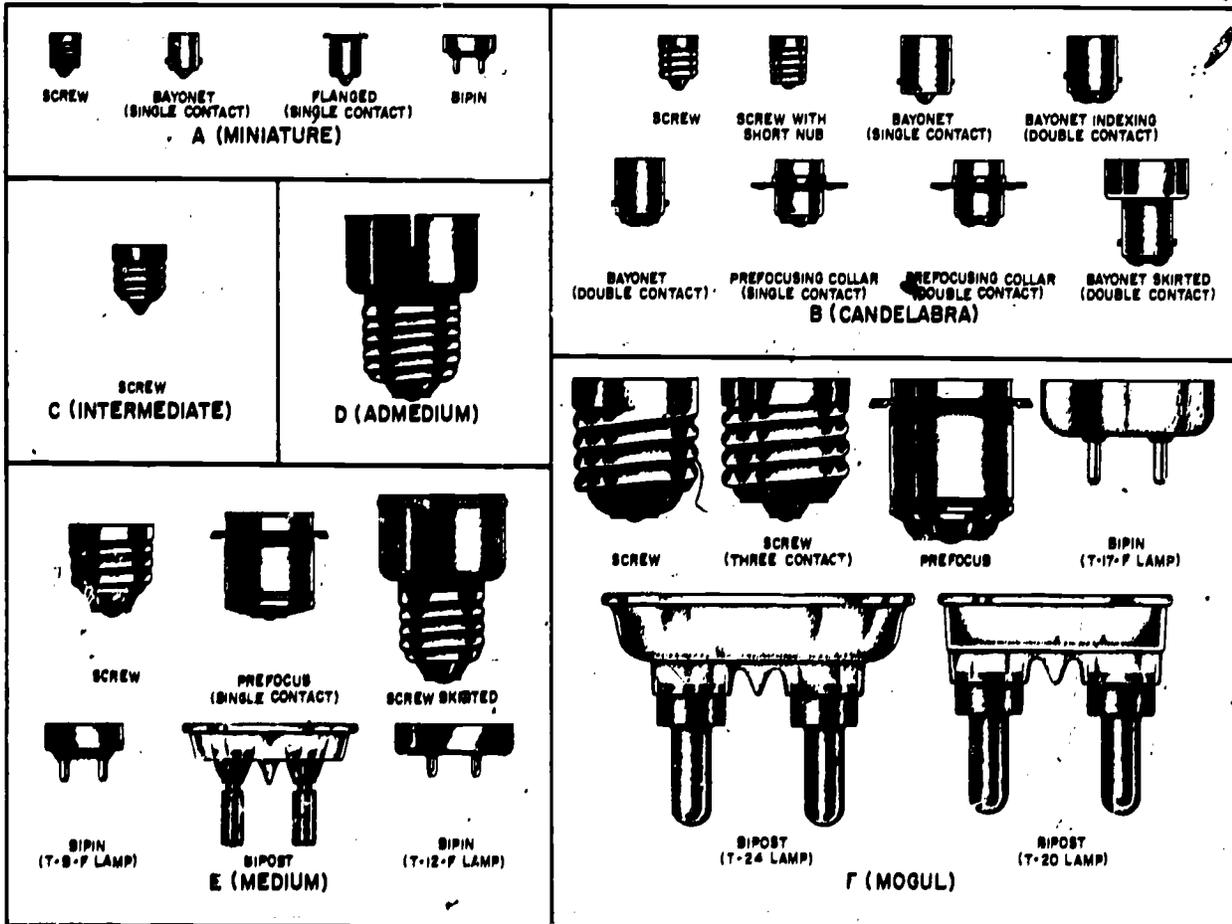


Figure 9-6. — Classification of lamps according to type of base.

12.79

The miniature, candelabra, and intermediate types of bases (fig. 9-6A, B, and C) are used on small size lamps for detail lighting.

The medium base (fig. 9-6E), which is the most commonly used type, is used on lamps (up to and including 300 watts) for general lighting.

The admedium base (fig. 9-6D) is slightly larger in diameter than the medium base and is used on some mercury lamps.

The mogul base (fig. 9-6F) is used on lamps rated above 300 watts. A three-contact mogul base is usually used on the higher wattage 3-way lamps and the medium screw base is used on the lower wattage 3-way lamps.

The medium and mogul prefocused bases are used on lamps provided with concentrated filaments, such as those used for motion picture projection.

The medium bipin base is used on fluorescent lamps described later in this chapter. The medium bipost base is used on lamps of 500, 750, 1000, 1250, and 1500 watts principally for indirect fixtures. This design allows better heat radiation than can be obtained with the mogul screw base.

The mogul bipost base is used on lamps of 500, 1000, and 1500 watts and above including floodlights.

Characteristics

The average life of standard lamps for general lighting service, when operated at rated voltage, is 750 hours for some sizes and 1000 hours for others. The light output, life, and electrical characteristics of a lamp are materially affected when it is operated at other than the design voltage. Operating a lamp at less than rated voltage will prolong the life of the lamp and decrease the light output. Conversely, operating a lamp at higher than rated voltage will shorten the life and increase the light output. Lamps should be operated as closely as possible to their rated voltage.

FLUORESCENT LAMPS

The fluorescent lamp is an electric discharge lamp that consists of an elongated tubular bulb with an inside-coated filament sealed in each


end to comprise two electrodes (fig. 9-7). The bulb contains a drop of mercury and a small amount of argon gas. The inside surface of the bulb is coated with a fluorescent phosphor. The lamp produces invisible, short-wave (ultra-violet) radiation by the discharge through the mercury vapor in the bulb. The phosphor absorbs the invisible radiant energy and reradiates it over a band of wavelengths that the eye is sensitive to. Note: A black dot inside a lamp symbol designates a gas filled tube.

Fluorescent lamps are now used for the majority of both red and white lighting on naval ships. Red lighting is achieved through the use of red plastic sleeves that slide over the lamps. The Navy has standardized on three lamp sizes; 8 watts, 15 watts, and 20 watts. The use of fluorescent lamps of over 20 watts has been limited to special installations. For example, 60-watt lamps are being used in hangar spaces, over workbenches in weapons repair shops, and in dock basins on LSDs (landing ship dock).


Operation

Fluorescent lamps installed aboard ship are of the hot-cathode, preheat starting type. A fluorescent lamp equipped with a glow-switch starter is illustrated in figure 9-7A. The glow-switch starter is essentially a glow lamp containing neon or argon gas and two metallic electrodes. One electrode has a fixed contact, and the other electrode is a U-shaped, bimetal strip having a movable contact. These contacts are normally open.

When the circuit switch is closed there is practically no voltage drop across the ballast, and the voltage across the starter, S, is sufficient to produce a glow around the bimetallic strip in the glow lamp. The heat from the glow causes the bimetal strip to distort and touch the fixed electrode. This action shorts out the glow discharge and the bimetal strip starts to cool as the starting circuit of the fluorescent lamp is completed. The starting current flows through the lamp filament in each end of the fluorescent tube, causing the mercury to vaporize. Current does not flow across the lamp between the electrodes at this time because the path is short circuited by the starter and because the gas in the bulb is nonconducting when the electrodes are cold. The preheating of the fluorescent tube continues until the bimetal strip in the starter cools sufficiently to open the starting circuit.

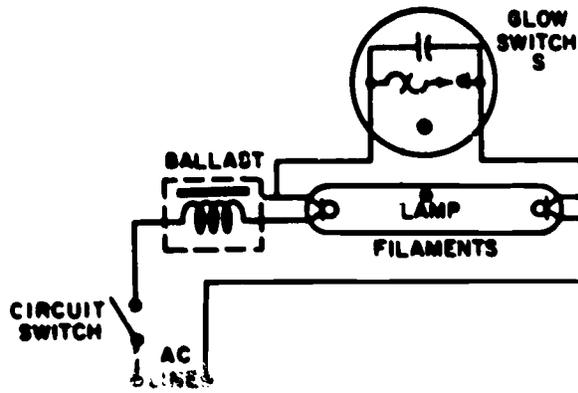


A GLOW-SWITCH STARTER

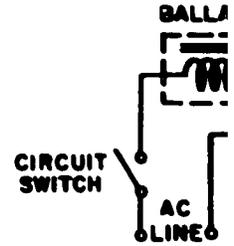


B THERMAL STARTER

65

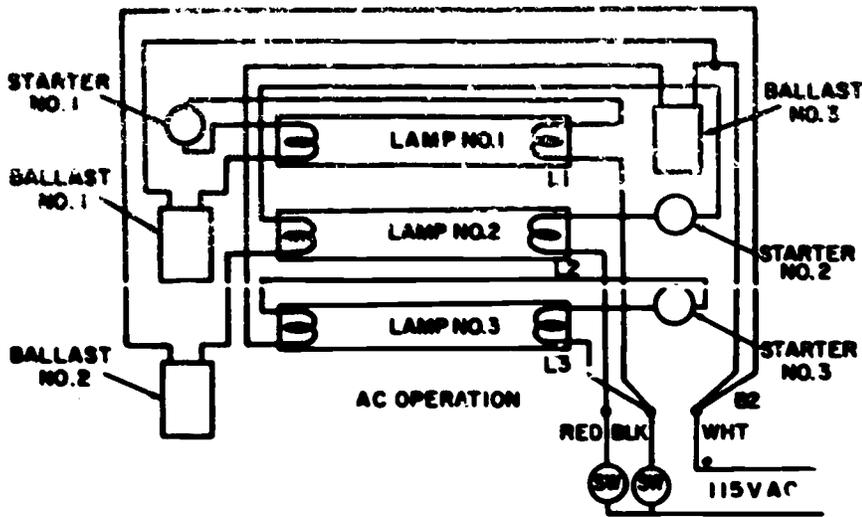

C FOR AC OPERATION

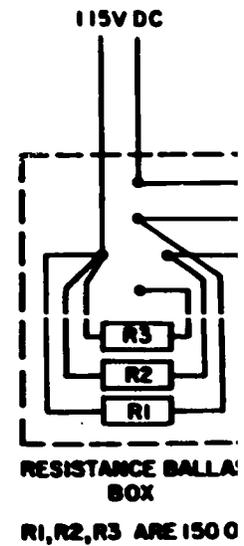

**D RESISTANCE BALLAST BOX
R1, R2, R3 ARE 150 Ω**

Figure 9-7.— Fluorescent lamps with auxiliary equip

When the starting circuit opens, the decrease of current in the ballast produces an induced voltage across the lamp electrodes. The magnitude of this voltage is sufficient to ionize the mercury vapor and start the lamp. The resulting glow discharge (arc) through the fluorescent lamp produces a large amount of ultraviolet radiation that impinges on the phosphor, causing it to fluoresce and emit a relatively bright light. During normal operation the voltage across the fluorescent lamp is not sufficient to produce a glow in the starter. Hence, the contacts remain open and the starter consumes no energy.

A fluorescent lamp equipped with a thermal-switch starter is illustrated in figure 9-7B. The thermal-switch starter consists of two normally closed metallic contacts and a series resistance contained in a cylindrical enclosure. One contact is fixed, and the movable contact is mounted on a bimetal strip.

When the circuit switch is closed the starting circuit of the fluorescent lamp is completed (through the series resistance, R) to allow the preheating current to flow through the electrodes. The current through the series resistance produces heat that causes the bimetal strip to bend and open the starting circuit. The accompanying induced voltage produced by the ballast starts the lamp. The normal operating current holds the thermal switch open.

Although the fluorescent lamp is basically an a-c lamp, it can be operated on d-c with the proper auxiliary equipment. The current is controlled by an external resistance in series with the lamp (figure 9-7D). Since there is no voltage peak, starting is more difficult and thermal-switch starters are required.

Because of the power lost in the resistance ballast box in the d-c system, the overall lumens per watt efficiency of the d-c system is about 60 percent of the a-c system. Also, lamps operated on d-c may provide as little as 80 percent of rated life.

The majority of thermal-switch starters use some energy during normal operation of the lamp. However, this switch ensures more positive starting by providing an adequate preheating period and a higher induced starting voltage.

The efficiency of the energy conversion of a fluorescent lamp is very sensitive to changes in temperature of the bulb, therefore, a fluorescent bulb in a cold place will burn very dim and appear to be defective.

The efficiency decreases slowly as the temperature is increased above normal, but also decreases very rapidly as the temperature is decreased below normal. Hence, the fluorescent lamp is not satisfactory for locations in which it will be subjected to wide variations in temperature.

Fluorescent lamps should be operated at voltage within +10 percent of their rated voltage. If the lamps are operated at lower voltage, uncertain starting may result, and if operated at higher voltages, the ballast may overheat. Operation of the lamps at either lower or higher voltages results in decreased lamp life. The performance of fluorescent lamps depends to a great extent on the characteristics of the ballast, which determines the power delivered to the lamp for a given line voltage.

When fluorescent lamps are operated on a-c circuits, the light output executes cyclic pulsations as the current passes through zero. This reduction in light output produces a flicker that is not usually noticeable at frequencies of 50 and 60-hertz, but may cause unpleasant stroboscopic effects when moving objects are viewed. The cyclic flicker can be minimized by combining two or three lamps in a fixture and operating the lamps on different phases of a 3-phase system (fig. 9-7C). Where only single-phase circuits are available, leading current is supplied to one lamp and lagging current to another so that the light pulsations compensate each other.

The fluorescent lamp is inherently a high power-factor device, but the ballast required to stabilize the arc is a low power-factor device. The voltage drop across the ballast is usually equal to the drop across the arc, and the resulting power factor for a single-lamp circuit with ballast is about 60 percent.

The majority of the difficulties encountered with fluorescent lights are caused by either wornout or defective starters, or by damaged or expended lamps. Lamps are considered defective when the ends are noticeably black in color. Hence, when abnormal operation of a fluorescent fixture is observed, the difficulty can usually be remedied by replacing either the starter or the lamp or both.

CAUTION: Fluorescent lamps contain mercury which is extremely toxic! Mercury can be swallowed, inhaled, or absorbed through the skin. Although the amount of mercury contained in each fluorescent lamp is small, the combined numbers of lamps used on-board ship could impact on health and marine life if not properly disposed of. All used fluorescent lamps must be turned in at the nearest defense property disposal office, ship repair facility, or naval shipyard. If a fluorescent lamp gets broken, avoid breathing the mercury vapor, and be extremely careful in handling the broken glass to avoid cuts. Mercury spillage must be cleaned up promptly. Detailed cleanup and disposal instructions are contained in NAVSHIPS' Technical Manual, Chapter 670.

GLOW LAMPS

The glow lamp is a device in which light is produced by an ionization process which creates the flow of electrons through an inert gas such as neon or argon, the effect of which causes a visible colored glow at the negative electrode.

Glow lamps are used as indicator or pilot lights for various instruments and on control panels. These lamps have relatively low light output, and thus are used to indicate when circuits are energized or to indicate the operation of electrical equipment installed in remote locations.

The glow lamp consists of two closely-spaced metallic electrodes sealed in a glass bulb that contains an inert gas. The color of the light emitted by the lamp depends on the gas. Neon gas produces an orange-red light, and argon gas produces a blue light. The lamp must be operated in series with a current-limiting device to stabilize the discharge. This current-limiting device consists of a high resistance that is sometimes contained in the lamp base.

The glow lamp produces light only when the voltage exceeds a certain striking voltage. As the voltage is decreased somewhat below this value, the glow suddenly vanishes. When the lamp is operated on alternating current, light is produced only during a portion of each half cycle and both electrodes are alternately

surrounded with a glow. When the lamp is operated on direct current, light is produced continuously, and only the negative electrode is surrounded with a glow. This characteristic makes it possible to use the glow lamp as an indicator of alternating current and direct current. It has the advantages of small size, ruggedness, long life, negligible current consumption, and can be operated on standard lighting circuits.


LIGHT FIXTURES

A lighting fixture, or unit, is a complete illuminating device that directs, diffuses, or modifies the light from a source to obtain more economical, effective, and safe use of the light. A lighting fixture usually consists of a lamp, globe, reflector, refractor (baffle), housing, and support that is integral with the housing or any combination of these parts (fig. 9-8A). A globe alters the characteristics of the light emitted by the lamp. A clear glass globe (fig. 9-8B) absorbs a small percentage of the light without appreciably changing the distribution of the light. A diffusing glass globe absorbs a little more light and tends to smooth out variations in the spherical distribution of the light; whereas, a colored-glass or plastic globe absorbs a high percentage of the light emitted by the lamp. A baffle conceals the lamp and reduces glare. A reflector intercepts the light traveling in a direction in which it is not needed and reflects it in a direction in which it will be more useful.

CLASSIFICATION

Lighting fixtures are designated according to the type of enclosure provided, as watertight, nonwatertight, pressure-proof, or explosion-proof. They are classified according to use as (1) regular permanent fixtures, (2) regular permanent red-light fixtures, (3) regular portable fixtures, (4) miscellaneous fixtures, (5) navigational lights, and (6) lights for night-flight operations.

Regular permanent fixtures (incandescent, figs. 9-4 and B, fluorescent fig. 9-8C) are permanently installed to provide general illumination and such detail illumination as may be required in specific locations. General illumination is based on the light intensity required

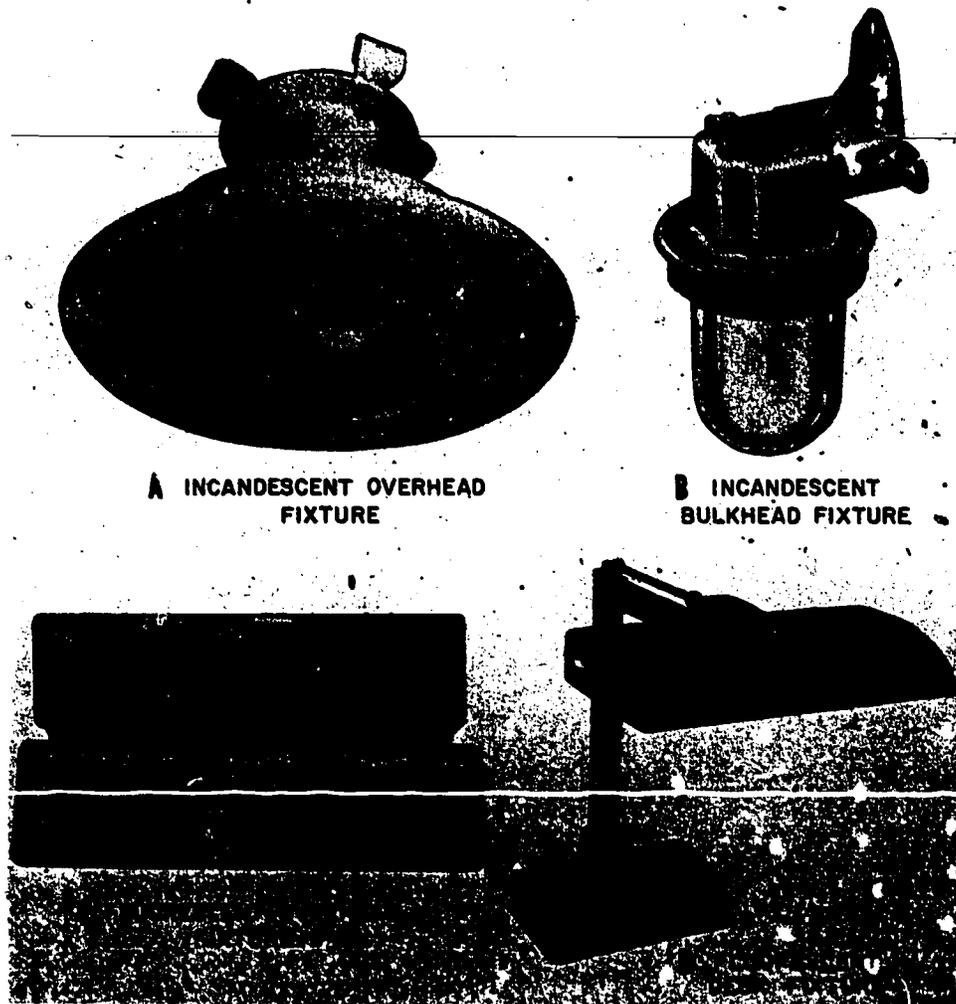A INCANDESCENT OVERHEAD
FIXTUREB INCANDESCENT
BULKHEAD FIXTURE

77.38


4 Figure 9-8. — Lighting fixtures.

for the performance of normal routine duties. Detail illumination is provided where the general illumination is inadequate for the performance of specific tasks. Sources include berth fixtures, desk lamps, and plotting lamps.

Regular red light fixtures (incandescent or fluorescent) are permanently installed to provide low-level, red illumination in berthing areas, in access routes to topside battle and watch stations, and in special compartments and stations. The incandescent fixtures are equipped with steamtight inside acid-etched red globes.

Regular portable fixtures (incandescent) are provided for lighting applications that cannot be served by permanently installed fixtures. These units are energized by means of portable cables that are plugged into outlets in the ship's service wiring system and include bedside lights, desk lights, and floodlights.

Miscellaneous fixtures (incandescent or fluorescent) are provided for detail and special lighting applications that cannot be served by regular permanent or regular portable lighting fixtures. These fixtures include boom lights, crane lights, gangway lights, portable flood lanterns, hand lanterns, and flashlights.

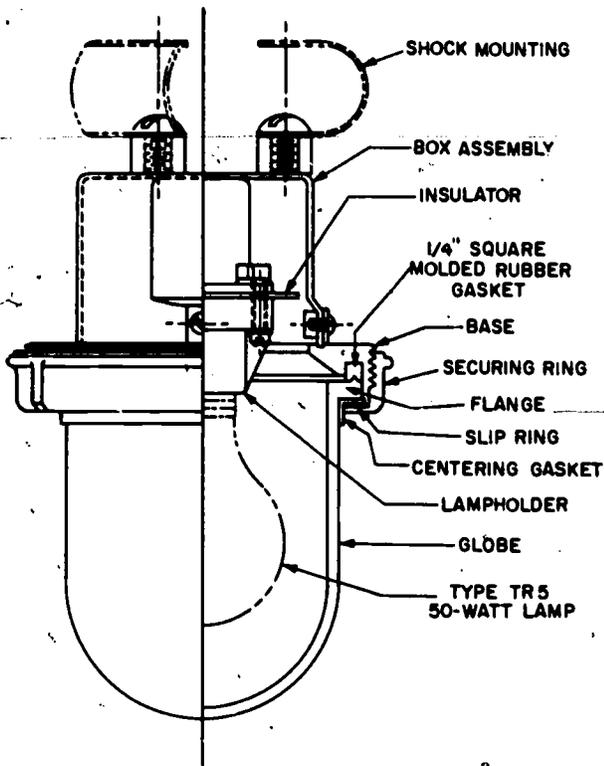

77.49
Figure 9-9. — Symbol 92.2 watertight fixture.

intervals to prevent a waste of energy and low intensity of illumination.

The depreciation of the light caused by the accumulation of dirt, dust, and film on the lamps and fixtures greatly reduces the efficiency of a lighting system. The actual loss of light from this cause will depend on the extent to which oil fumes, dust, and dirt are present in the surrounding atmosphere, and on the frequency with which the fixtures are cleaned.

When a fixture requires cleaning, turn off the light and remove the glassware from the lamp, and, if practicable, the reflector (if any). Wash the glassware, lamp, and reflector with soap and water. Avoid the use of strong alkaline and acid detergents when washing aluminum reflectors. Rinse the washed parts with clean, fresh water to which a few drops of ammonia are added to remove the soap film. Dry the parts with a soft cloth and replace them in the fixture.

To replace a burned-out lamp in a watertight fixture (fig. 9-9), unscrew the securing ring with a spanner wrench, remove the globe, and replace the burned-out lamp with a new one. Inspect the one-fourth of an inch gasket in the base, and the centering gasket on the outside of the flange and replace with new gaskets if they are worn or deteriorated. Insert the globe and tighten the securing ring onto the base.

Navigational lights (incandescent) include all external lights (running, signal, and anchor), except searchlights, which are used for navigational and signaling purposes while underway or at anchor.

Lights for night-flight operations are used to assist pilots (at night) when taking off and landing. These lights also provide visual aid to pilots for locating and identifying the parent aircraft carrier.

MAINTENANCE OF LAMPS

The lighting system should be maintained at its maximum efficiency because artificial light has an important bearing on the effectiveness of operation of a naval vessel. All lighting fixtures should be adequately cleaned at regular

NAVIGATION AND SIGNAL LIGHTS

Navigation and signal lights include all external lights used to reduce the possibility of collision and to transmit intelligence. Figure 9-10 shows a general location of many of these lights aboard ship.

NAVIGATIONAL LIGHTS

The number, location, arc, and range of visibility of the navigation lights, which must be displayed from sunset to sunrise by all ships in International Waters, are established by the International Regulations for Preventing Collisions at Sea. Statutory law requires Naval compliance with the International Rules of the Road, or has allowed an existing waiver or

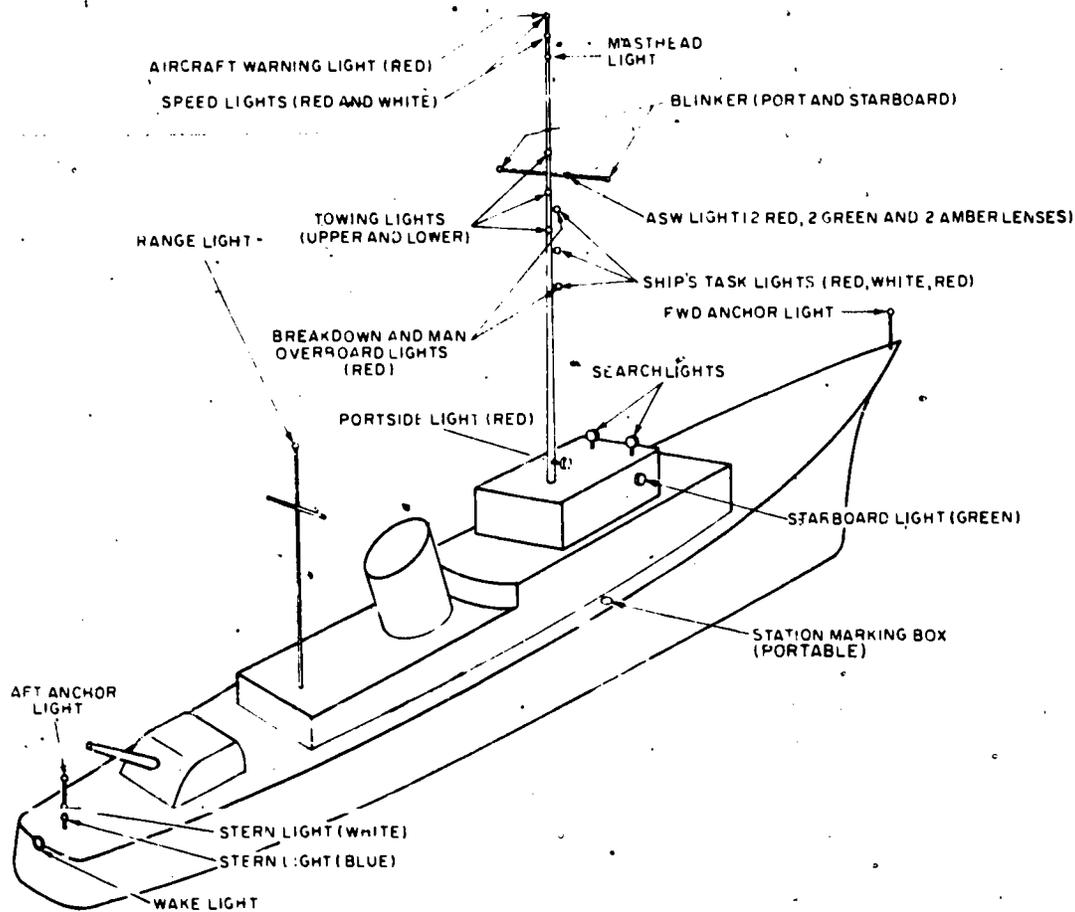


Figure 9-10.—A general location of shipboard lights.

17.23(77C)

a waiver to be issued covering the vessel being built. Figure 9-11 illustrates the arcs of visibility for shipboard running lights.

The RANGE LIGHT (white) for ships is a 20-point (225°) light located on the foremast or in the forward part of the vessel. It is a spraytight fixture provided with a 50-watt, 2-filament lamp and equipped with an external shield to show an unbroken light over an arc of the horizon of 20 points—that is, from dead ahead to 2 points abaft the beam on either side.

The MASTHEAD LIGHT (white) for ships is also a 20-point (225°) 50-watt 2-filament light located on the mainmast or the fore part of the vessel. The vertical

distance of the range light must be at least 15 feet higher than the masthead light and the horizontal distance must be greater than the vertical distance of the masthead light.

The PORT and STARBOARD SIDE LIGHTS for ships are 10-point, $112\frac{1}{2}^\circ$ lights (fig. 9-12) located on the respective sides of the vessel, showing red to port and green to starboard. The fixtures are spraytight, each provided with a 100-watt, 2-filament lamp and equipped with an external shield arranged to throw the light from dead ahead to 2 points abaft the beam on the respective sides.

The STERN LIGHT (white) for ships is a 12-point (135°) light located on the stern of

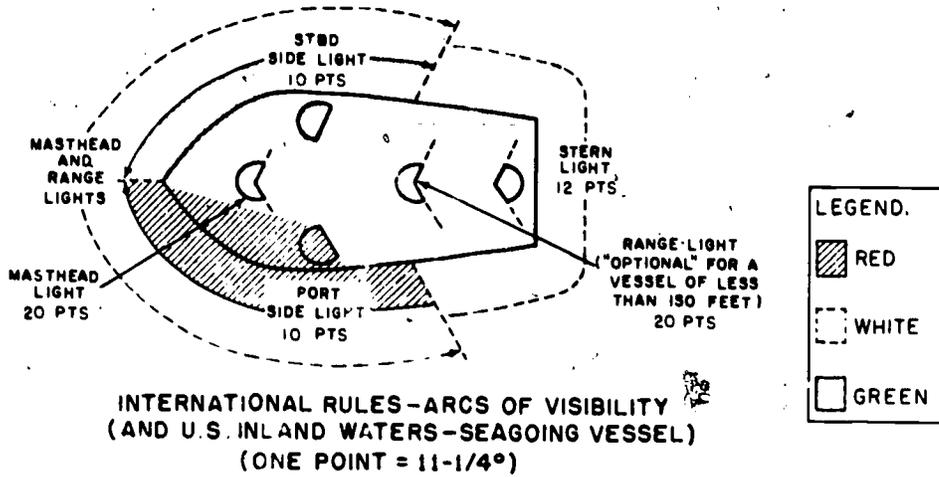


Figure 9-11.—Running lights arcs of visibility.

69.27

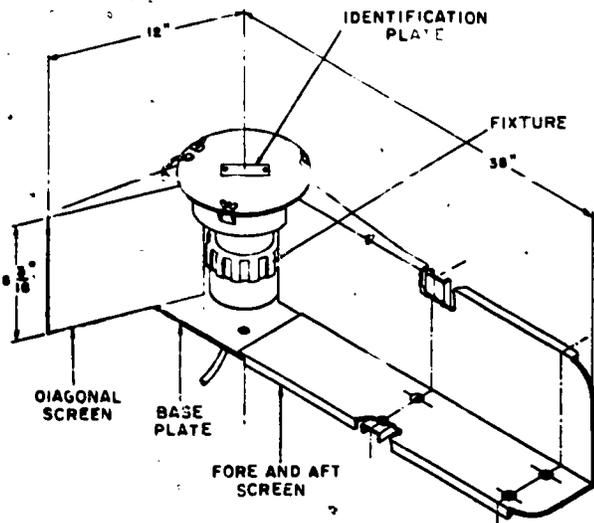


Figure 9-12.—Side light.

77.41

the vessel. It is a watertight fixture provided with a 50-watt, 2-filament lamp and equipped with an external shield to show an unbroken light over an arc of the horizon of 12 points of the compass—that is, from dead astern to points on each side of the ship.

The UPPER and LOWER TOWING LIGHTS (white) for ships not normally engaged in towing

operations are 20-point (225°) lights similar to the previously described masthead and range lights. They are portable fixtures, each equipped with a 50-watt lamp and a type THOF-3 cable and-plug connector for energizing the lights from the nearest lighting receptacle connector. When these lights are used, they are located vertically (6 feet apart) in the fore part of the vessel.

The BREAKDOWN and MAN-OVERBOARD LIGHTS (red) for ships are 32-point (360°) lights located 12 feet apart (vertically) and mounted on brackets that extend aft of, and to starboard of the mast or structure. This arrangement permits visibility, as far as practicable, throughout 360° of azimuth. The fixtures are spraytight and equipped with 15-watt, 1-filament lamps. When these lights are used as a man-overboard signal, they are pulsed by a rotary snapswitch (fitted with a crank handle) on the signal and anchor light supply and control panel. These lights are mounted and operated in conjunction with the ship's task lights.

The SHIP'S TASK LIGHT is an array consisting of three 32-point (360°) lights, stepped out 45 degrees aft and to starboard of the mast, in a vertical line one over the other so that the upper and lower lights shall be the same

distance from, and not less than six feet above or below, the middle light and be visible all around the horizon at a distance of at least 2 miles. The upper and lower lights of this array shall be red, utilizing the presently installed Man-overboard and Breakdown Lights, relocated as necessary. The center light shall be a clear white light.

These lights shall be connected to the Navigational Light Supply and Control (no telltale) Panel as follows:

- (1) So that the two red lights may be burned steadily to indicate the ship is Not Under Command;
- (2) So that the two red lights may be flashed by rotating the switch (crank type) handle, to indicate a man-overboard condition exists;
- (3) So that the three lights will burn simultaneously to indicate the ship is either launching or recovering aircraft or engaged in replenishment-at-sea operations and by the nature of its work is unable to get out of the way of approaching vessels. The switch for this application shall be labeled "Ship's Task Lights."


The FORWARD and AFTER ANCHOR LIGHTS (white) for ships are 32-point (360°) lights. The forward anchor light is located near the stem of the vessel, and the after anchor light is at the top of the flagstaff. The fixtures are splash-proof, each provided with a 50-watt, 1-filament lamp. The anchor lights are energized through individual on-off rotary snap switches on the signal and anchor light supply and control panel in the pilothouse.

Testing Navigational Lights

All shipboard navigational lights are tested daily while at sea. The test is usually made one hour prior to sunset by the Quartermaster.

The SUPPLY, CONTROL, and TELLTALE PANEL for the running lights is a nonwater-tight, sheet metal cabinet designed for bulkhead mounting (fig. 9-13).

This panel is provided to aid a ship in keeping its running lights lit as prescribed by the

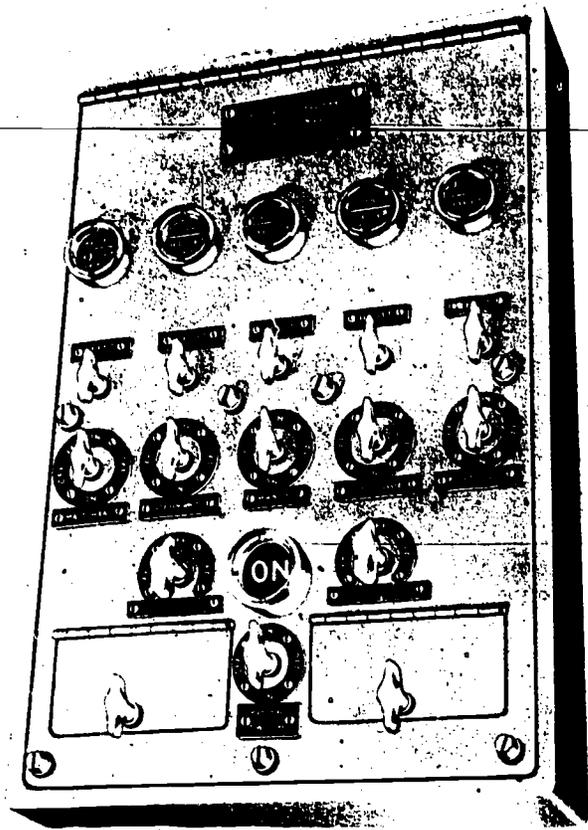

77.42

Figure 9-13.— Supply, control, and telltale panel.

rules for preventing collisions at sea. It is installed in or near the pilot house and gives an alarm when one of the running lights (masthead, stern, range and side lights) is out or has had a failure of its primary filament and is operating on its secondary filament.

Failure of the primary filament, or its circuit, of any one of the following lights: masthead, stern, range, and side lights, deenergizes a relay. This relay effects a transfer of power to the secondary filament of the affected light, sounds a buzzer, lights an indicator light and moves an annunciator target to read, OUT (reads RESET when deenergized). The buzzer may be silenced by turning the handle of the reset switch 90° (to the horizontal position); however the indicator lamp of the affected light stays lit until the repair has been completed and

the reset switch is turned back to the normal (RESET) position. Certain ships have permanent towing lights installed and connected to control switches on the telltale panel. The towing light switches are manual. When failure of the primary filament occurs in towing lights connected to this panel the switch must be manually turned to the position marked "SEC", to energize the secondary filament.

Sequence of Operations

The operations of the supply control and telltale panel are easily seen by following the schematic diagram in figure 9-14. For simplification this schematic shows only one of the five running lights, the operation is the same for all five.

When the primary filament of a running light is lighted, relay contacts (X, Y and Z) are open, indicator lamps, annunciator and buzzer are not

energized, reset switch must be kept pointing in the (vertical) "RESET" (marked position) under normal condition or buzzer will not be energized when a failure occurs.

If the primary filament circuit is opened, as when the filament burns out, the relay is de-energized closing contacts (X and Y), secondary filament is lighted, indicator lamps are lighted, annunciator target moves to "OUT" position (closing contact Z) and the buzzer sounds.

When the "RESET" switch handle is turned to the horizontal (unmarked position), the buzzer is silenced but the indicator lamps remain lighted and the annunciator target is still OUT.

When the defective lamp is replaced, (or fault in primary circuit is corrected) the relay coil is energized and relay contacts (X and Y) are opened, annunciator coil is deenergized (opening contact Z) and target indicates RESET, secondary filament is deenergized, indicator lamps remain lighted.

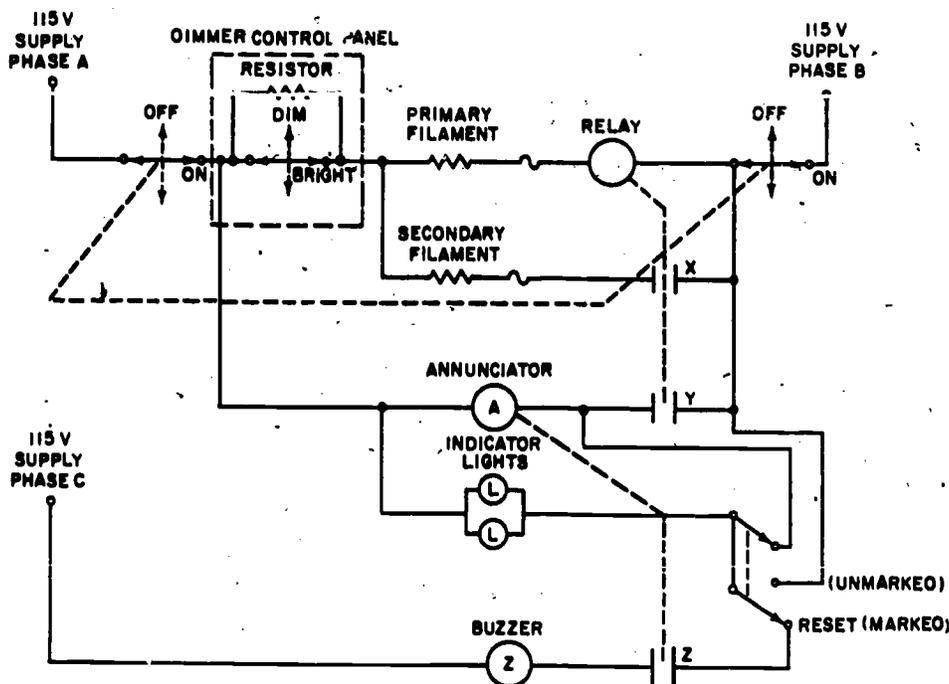


Figure 9-14.— Running light control schematic diagram.

77.43A

Reset switch is returned to RESET (vertical) position, indicator lamps go out and entire unit is again in normal condition.

A dimmer control panel connected as shown in figure 9-14 is provided for dimming the running lights when directed. This panel provides but one position of dimming. In the dim position the visibility of the range, masthead, side lights, and stern light is reduced to about 4000 yards. The sequence of operation of the telltale panel is the same whether the running lights are in the light or dimmed condition.



Navigation lights do not conform to the rules of the road when in the dim position; therefore they are dimmed only when directed by higher authority.

SIGNAL LIGHTS (STATION OR OPERATIONAL)

The AIRCRAFT WARNING LIGHTS (red) for ships are 32-point (360°) lights (fig. 9-15A) installed at the truck of each mast. Two aircraft warning lights are installed if the light cannot be located so that it is visible from any location throughout 360° of azimuth. However, a separate aircraft warning light is not required if a 32-point red light is installed at the truck of a mast for another purpose. The fixtures are spraytight and equipped with multiple sockets provided with 15-watt, 1-filament lamps (fig. 9-15B).

The STERN LIGHT (blue) for ships is a 12-point (135°) light similar to the previously described white stern light. It is a watertight fixture provided with a 50-watt lamp and is installed near the stern on ships that are engaged in convoy operations and mounted to show an unbroken arc of light from dead astern to six points on each side of the ship.

The WAKE LIGHT (white) for ships is installed on the flagstaff or after part of the ship to illuminate the wake, and mounted so that no part of the ship is illuminated. The fixture is spraytight and of tubular construction. One end of the fixture is fitted with an internal screen, having a 1-inch diameter hole provided with a lens (2-5.16" diameter x 3/8" thick) through which light is emitted from a 100-watt, 2-filament lamp. A suitable mounting bracket

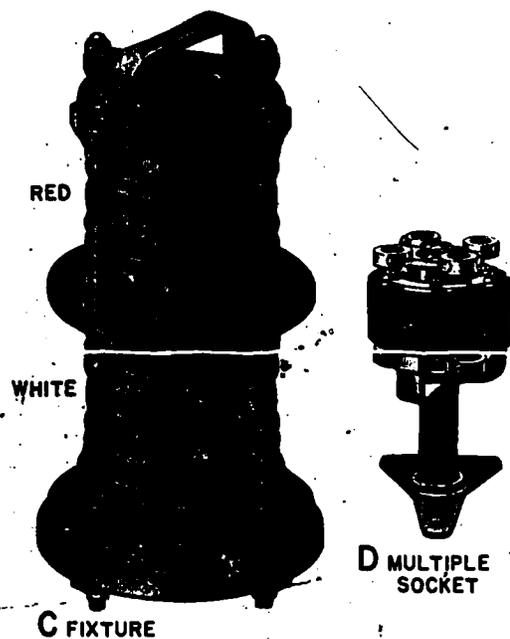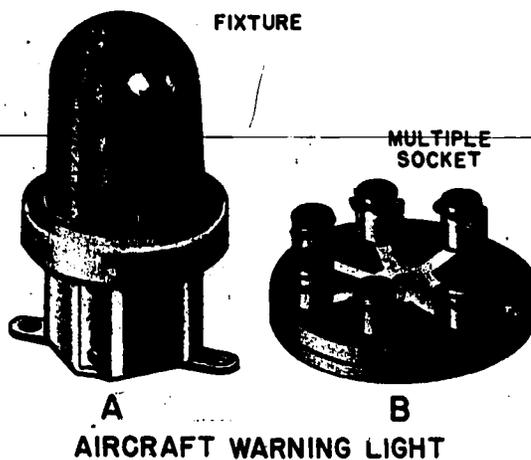

SPEED LIGHTS

77.44

Figure 9-15.— Aircraft warning and speed lights.

is included for adjusting the position of the light. Thus, the wake light puts a "target" in the ship's wake.

The SPEED LIGHTS for ships are combination red (top) and white (bottom), 32-point (360°) lights (fig. 9-15C). They are located at the

truck (top) of the mainmast, except when the height of the foremast is such as to interfere with their visibility; in this case, they are located at the truck of the foremast. Two speed lights are installed if their light cannot be located so that they are visible throughout 360° of azimuth.

Speed lights are provided to indicate (by means of a coded signal) the speed of the vessel to ships information. In other words, they indicate the order being transmitted over the engine order system. The white light indicates ahead speeds, and the red light indicates stopping and backing. The fixture is spraytight and equipped with a multiple socket (fig. 9-15D) provided with nine 15-watt, 1-filament lamps. Six lamps are used in the top of the socket for the red light and three in the bottom for the white light, each light is energized from separate circuits.

The controller for the speed lights is located in the pilot house.

The speed light controller is energized through the supply switch on the signal and anchor light control and supply panel. Automatic operation of the speed light system is accomplished by placing the circuit control switch in the MOTOR PULSE position and the signal (speed) selector switch to the desired position. This action establishes connections to the motor-driven pulsator to provide the proper signals. If the pulsator unit should fail, manual operation of the speed light system is accomplished by placing the circuit control switch in the Hand Pulse (Red or White) position. This action connects the Hand Pulse key in the speed light circuit so that the signals can be transmitted manually, using the same code as that for the automatic pulsator.

The speed light can be used as an aircraft warning light by placing the signal selector switch in the stop position and the circuit control switch in the AIRCRAFT WARNING position.

The REVOLVING BEAM ASW (GRIMES) LIGHT is displayed for intership signaling during ASW operations and is installed on all ships equipped to participate in ASW operations. The light is positioned on either the yardarm or mast platform where it can best be seen all around the horizon. Two red, two green, and two amber lenses are provided with each fixture. Colors to be used are determined by operating forces.

The STATION MARKER BOX SIGNAL LIGHT (fig. 9-16) has nine holes each fitted with a red lens. The hand-operated individual shutters hinge upward. Illumination is by two 25-watt shielded bulbs, one in a stand-by.

One watertight receptacle is installed at each replenishment-at-sea station, outboard near or under the rail or life line. The lights have no special arcs-of-visibility requirements.

Station marking boxes are used for visual communications between the replenishment-at-sea stations of the sending and the receiving ships. Specific combinations of lights indicate that stores, such as water, fuel oil, and ammunition, are to be sent to certain stations. When the marker box is flagged correctly there will be little chance of receiving the wrong cargo at a station.

The Boatswain Mates will usually test the station marker box prior to underway replenishment, but you should be prepared for any possible trouble and have spare light bulbs readily available.

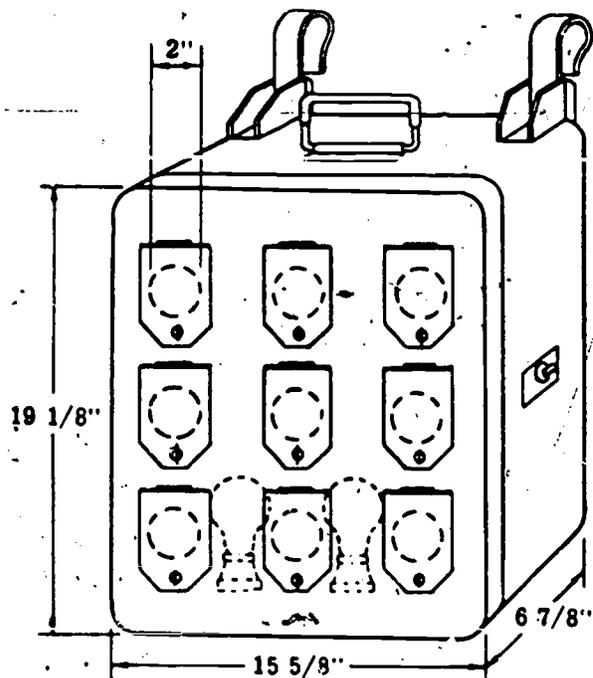


Figure 9-16. — Station marker box.

37.10

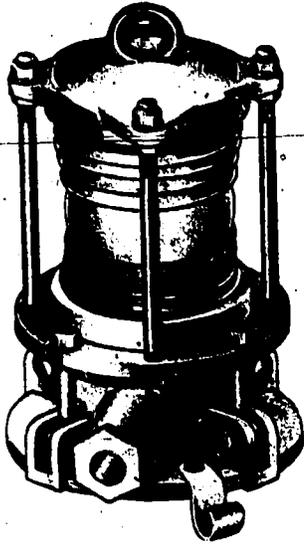


Figure 9-17. — Blinker light.

77.44

The CONTOUR APPROACH LIGHTS are found on replenishment-at-sea delivery ships. The lights assist the receiving ship coming alongside during replenishment operations by establishing the delivery ship's contour lines. Two control approach red signal lights (135° arc) are located on each side of the delivery ship at the railing. Additional lights may be installed if obstructions exist beyond the delivery ship's parallel contour lines.

SIGNAL LIGHTS (VISUAL COMMUNICATION)

The signal lights for visual communication include the blinker lights located on the yardarm and the searchlights.

Blinker Lights

The BLINKER LIGHTS (white) for ships are 32-point (360°) lights (fig. 9-17) located, one port and one starboard, outboard on the signal yardarm. The fixtures are spraytight, each provided with 15-watt, 1-filament lamps and fitted with a screen at the base to prevent glare or

reflection that may interfere with the navigation of the ship. These lights are operated from signal keys located on each side of the signal bridge.

Older blinker units (fig. 9-17) have a cluster of six 15-watt lamps in a single multiple-lamp socket, similarly arranged as in the warning light (fig. 9-15B). Later units (not illustrated) are covered by NavShips drawing 815-F-1197117-B. These later units have two clusters of six lamps. Cluster No. 1 may be used singly for normal use. Cluster No. 2 may be added by switching to increase brilliance for communication at greater distance. Cluster No. 2 may be selected alone when No. 1 fails.

Multipurpose Signal Light

The portable multipurpose signal light (fig. 9-18) produces a high intensity beam of light suitable for use as a spot light or as a blinker (by means of a trigger switch located on the rear handle) for visual communications. The light is designed to operate from an internal battery (three type BA-2 dry cells connected in parallel), or from the 120-volt a-c ship's supply via a 120/20 volt transformer mounted in the stowage box. The front handle is adjustable to assure a steady position when signaling, and front and rear sights provide for holding the beam on the desired target.

Supplied with the light, in addition to the stowage box, are red, green, and yellow lenses; a 15-ft power cable for supplying power from the ship's a-c source to the stowage box, a 25-ft cable for supplying power from the stowage box to the light, and the manufacturer's technical manual.

Searchlights

Naval searchlights are used to project a narrow beam of light for the illumination of distant objects and for visual signaling. To accomplish its purposes the searchlight must have an intense, concentrated source of light, a reflector that collects light from the source (to direct it in a narrow beam), and a signal shutter (to interrupt the beam of light).

920.7

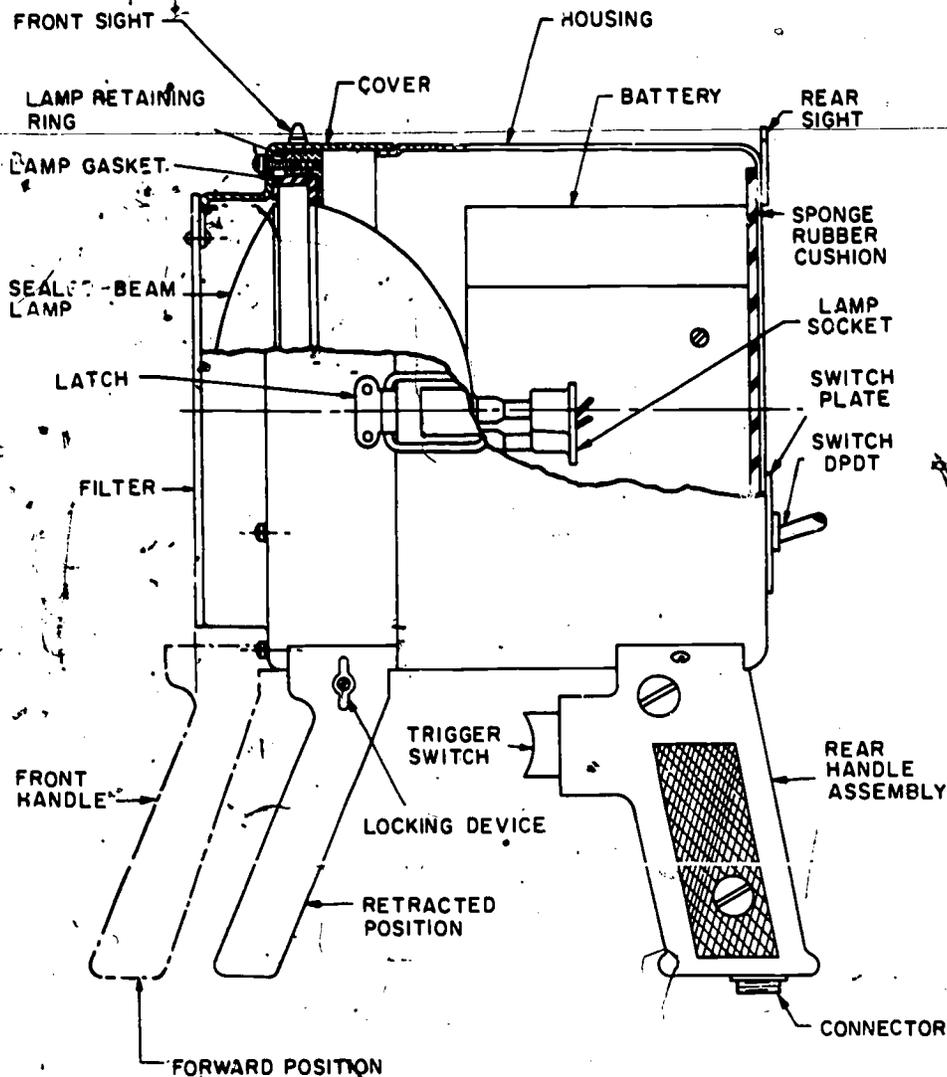


Figure 9-18.—Multipurpose signal light.


101.5

Searchlights are classified according to size of reflector and light source. The three general classes are the 8-inch, 12-inch, and 24-inch searchlights. The 8-inch searchlight is of the sealed-beam incandescent type; the 12-inch light is of the incandescent type and the 24-inch searchlight is the carbon-arc type.

8-INCH SEALED-BEAM SEARCHLIGHT.—The 8-inch signaling searchlight utilizes an

incandescent sealed beam lamp. It is designed to withstand high vibratory shock and extreme humidity conditions, and will operate equally well in hot or cold climates.

This searchlight may be furnished for operation with either a 60-hertz 115-volt transformer to step the voltage down to 23 volts, or without transformer to operate on 115 volts using the proper rated sealed beam unit. The same unit

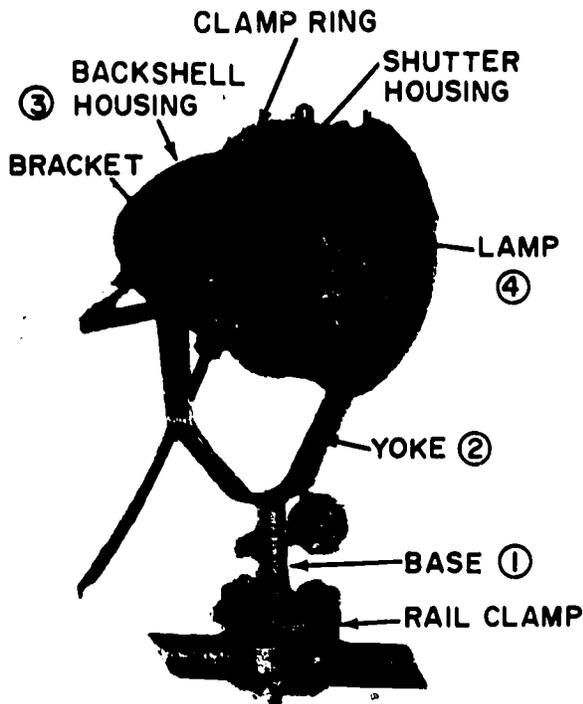

77.62

Figure 9-19.--8-inch 60-hertz sealed-beam searchlight.

is available for use on small craft from a 28-volt power source.

The searchlight (fig. 9-19) consists of the (1) base, (2) yoke, (3) housing, and (4) lamp. The BASE is equipped with a rail clamp for securing the searchlight to the rail. The YOKE is swivel mounted on the base to allow it to be trained through 360°. The HOUSING provides an enclosure for the lamp and is composed of a front and a rear section. The front section comprises the shutter housing, and the rear section comprises the backshell housing. The two sections are held together by a quick-release clamp ring that permits easy replacement of the lamp. The backshell and lamp assembly, when detached, may be used as a portable searchlight. The entire housing is mounted on brackets attached to the shutter housing and supported by the yoke to allow the searchlight to be elevated or depressed. Clamps are provided for securing the searchlight in train and elevation.


The SHUTTER HOUSING contains the venetian blind shutter, which is held closed by springs and manually opened by a lever on either side of the housing. The front of the shutter housing is sealed by the cover glass and a gasket. The rear of the shutter housing is enclosed by a gasket and adapter assembly. The adapter assembly provides a locating seat for the lamp and incorporates a hook and key arrangement that aligns the backshell housing and retains it in position while attaching the clamp ring to hold the two sections together.

Three filter assemblies (red, green, and yellow) are provided and can be readily snapped in place over the face of the searchlight. The shutter vanes can be locked in the open position for use as a spotlight.

The backshell housing provides an enclosure for the 115/23 volt transformer.

To remove the lamp from the housing for cleaning or replacement, tip the rear end of the searchlight up to its highest position and lock it in place. Release the clamp ring toggle and remove the clamp ring (fig. 9-19). Remove the backshell assembly by raising it up to disengage it from the hook and tab. Pull the gasketed lamp out of the shutter adapter assembly by gripping the lamp gasket on its periphery and lifting it out to disengage the gasket lugs from the notches in the adapter assembly.

To replace the lamp in the lamp gasket, be certain that the TOP marked on the lamp and on the gasket are aligned, and that the lugs of the lamp are firmly seated in the recesses provided in the gasket. To replace the gasketed lamp in the housing, be certain that the lugs are set into the notches in the adapter assembly, located inside, and at the rear of, the shutter housing. Set the backshell assembly over the shutter assembly, engaging the shutter hook into the slot of the backshell. Using the hook as a hinge, carefully swing the lower part of the backshell down to the shutter assembly, engaging the shutter tab into the notch in the rolled edge of the backshell. Be careful to swing the backshell down in a straight line to make direct engagement and to ensure proper positioning of the lamp contacts on the terminals of the lamp. Replace the clamp ring, being certain to have the hinge pin set into the notches of the adapter and backshell assemblies.

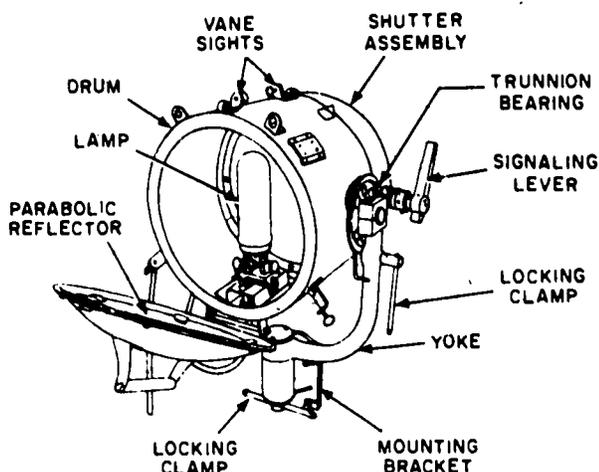

101.1
Figure 9-20.—12-inch incandescent searchlight.

12-INCH INCANDESCENT SEARCHLIGHT.—

The 12-inch incandescent searchlight is used primarily for signaling and secondarily for illumination.

The searchlight (fig. 9-20) comprises the (1) mounting bracket, (2) yoke, (3) drum, and (4) lamp. The MOUNTING BRACKET permits the searchlight to be secured to a vertical pipe or to a flat vertical surface. The YOKE is swivel mounted on the bracket to allow the searchlight to be rotated continuously in train. The steel DRUM provides housing for the lamp and its trunnion mounted on the yoke to allow it to be elevated and depressed. Clamps are provided for locking the searchlight in any position of train and elevation.

The SIGNALING SHUTTER is a venetian blind shutter mounted inside the drum behind the front door. It is held in the CLOSED position by two springs and is manually opened by a lever on either side of the drum. The parabolic metal reflector is mounted on the inside of the rear door.

The LAMP is usually a 1000-watt, 117-volt incandescent lamp having special concentrated filaments that reduce the area of the light beam. The lamp is mounted in a mogul bipost socket. The socket is located in front of the reflector and can be adjusted only slightly. The replacement of the lamp is accomplished through the rear door of the searchlight.

Maintenance on 8- and 12-inch Searchlights.—These searchlights are maintained in accordance with the same good practice that relates to all electrical and mechanical equipment. Electrical contacts must be kept clean and bright. Electrical leads should be checked daily and replaced as soon as defects appear. Depending on the amount of time they are used, moving parts such as trunnion bearings and the stanchion socket must be lubricated at intervals. Vane hinges and links should be lubricated once a month, or more frequently if required, with a mixture of graphite and diesel oil (diesel oil floats the graphite into places needing lubrication). Shutters should be opened for a few minutes after lubrication with the door glass and cover open to allow the diesel oil to evaporate. The lubrication mixture is applied sparingly to prevent its clouding the glass or reflector.


At regular intervals the two shutter stop screws, located next to the handles, are adjusted to take up wear in the leather bumpers that cushion the shock of the shutters closing. To prevent twisting the shaft, the bumpers should just touch the stop adjustment when the vanes are closed. Shutter vanes are checked often to ensure that all screws are tight.

The reflector is cleaned weekly or more often to remove dust. Salt spray is removed from the lens and reflector whenever needed. To clean the reflector:

1. Ensure that the surface is cool. Touching a hot surface with your bare skin can result in a serious burn.
2. Use standard Navy brightwork polish.
3. Use cotton or a soft clean cloth.
4. Use radial motion from center toward rim of reflector. Do not use circular motion.

Never paint a bearing surface or the working member of any part of the light. Do not paint bolts, locking nuts, other parts necessary for access to the interior, or over nameplate dat. Keep oiling cups and holes free of paint.

Replacing the lamp and focusing should be done only by qualified Electrician's Mates unless a member of the signal gang is qualified.

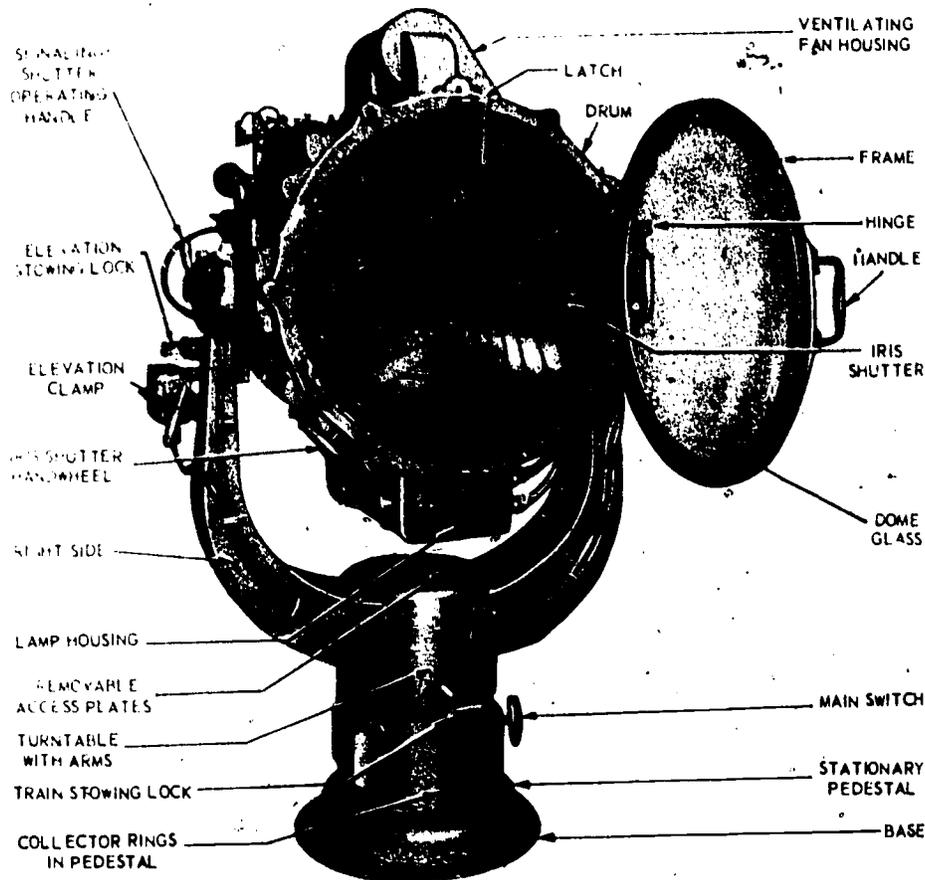

77.50.1

Figure 9-21.— 24-inch carbon-arc searchlight. (Front View.)

The light source must be at the focus of the reflector for minimum beam spread and maximum intensity. Some types of 12-inch incandescent searchlights are provided with focusing adjustment screws. Other types can be adjusted by loosening the screws that hold the lamp-socket support plate in position. Move the entire socket assembly toward or away from the reflector until the beam has a minimum diameter at a distance of 100 feet or more from the light, and retighten the screws. When checking the diameter of the beam, the rear door must be tightly clamped shut.

A screen hood is provided for attachment to the front door to limit the candle power of the beam, to cut down its range, and to reduce stray light, which causes secondary illumination

around the main beam. The hood also provides for the use of colored filters.

24-INCH CARBON-ARC SEARCHLIGHT.— The 24-inch carbon-arc searchlight (fig. 9-21) consists of a (1) stationary pedestal, (2) turntable with arms, (3) drum with iris and signaling shutters, and (4) carbon-arc lamp. The turntable is supported on the pedestal and can rotate continuously in train; and the drum, which provides a housing for the lamp, is trunnioned on the turntable arms and can be elevated or depressed through angles of 110° and 30° , respectively.

The pedestal is secured to the searchlight platform, or base, and provides a mounting for the turntable and main power switch. The turntable shaft is supported on two large ball bearings.

assemblies inside the pedestal (not shown) to allow the turntable and arms to rotate continuously in train. The main power switch is mounted inside the pedestal and is operated by a handle that protrudes from the switch cover. Terminal tubes through the pedestal provide entrances to the searchlight for the d-c supply cable and the remote signaling key circuit.

The turntable and arms, which support the drum, provide a mounting for the shutter switch train clamp, elevation clamp, and elevation stowing lock. Three collector rings mounted

on the turntable shaft (not shown) supply power to the lamp and the remote signaling key circuit.

The drum, or barrel, is essentially a sheet-steel shell that provides an enclosure for the lamp. It is equipped with trunnions that are supported by bearings mounted on the turntable arms to allow the drum to be elevated or depressed through angles of 110° and 30°, respectively. Handles are provided at the front and rear of the barrel for swinging the searchlight in train and in elevation to direct the beam of light. The barrel includes the lamp housing, front door and dome glass, iris shutter,

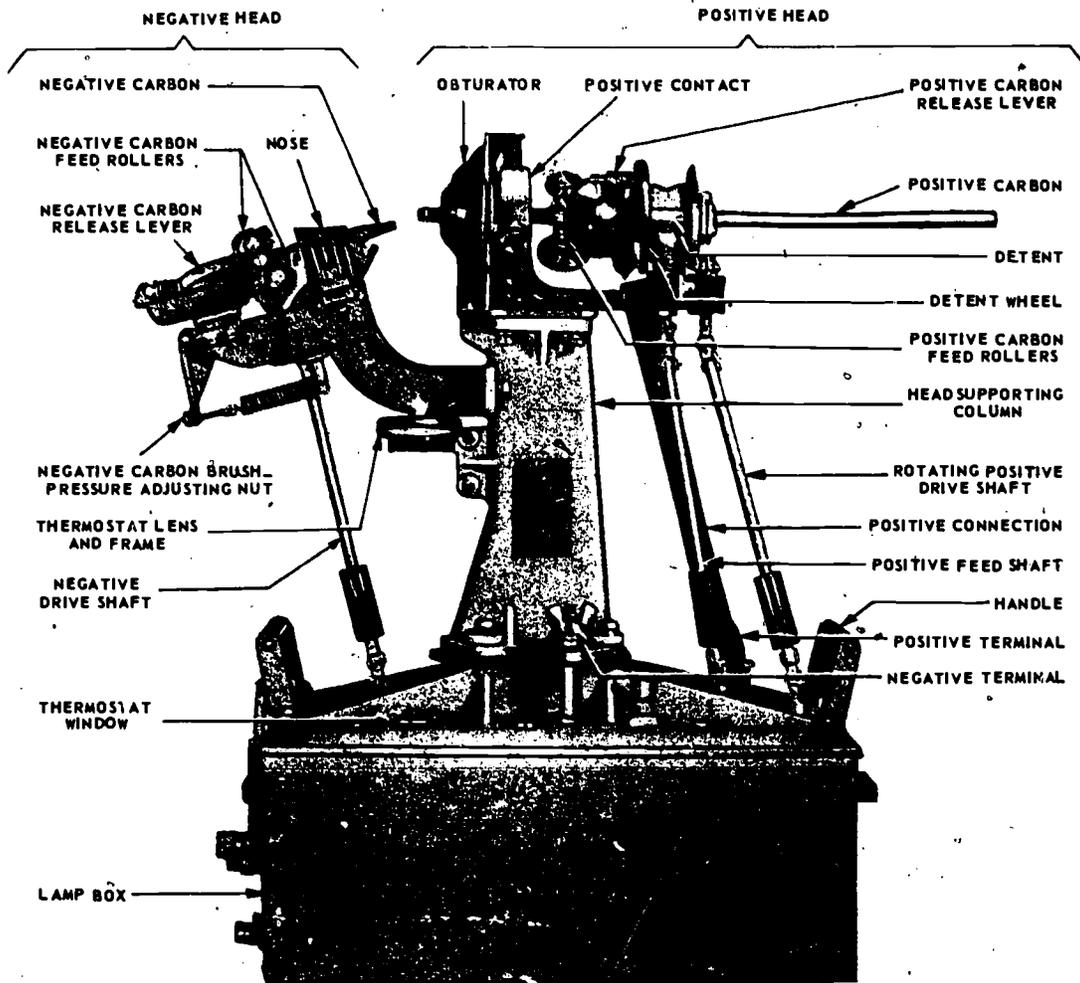


Figure 9-22. — 24-inch carbon-arc lamp.

77.51

sector-vane (signaling) shutter, rear door and reflector, and ventilating system.

The carbon-arc lamp utilizes a high intensity d-c arc between special cored carbon electrodes. It is designed for operation with an arc-ballast resistor (located below deck) supplied from the ship's 120-volt, d-c power. The arc current is adjusted for 75 to 80 amperes with an arc voltage of 65 to 70 volts. The arc-ballast resistor is connected in series with the arc to limit the starting current, stabilize the arc, and absorb the difference between the line voltage and arc voltage.

The function of the lamp mechanism is to hold and control the carbons to produce a source of light (always) at the focus of the reflector. The lamp consists of the positive head, negative head, and lamp operating mechanism (fig. 9-22). The positive and negative heads are secured to the head-supporting column mounted on the lamp base, or box, that contains the mechanism for automatically operating the lamp. The automatic features of rotating and feeding the positive carbon, feeding and retracting of the negative carbon, starting the arc, and providing ventilation are accomplished by the lamp (feed) motor and associated equipment contained in the lamp base.

Preventive Maintenance.—The 24-inch carbon-arc searchlight requires that the signalmen, and other personnel who frequently use searchlights, be carefully instructed on how to operate them. When operating carbon-arc searchlights, personnel must be impressed with the importance of renewing carbons before the positive carbon has burned so short that it cannot be gripped by the feed rollers and fed toward the arc. If the positive carbon is permitted to burn after this condition occurs, the arc burns closer to the positive nose (obturator) and will finally cause it to melt.

Operators must frequently observe the arc of an operating searchlight through the peep sight. They should renew the carbons when the positive carbon is no longer fed forward or when the positive-carbon tip projects less than one-half inch beyond the obturator.

An Electrician's Mate must remove the old carbons and replace them with a new pair. Carbons are always renewed by pairs to ensure optimum performance. The doors should not be

opened for any purpose until the drum is placed in the horizontal position and the searchlight is locked both in train and elevation. Before changing carbons or attempting any work on a searchlight, turn the power switch to the OFF position. Open the rear door until the latch engages. Make sure that the components are cool before touching with the bare hands. Lift the negative-carbon release lever upward and remove the negative carbon by pushing it out through the rear of the negative head. Lift the positive-carbon release lever and remove the stub by pulling it out over the negative head. If the stub is hot, use pliers to remove it.

The positive and negative heads should be reamed before each recarboning to remove the material deposited by the preceding carbons. When using the reamers, the carbon-feed rollers and contacts should be released to prevent the cutting edges of the reamers from damaging these parts. The positive-nose reamer should be inserted from the obturator end, and the negative-head reamer should be inserted from the rear, or release-lever end. Reamers should not be used while the heads are hot unless it is absolutely necessary. However, if it is necessary to ream while the heads are hot, the reamer should be kept turning continuously to prevent its seizure by cooling and contracting of the metal parts.

When the reaming is completed, run the new set of carbons through the heads to be certain that they do not jam. Crooked carbons or those having long cracks, or loose cores should be discarded. Rough spots and blisters can be removed with sandpaper. Adjust the protrusion of the positive carbon from the nose cap, and adjust the arc length in accordance with the values specified for the equipment in the manufacturers' instruction book. The carbons must be centered in their heads and must not touch the nose caps.

After the carbons are renewed, wipe the reflector, front-door glass, thermostat lens, and thermostat window with a clean, dry cheesecloth to remove any carbon deposit. Close the lamp housing, turn the power switch to the ON position and operate the searchlight for about 5 minutes to form the crater in the positive carbon and establish a normal arc. The first 5 minutes is the critical period of operation after a carbon renewal. During this interval, closely observe the arc and all lamp parts for any malfunctioning.

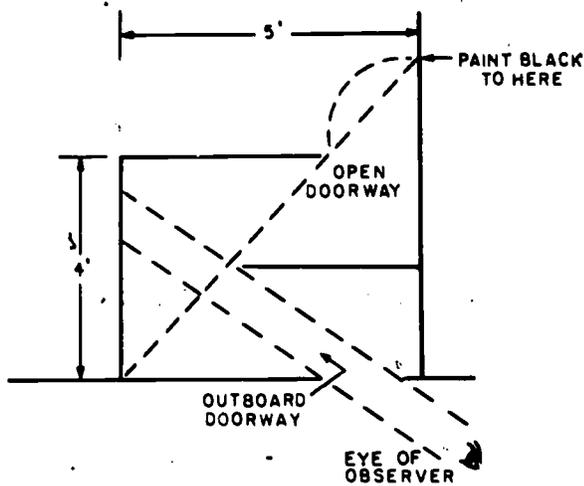


Figure 9-23.— Light trap.

77.46

Lubrication of the lamp mechanism should be limited to the parts specified in the manufacturers' instructions unless they are superseded by Naval Sea Systems Command.

DIVERSIFIED LIGHTING EQUIPMENT

Light traps and special lights also serve useful purposes aboard ship. Visibility in all directions must be restricted with most of this equipment where personnel must take into account the lighting as affected by glare and background illumination.

DARKEN SHIP EQUIPMENT

Darkened ship is a security condition designed to prevent the exposure of light, which could reveal the location of the vessel. Darkened-ship condition is achieved by means of (1) light traps that prevent the escape of light from illuminated spaces or (2) door switches that automatically disconnect the lights when the doors are opened.

When darkened-ship condition is ordered, check every door switch installation aboard ship to determine that all lock-devices or short-circuiting switches are set at the DARKENED SHIP position.

Inspect the light traps to determine that they are free of all obstructions. A light colored object of any appreciable size placed in a light trap might be sufficiently illuminated by the interior lighting to be visible beyond the safe limit. Note the positions of the hand lanterns when entering a compartment so that you can find them without delay when they are needed.

Light Trap and Door-Switch

A light trap is an arrangement of screens placed inside access doors or hatches to prevent the escape of direct or reflected light from within (fig. 9-23). The inside surfaces of the screens are painted flat black so that they will reflect a minimum of light falling on them. Light traps that are used to prevent the escape of white light should have at least two black, light-absorbing surfaces interposed between the light source and the outboard openings. Light traps are preferred to door switches in locations where (1) egress and ingress are frequent; (2) interruption of light would cause work stoppage in large areas; (3) light might be exposed from a series of hatches, one above the other on successive deck levels; and (4) many small compartments and passages are joined by numerous inside and outside doors that would complicate a door-switch installation.

A door switch is mounted on the break side of a door jamb (inside the compartment) and operated by a stud welded to the door. When the door is opened, the switch is automatically opened at the same time. Door switches are connected in a variety of ways to suit the arrangement of the compartment concerned.

All door switch installations are provided with lock-in devices or short-circuiting switches to change the settings of the door switches, as required from lighted ship to darkened ship and vice versa. Each standard door switch is furnished with a mechanical lock-in device for use when only one door switch is installed. When two or more door switches are connected in series, a single, separately mounted short-circuiting switch is installed in an accessible location to avoid the possibility of overlooking any of the door switches when the changeover is made.

When a single door switch at an outer door is connected in parallel with door switches at inner doors, only the door switch at the outer door is provided with a lock-in device, and the lock-in devices are removed from the other outer doors. The location of the control switch

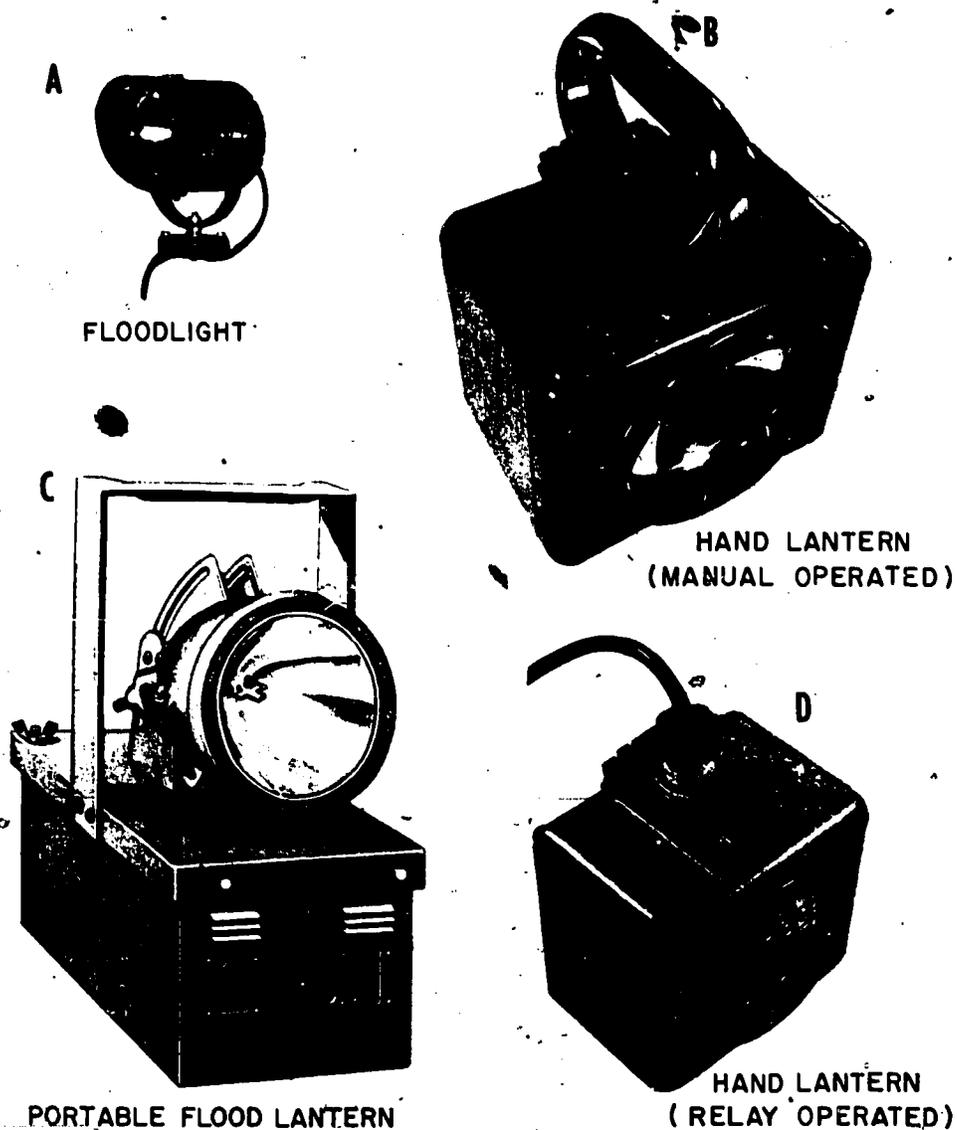


Figure 9-24. — Special lights.

77.47

is indicated by a plate mounted adjacent to each door switch. The control switch is marked **CAUTION—DOOR SWITCH CONTROL**. The portion of the short-circuiting switch that connects the door switches in the circuit is marked **DARKENED SHIP**, and the portion that disconnects the door switches from the circuit is marked **LIGHTED SHIP**. Personnel should become familiar with the location of the short-circuiting switch in all compartments and the number of doors that it controls.

SPECIAL LIGHTS

Special lights are provided aboard ships for various uses. These lights include (1) flashlights, (2) floodlights, (3) hand lanterns and flood lanterns (fig. 9-24). Lights and lighting fixtures are identified by NavShips symbol numbers (1 thru 399), military standard numbers (MS. no.), federal stock numbers, military specification numbers, or NavShips drawing number. The NavShips

Standard Electrical Symbol List (NavSea Q960-000-4000) lists the lights and lighting fixtures in current use on naval ships. Fixtures are listed in NavSea symbol number order along with the MS or NavShips drawing number, and federal stock number (FSN).

Floodlight

The floodlight (fig. 9-24A) consists of a splashproof housing equipped with a rain shielded, hinged door secured with a trunk type latch. The 300-watt lamp is a sealed-beam type. The lamp housing is trunnioned on a yoke which in turn is mounted on a shock absorbing base. The light is secured in elevation by a clamp on the yoke. Train positioning is accomplished by friction within the shock absorbing base. Each floodlight is furnished with a three-conductor cable (including a green lead to ground the metal housing) for connection into the lighting circuit.

Larger 500-watt floodlights (not shown), using a mogul screw base lamp are also widely used. Floodlights are installed on weather decks at suitable locations to provide sufficient illumination for the operation of cranes and hoists, and the handling of boats. New high-level illuminating floodlights are being evaluated by Naval Sea System Command.

Hand Lanterns

Two types of dry-battery-powered lanterns are available for installation in certain strategic locations to prevent total darkness if the lighting power fails. One model is hand operated. The other is operated automatically by a relay when the regular power fails.

The MANUALLY OPERATED PORTABLE LANTERN (fig. 9-24B), consists of a watertight plastic case containing two (6 volt), batteries connected in parallel. It includes a sealed beam lamp, rated at 5 volts, but operated at 6 volts (when the batteries are new) to increase the light output. A rigid handle is secured to the top of the case. The lantern is operated by a toggle switch, the lever of which is convenient to the thumb. When the batteries are fresh, the lantern can be used continuously for approximately 8 hours before the light output ceases to be useful.

Manually operated lanterns are installed as an emergency source of illumination in spaces that

are manned only occasionally. These lanterns are also used in certain areas to supplement the relay-operated lanterns.

Manually operated portable lanterns must not be removed from the compartments in which they are installed unless the compartments are to be abandoned permanently.

The RELAY-OPERATED PORTABLE LANTERN is similar to the manually operated type except that the relay housing is mounted topside of the lantern case (fig. 9-24D) in place of the handle. The 115-volt a-c version is identified by symbol 101.2. Symbol 102.2 identifies the 115-volt d-c type. A three-conductor cable (including a green conductor to ground the relay metal frame) is provided for connection into the lighting circuit. THE RELAY-CONTROLLED LANTERN MUST ALWAYS BE INSTALLED WITH THE RELAY UPPERMOST. This specific arrangement of the relay prevents a proven fire hazard, which would be caused by liquid electrolyte (formed from battery exhaustion) draining into the (otherwise inverted) relay housing.

Relay-controlled lanterns are assigned to spaces in which it is necessary to maintain practically continuous illumination. These spaces include essential watch stations, control rooms, machinery spaces, battle dressing stations. The lanterns must illuminate the tops and bottoms of all ladders and all flush-mounted scuttles. They must also be mounted so as to illuminate all gauges at vital watch stations. Operating personnel will depend on these lanterns for illumination when bringing the machinery back on the line in the event of a casualty. These lanterns must not be installed in magazine or powder-handling spaces in which fixed or semifixed ammunition is handled, or in any location in which explosion-proof equipment is required.

The lantern relay is connected in the lighting circuit (in the space in which the lantern is installed) on the power supply side of the local light switch that controls the lighting in the space concerned. Thus, the relay operates and causes the lamp in the lantern to be energized from its batteries only when power failure occurs, not when the lighting circuit is deenergized by the light switch. If the space is supplied with both emergency and ship's service lights, the lantern relay is connected to the emergency lighting circuit only.

The lantern relay should be fused so that a short circuit in the relay leads of one compartment will be cleared through low-capacity fuses before the fault causes heavier fuses nearer the source of power to blow and cut off the power supply to lighting circuits in other compartments. The fuses that protect the branch circuits are ample protection for the lantern relay. A lantern relay can be connected directly to the load side of the fuses in fuse boxes or switchboxes. If a relay cannot be connected to a branch circuit, it can be connected to the source side of a fuse box or other point on a submain. If the submain supplies lighting to more than one compartment, separate fuses must be installed in the relay circuit.

The operation of the relays in lanterns should be checked at least once every 3 months. When the circuit is deenergized, the relay should operate and automatically turn on the lantern. The circuit may be deenergized by pressure exerted on the push switch located on the relay housing. This simulates a loss of 115-volt power. The relay should then drop out and the lantern will light.

To ensure satisfactory operation of hand lanterns, the batteries should be checked at least once every 3 months. The batteries are checked by operating the lantern and observing the brightness of the lamp. If the emitted light is dim, the batteries should be replaced immediately. At this time, also check the rubber boot on the switch for tears or cracks. Replace immediately if the boot is defective. The switch must also be grounded to the ship's hull. A simple test with a multimeter will verify this.

Lanterns that are located in spaces in which the normal temperature is consistently above 90°F should be checked more often. For example, in boiler rooms it may be necessary to replace the batteries weekly to ensure adequate service from the lanterns.

The NavSea symbol number 104 (not shown) dry battery type (hand carrying or head attaching) of lantern is used for damage control purposes and is generally stored in damage control lockers. This lantern's battery container may be clipped over the wearer's belt, the lamp and reflector assembly may be hand held or worn on the head or helmet of repair party personnel by using a headband attached to the light.

Portable Flood Lanterns

The NavSea symbol number 105 portable flood lantern (fig. 9-24C) consists of a sealed beam lamp

enclosed in a built-in lamp housing equipped with a toggle switch. The lamp housing is adjustably mounted on a drip-proof, acid-resistant case provided with two windows in each end.

The case contains four Navy type BB-254/U storage cells. Each cell contains a channeled section in which a green, white, and red ball denotes the state of charge of the cell when viewed through the window. When a cell is fully charged, all three indicator balls float at the surface of the electrolyte. The green ball sinks when approximately 10 percent of the cell capacity has been discharged; the white ball sinks when the cell is 50 percent discharged; and the red ball sinks when the cell is 90 percent discharged.

The lamp is rated at 6 volts but operated at 8 volts to increase the light output. When operated with fully charged batteries, the lantern can be operated continuously for about three hours without recharging. The batteries should be recharged as soon as possible after the green ball (10 percent discharged) has sunk to the bottom. The lanterns should be checked at least once a week to determine if the green indicator balls are floating. If they are not floating, the battery should be charged at a rate of 1 1/2 to 2 amperes until all indicator balls are floating at the indicator line. If the battery is completely discharged, it will require from 20 to 25 hours to recharge it. After the charging voltage has remained constant at 10 volts for one hour, discontinue the charging.

When necessary, add pure distilled water to keep the electrolyte level at the indicator line marked on the front of the cell. Do not add enough water to bring electrolyte level above the line because overfilling nullifies the nonspill feature of the battery and may cause the electrolyte to spurt out through the vent tube. However, if the electrolyte level is not at the indicator line, the charge indicator balls will not indicate correctly the state of charge of the battery.

Portable flood lanterns are often referred to as damage control lanterns because they are used by damage control personnel to furnish high intensity illumination for emergency repair work or to illuminate inaccessible locations below deck.

CHAPTER 10

DEGAUSSING

A steel-hulled ship is like a huge floating magnet. Because of its magnetic field, the ship can act as a triggering device for magnetically sensitive mines. Degaussing concerns the methods and techniques of reducing the ship's magnetic field to minimize the possibility of detection by magnetic mines and other magnetic influence detection devices.

A steel ship which has received no anti-magnetic, or degaussing, treatment has a large magnetic field surrounding its hull. As the ship moves through the water, this field also moves and adds to or subtracts from the earth's magnetic field causing it to bend or move. To a magnetic mine beneath the ship, this moving magnetic field appears as a change or variation in the surrounding magnetic environment. Magnetic ordnance is highly sensitive to variations of one or more portions or components of this field. When the ship is degaussed its field is altered or modified so the ordnance can detect little, if any magnetic disturbance as the ship passes.

EARTH'S MAGNETIC FIELD

An even greater magnetic field than a ship is the magnetic field of the earth. The earth's magnetic field acts upon all metal objects on or near the earth's surface.

The existence of magnetic influence far out in space was determined mathematically many years ago. The first factual proof came with the launching of the EXPLORER and PIONEER satellites in 1958 and 1959. Radiation counters proved that the Van Allen belts, layers of high-intensity radiation existing far out in space, followed the predicted magnetic contours.

Project Argus also gave additional proof of the earth's magnetic field in space. In August of 1958, three small 1.5-kiloton nuclear explosions were

detonated 300 miles above the Falkland Islands in the South Atlantic. In the virtual vacuum which exists at 300 miles above the earth's surface, free electrons, released by the explosion, were captured by the nearest magnetic meridian. In less than one second, electrons spiraled the entire length of this meridian, going from the Southern to the Northern Hemisphere. From the Falkland Island meridian, these electrons attached themselves to adjacent meridians. Within an hour, they had passed from one meridian to the next until the entire magnetic field at 300 miles altitude was covered.

Figure 10-1 shows the earth as a huge permanent magnet, 6000 miles long, extended from the Arctic to the Antarctic polar regions. Lines of force from this magnet extend all over the earth's surface, exerting a magnetic influence on

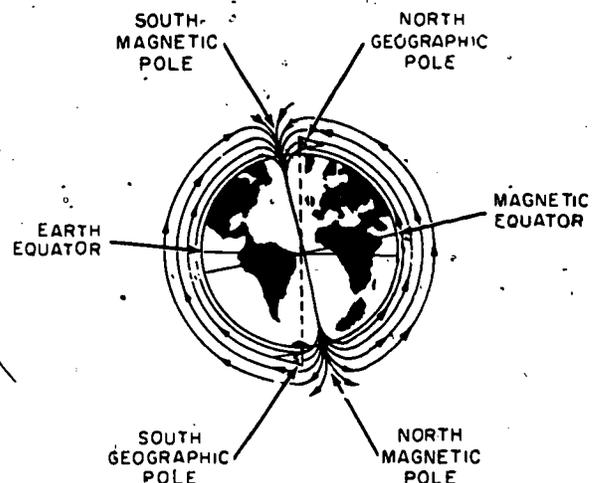


Figure 10-1. — Earth's magnetic field.

56.27

all ferrous materials on or near the surface. Since many of these ferrous materials themselves become magnetized, they distort the background field into irregular eddies and areas of greatly increased or decreased magnetic strength. Thus the lines of magnetic force at the earth's surface do not run in straight, converging lines like the meridians on a globe, but appear more like the isobar lines on a weather map.

By convention, the external direction of the magnetic field of a bar magnet is from the north pole to the south pole. Lines of force for the earth's field, however, leave the earth in the Southern Hemisphere and reenter in the Northern Hemisphere. For this reason, it is necessary to think of the polar region in the Arctic as the north-geographic, south-magnetic pole where polarity direction in the field of degaussing now is described.

Note in figure 10-1 that the magnetic meridians form closed loops, arching from the earth's magnetic core to outer space, and then reentering the earth in the opposite hemisphere. Since, all lines of magnetic force return to their points of origin, they form closed magnetic circuits. An idea of the size of the earth's magnetic field is apparent by noticing that lines of force at the polar regions seem to extend vertically into space. The size of the closed loops formed by these lines of force is staggering to the imagination. It is impossible to eliminate the earth's field; however, the effects of the ship on this field may be lessened. It is the purpose of degaussing to prevent the ship from distorting the earth's magnetic field, and some highly developed techniques are used to do so.

The rest of this chapter explains the fundamentals of degaussing and describes the operating principles of manual and automatic shipboard degaussing systems. Learning these knowledge factors will help the Electrician's Mate to stand watch at the degaussing switchboard, operate the degaussing equipment, and maintain the installed degaussing system.

The strength and direction of the earth's field at any point is a function of the strength of the individual components. The angle of the field with the horizontal, sometimes called the dip, may be easily determined by means of a dip needle, a simple compass needle held with the needle pivot axis parallel to the earth's surface. Since a compass needle always aligns itself parallel to the lines of force of a magnetic field, the dip

needle indicates the angle of the earth's field to the horizontal by aligning itself with the lines of force entering or leaving the earth at that point. Both direction AND STRENGTH of the field may be determined by means of a mine search coil and flux-measuring equipment.

The earth's field is resolved into two components, the H component and the Z component. Since the earth is spherical, an X and Y component would have little meaning; therefore, X and Y are combined into one component, the H or horizontal component. The vector sum of the H and Z components defines the magnitude and the direction of the total field at any point on the earth's surface.

Table 10-1 shows horizontal and vertical component strength, and the resulting total field strength and direction for several representative cities in the Northern and Southern Hemispheres. Note that the vertical component may be assigned either a positive or negative value. This is necessary because lines of force leave the earth in the Southern Hemisphere and reenter in the Northern Hemisphere. For this reason the upward field, in the Southern Hemisphere, is assigned a negative value and the downward field in the Northern Hemisphere, is assigned a positive value. There are two areas of maximum vertical intensity but opposite polarity—the north and south magnetic poles. The vertical intensity at the magnetic equator is zero since the entire field is horizontal.

SHIP'S MAGNETIC FIELD

The magnetic field of a ship is the resultant of the algebraic sum of the ship's permanent magnetization and the ship's induced magnetization. The ship's magnetic field may have any angle with respect to the horizontal axis of the ship, and any magnitude.

PERMANENT MAGNETIZATION

The process of building a ship in the presence of the earth's magnetic field develops a certain amount of permanent magnetism in the ship. The magnitude of the permanent magnetization depends on the earth's magnetic field at the place where the ship was built, the material of which the ship is constructed, and the orientation of the ship at time of building with respect to the earth's field.

Chapter 10—DEGAUSSING

Table 10-1.—Measurements of the Earth's Magnetic Field at Selected Locations Expressed in Milligauss

LOCATION	HORIZONTAL (H) COMPONENT	VERTICAL (Z) COMPONENT	TOTAL FIELD STRENGTH	DIRECTION OF TOTAL FIELD
North Pole (Magnetic)	0	+620	620	90° down
Fairbanks, Alaska	120	+560	570	78° down
Stockholm, Sweden	150	+460	490	70° down
London, England	190	+440	470	69° down
Washington, D.C.	180	+540	570	72° down
Tokyo, Japan	300	+340	460	50° down
Manila, Philippine Islands	390	+100	410	14° down
Equator (Magnetic)	410	0	410	0° horizontal
Rio de Janeiro, Brazil	230	-080	250	20° up
Capetown, South Africa	140	-280	320	64° up
Buenos Aires, Argentina	230	-140	260	30° up
Melbourne, Australia	230	-560	610	68° up
South Pole (Magnetic)	0	-720	720	-90° up

NOTE—All measurements are approximate.

The ship's permanent magnetization can be resolved into the (1) vertical permanent field component and (2) horizontal permanent field component. The horizontal permanent field component comprises the longitudinal permanent field component and athwartship permanent field component. The vertical, longitudinal, and athwartship permanent field components are constant, except for slow changes with time, and are not affected by changes in heading or magnetic latitude.

All ships that are to be fitted with a ship-board degaussing installation and some ships that

do not require degaussing installation are depermed. Deperming is essentially a large scale version of demagnetizing a watch. The purpose is to reduce permanent magnetization and bring all ships of the same class into a standard condition so that the permanent magnetization, which remains after deperming, is approximately the same for all ships of the class.

INDUCED MAGNETIZATION

After a ship is built, its very existence in the earth's magnetic field causes a certain amount

of magnetism to be induced in it. The ship's induced magnetization depends on the strength of the earth's magnetic field and on the heading of the ship with respect to the inducing (earth's) field.

The ship's induced magnetization, like the ship's permanent magnetization, can be resolved into the (1) vertical induced field component and (2) horizontal induced field component. The horizontal induced field component also comprises the longitudinal induced field component and athwartship induced field component.

The magnitude of vertical induced magnetization depends on the magnetic latitude. The vertical induced magnetization is maximum at the magnetic poles and zero at the magnetic equator. The vertical induced magnetization is directed down when the ship is north of the magnetic equator and up when the ship is south of the magnetic equator. Hence, the vertical induced magnetization changes with magnetic latitude, and to some extent, when the ship rolls or pitches. The vertical induced magnetization does not change with heading because a change of heading does not change the orientation of the ship with respect to the vertical component of the earth's magnetic field.

The longitudinal induced magnetization changes when either the magnetic latitude or the heading changes, and when the ship pitches. If a ship is headed north geographic, the horizontal component of the earth's magnetic field induces a north pole in the bow and a south pole in the stern (fig. 10-2A). In other words, the horizontal component of the earth's field induces a longitudinal or fore-and-aft component of magnetization. The stronger the horizontal component of the earth's magnetic field, the greater will be the longitudinal component of magnetization. If the ship starts at the south magnetic pole and steams toward the north magnetic pole the longitudinal component of induced magnetization starts at zero at the south magnetic pole, increases to a maximum at the magnetic equator, and decreases to zero at the north magnetic pole. Hence, for a constant heading the longitudinal component of induced magnetization changes when the ship moves to a position where the horizontal component of the earth's magnetic field is different—that is, when the ship changes its magnetic latitude.

If at a given magnetic latitude the ship changes heading from north to east, the longitudinal component of induced magnetization changes from a maximum on the north heading to zero on the east heading. When the ship changes heading from

east to south, the longitudinal component increases from zero on the east heading to a maximum on the south heading. On southerly headings a north pole is induced at the stern and a south pole at the bow, which is a reversal of the conditions on northerly headings when a north pole is induced at the bow and a south pole at the stern. The longitudinal component of induced magnetization also changes, to some extent, as the ship pitches.

The athwartship induced magnetization changes when either the magnetic latitude or the heading changes, and when the ship rolls or pitches. When a ship is on an east heading, a north pole is induced on the port side and a south pole on the starboard side (fig. 10-2B), which is the athwartship component of induced magnetization. The magnitude of the athwartship magnetization depends on the strength of the horizontal component of the earth's magnetic field at that latitude. This component is maximum at the magnetic equator for a ship on an east-west heading, and zero at the magnetic poles for a ship on a north-south heading.


MAGNETIC RANGING

A ship is said to be ranged when its magnetic field is measured at a magnetic range, which is commonly called a degaussing range or degaussing station.

A degaussing range or station is equipped to measure the magnetic field of ships which pass over measuring equipment located at or near the bottom of the channel in which the ships travel.

RANGING PROCEDURES

Ships are ranged prior to deperming in order that the direction and magnitude of their fields may be determined. Magnetometer garden measurements also are required during and after the deperming process in order that the quality and effectiveness of the treatment may be evaluated. The most common ranging procedure, called check ranging, is by means of the coil range. Check ranging usually occurs during a ship's normal entry into port. After passing over the range, the ship is sent a report of its magnetic characteristics. If the strength of its magnetic field exceeds a safe operational level, the ship then is scheduled

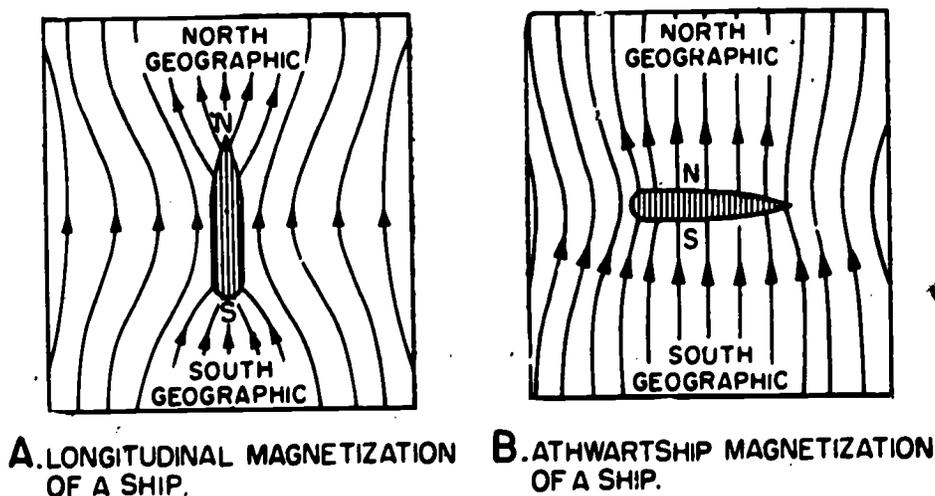

27.105:106

Figure 10-2. — Effect of the earth's magnetic field upon a ship.

to report for calibration ranging. Here, the ship makes a number of passes over the range, while its shipboard degaussing coils are adjusted and calibrated from information supplied from the range hut. When the new settings for the degaussing coils have been determined, new degaussing control settings are placed in the degaussing folder.

If the ship is unable to compensate adequately for its magnetic field because of excessive permanent longitudinal or permanent athwartship magnetization or an irregular permanent vertical magnetization, the ship then is scheduled to report for deperming.

DEGAUSSING FOLDER

The degaussing folder aboard each ship contains current setting charts that are prepared by the degaussing range when the ship is ranged, and gives the degaussing coil currents to be used for any position on the earth's surface and any heading of the ship. This folder also contains the forms which show the number of coils and types of circuit installed in the ship. Further details of the degaussing installation are shown on the degaussing plans carried aboard the ship.

SHIPBOARD DEGAUSSING INSTALLATION

A shipboard degaussing installation consists of one or more coils of electric cable in specific locations inside the ship's hull, a d-c power source to energize these coils, and a means of controlling the magnitude and polarity of the current through the coils. Compass-compensating equipment, consisting of compensating coils and control boxes, is also installed as a part of the degaussing system to compensate for the deviation effect of the degaussing coils on the ship's magnetic compasses.

DEGAUSSING COILS

The distortion of the earth's field caused by the ship's permanent magnetization (vertical, longitudinal, and athwartship components) and the ship's induced magnetization (vertical, longitudinal, and athwartship components) is neutralized by means of degaussing coils. The degaussing coils are made with either single-conductor or multiconductor cables. The coils must be energized by direct current, which is supplied from 120-volt or 240-volt, d-c ship service generators or from degaussing power supply equipment installed for the specific purpose of energizing the degaussing coils.

The degaussing coils consist of coils of cable wound on the ship, each having the required


location and the number of turns to establish the required magnetic field strength when energized by direct current of the proper value and polarity. The coils will then produce magnetic field components equal and opposite to the components of the ship's field. Each coil consists of the main loop and may have smaller loops within the area covered by the main loop, usually at the same level. The smaller loops oppose localized peaks that occur in the ship's magnetic field within the area covered by the main loop. The resultant effect of the degaussing coils when the currents are properly set is to restore the earth's field to the undistorted condition around the ship.

M Coil

The M or main coil (fig. 10-3A) encircles the ship in a horizontal plane, which is usually near the waterline. The function of the M coil is to counteract the magnetic field produced by the vertical permanent and the vertical induced magnetization of the ship. Hence, the M coil current must be changed when the ship changes magnetic latitude in order to keep the M coil field as nearly as possible equal and opposite to the field produced by the ship's vertical induced magnetization. The permanent vertical magnetization of a ship remains constant.

F and Q Coils

The F or forecastle coil (fig. 10-3B) encircles the forward one-fourth to one-third of the ship and is usually just below the forecastle or other uppermost deck; whereas, the Q or quarterdeck coil encircles the after one-fourth to one-third of the ship and is usually just below the quarterdeck or other uppermost deck. The function of the F and Q coils is to counteract the magnetic field produced by the ship's longitudinal permanent and longitudinal induced magnetization. The shape of the magnetic field produced by the F and Q coils is somewhat different from the magnetic field produced by the ship's longitudinal magnetism, but the two fields are, in general, opposite directly below the bow and stern of the ship. The F and Q coil currents must be changed when the ship changes its course or magnetic latitude in order to keep the coil strengths at the proper values to counteract the changes in the ship's longitudinal induced magnetization. Two adjustments are necessary, one to change the F coil current and one to change the Q coil current. In many installations the conductors of the F and Q coils are connected to form two separate circuits designated as the FI-QI coil and the FP-QP coil (fig. 10-3B).

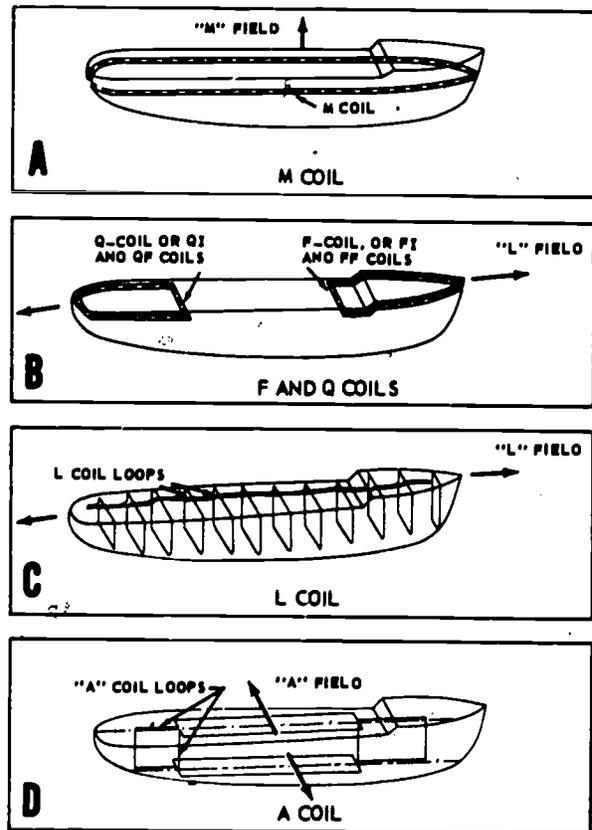

27.107
Figure 10-3. — Types of degaussing coils.

The FI-QI coil is used to counteract the magnetic field produced by the ship's longitudinal induced magnetization. The longitudinal induced magnetization changes when the ship changes heading or magnetic latitude, and the FI-QI coil current must be changed accordingly.

The FP-QP coil is used to counteract the magnetic field produced by the ship's longitudinal permanent magnetization. The longitudinal permanent magnetization does not change when the ship changes heading or magnetic latitude, and no change is needed in the strength of the FP-QP coil.

L Coil

The L or longitudinal coil (fig. 10-3C) consists of loops in vertical planes that are parallel

to the frames of the ship. The function of the L coil is to counteract the magnetic field produced by the ship's longitudinal permanent and longitudinal induced magnetization. The L coil is more difficult to install than the F and Q coils or FI-QI and FP-QP coils, but provides better neutralization because it more closely simulates the longitudinal magnetization of the ship. The L coil is commonly used in minesweeper vessels.

The longitudinal induced magnetization changes when the ship changes heading or magnetic latitude, and the L coil current must be changed accordingly. On a minesweeper, the L coil current must even be changed as the vessel pitches. Roll or pitch adjustments or both are necessary on all the degaussing coils on minesweepers.

A Coil

The A or athwartship coil (fig. 10-3D) consists of loops in vertical fore-and-aft planes. The function of the A coil is to produce a magnetic field that will counteract the magnetic field caused by the athwartship permanent and athwartship induced magnetization. The athwartship induced magnetization changes when the ship changes heading or magnetic latitude, and the A coil (current) must be changed accordingly.

MARKING SYSTEM

The degaussing installations in all types of naval vessels are marked in accordance with a standard marking system to facilitate maintenance by the ship's force. All feeders, mains, and other cables supplying power to degaussing switchboards, power supplies, and control panels are designated and marked as specified for power and lighting circuits. The system of markings and designations of conductors applies specifically for a multiconductor system, but it is also applicable to single-conductor type installations.

Degaussing cable identification tags are made of metal. The cables are tagged as close as practicable to both sides of decks, bulkheads, or other barriers. Degaussing conductors are marked by hot stamping (branding) insulating sleeving of appropriate size. Each end of all conductors are so marked and correspond to the marking of the terminal to which they connect inside the connection box or through box. The sleeving is pushed over the conductor so that the marking is

parallel to the axis of the conductor. The following letters are used for designating and marking cable tags for degaussing coil cables and circuits.

- D—Degaussing system
- A—Athwartship (A) coil
- AX—A auxiliary coil
- CC—Compass compensating coil
- F—Forecastle (F) coil to correct for permanent and induced magnetization
- FDR—Feeder
- FI—F coil to correct for induced magnetization
- FP—F coil to correct for permanent magnetization
- I—FI-QI coil used in conjunction with feeders, compass-compensating coil, and indicator light leads
- IL—Indicator light
- L—Longitudinal (L) coil
- LX—L auxiliary coil
- M—Main (M) coil
- MX—M auxiliary coil
- P—FP-QP coil used in conjunction with feeders, compass-compensating coil, and indicator light leads.
- Q—Quarterdeck (Q) coil to correct for permanent and induced magnetization
- QI—Q coil to correct for induced magnetization
- QP—Q coil to correct for permanent magnetization
- SPR—Spare conductor

A detailed description of the marking for degaussing-coil loops, circuits, conductors, and cables and for degaussing feeder cable and feeder-cable conductors is contained in Chapter 475 of the NavShips Technical Manual.

CONNECTION AND THROUGH BOXES

Connection and through boxes are similarly constructed watertight boxes, but they are used for different purposes.

A CONNECTION BOX is a watertight box with a removable cover used to connect loops together,

to connect conductors in series, and to reverse turns. The power supply connection for a coil and all adjustments of ampere-turn ratios between loops are made within connection boxes. The power supply cable and interconnecting cable for the FI-QI and FP-QP coils terminate in connection boxes.

A THROUGH BOX is a watertight box with a removable cover used to connect conductors without changing the order of conductor connections. Also, a through box is used when it is necessary to connect sections of cable. In some cases splicing in lieu of through boxes is used.

A wiring diagram of the connections in the box is pasted on the inside of the cover and coated with varnish or shellac. The wiring diagram for connection boxes should (1) designate the conductors that may be reversed without reversing the other loops, (2) indicate the arrangement of parallel circuits so that equal changes can be made in all parallel circuits when such changes are required, and (3) show the spare conductors. Spare conductors should be secured to connectors and should be connected to form a closed or continuous circuit. All conductors in a connection box should be 1-1/2 times the length required to reach any terminal within the box. Connection boxes should also be fitted with drain plugs to provide accessibility for periodic removal of accumulated moisture from the boxes.

Connection and through boxes are provided with IDENTIFICATION PLATES that include; degaussing box numbers (D1, D2, etc.), connection box and/or through box as applicable, and coil and loop designations (M1, M2, F12, etc.).

Example,

	D1	
Connection Box		Through Box
M1		F1
M2		

identifies the No. 1 degaussing box serving as a connection box for the M1 and M2 loops and as a through box for the F1 loop.

MANUAL DEGAUSSING SYSTEMS

Degaussing installations, as previously stated, consist of different combinations of degaussing

coils and manual or automatic degaussing equipment for control of the current in these coils. The selected combination depends on the size and the intended use of the particular ship.

The currents in the A and FI-QI or F and Q degaussing coils must be changed when there are changes in the ship's heading, magnetic latitude, or both. The control of the coil currents is accomplished manually in the older installations and automatically in all new installations. The M and FP-QP coil currents remain essentially constant with the M coil current changing only when the ship changes zones and the FP-QP coil current changing only as a result of calibration.


Degaussing installations that have the coil currents manually controlled are energized from constant voltage d-c generators or from variable voltage motor-generators and are called rheostat and motor-generator installations, respectively.

RHEOSTAT CONTROL

In a rheostat installation the power for the degaussing coils is supplied by a constant-voltage d-c generator, and the coil currents are controlled by adjusting a rheostat connected in series with the coil and power supply. An installation in which rheostats are used to control the M, FI-QI, and FP-QP coil currents is illustrated in figure 10-4. Manually operated rheostats are used in some installations and motor-operated rheostats in other installations. In the manual type, the rheostat is adjusted locally at the degaussing switchboard by turning the rheostat handle. In the motor-operated type, the rheostat shaft is turned by a motor controlled from a remote station by means of a push-button. Motor-operated rheostats are equipped for manual operation in the event of an emergency.

MOTOR-GENERATOR CONTROL

In a motor-generator installation the power for the degaussing coils (F, Q, and M) is supplied by a motor-generator, and the coil currents are controlled by adjusting a rheostat in the generator field circuit to vary the output of the generator. A single-line diagram of this type installation is illustrated in figure 10-5. The rheostats in the generator fields can be operated manually or by means of a motor to change the generator voltage and thereby adjust the coil current to the desired value.

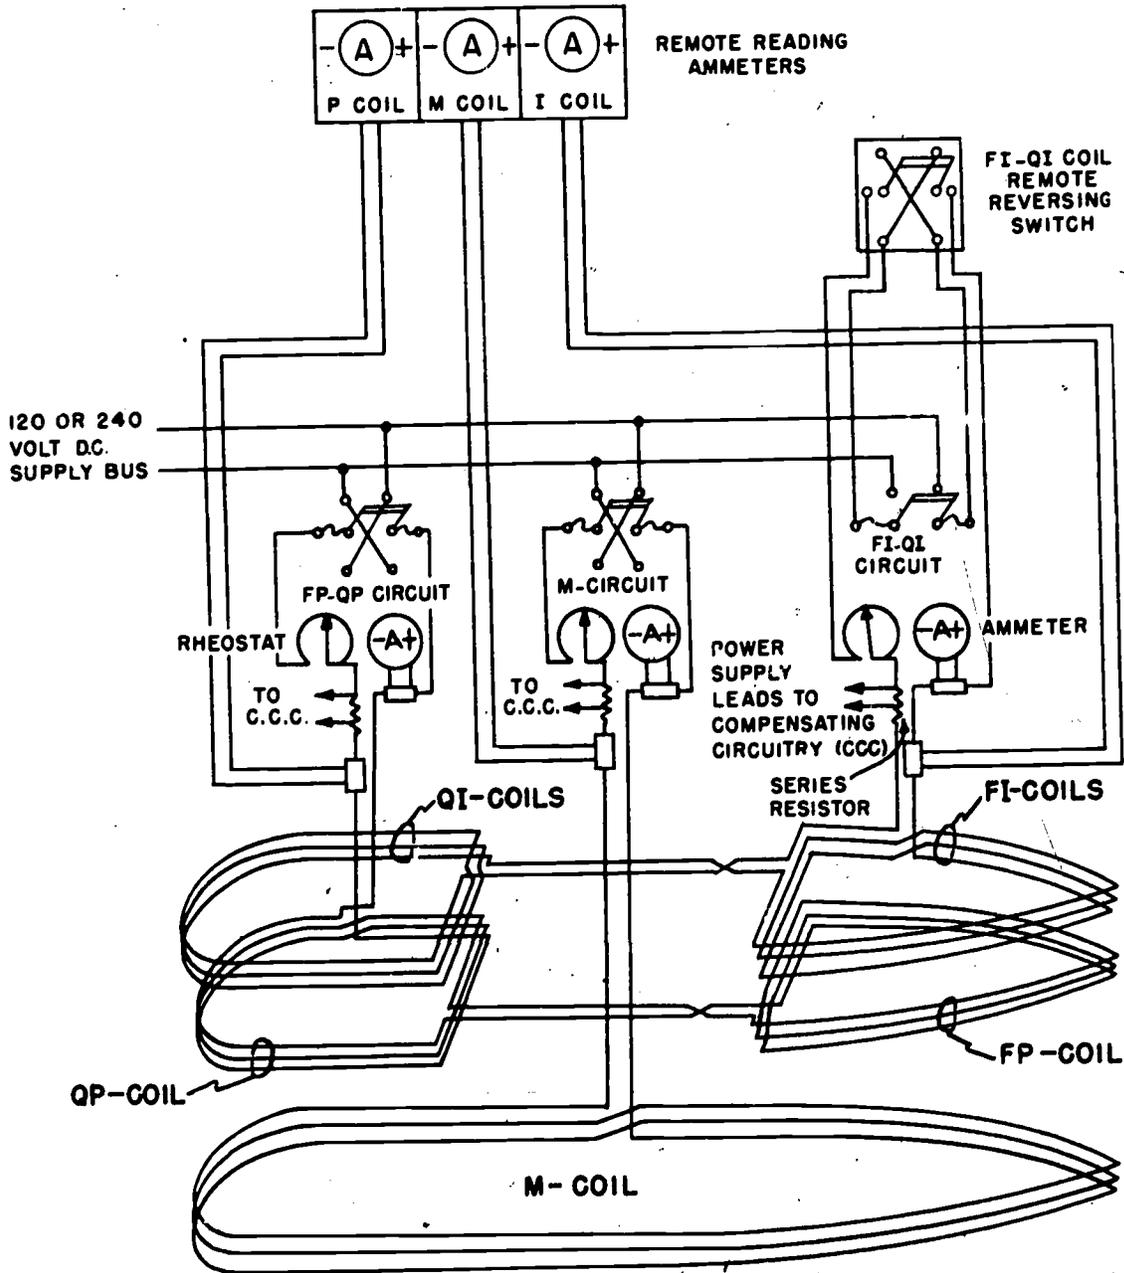

77.181

Figure 10-4. — Manual degaussing system with rheostat control.

POLARITY

The polarity of the degaussing coil currents is of particular importance. If the polarity of any of

the degaussing coils is incorrect, the ship may very likely be in much greater danger from magnetic mines than if no degaussing were installed. The polarity of a coil should be checked by observing whether the pointer of the ammeter for the

coil is on the POSITIVE or NEGATIVE side of the zero-center ammeter. Also, the polarity of a coil can be checked by observing whether the positive or negative plate glows in the neon indicator light for the coil. For positive polarity the right-hand electrode glows, and for negative polarity the left-hand electrode glows.

The direction of current in a degaussing coil is normally indicated by zero-center ammeters located on the degaussing control panel. The pointer will deflect to the right for positive (direction) current through the coil and to the left for negative current. The direction of current can be checked by a degaussing polarity indicator or a small compass. The polarity indicator dial is marked to denote the direction of current. When taking polarity readings with the indicator or small compass, move the device toward the degaussing coil until a good deflection is obtained, and no closer. The needle in the indicator or compass will reverse its magnetic polarity if the

Reversing switches are used to change the polarity of the coils, except where provision is made to accomplish this change in the design of the rheostat for the constant voltage supply or in the generator control for the variable voltage supply.

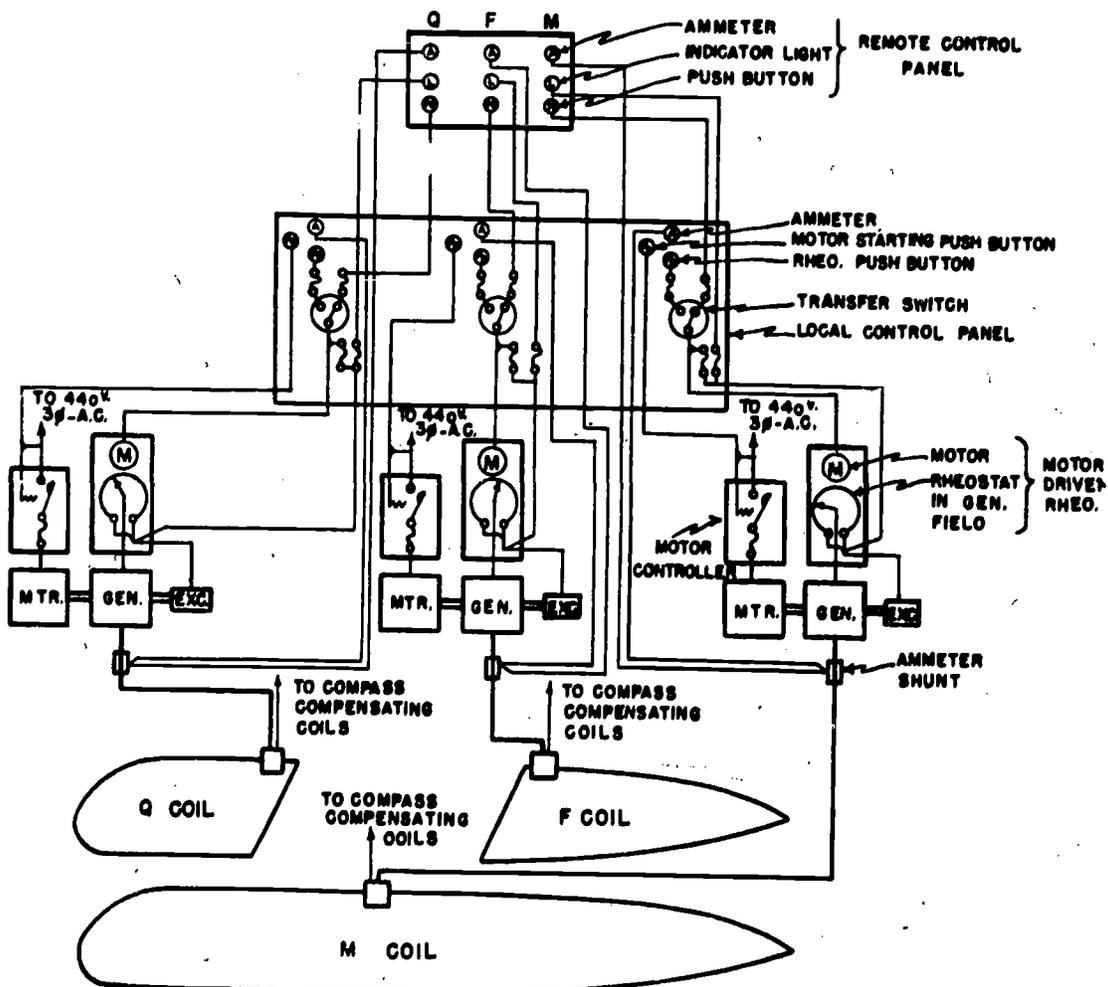


Figure 10-5. — Manual degaussing system with motor-generator control.

77.182

Chapter 10—DEGAUSSING

device is held too close to the coils. The indicator or compass should be checked after each test to be certain that the magnetic polarity of the needle has not reversed.

CHANGING COIL CURRENTS

Degaussing coil currents will change and require readjustment because of changes in degaussing-coil resistance caused by changes in cable temperature and changes in the voltage of the power supply for the degaussing coils.

The degaussing folder for each ship gives the current needed for each coil for all positions on

the earth's surface and for all headings. One or more of the coil currents must be changed when one of the following conditions occurs:

1. When the ship passes from one Z zone to another.

The vertical intensity (Z component) of the earth's field, which is maximum at the magnetic poles and zero at the magnetic equator, is divided into a number of Z zones. The number of Z zones will vary, depending on the amount of compensation provided by the particular installation. Degaussing chart No. 1 (fig. 10-6) illustrates the Z zones for the Atlantic and Indian Oceans. The reverse side of this chart (not shown) contains the same number

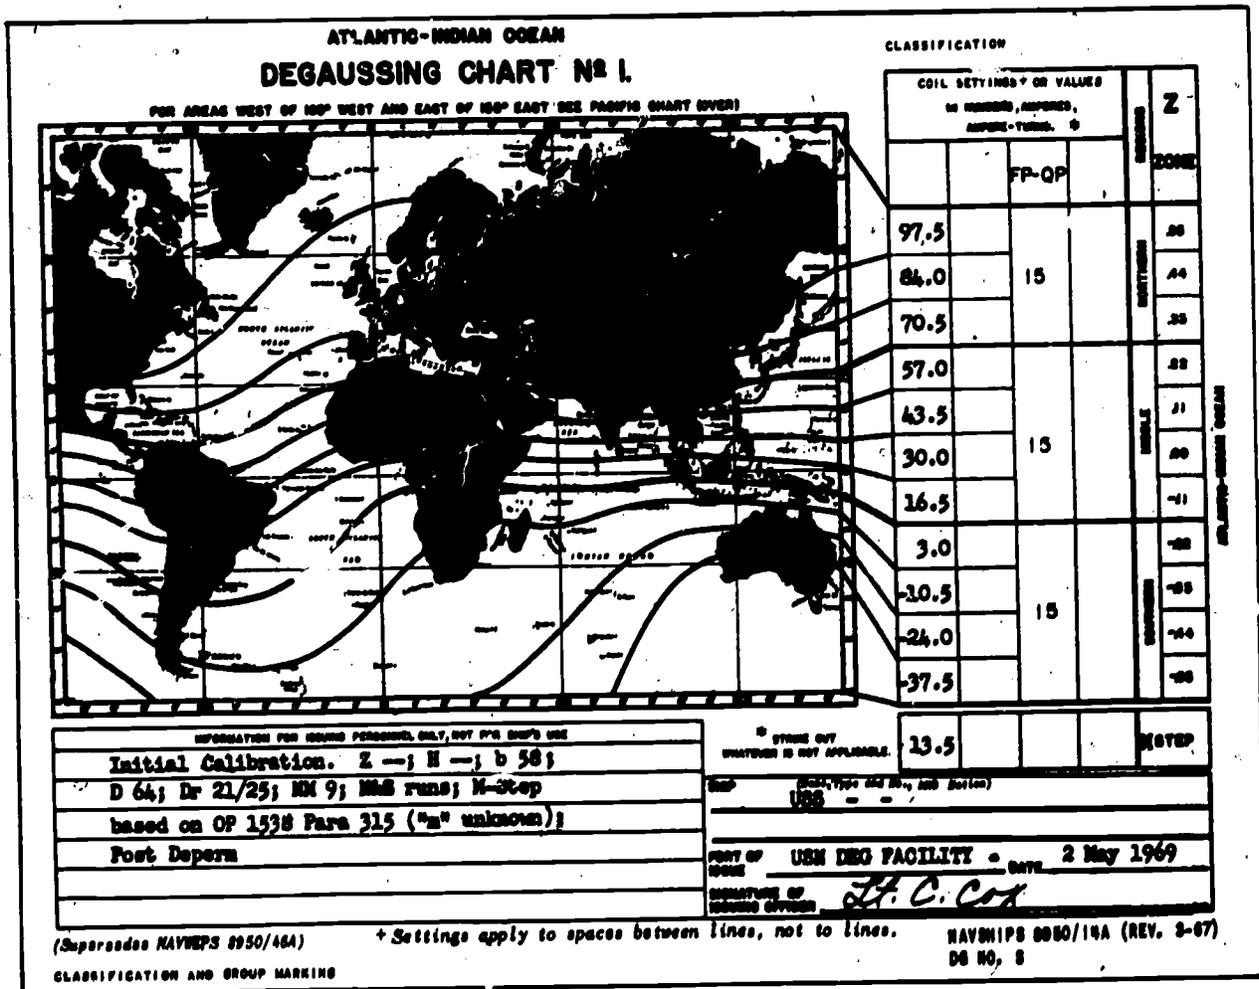


Figure 10-6.—Degaussing chart No. 1.

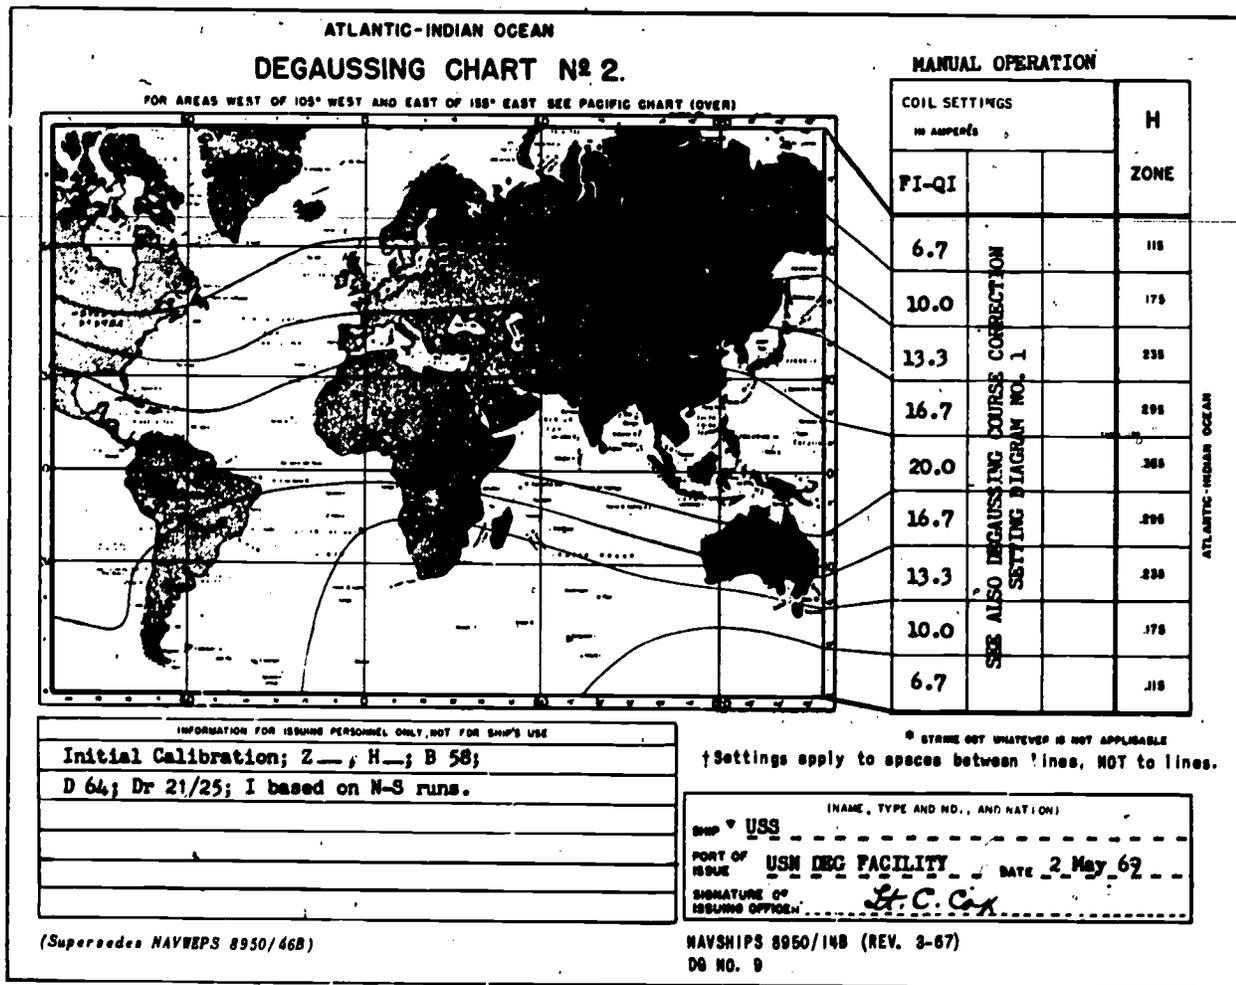


Figure 10-7.—Degaussing chart No. 2.

69.15

of Z zones for the Pacific Ocean. The coil current settings are filled in by range personnel for the various zones after the ship has been ranged.

and Indian Oceans and the reverse side (not shown) contains the same number of H zones for the Pacific Ocean.

2. When the ship passes from one H zone to another.

3. When the ship's heading changes from one sector to another.

The horizontal intensity (H component) of the earth's magnetic field, which is maximum at the magnetic equator and zero at the magnetic poles, is divided into a number of H zones. Similar to the Z zones, the number of H zones will vary, depending on the degree of compensation provided by the degaussing system. A degaussing chart No. 2 (fig. 10-7) illustrates the H zones for the Atlantic

The entire range of headings from 0° to 360° is divided into a number of sectors, each covering a part of the whole range of courses.

None of the degaussing coil currents is changed as long as the ship's course remains in one sector (if the Z zone and H zone remain unchanged). The FP-QP coil current is NOT changed when the ship's heading or the ship's

position changes. The following changes are necessary when changing from one sector to another or from one zone to another:

1. The M coil current must be changed when the ship moves from one Z zone to another. The M coil current is not changed when the ship moves from one H zone to another or when the heading changes from one sector to another.

2. The F, Q, FI-QI, L, and A coil currents are not changed when the ship moves from one Z zone to another, but must be changed if the ship moves to a different H zone, or if the heading changes to a different sector.

In a few ships, exceptional conditions may require a departure from the foregoing changes. In all cases, the degaussing folder will show the coil currents to be used.

Rheostat Installation

The degaussing coils in rheostat installations are energized by closing the main degaussing feeder switch and the individual coil switches in the proper polarity position with all rheostats set for maximum resistance. Set the current in each coil by cutting out resistance.

Adjust the rheostats for the M and FP-QP coils (if provided) until the M and FP-QP coil currents have the values specified in the degaussing folder for the ship's position. Adjust the rheostats for the F, Q, FI-QI, L, and A coils (if provided) until the coil currents have the values specified in the degaussing folder for the ship's position and heading. Check the coil currents periodically, and change the coil currents as required by changes in the ship's position and heading.

In installations employing motor-driven rheostats the polarity is changed only when the current is zero either by means of a motor-driven polarity changer, and pushbutton, or by operating the rheostat through and beyond the position of maximum resistance. At this point, reversal of current will occur automatically because of the internal cross-wiring of the rheostat buttons on either side of this point, or by means of a motor-driven polarity changer actuated by the rheostat arm.

Motor-driven rheostats can be operated manually by turning the emergency handwheels in the

event of failure of the motor-drive system. Always reduce the current to zero before operating the polarity changer. Otherwise, the contacts will arc and may burn out from operation under load.

In installations employing manually operated rheostats, the degaussing switchboard is usually located in the engine room. This switchboard includes the disconnect switches for the F, Q, FI-QI, L, and A coils; reversing switches for the M and FP-QP coils; series resistors; fuses; and ammeters. A remote degaussing panel is located in the pilot house or chart house to permit changing the F, Q, FI-QI, L, and A coil currents as the ship changes heading. This panel includes ammeters or polarity indicator lights for all coils and rheostats (rheostat pushbuttons); and reversing switches for the F, Q, and L coils or reversing switches for the FI-QI and A coils.

Telephone communications are provided between the remote and main panels. When the degaussing system is to be energized, the remote position (pilot house) may call the main degaussing switchboard station and have all currents set to the values called for in the degaussing folder. The remote position will then continue to maintain the currents in the FI-QI and A coils according to the ship's location and heading.

Motor-Generator Installation

The degaussing coils in motor-generator installations are energized by closing the disconnect switch to the motors with the generator field rheostats set for the maximum resistance, and operating the pushbutton to start the motor. The degaussing switchboard is usually located in, or in the vicinity of, the engine room near the degaussing motor-generators. This switchboard includes ammeters, pushbuttons for starting the motors, and the motor-driven field rheostat for the generator. In many installations in which the motor-generators are not located together, a separate switchboard is provided for each group of motor-generators.

After the motor has started, the currents in the coils are set by the pushbuttons that control the motor-driven field rheostats for the generators. The pushbuttons are located on the remote control panel in the pilot house or chart house,

or on the degaussing switchboard. Zero-center ammeters mounted above the pushbuttons are used to determine whether the positive or negative pushbutton should be operated to obtain the specified currents. The positive pushbutton will operate the motor-driven generator field rheostat to increase the current in the positive direction (decrease the current in the negative direction). Conversely, the negative pushbutton will operate the motor-driven rheostat to increase the current in the negative direction (decrease the current in the positive direction).

SECURING

Degaussing coils should be secured according to instructions in the degaussing folder for the installation concerned. To cancel any residual magnetism due to the degaussing current, most installations require one or more of the coils to be secured by reversals. The procedure for securing a degaussing coil by reversals is as follows: (1) Starting with the maximum current specified in the degaussing folder, reduce the current to zero then increase to the starting value in the reverse direction. (2) Reduce the current to zero and then increase to 3/4 value in the original direction. (3) Reduce the current to zero and then increase to 1/2 value in the reverse direction. (4) Reduce the current to zero and then increase to 1/4 value in the original direction. (5) Reduce the current to zero and then increase to 1/8 value in the reverse direction. (6) Reduce the current to zero and secure.

AUTOMATIC DEGAUSSING SYSTEMS

Installed on all new ships built since 1951, automatic degaussing equipment compensates automatically for induced magnetization by changing currents in the FI-QI and A coils as a ship's heading changes.

TYPES OF AUTOMATIC DEGAUSSING EQUIPMENT

The letter designation of each degaussing coil current control equipment provides information as to its type. The types are:

1. SM magnetic amplifier; controls selenium rectifier type power supply.

2. GM magnetic amplifier; controls field of generator of degaussing motor-generator.

3. FM magnetic amplifier; controls the field of exciter of degaussing motor-generator.

4. RM magnetic amplifier; controls the motor of motor-operated rheostat; the rheostat is in series with the degaussing coil which is connected across the ship's constant voltage d-c power supply.

5. SSM semiconductor; silicon controlled rectifier type power supplies.

6. EMS semiconductor; magnetometer controlled degaussing system.

SM-9A AUTOMATIC DEGAUSSING SYSTEM

The SM-9A automatic degaussing control system comprises a degaussing switchboard (fig. 10-8), a remote switchboard, a FI-QI coil power supply, an FP-QP coil power supply, and a M coil power supply. The degaussing switchboard (fig. 10-9), contains the controls required to operate the degaussing system. The FI-QI control panel mounted at the top of the switchboard contains all the circuits required to control the FI-QI degaussing currents in both the manual and automatic modes of operation. The M control panel mounted in the center left section of the switchboard contains the controls and circuitry required to control the M coil current. The FP-QP control panel mounted center right contains the controls for setting the FP-QP coil current. At the bottom is located the power supply overheating alarm circuits and ground fault detector.

The remote control unit mounts three meters which indicate the current in each of the three degaussing coils. Three red lights mounted on the unit indicate whether or not there is trouble in the three circuits. One white light indicates that the system is in manual operation, and another indicates that the FI-QI current is being controlled at the remote control unit by the manual control switch on the remote unit.

The three power supplies contain the circuits necessary to supply the currents required to


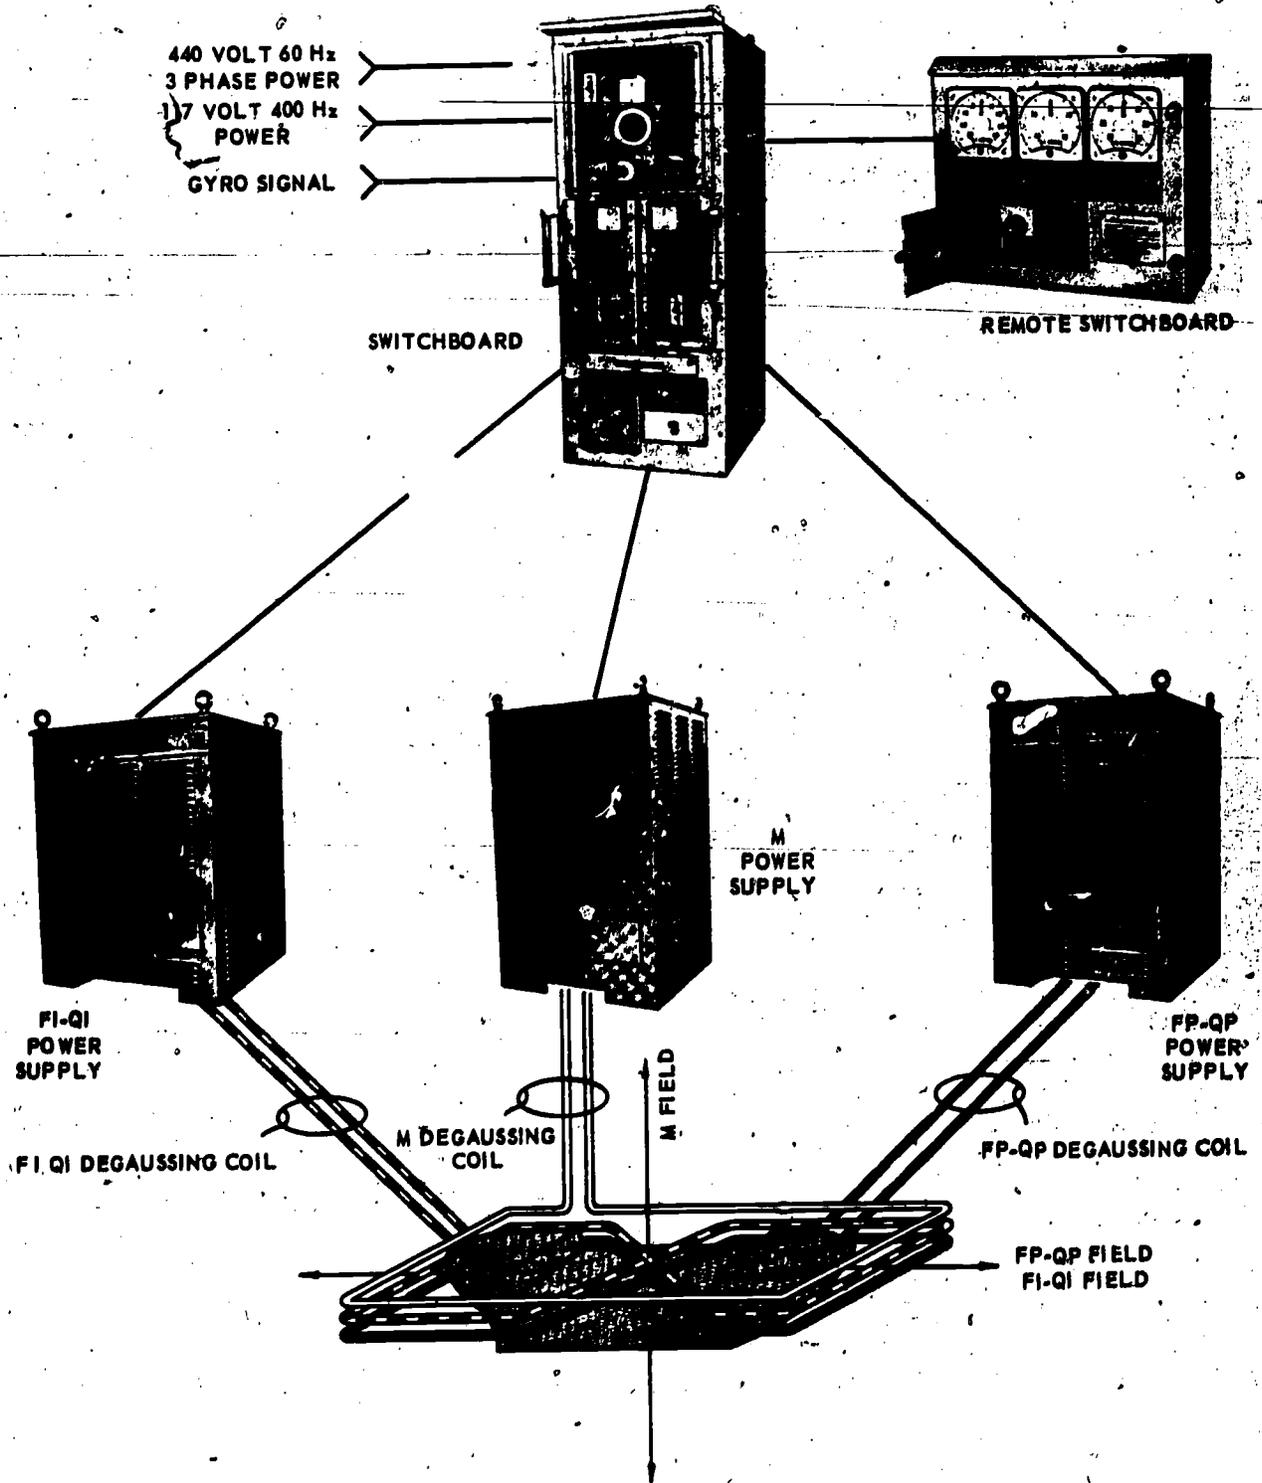


Figure 10-8. — Type SM-9A automatic degaussing control system.

77.327

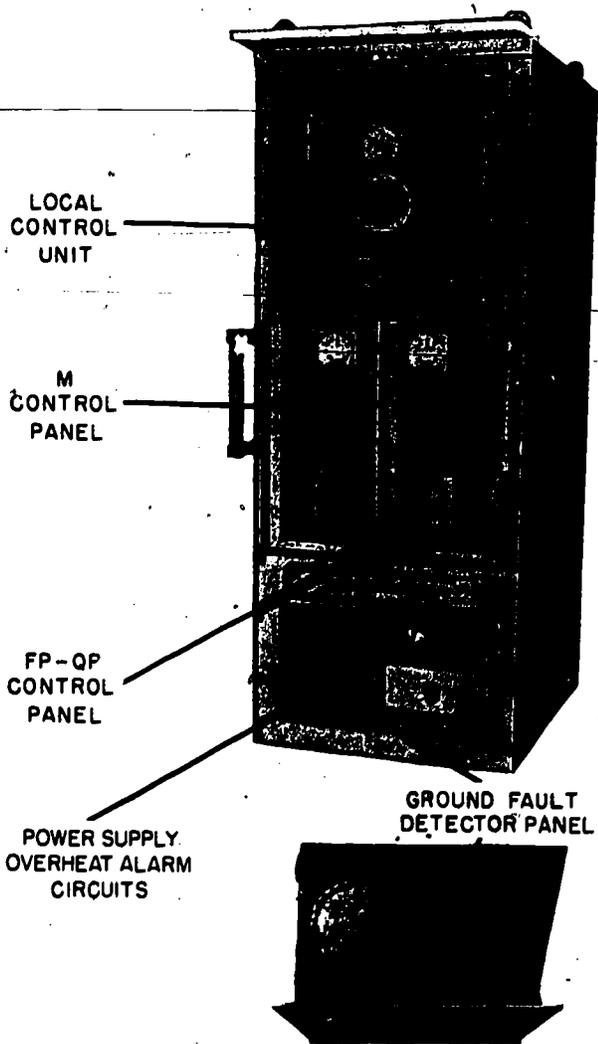

111.121


Figure 10-9. — SM-9A degaussing switchboard.

degauss the ship. The only externally mounted components on the supplies are indicator type fuses which fuse the power circuits in the supplies.

FI-QI Channel Functional Description

The FI-QI automatic channel circuit is shown in block diagram form in figure 10-10.

Signals from the ship's gyro system which are proportional to the ship's true heading are

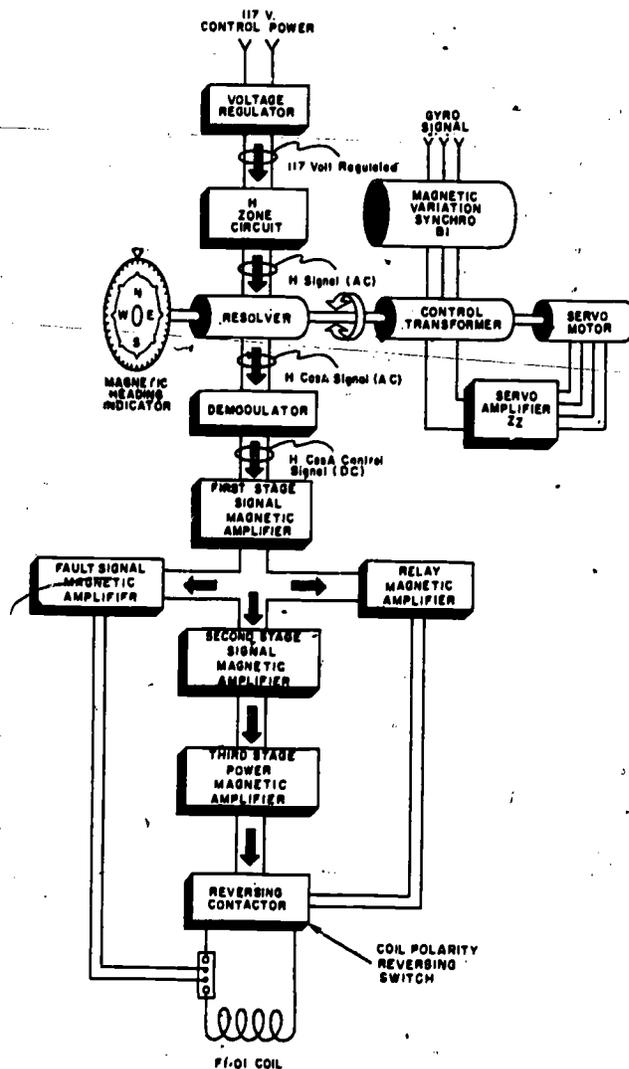

111.122

Figure 10-10. — SM-9A FI-QI automatic channel-block diagram.

converted to signals which are proportional to the magnetic heading by the magnetic variation synchro. The resulting magnetic heading signal drives a servoamplifier and servomotor which positions the magnetic heading indicator dial, control transformer rotor, and synchro resolver which are attached to the gear train.

The servoamplifier provides an impedance match between the control transformer secondary and the servomotor, permitting faster gear train action.

The First Stage Signal Amplifier Circuit is a push-pull amplifier connected for direct current

output so that the net output signal (difference between the push-pull outputs) is a reversible polarity direct current signal proportional to the required FI-QI degaussing current for any magnetic heading and H Zone. The first stage output signal is then used as a control signal for the second stage amplifier.

The second stage signal amplifier receives its control signal from the first stage signal amplifier and supplies the control signal for the third stage power amplifier. Since the second stage signal amplifier and the third stage power amplifier are "single-ended" stages (not push-pull), they are capable of producing an output current of only one polarity. When a negative current is required (when the signal from the first stage goes in a negative direction), the pilot relay reverses the polarity of the second stage control signal so that it will continue to drive in a positive direction, and the reversing contactor (controlled by the pilot relay) reverses the FI-QI degaussing current.

Operation of the relay amplifier, which controls the operation of the pilot relay, is such that when a negative degaussing current is required the pilot relay is energized.

The fault signal circuit produces a visual indication of trouble by lighting the trouble lights (on both the degaussing switchboard and the remote control unit) when the degaussing current is in error with the required degaussing current by more than five percent. The fault signal reactor magnetically compares the output signal from the first stage signal amplifier, which is proportional to the required degaussing current, with a signal from the feedback shunt, which is proportional to the actual degaussing current. If the difference between these two signals exceeds the value at which the fault signal reactor has been adjusted to "fire," the trouble lights will light.

Gyro Signal Circuit

The ship's gyrocompass equipment provides a synchro signal which is a function of the ship's heading from true north. Since degaussing equipment must operate from a magnetic bearing, the gyrocompass signal is fed to a synchro differential generator which introduces a correction for magnetic variation. The amount of correction

applied is determined by the setting of the MAGNETIC VARIATION dial on the control unit. The proper setting for any given area in which the ship is operating may be obtained from the ship's navigational charts.

Signal Amplifier Circuit

Signals from the demodulator circuit (fig. 10-10) are fed through the automatic operation current adjustment rheostat (not shown) to a push-pull magnetic amplifier (the signal magnetic amplifier). The push-pull amplifier produces a d-c output proportional in magnitude and polarity to the magnitude and polarity of the input signal from the automatic operation current adjustment rheostat which is part of the signal amplifier circuit.

RELAY AMPLIFIER CIRCUIT.—The relay amplifier circuit receives the d-c output signal from the signal amplifier circuit and sends the signal through a magnetic amplifier to a pilot relay. The pilot relay, through its contacts, sends a unidirectional d-c signal at all times to the input of the second stage magnetic amplifier. The pilot relay also controls the reversing contactor. This means that although a reversible signal is received by the relay amplifier, the pilot relay will allow only a d-c signal of the same polarity each time to go to the second stage magnetic amplifier, but still operate the reversing contactor to have the same polarity as the input signal to the relay amplifier.

SECOND AND THIRD STAGE AMPLIFIER CIRCUITS.—The second and output stage amplifiers are single ended, three phase, magnetic amplifier circuits. These circuits, which are located within the FI-QI power supply, function to produce a degaussing current proportional to the output signal from the signal amplifier circuit. When a negative degaussing current is required (when the signal amplifier output current is negative), both the control signal input connections and the degaussing current output connections are reversed so that the degaussing current follows the output of the signal amplifier circuit even though the second and output stages are driving only in one direction.

Two feedback signals (shunt feedback and rate feedback) are applied to the second stage amplifier. Although they are positive to the second stage, they have a negative effect on degaussing


coil current because the second stage output is applied to the third stage amplifier in a negative signal winding. These feedback signals improve the linearity and stability of the FI-QI channel. The shunt feedback signal is directly proportional to the degaussing coil current, while the rate feedback signal is proportional to the rate of change of the coil current. The effect of the rate feedback signal is to oppose any tendency of the system to oscillate.

FAULT SIGNAL AMPLIFIER.--The function of the fault signal circuit is to provide a visual indication of trouble when the FI-QI degaussing current is in error with the required degaussing current as dictated by the d-c control signal from the signal amplifier. This is done by comparing the two signals magnetically within a saturable reactor circuit. Error signals of either polarity will cause an increase in the control current applied to the saturable reactor thus decreasing the impedance of the output windings, causing the trouble light to light.

M and FP-QP Manual Coil Channels

The manual coil channels (M and FP-QP) (fig. 10-11), each consists of a control panel that houses a constant voltage source and the means of controlling the magnitude and polarity of the current to the degaussing coil. This is done by sending a unidirectional d-c signal of a variable magnitude to the first stage and second stage amplifier where the d-c signal is amplified to the value needed in the degaussing coil. The polarity of the degaussing current is determined by the position of the coil polarity reversing switch that is located in the coil channel control panel. The contacts in the reversing switch operate the reversing contactor that is connected between the output of the amplifier (second) stage and the degaussing coil. The coil polarity reversing switch also has a set of contacts that direct the d-c signal voltage to the fault signal amplifier. The fault signal amplifier is a visual indication of whether the manual coil channel is functioning properly. The functioning of the individual units of the manual coil channel follows.

M AND FP-QP CHANNEL CONTROL PANEL. -The M and FP-QP coil channels are manually controlled. The control circuits for the M and FP-QP coil channels are identical. The M coil channel control panel utilizes a constant

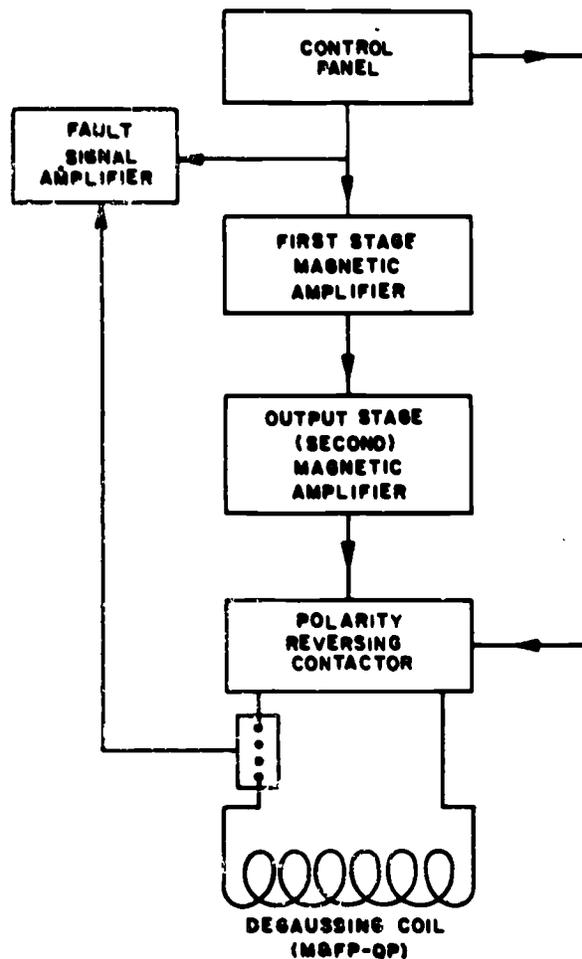

111.123

Figure 10-11--SM-9A M and FP-QP manual channel-block diagram.

voltage supply transformer along with a filtering and reducing circuit composed of capacitors, an inductor, and resistors. The resultant a-c voltage is sent to a full-wave rectifier which provides the d-c voltage source which is used as the control voltage in the M coil channel. A manual control adjusting rheostat is used to vary the magnitude of the d-c signal from the full-wave rectifier. The positive side of the resultant d-c voltage is applied through the M coil polarity reversing switch where it is directed to the control winding of the fault signal amplifier and returns back to the output of the M coil channel control panel. The purpose of the signal to the fault signal amplifier is to provide a reference that is used to determine if the circuit is functioning properly. The M coil polarity

reversing switch also operates the reversing contactor of the M coil. The output of the control panel goes to the input of the first stage magnetic amplifier.

FIRST STAGE AND OUTPUT STAGE MAGNETIC AMPLIFIERS.—The first and output stage of the M coil channel are the same as the second and output stage amplifiers of the FI-QI coil channel. A unidirectional d-c signal from the output M coil channel control panel is sent to the input of the first stage magnetic amplifier. Because the first stage magnetic amplifier is single ended, the d-c signal to the control winding is the same polarity at all times and only varies in magnitude. The means of amplification is identical to the method described for the second and output stage of the FI-QI control panel. The output of the output (second) stage goes to the primary of a power transformer. This transformer is provided with taps to supply the proper voltage to the degaussing coil. The output of the transformer is connected to a full-wave bridge rectifier where it is rectified and fed through a reversing contactor to the degaussing coil.

The reversing contactor is similar to the one used in the FI-QI control channel. The only difference is that the reversing contactor is always manually controlled from the coil polarity reversing switch in the control panel.

The fault signal amplifier produces a visual indication of trouble by lighting the trouble lights when the degaussing current is in error with the required degaussing current. The operation is similar to the one mentioned in the FI-QI control channel.

MAINTENANCE

The degaussing installation should be carefully maintained particularly to prevent deterioration resulting from moisture gradually entering the cables. Since the degaussing system consists of electrical cables, rheostats, ammeters, connection boxes, motor-generator sets, and costly automatic control equipment it must be maintained in conformity with the instruction for the maintenance of electrical equipment given in applicable chapters of the NavShips Technical Manual (Chapters 300 and 475) and applicable technical manuals for the equipment installed.

First and always, bear in mind that this equipment is energized with dangerous voltages. All electrical

maintenance personnel must observe the safety precautions and electrical maintenance procedures as presented in chapter 300 of NavShips Technical Manual.

PREVENTATIVE MAINTENANCE

The maintenance requirements for manual degaussing systems are not as extensive as those for automatic degaussing systems.

Automatic degaussing switchboards and remote panels require more frequent cleaning and inspection as they are more sensitive to heat and dirt due to their fine components.

When the system is not in normal use, all coils should be energized at least once a week to the maximum current specified in the degaussing folder and operated for at least four hours with the current in one direction. Then reduce the current to zero and energize the coils momentarily with maximum current in the opposite direction.

Check each degaussing coil for grounds by insulation resistance measurements using a 500-volt megger. When the source of supply for degaussing coils is from rectifiers, the rectifiers must be disconnected prior to using a 500-volt megger on the degaussing coils to prevent damage to the rectifiers. These measurements should always be made with the same degaussing equipment connected in the circuit and as closely as possible under similar conditions of temperature and humidity. The date and reading of the insulation resistance to ground may be recorded on the resistance test record card (NAVSEA 531-1) in accordance with chapter 300 of the NavShips Technical Manual. These measurements should be taken between the coil disconnect switch and ground. In the F, Q, and A or I, P, and A coils that have a reversing switch on the coil side of the disconnect switch, the measurement should be made with the reversing switch in the CLOSED position. Also, this measurement should be made just before the weekly energizing of the coils so that the comparative readings are obtained under similar conditions. By comparing these weekly readings it is possible to detect abnormal decreases in resistance and take the necessary corrective action before failure occurs. When abnormal decreases are indicated the various components of the circuit should be isolated and the insulation resistances checked individually to determine the cause of the low reading.

The connection boxes may accumulate considerable amounts of water due to condensation and leakage through improperly seated gaskets. The moist atmosphere in the box will gradually force moisture into the cable ends and reduce the insulation resistance. If this condition is not checked in time, the cable may be ruined and require replacement. Therefore, remove the connection and through-box drain plugs once a month to allow any accumulated water to run out. Boxes that have abnormal accumulations of water should be opened, dried out, and the gaskets checked and replaced if necessary.

Remove corrosion on rheostat contact buttons with fine sandpaper and coat the buttons lightly with a graphite lubricant. Remove accumulations of dirt and dust from automatic degaussing control equipment to facilitate the natural flow of air around the components, and thus eliminate the possibility of overheating. Use a vacuum cleaner or bellows; do not use compressed air.

Observe the preventive maintenance requirements for automatic control equipment and motor-driven rheostats, as outlined in the applicable technical manual. Also, observe the maintenance of electrical equipment and electrical safety precautions, as required by Chapter 300 of the NavShips Technical Manual.

CORRECTIVE MAINTENANCE

Corrective maintenance consists principally of locating and eliminating grounds in the various coils, circuits, and components of a degaussing system.

Grounds in a degaussing conductor can be located by breaking the conductor into its component sections by opening connections at connection and through boxes, and testing each section of the conductor individually. Grounds in FEEDERS and control equipment CIRCUITS can be located by isolating the different components.

When making these tests, reconnect all ungrounded connectors to their terminals immediately after they have tested clear, to prevent misconnection later. To locate grounds in degaussing circuits, proceed as follows (observe precautions required when using a 500-volt megger on rectifier circuits):

1. Open the supply switch for the degaussing coil and close the reversing switch in either position.

2. Disconnect the feeder conductors from the degaussing coil at the feeder connection box.

3. Measure the insulation resistance to ground for each of the feeder conductors. If the insulation resistances are satisfactory in accordance with the manufacturer's technical manual and Chapter 300 of NavShips Technical Manual, the feeder conductors and the equipment connected to them are clear of objectionable grounds. If the insulation resistance to ground is unsatisfactory for either one or more of the feeder conductors, proceed in accordance with the method for locating grounds in feeder conductors, as described in the instruction book accompanying the installation.

4. Measure the insulation resistance from the degaussing coil to ground. If the insulation resistance of the degaussing coil is satisfactory in accordance with Chapter 300 NavShips Technical Manual, no further insulation tests on the coil are necessary.

SSM AUTOMATIC DEGAUSSING SYSTEM

The SSM Automatic Degaussing System will be the standard system for all new steel-hulled construction. It differs from older systems by the manner, in which the current is controlled and sent to the degaussing coils. The SSM uses transistorized devices for amplification instead of magnetic amplifiers. Development of the silicon controlled rectifier has taken over many tasks that magnetic amplifiers previously assumed.

The SSM automatic degaussing control system is made up of the degaussing switchboard, FI-QI coil power supply, FP-QP coil power supply, M coil power supply, A coil power supply, and remote control unit. The magnitude and polarity of the current in the A and the FI-QI degaussing coils is automatically controlled by the control circuits in the degaussing switchboard as a function of the ship's magnetic heading. The signal used to provide the heading information to the control circuits is provided by the ship's gyrocompass equipment. The magnitude and polarity of the currents to the FP-QP and M degaussing coils are manually set by controls mounted on the degaussing switchboard.

CHAPTER 11

ELECTRICAL PROPULSION AND CONTROLS

The driving units for propulsion systems installed on most Navy ships are either gas turbine, steam turbines or diesel engines. Turbine-driven reduction-gear systems (fig. 11-1A) are standard for all of the fleet's capital ships, whereas the diesel reduction-gear drives (fig. 11-1B) are found on medium-sized and smaller vessels, such as tank landing ships. Certain classes of the capital ships have central operating systems (described in the next chapter) to control their power plants automatically.

Also driven by turbine or diesel engine, the systems shown in figure 11-1C and 11-1D are electric propulsion drives. They differ in that a d-c electrical system replaces the reduction gear. Electric propulsion is used on modern ships where it has a specialized purpose such as very good control.

D-C PROPULSION


A representative diesel-electric d-c propulsion installation in a U.S. fleet tug consists of four diesel engine-driven propulsion generators, which furnish power through the control equipment to one propulsion motor, which in turn drives the propeller (fig. 11-2). Each generator is provided with an exciter mounted on an extension of the generator shaft. The four generating units are located amidship, two on the port side and two on the starboard side.

The propulsion motor is directly connected to a single propeller shaft and located on the centerline of the ship in a separate compartment immediately aft of the generating units.


The control equipment consists of an engine-room control station and a pilothouse control station with instrument panel. A transfer switch is provided to control the drive system from either

the engine room or the pilothouse. The control provides for controlling the outputs of the four propulsion generators and associated exciters, and the speed and direction of rotation of the propulsion motor.

The diesel engines and generators rotate in the same direction for both ahead and astern rotation

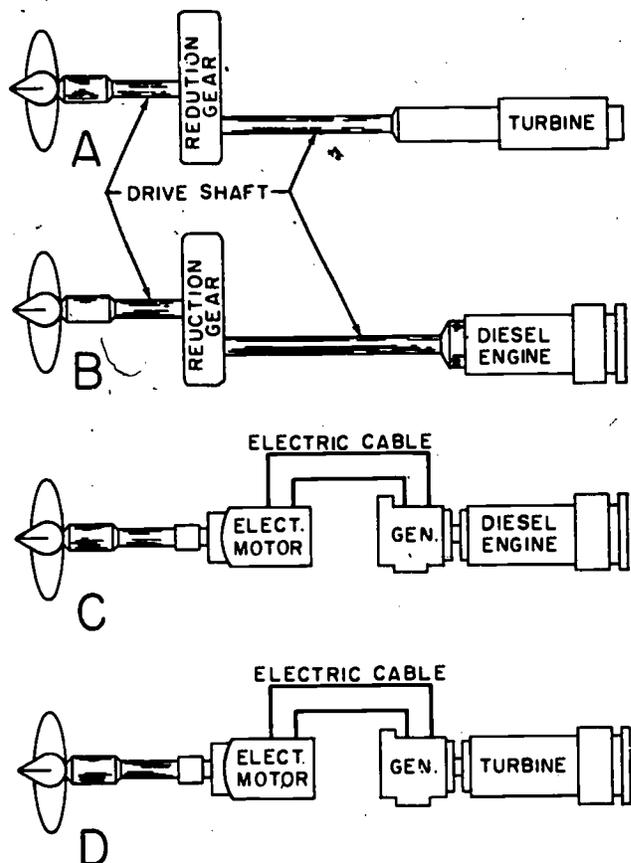

27.327 (77C)
Figure 11-1.— Propulsion drives.

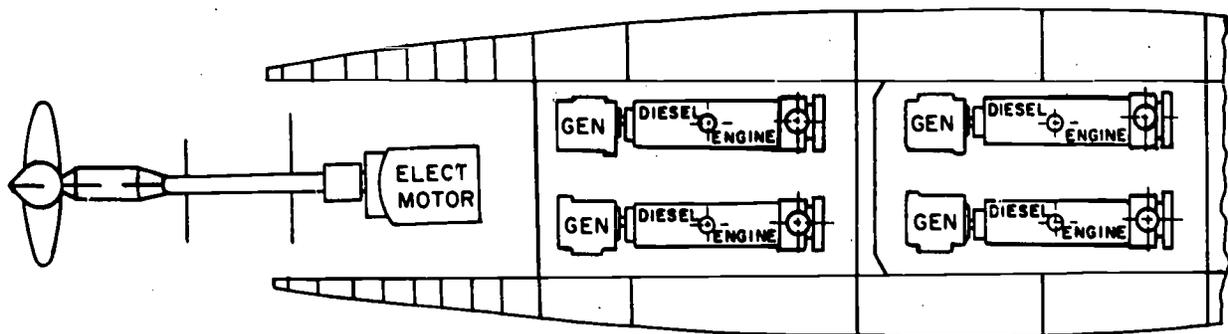

27.327

Figure 11-2.— Four diesel-electric generators with single-motor propulsion system.

of the propeller. Primary control of the direction of propeller rotation is obtained by changing the polarity of the generator terminal voltage. The control of propeller speed is obtained by changing the magnitude of the generator terminal voltage. The generator terminal voltage is controlled by varying the generator field strength in the lower propeller speed range and by varying the speed of the diesel engines and thus the terminal voltages of the associated generators in the upper speed range.

The control is effected by means of a speed controller in the engineroom or by a speed controller in the pilothouse. The speed controller is connected to a rheostat and reversing contacts for controlling the magnitude and direction of the generator field current and to an engine speed transmitter for controlling the engine speed.

The system is designed to permit operation of any combination from one to four generators with the motor. Also, either generator 2 or 3 but not both at the same time, can be used to supply auxiliary power for salvage operations. When this is done the generator cannot be used in propulsion service.

PROPULSION GENERATORS

The four propulsion generators are d-c, separately excited, 2-wire, split-frame, self-ventilated machines. They are heavy duty marine type units designed for operation over the speed range of the diesel engines. Commutating poles are provided to improve commutation. Each generator is rated at 610 kW, 375 volts, 1625 amperes, and 700 rpm.


PROPULSION EXCITERS

As previously stated, each propulsion generator is equipped with a directly connected exciter, which provides excitation for the associated generator field. The exciters are d-c, separately excited, 2-wire, self-ventilated units provided with commutating poles. Each exciter is rated at 3 kW, 70 volts, 43 amperes, and 350/700 rpm.

PROPULSION MOTOR

The propulsion motor is a d-c, separately excited, adjustable speed motor having commutating and compensating windings (fig. 11-3). It is actually two identical motors with their armatures mounted on a common shaft. The armatures are operated in series at all times. Each half of the motor is rated at 1500 horsepower, 750 volts, 1610 amperes, and at 112/140 rpm. The power is supplied from the propulsion generators, which are connected with their armatures interposed with those of the propulsion motor so that the maximum voltage across any part of the propulsion loop does not exceed 750 volts. The shunt type fields of the propulsion motor are excited from the ship's 240-volt (auxiliary), d-c supply. The two armatures are mounted on a single shaft with their commutators adjacent. The direction of rotation is determined by viewing the commutator end of each armature. The stator frames are independently foot mounted and are also identical except for the brush rigging and the polarities of the shunt field leads, which are made to suit the opposite direction of rotation of the armatures.

The propulsion motor is provided with induced ventilation by means of a separately mounted

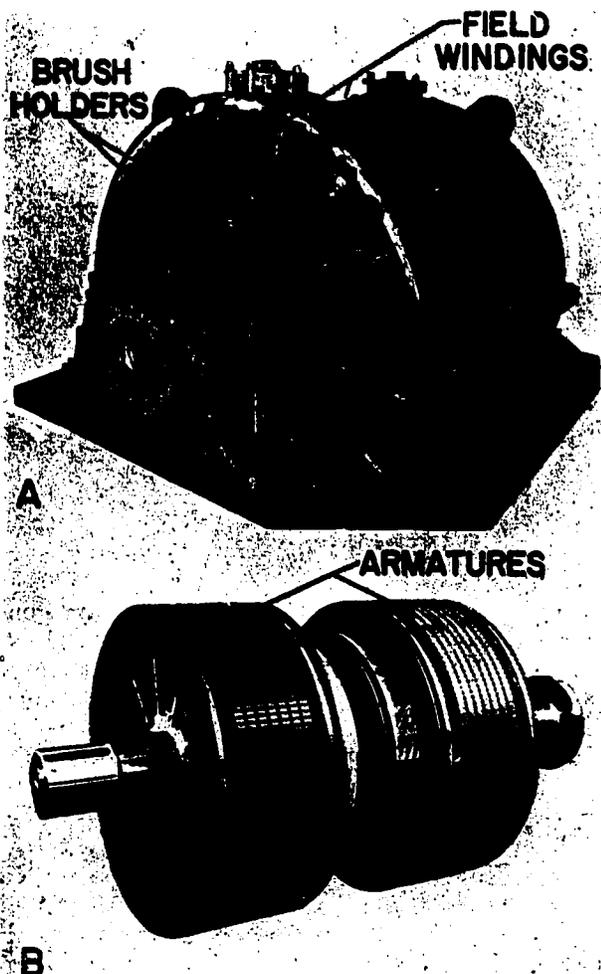

77.228

Figure 11-3. — D-c propulsion motor.

blower through a duct connected to an opening in the enclosing cover of the commutator at the top of the machines. The air is drawn in through openings in the end bells at both ends of the motor and flows through radial ducts in the armature cores, over the armature surfaces and between the field coils where it passes over the commutators and out the opening at the top.

The blower is driven by a 15-horsepower, 230-volt stabilized shunt, d-c motor. The motor is controlled by a magnetic starter (mounted in a separate cabinet), which is controlled from the main propulsion control board. The starter is equipped with a START-STOP pushbutton for local operation.


PROPULSION CONTROL EQUIPMENT

The propulsion control equipment (fig. 11-4) is assembled as a unit and located on the platform level in the engineroom. The indicating instruments and the handles of the manually operated devices are mounted on the front of three 2-section panels that comprise the control board. The first two are the generator panels and the third is the motor panel. The third panel does, however, mount some devices that are not directly associated with control of the propulsion motor. Referring to figure 11-4, the four voltmeters M1 mounted on the generator panels indicate the voltages of the four propulsion generators. The two exciter voltmeters M2 indicate the voltages of the four exciter generators. One voltmeter is for exciters 1 and 2 and one is for exciters 3 and 4. These voltmeters are also used as ground detectors. The two exciter voltmeter and ground detector transfer switches SW1 are used to transfer the two voltmeters to the circuits whose voltages are to be read. The excitation voltmeter M9 indicates the voltage of the ship's 240-volt d-c supply. This voltmeter is also used as a ground detector.

The excitation voltmeter and generator field ground detector transfer switch SW4 are used to transfer the voltmeter to the various circuits. The auxiliary power ammeter M3 on the first generator panel indicates the current supplied to the auxiliary power circuits by the generator being used to furnish auxiliary power.

The four engine speed indicators M5 indicate the speeds of the four diesel engines. The auxiliary power control switch SW2 operates the auxiliary field contactor which energizes the exciter field circuit of the generator supplying auxiliary power. The auxiliary power generator field rheostat RH1 is provided to control the strength of the exciter field of the generator supplying auxiliary power.

The four small handwheels SW11 are the generator control switches that control the field circuits of the four generators and associated exciters to apply or remove excitation. The four large handwheels SW9 and SW10 control the setup switches of the four generators. The switching arrangement is such that generators 1 and 4 may be used only for propulsion service whereas generators 2 and 3 may be used for either propulsion or auxiliary power service. Operating in conjunction with each generator setup switch, is an engine speed-exciter field setup switch SW5, not shown in figure 11-4.

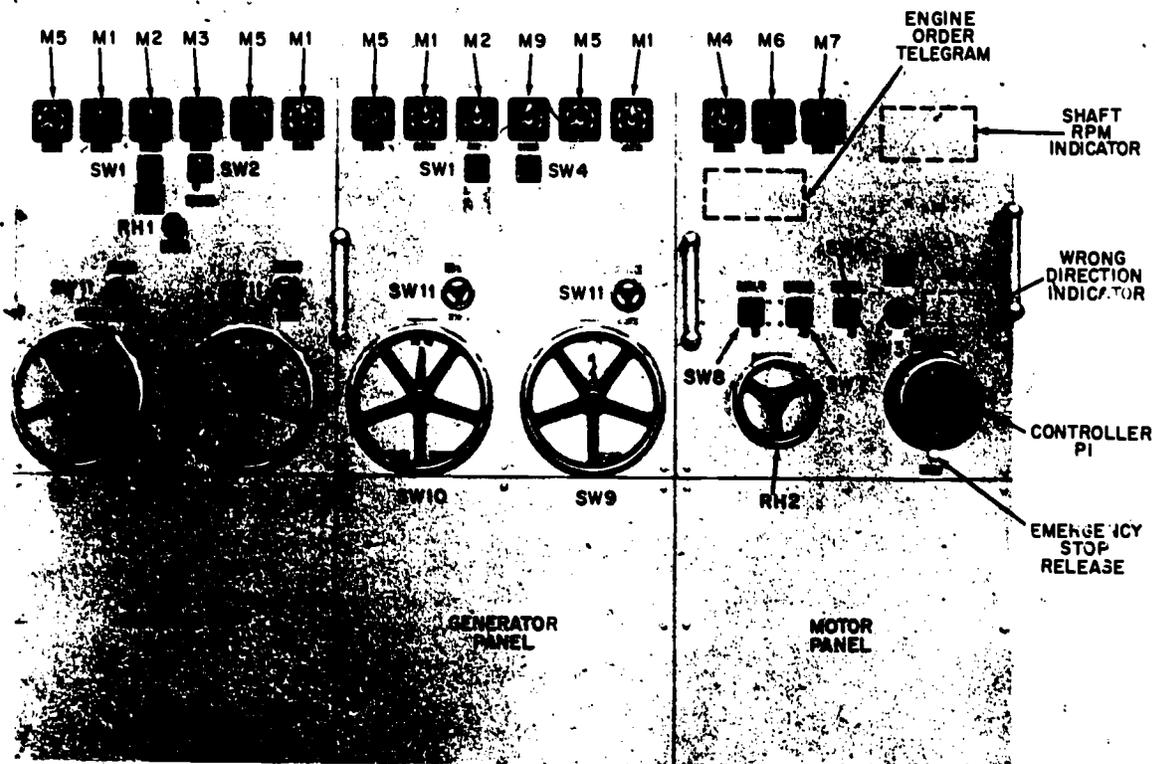

- M1-GENERATOR VOLTMETER, 500-0-500
- M2-EXCITER AND GROUND DETECTOR VOLTMETER, 100-0-100
- M3-AUXILIARY POWER AMMETER, 0-2000
- M4-MOTOR AND GROUND DETECTOR VOLTMETER, 1000-0-1000
- M5-ENGINE SPEED INDICATOR, 0-1000
- M6-MOTOR FIELD AMMETER, 0-150
- M7-MOTOR AMMETER, 3000-0-3000
- M8-PILOT HOUSE MOTOR AMMETER, 3000-0-3000 (NOT SHOWN)
- M9-EXCITATION VOLTMETER (SHIP'S SERVICE), 0-300
- SW1-EXCITER VOLTMETER AND GROUND DETECTOR TRANSFER SWITCH
- SW2-AUXILIARY POWER GENERATOR FIELD CONTROL SWITCH
- SW3-MOTOR VOLTMETER AND GROUND DETECTOR TRANSFER SWITCH
- SW4-EXCITER VOLTMETER AND GENERATOR FIELD GROUND DETECTOR TRANSFER SWITCH
- SW5-ENGINE SPEED-EXCITER FIELD SWITCH ON GENERATOR SET-UP SWITCH (NOT SHOWN)
- SW6-ENGINE SPEED CONTROL SWITCH
- SW7-EXCITATION CONTROL SWITCH
- SW8-PILOT HOUSE-ENGINEROOM TRANSFER SWITCH
- SW9-10-GENERATOR SET-UP SWITCHES
- SW11-GENERATOR CONTROL SWITCH
- RH1-AUXILIARY POWER GENERATOR FIELD RHEOSTAT
- RH2-MOTOR FIELD RHEOSTAT
- P1-ENGINEROOM CONTROLLER

27.100

Figure 11-4. — Propulsion control equipment.

The motor voltmeter M4 mounted on the motor panel indicates the voltage across the two motor armatures and also functions as a ground detector in the generator and motor armature circuits. The motor voltmeter and ground detector transfer

switch SW3 is used to transfer the voltmeter to the circuits to be read.

The motor field ammeter M6 indicates the current in the motor field circuits. The motor

ammeter M8 indicates the current in the propulsion circuit.

The control transfer switch SW8 is provided to transfer control of the propulsion system from the engineroom to the pilot house.

The excitation control switch SW7 operates the exciter contactor which energizes the exciter and motor fields from the ship's 240-volt d-c supply.

The motor field rheostat handwheel RH2 controls the excitation of the motor field. Engineroom controller handwheel P1 controls the operation of the propulsion system from the engineroom. The controller has 24 ahead and 24 astern speed operating positions. An emergency stop-release button is located at the 22nd controller position. The operator must press the release button to move the controller beyond this point.

OPERATION

By the use of disconnect blocks (fig. 11-5 part 1) either motor armature may be bridged and removed from the propulsion loop in an emergency. When one armature is removed the motor voltage rating is reduced one-half, consequently not more than two generators should be operated in the series propulsion loop.

The overload relays OL1 and OL2 are designed to operate in case of a short circuit in the propulsion or auxiliary power circuit. When a short circuit occurs in the propulsion circuit, relay OL1 closes its contacts and energizes the tripping coil for excitation contactor K2 (part 4). When a short circuit occurs in the auxiliary power circuit, relay OL2 opens the circuit to the auxiliary power field contactor K1.

The two resistors R11 in series with RH2 (part 2) and the two motor fields are provided to adjust the excitation of the motor fields so that the two motor armatures divide their loads equally. The load is divided equally when the voltage drops across the two motor armatures are identical. As the two armatures are identical the excitation currents should be approximately the same. Once correctly adjusted, these resistors need not be changed.

Adjustable resistors R4 in the exciter field circuits are provided to equalize the performance characteristics of the generators as they, too, need not be changed after they are properly adjusted. Motor field discharge resistor R10 (part 2) is connected across the motor fields only while the excitation contactor K2 is in the open position. Exciter field discharge resistors R2 are connected across the exciter fields at all times. The main propulsion generator field discharge

resistors R1 are thyrite resistors and are permanently connected across the generator fields. An engine speed transmitter rheostat RH5 (part 3) is provided with the engineroom and pilot house controllers. These two transmitters consist of three rheostats mounted together and operated by a common shaft, which is a projection of the propulsion controller operating shaft (fig. 11-6). The three rheostats are adjusted so that each has a different value for any controller position and are connected to a receiver on the engine speed governor.

A third transmitter, the auxiliary power engine speed transmitter RH6, mounted behind the generator panels, controls the speed of the diesel engine which is being used to supply auxiliary power. This transmitter has a fixed setting and each time the transmitter assumes control the engine speed is brought to the predetermined value of 450 rpm.

The engine speed circuits are series circuits. For this reason loading resistors R5 and R6 (fig. 11-5 part 3) are provided to maintain the circuit resistance constant, thereby keeping the synchros in calibration. The resistors are switched in and out of the circuit by the generator setup switches SW5.

Starting

Before starting the system determine that the engineroom controller and the pilot house controller are in the STOP position; the excitation control switch SW7 (fig. 11-5, part 4) is in the OFF position; the engine speed control switch SW6 (part 3) is in the OPEN position; the auxiliary power control switch SW2 (part 4) is in the OFF position; the auxiliary power generator field rheostat RH1 (part 2) is in the MAXIMUM RESISTANCE position, and the generator setup switches SW9 and SW10 (part 1), and the generator control switches SW11 (part 2) are in the OFF position. (This does not apply to a generator already in auxiliary power service.) Assume the system is to be controlled from the pilot house.

To start the system, start the diesel engines to be used. The engine speeds should reach and remain at 350 rpm. This allows the generator fan to circulate the air for cooling. Turn the handwheel of each generator setup switch SW9 and SW10 to the position corresponding to the service that the generator is to supply. This action connects the main propulsion generator and motor armatures in a closed series propulsion loop. Setup switch SW5 operates in conjunction with SW9 and SW10 to close contacts 14 and 16 (part 2) in the exciter field circuits whose generators are selected for

ELECTRICIAN'S MATE 3 & 2



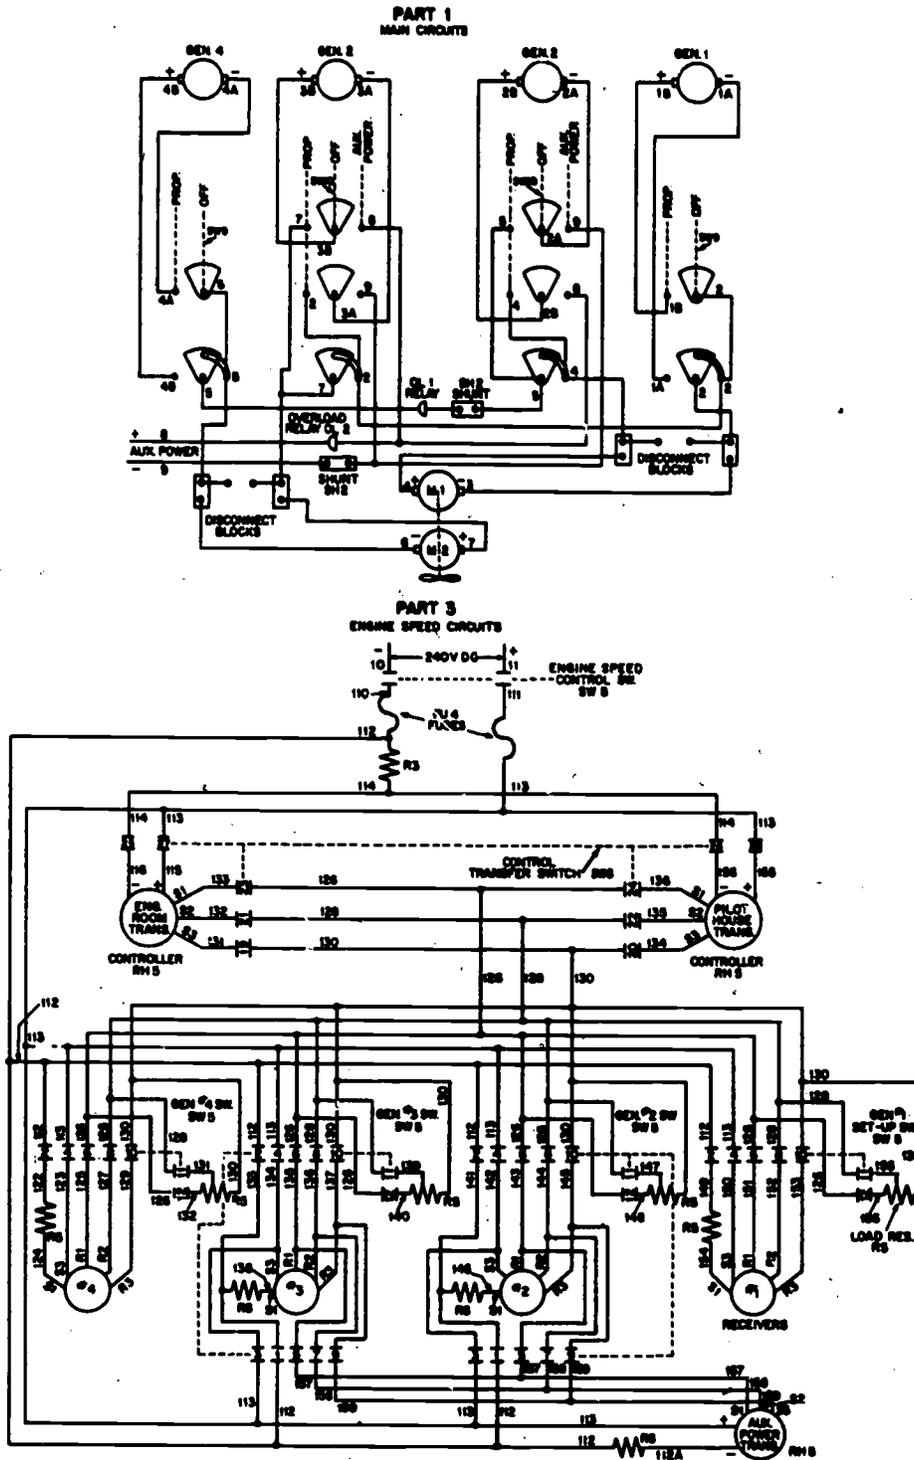


Figure 11-5(A).— (Parts 1 & 3) Propulsion circuits—fleet tug.


27.102.1

Chapter 11 — ELECTRICAL PROPULSION AND CONTROLS

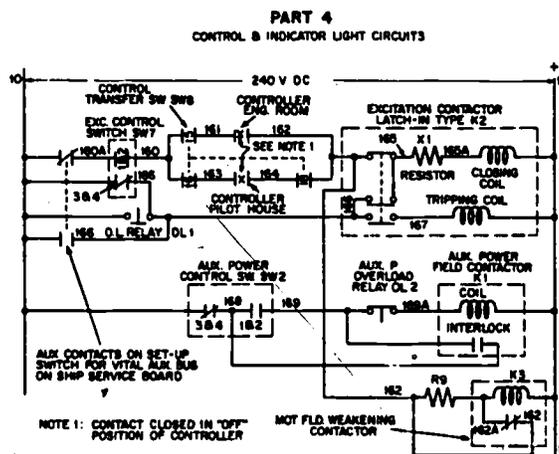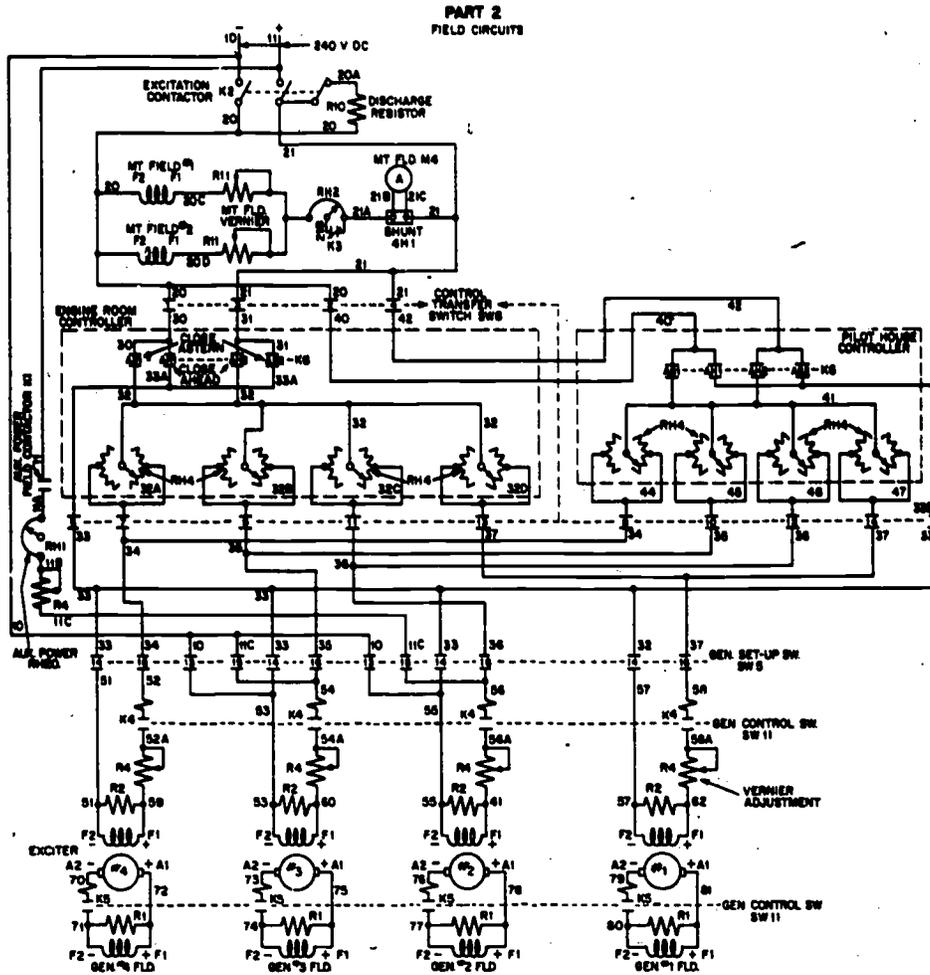

27.102.2

Figure 11-5(B). — (Parts 2 & 4) — Simplified propulsion circuits-fleet tug (Continued).

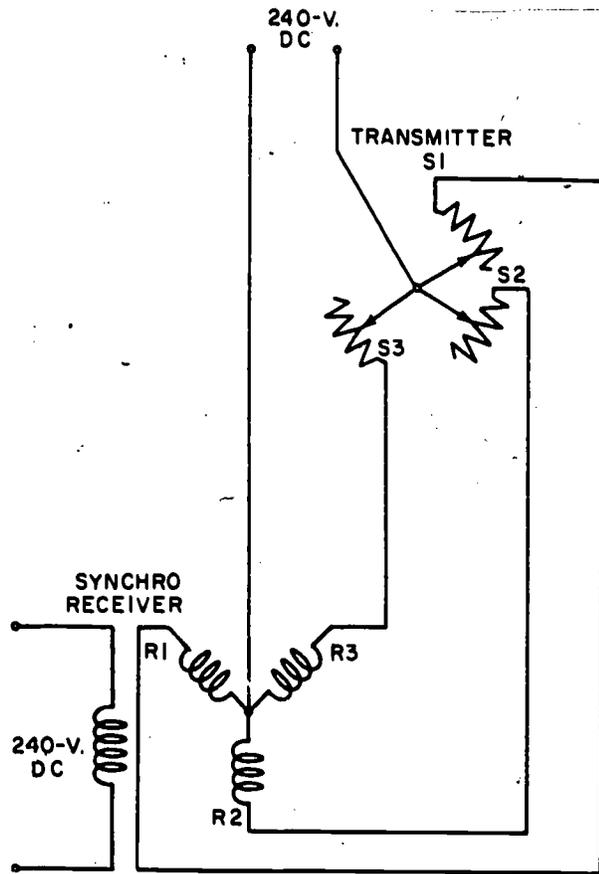

27.103

Figure 11-6.— Engine speed transmitter and receiver.

propulsion service and contacts 2, 4, 6, 8, 10, 11, and 12 (part 3) in the engine speed circuits for the associated engines.

NOTE: Generators 2 and 3 setup switches are interlocked so that only one or the other may be placed in the auxiliary power position at a time; also a setup switch cannot be moved from the propulsion to auxiliary power position unless the associated generator control switch SW11 is in the OFF position. Place the motor field rheostat RH2 (part 2) in the position corresponding to the number of generators to be put in service.

Close the generator control switches SW11 of the generators to be operated. This action closes relays K4 and K5 in the respective exciter and generator field circuits. Turn the control transfer switch SW8 to the PILOT HOUSE position.

This switch cannot be moved to transfer control unless the excitation control switch SW7 is in the OFF position.)

Contacts 16 and 18 (part 4), contacts 20, 22, 24, 26, and 28 (part 3) and contacts 2, 4, 6, 8, 10, 12, and 14 (part 2), close. Contacts X (part 4), are closed only while the controller is in the STOP position. Close the excitation control switch SW7 (part 4). This action completes the circuit to the excitation contactor K2 closing coil (part 4) and the excitation contactor K2 (part 2), closes and latches, making available the ship's 240-volt d-c power for control and excitation. Excitation contactor K2 will not close unless the controller selected by the control transfer switch is in the STOP position. The circuit to the motor field weakening contactor coil (part 4) is also completed at this time and the K3 relay operates opening the K3 contact (part 2) allowing light excitation to be applied to the motor fields while the controller is in the STOP position. Place the exciter voltmeter and ground detector switch, SW4 (fig. 11-4) in the first position to determine by voltmeter, M9, that the 240-volt d-c supply is available.

Close the engine speed control switch, SW6 (fig. 11-5, part 3) to apply 240-volt d-c power for operation of the engine speed control system. Place the two exciter voltmeter and ground detector transfer switches, SW1 (fig. 11-4), in the first position. In this position the two exciter voltmeters, M2, will indicate the exciter voltages for two of the exciters. Later the switches can be placed in the second position to check the voltages of the other two exciters. Move the pilot house controller clockwise to the first position in the ahead direction of propulsion.

This action closes contacts AH1 and AH2 (fig. 11-5, part 2) to apply light excitation to the fields of the generators in the propulsion service. Contact X (part 4), opens to deenergize the motor field weakening relay K3, and contact K3 (part 2), closes. Excitation to the motor fields is not determined by the setting of the motor field rheostat, RH2. This motor field excitation is held constant throughout the controller range.

Current now flows in the generator and motor armature circuits causing the propeller to rotate slowly in the ahead direction. Moving the controller up to the 11th position progressively accelerates the propeller speed by increasing the generator excitation, the engine speeds remaining at 350 rpm. Moving the controller from the 12th to the 24th position accelerates the propeller speed by increasing the speed of the diesel engines while holding the generator excitation constant. To prevent the exciters from building up the excitation of

the generators with increased speed, the controller inserts blocks of resistance in the exciter field circuits when progressing from the 12th to the 24th controller position. When the maximum rated engine speed of 700 rpm is reached, the output of the system is maximum.

Stopping

To stop the ship while underway in the ahead direction, slowly move the controller handwheel counterclockwise to the STOP position, observing the motor ammeter, M8, in the propulsion circuit. If the controller is moved too rapidly toward the stop position, the motor will tend momentarily to act as a generator, causing the generators to act as motors and hold the engine speed for a time above the speed called for by the controller position. No useful purpose can be gained by bringing the controller too rapidly to the STOP position. When the STOP position is reached, advance the controller gradually step-by-step counterclockwise in the astern direction until the propeller exerts the desired amount of retarding force. When the ship has come to rest, return the controller to the STOP position.

Reversing

When the controller handwheel is turned counterclockwise for astern rotation, the same operating conditions exist as for the corresponding position in the ahead direction, except the current flow is reversed in the excitation circuits of the exciters by contacts AS1 and AS2 (fig. 11-5, part 2), and, hence, a reversal occurs in the motor and generator armature circuits.

To reverse the ship from underway in the ahead direction to underway in the astern direction, follow the same procedures for stopping the ship. Continue advancing the controller in the counterclockwise direction for astern propulsion until the desired propelling speed is obtained. An astern ship speed for this type ship should not exceed 10 knots because of the limitations of the steering gear.

Removing Generator From Propulsion Service

The controller is not necessarily moved to the STOP position to cut a generator in or out of

the propulsion circuit. However, under normal conditions, the controller should be moved to the 11th position so that the engines are operating at the idling speed of 350 rpm. In an extreme emergency a generator can be cut out of the circuit while the engine is above the idling speed because the generators are designed to withstand short circuiting at full rated speed of 700 rpm with no field current on the generator.

If it is necessary to cut out a generator, open control switch SW11, then pause several seconds to allow the generator field current to decay to zero before operating the associated setup switch, SW9, or SW10. This time interval is necessary for the generator field excitation to decrease sufficiently to avoid the possibility of motoring the generator and to reduce the current surges in the propulsion circuit to a minimum.

Placing Generator in Propulsion Service

Before cutting an additional generator in the propulsion circuit, the motor field rheostat, RH2, must be adjusted to the correct setting for the total number of generators to be operated in propulsion service. For example, if two generators are in service and another machine is required in the propulsion loop, set the motor field rheostat at the correct position for the operation of the generators before cutting in the third machine. This action is essential and if not performed will result in greatly overloading the diesel engines, generators, and motor immediately when the third generator is cut in the circuit. The effect of this overloading can be serious. Therefore, always adjust the motor field rheostat, RH2, for the number of generators that are to be used and then cut the generators in the circuit one at a time, as previously explained.

Placing Generator in Auxiliary Power Service

To place a generator in auxiliary power service, turn the setup switch, SW10, of either generator 2 or 3 to the AUXILIARY POWER position. This will connect the generator output to the auxiliary power bus, 8 and 9 (fig. 11-5, part 1). Associated setup switch, SW5, will close contacts 1, 3, 5, 7, 9, 11, and 12 (part 3), bringing the associated diesel engine under the control of the

ELECTRICIAN'S MATE 3 & 2

auxiliary power engine speed transmitter, RH6, which brings the engine speed to 450 rpm, as mentioned previously.

Contacts 13 and 15 (part 2) in the exciter field circuit for the generator selected will also close (contacts 14 and 16 remaining open). Close the generator control switch, SW11, of the generator to be used, which will close contactors K4 and K5. Remember the setup switch, SW10, cannot be moved from the auxiliary power position to the propulsion position unless the generator control switch, SW11, is first turned to the OFF position. Close the auxiliary power control switch, SW2 (part 4), energizing the auxiliary power field contactor, K1, which will close contact, K1 (part 2). The generator voltage may now be adjusted to normal by the auxiliary power rheostat, RH1.

OPERATING RECORDS

A constant check of all machinery and units in operation must be made by the personnel on watch in the machinery spaces. The data obtained by the watchstanders is entered on records referred to as operating records. These records, in addition to ensuring frequent observation of all machinery in operation, provide a basis for analyzing machinery performance.

The A-C/D-C Electric Propulsion Operating Record, NavShips 3647 (fig. 11-7A, B), is used on all surface ships equipped with a-c or d-c electric drive. The record is maintained by the Electrician's Mate standing the throttle watch. Spaces are provided on both the front and the back for data concerning the main propulsion equipment.

The electrical log is a complete daily record (from midnight to midnight) of the operating conditions of the ship's electric propulsion plant. The log sheet must be kept clean and neat. Any corrections or changes to entries for a watch must be made by the person who signs the log for that watch. However, corrections or additions must not be made after the log sheet has been signed by the engineer officer without his permission or direction. The station logs are turned in to the log room every morning for the engineer officer's signature and for filing.

The back of the log is a continuation of the front and also provides spaces for the signatures of the engineer officer and senior Electrician's Mate.

LEGAL RECORDS

The Engineer's Bell Book and the Engineering Log are official legal records. They can be used in any military or civilian court as final proof of any action taken on or by the ship, and as evidence for or against any officer or enlisted man of the ship's crew who may be brought before the court or board.

The Engineer's Bell Book and the Engineering Log must be preserved as a permanent record on board for a three-year period after date of last entry unless they are requested by a naval court or board, or the Navy Department. In such a case, a copy (preferably photostatic) of such sheets that are sent away from the ship are prepared and certified as a true copy by the engineer officer for the ship's files. At the end of the three-year period these records may be destroyed. When a ship is stricken, if either record is less than three years old, it should be forwarded to the nearest Naval Records Management Center.

ENGINEER'S BELL BOOK

The Engineer's Bell Book (NAVSHIPS 3120/1 fig. 11-8) is a record of all bells, signals and orders, and of the time they are received regarding the movement of the ship's propellers. The entries are generally made by the throttlemaster. Whenever the ship is entering port, leaving port, or maneuvering, an assistant should make the entries, thus enabling the throttlemaster to give full attention to the signals, bells, and orders.

Here is a list of instructions for keeping the Engineer's Bell Book:

1. Use a separate sheet for each shaft each date, except on small ships and craft where the keeping of separate sheets for separate shafts is not practicable. All sheets for the same date should be filed together as a single record. (Entries in

Chapter 11 — ELECTRICAL PROPULSION AND CONTROLS

AC/DC ELECTRIC PROPULSION OPERATING RECORD—SURFACE VESSELS ONLY
 NAVSHIPS 3647 (REV. 4-54) ALL PREVIOUS EDITIONS ARE OBSOLETE

INSTRUCTIONS:
 1. INDICATE °F OR °C IN COLUMN HEADINGS FOR ALL TEMPERATURE READINGS.
 2. USE SEPARATE SHEET FOR EACH SHAFT, EXCEPT ON VESSELS WITH MORE THAN TWO GENERATORS OR TWO MOTORS PER SHAFT, IN WHICH CASE USE SHEETS AS REQUIRED.
 3. RETAIN THIS RECORD ON BOARD FOR TWO YEARS AFTER WHICH TIME IT MAY BE DESTROYED IN ACCORDANCE WITH CURRENT DISPOSAL REGULATIONS.

U.S.S. **WETDECK, DE-183** SHAFT **1** GENERATOR **1** MOTORS **AND 1** TIME ZONE **+5** SET CLOCK AHEAD OR BACK _____ MINUTES AT _____ DATE **1 June 19--**

HOUR	GENERATOR NO. 1						GENERATOR NO. 2						MOTOR NO. 1						MOTOR NO. 2						REMARKS							
	RPM	KW	ARM VOLTS	ARM AMPS	FIELD VOLTS	FIELD AMPS	AIR TEMP		RPM	KW	ARM VOLTS	ARM AMPS	FIELD VOLTS	FIELD AMPS	AIR TEMP		RPM	KW	ARM VOLTS	ARM AMPS	FIELD VOLTS	FIELD AMPS	AIR TEMP			RPM	KW	ARM VOLTS	ARM AMPS	FIELD VOLTS	FIELD AMPS	AIR TEMP
						IN	OUT	IN	OUT						IN	OUT							IN	OUT								
0100	110	2200	1800	700	50	80	135	115											1800	50	60	160	120									
0200	110	2200	1800	700	50	80	130	110											1800	50	60	135	115									
0300	110	2200	1800	700	50	80	130	110											1800	50	60	135	115									
0400																																

0000-0400 Routine steaming watch
 Conditions—normal

A. B. Sea - 67M3

SEE REVERSE SIDE

A

AC/DC ELECTRIC PROPULSION OPERATING RECORD—SURFACE VESSELS ONLY
 NAVSHIPS 3647 (REV. 4-54) BACK

HOUR	PROP LOOP AMPS	TOTAL MOTOR FIELD AMPS	GROUND DET. VOLTS			EXCIT. BUS VOLTS	SHAFT NO.			HIGHEST TEMPERATURES				A. C. STATOR		REMARKS	
			+	-	A OR C		COUNTER	RPM	THEY BEAR - F	GEN. NO. 1 BEAR. INO - F	MTR. NO. 1 BEAR. INO - F	GEN. NO. 2 BEAR. INO - F	MTR. NO. 2 BEAR. INO - F	GEN. MTR.	GEN. MTR.		
0100			0	0	0	120	472970	110	115	1	110	2	118			64	60
0200			0	0	0	120	479570	110	115	1	110	2	120			65	60
0300			0	0	0	120	486170	110	115	1	110	2	120			65	60
0400																	

1700-1800
 1800-2000
 2000-2400

CHECKED _____ C. E. M. APPROVED _____ ENGINEER OFFICER, USN.

© U. S. GOVERNMENT PRINTING OFFICE: 1955 O 7-55281

B

Figure 11-7.—A-c/d-c electric propulsion operating record-surface vessels only. NAVSHIPS 36471 A(front), B(back).

77.232



the Bell Book shall be made at the time of receipt of each order.) The records for each throttle control station for each day must begin with a new sheet, and the day's records for all stations must be clipped together and filed as a unit.

2. In column 1, enter the times according to the system used in the Engineering Log.

3. In column 2, enter the signal received. If the signal is transmitted by the engine (motor) order telegraph, use the following symbols:

- Z—stop
- 1/3—ahead one-third speed
- 2/3—ahead two-thirds speed
- I—ahead standard speed
- II—ahead full speed
- III—ahead flank speed

Backing signals for 1/3 and 2/3 speed shall be entered as "B 1/3" and "B 2/3", respectively. Signals for full back and emergency back shall be entered as "BF" and "BEM" respectively. On small ships and craft, using a single sheet for two or more shafts, the above symbols shall be used with an additional preceding symbol "P," "S," or "C" (for port, starboard, or center shaft, respectively) if the signal is directed to other than all shafts.

If the signal is transmitted by the engine revolution telegraph without change in the engine (motor) order telegraph, the number of propeller revolutions signaled shall be entered in column 2. In this case, entries shall not be made in column 3.

4. In column 3, make an entry for each signal received on the engine order telegraph for the propeller corresponding to the engine order telegraph signal. When a signal is received simultaneously on the engine order telegraph and the engine revolution telegraph, make appropriate entries in both column 2 and column 3. The rpm entered in either column 2 or column 3 is, in each case, the propeller rpm ordered and not the propeller rpm resulting from the order. For submarines, however, record resulting propeller rpm when plant condition order is given.

5. In column 4, enter the engine counter reading at the time the change is made. Also, enter the counter reading each hour on the hour. For ships and craft equipped with controllable reversible pitch propellers, record in column 4 the propeller pitch in feet and fractions of feet set in response to a signaled speed change, rather than the shaft counter readings. The entries for astern pitch shall be preceded by the letter "B." Each hour on the hour entries shall be made for counter readings, thus facilitating the calculation of engine miles steamed during those hours when the propeller pitch remains constant at the last value set in response to a signaled order.

6. Before going off duty, the engineer officer of the watch shall sign the Bell Book in the line following the last entry for his watch and the next officer of the watch shall continue the record immediately thereafter. In machinery spaces where an engineer officer of the watch is not stationed, this record shall be signed by the senior petty officer of the watch.

7. Maintain the Bell Book at the station from which the engines are being controlled. When control is shifted, from one station to another station, the last entry in the Bell Book at the station from which control is being shifted shall indicate the time that control was shifted and the first entry in the Bell Book at the station to which control is shifted shall indicate the time when control was taken. The person in charge of the watch station at which the Bell Book is maintained shall sign the Bell Book in the same manner as prescribed for the engineer officer of the watch.

8. Alterations or erasures are not permitted. Correct an entry which is incorrect by drawing a single line through it and making the correct entry on the following line. Such deleted entries shall be initialed by the engineer officer of the watch, senior petty officer, or OOD (in the case of ships and craft equipped with controllable reversible pitch propellers), as appropriate.

9. For ships with automated bell loggers, include the automatic bell logger sheets in the Engineer's Bell Book. Limit manual recording of data to data not recorded by the automatic bell logger. The engineer officer of the watch shall sign the automatic bell logger sheets before going off duty. When the automatic bell logger is out of commission, follow the normal procedure for recording bells in the Engineer's Bell Book.

ELECTRICIAN'S MATE 3 & 2

10. Fill in the top section of the Bell Book as follows:

In spaces 3 and 4, enter the first two letters of ship type and enter remaining letters as appropriate in the next two shaded unnumbered spaces. In spaces 5-7, enter three-digit ship hull number; if hull number consists of four digits, enter the first digit in the shaded unnumbered space. For example:

DD	848	CVS	032	DDGN	1058
----	-----	-----	-----	------	------

In boxes 10-11 consecutively number sheets at each recording station beginning with 01 for the first sheet for each day starting with 0000 local time (time zone used in the Engineering Log).

In box 12, enter last digit of current year. In box 13-14, enter two digits to indicate current month, e.g., 02=February. In box 15, enter the letter designation for time zone used to record time entries. In boxes 16-17, enter two digits for the day of the month. Start a new sheet when the day changes.

In boxes 74-77, enter all shafts for which this sheet applies, i.e., 1, 2, 3, 4, P=Port, S=Starboard, C=Center, and M=Secondary propulsion motor.

In box 78, enter the appropriate code for highest security classification of data entered on this form. T=TOP SECRET; S=SECRET; C=CONFIDENTIAL; U=Unclassified.

Any entry in box 79 indicates special security handling; leave blank unless special instructions are received.

11. When directed to make duplicates of sheets, use Duplicate Engineer's Bell Book (NAVSHIPS 3120/1D) and follow the additional instructions on the back of it. Check forms for completeness and accuracy prior to submission.

ENGINEERING LOG

The Engineering Log NAVSHIPS 3120/2, (not shown) is a midnight-to-midnight daily record of the ship's engineering department. It is a complete daily record, by watches, of important events and data pertaining to the engineering department and the operation of the ship's propulsion plant. The log must show the average hourly speed in revolutions and knots, the total engine miles steamed for the day, and all major speed changes, draft and displacement; fuel, water, and lubricating oil on hand, received and expended; the engines, boilers, and principal auxiliaries in use, and all changes therein. All injuries to personnel occurring within the department and casualties to material assigned to the department, and such other matters as may be specified by competent authority, are entered into the engineering log.

The original entries in the log, neatly prepared in pencil or ink, are the legal record. The remarks must be prepared and signed by the engineering officer of the watch, or day, before leaving his station or being relieved. Any errors must be overlined and initialed by the person preparing the original entries.

The engineer officer must verify the accuracy and completeness of the entries and sign the log daily. The commanding officer must sign the log on the last calendar day of each month, and on the date of relinquishing command.

331

CHAPTER 12

CENTRAL OPERATIONS SYSTEMS

Advances in engineering technology, the use of solid-state devices, and computer circuitry have made it possible to automate shipboard engineering plants. The automation concerns ship control and plant surveillance mainly. Different types of automated engineering plants, or central operations systems, have been installed on Navy surface ships. There will be no attempt here to describe each different system, but instead you will be given a general description of a representative central operations system.

operations system (COS) incorporates major advances in boiler control, turbine control and plant surveillance, and provides direct control of shaft speed and direction from a console located on the bridge of the ship. By means of the bridge throttle control, the OOD has a better feel of the ship and gets faster responses to desired changes. Moreover, fewer watchstanders are needed to operate the engineering plant.

GENERAL DESCRIPTION

The automated engineering plant brings together in one location all the major control functions and indications formerly located throughout the engineering spaces. Such a central

Major units of the central operations system are shown in figure 12-1. The bridge and engine-room consoles control the propulsion plant. Information on plant conditions is provided by instrument displays, audible alarms, indicating lights, meters, and printout typewriters.

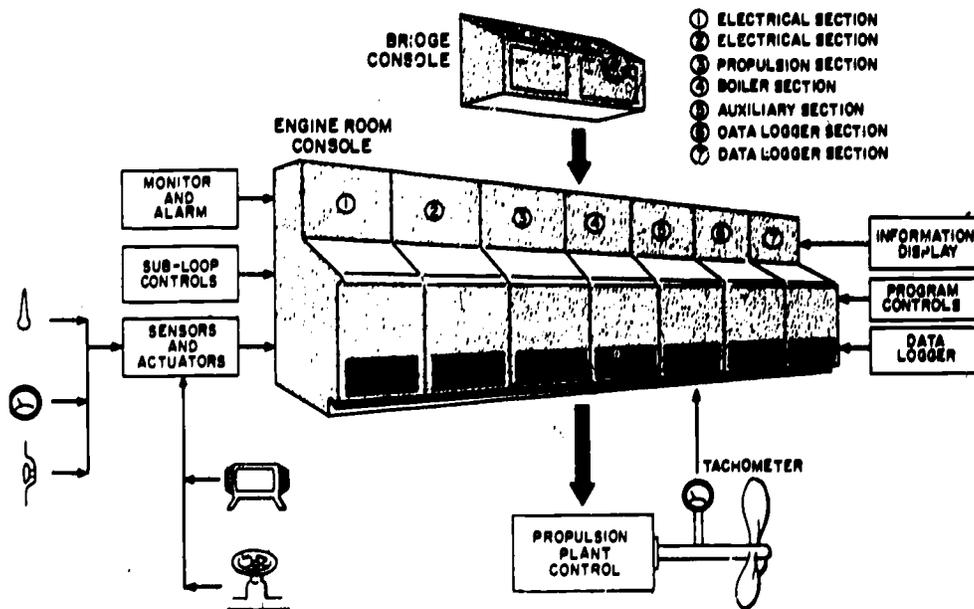



Figure 12-1.— Automatic propulsion system major units.

27.344


ENGINEER ROOM CONSOLE

The engineroom console (fig. 12-2) is the heart of the COS, and is divided into five functional sections: generators, propulsion machinery, boilers, auxiliaries, and data logger.

The desk top of each console section houses the controls and devices which must be within the operator's reach. The vertical surface above a desk top is primarily used for instruments and other visual indicators. Significant readings of plant conditions are displayed on vertical scale,

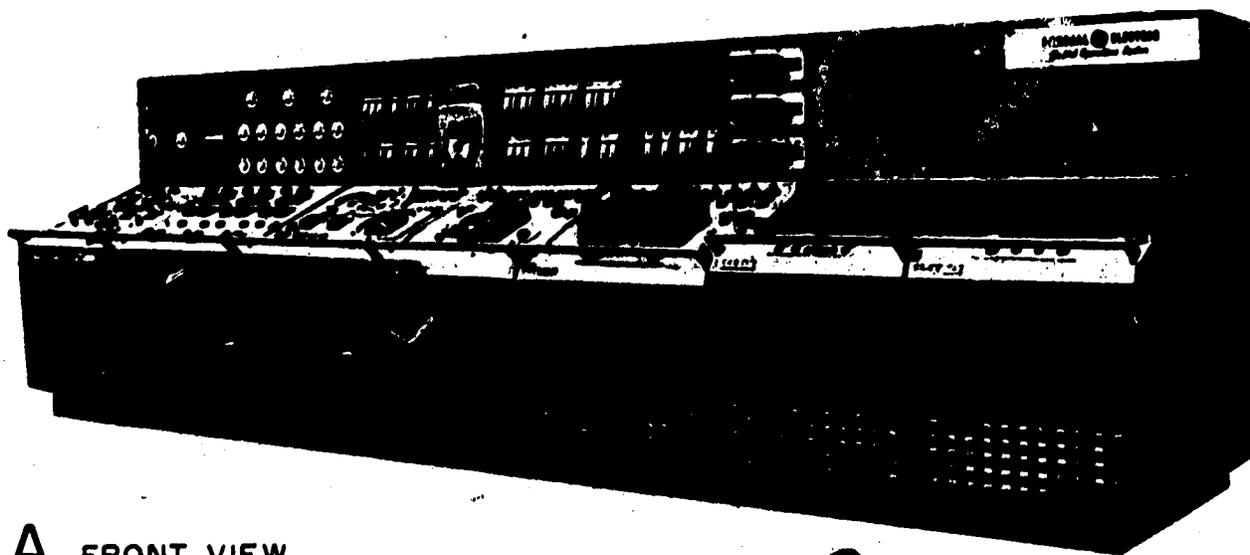

A. FRONT VIEW

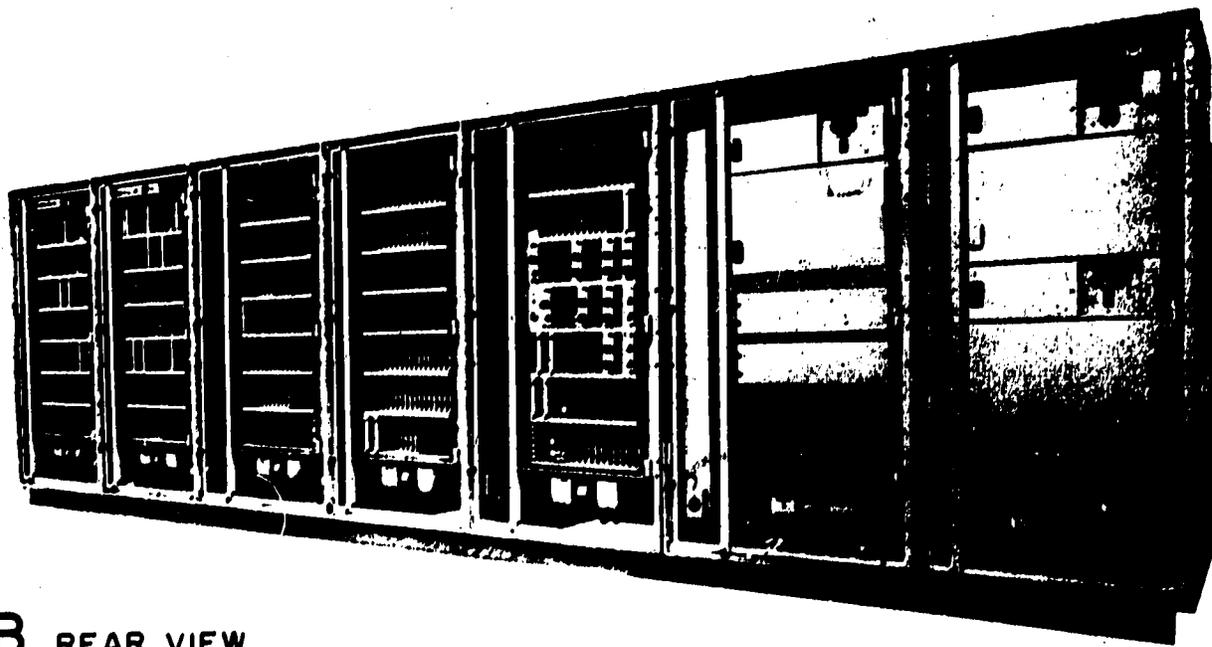

B. REAR VIEW

Figure 12-2. — Engineroom console.

27,345

12-2

333

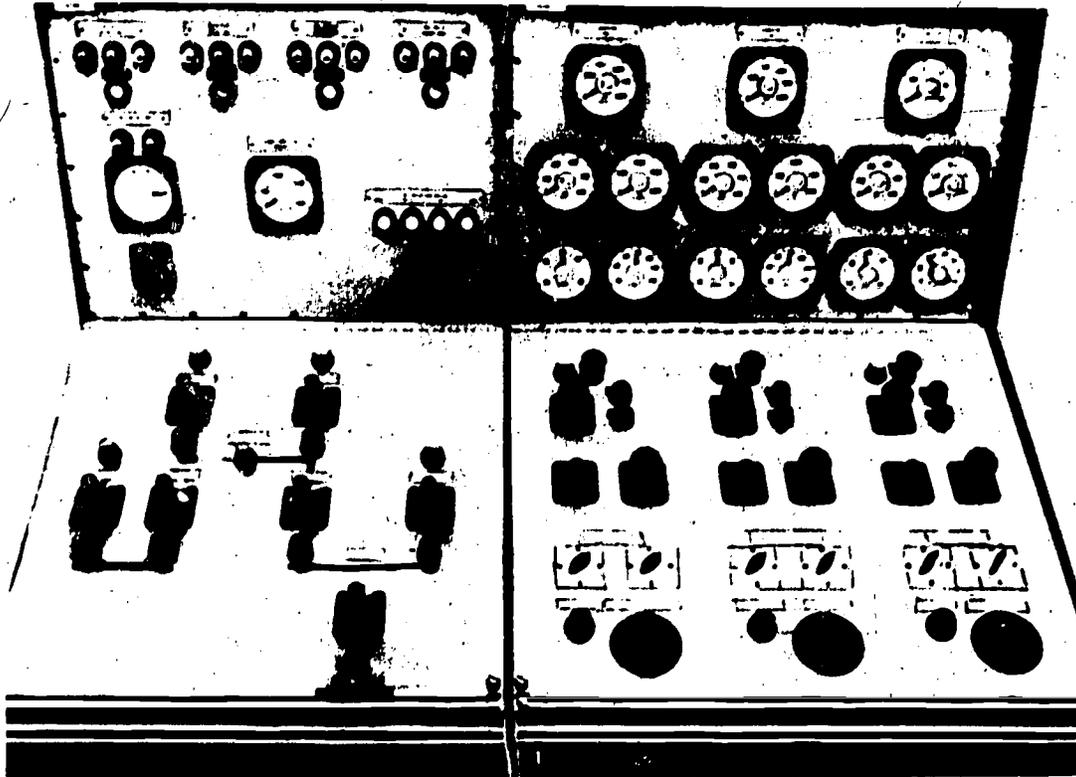


Figure 12-3.—Generator section.

27.346

flush-mounted electric meters. Readings which need to be checked continuously are displayed on digital (direct-reading) meters which the operator connects to the desired sensing device by dialing the "address" of the device through a switching system. These digital meters are called "digital demand display readouts."

In addition to permitting the operator to monitor all important functions and conditions in the plant without leaving his station, the COS automatically and continuously monitors temperatures, pressures, levels, and motor conditions at over 200 points in the plant. If any of these points go over or under their proper operating limits, the system alerts the operator by sounding an alarm, and a printout typewriter records the address, value, time and date in red ink.

Generator Section


The generator section (fig. 12-3) of the engine room console can both monitor and control

the ship's service generators. From this section the operator can adjust the frequency and voltage of each generator. He can monitor the output of each generator, and know the amount of current in each bus tie and in the shore power connection. He can monitor and operate any circuit breaker in the generators, bus ties, and shore power connection. He can test switchboard busses for grounds, and monitor and operate the space heaters in idle generators.

Starting the generators must be done at the generators. To achieve plant automation, many of the auxiliaries that are steam driven on conventional ships have been replaced with electric motor-driven units. Steam-driven auxiliary machines are started by lining up steam, lubricating, and condensate systems at the machines. Once running they can be controlled from the consoles.

Propulsion Section

The propulsion section of the engine room console (fig. 12-4) contains the throttle controls

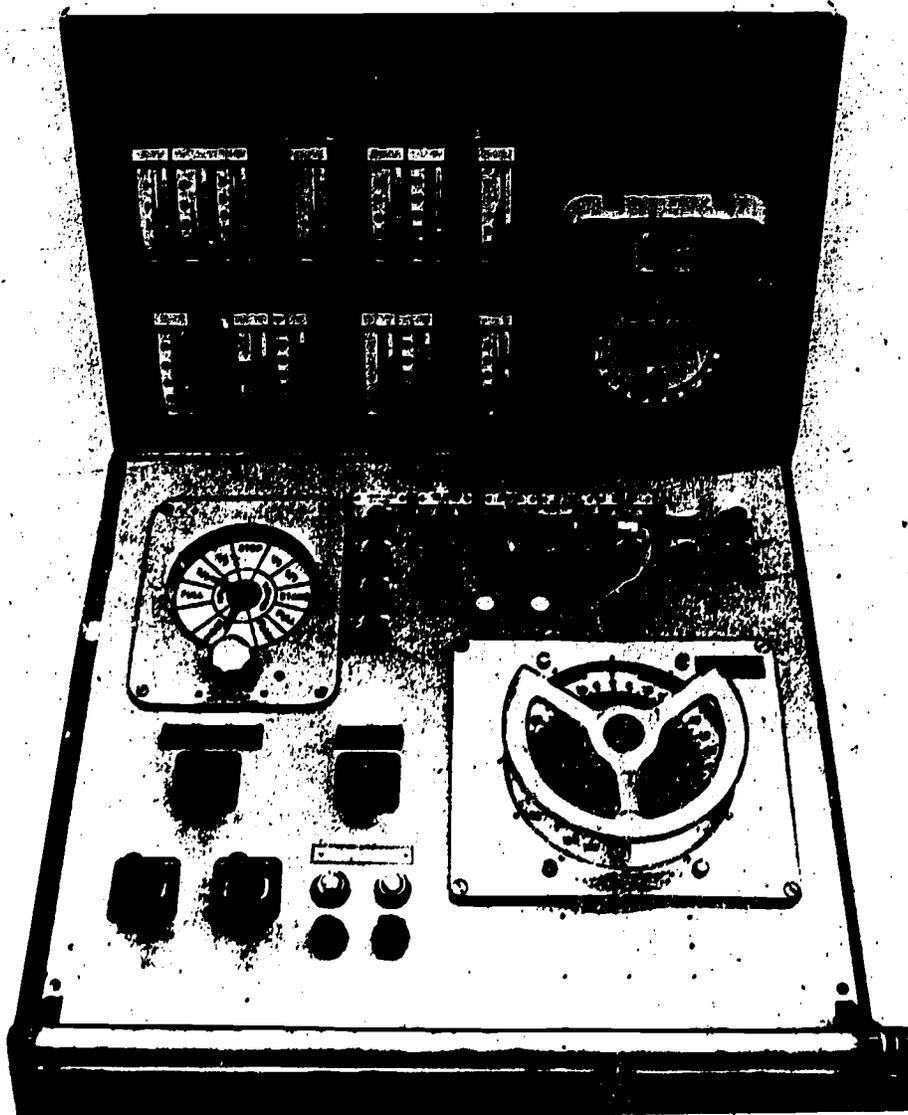

27.347

Figure 12-4. — Propulsion section.

and transfer switches, engine order telegraph, shaft revolution indicator-transmitter, and the necessary gages and indicators for monitoring the operating conditions of the main turbines, reduction gears, and propeller shaft.

The throttle control handwheel controls the position of pilot valves on hydraulic power actuators. The hydraulic power actuators, in turn, open or close the main steam valves to the ahead and astern turbines, thus controlling the speed and direction of the propeller shaft.

An alternate electrical control and a direct mechanical control of the throttle are also provided. Throttle control may also be shifted to the bridge control console, but may be reclaimed by the engineroom personnel at any time.

Boiler Section

The boiler section (fig. 12-5) contains the necessary pressure, temperature, and level indicators and alarms for monitoring boiler

12-835

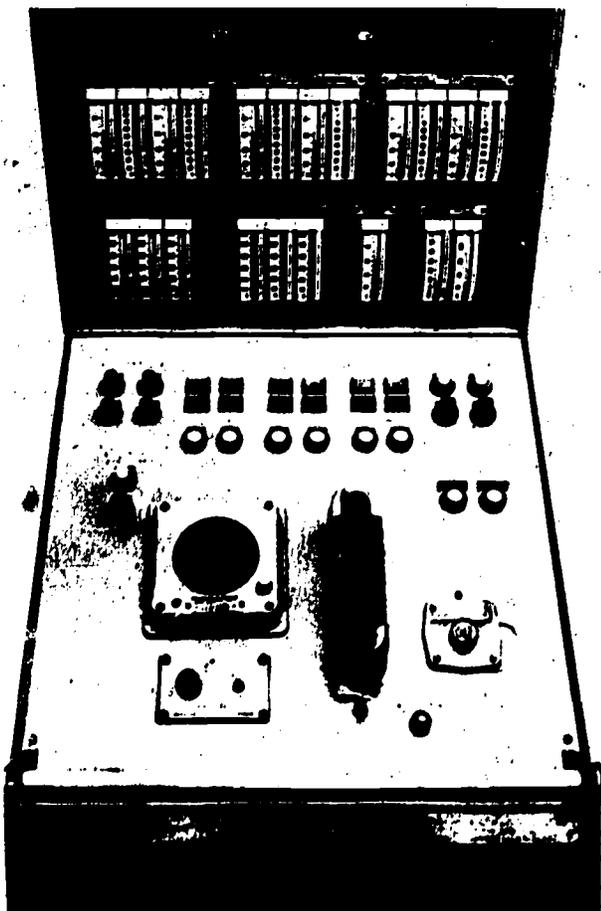


Figure 12-5.—Boiler section.

27.348

operation. This section also mounts an underwater log speed indicator and a sound-powered telephone handset and jack. Depending on the manufacturer of the controls, the automated combustion controls and burner management for the boilers are combined either on one section of the console or on a separate console located in a central engineering operation station.

Auxiliaries Section

The auxiliaries section (fig. 12-6) provides for remote operation (start and stop) of equipment, such as fire pumps, condensate and circulating pumps, and ventilation systems. It also monitors nonvital systems, such as potable water, air conditioning, and refrigeration. This section also

contains three digital demand meters. These meters will display, upon demand, any one or any three simultaneously, of approximately 170 different readings relating to the boilers, fuel and lube oil, main condensers, main turbines, ship's service generators, and auxiliary machinery. To obtain a reading, the operator looks up the number (address) of the function he wishes to read on the function address nameplate located on the data logger section and turns a thumbwheel beside the digital demand meter to this address. The meter will then display the value of the function selected. The same function may be selected and read on all three meters or three different functions may be displayed simultaneously.

Data Logger Section

The data logger section (fig. 12-7) consists of plant performance data logging, alarm scanning, and bell logging equipment. The plant performance

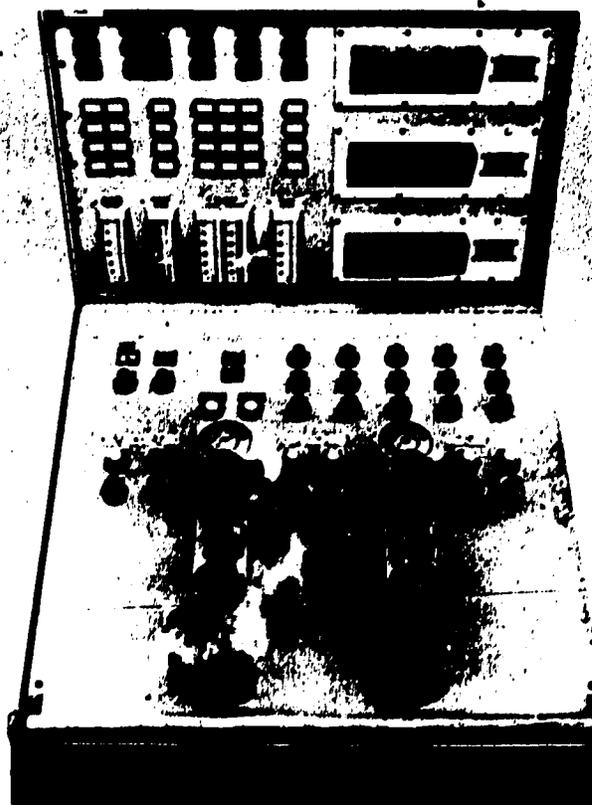


Figure 12-6.—Auxiliaries section.

27.349

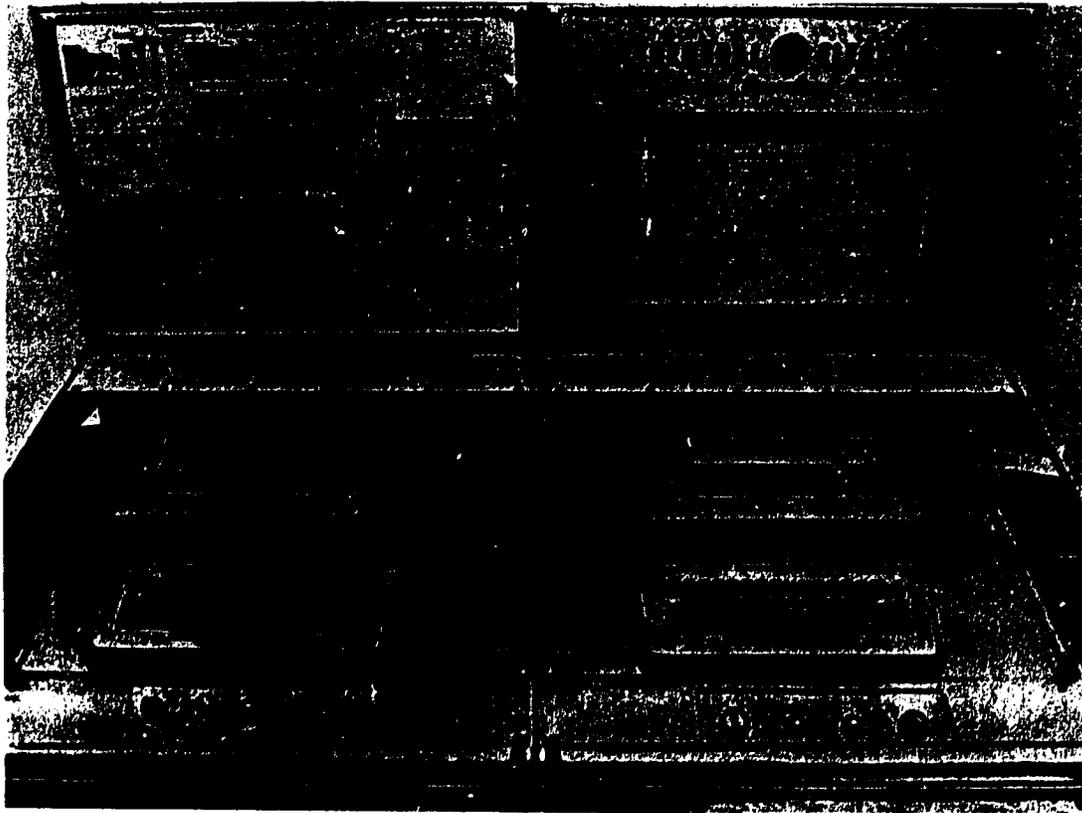


Figure 12-7.— Data logger section.

27.350

logging equipment can be set up to print, either automatically at regular time intervals, with continuous scanning of all sensor points or on demand. Abnormal conditions are printed in red by the performance typewriter.

The bell log typewriter (on the right) records each engine order telegraph (EOT) signal along with time and date, throttle control location (bridge or engineroom) and mode of operation (bridge, engineroom, direct and manual), throttle control wheel position (bridge or engineroom), and shaft rpm.


Under normal operation, any change of 5 rpm in shaft speed will produce a printout; however, there are circuits to allow for 10 rpm changes in bad weather, if the shaft is expected to come out of the water (fig. 12-8).

The bell log typewriter can be used for Performance Data if conditions require overhaul of the opposite typewriter.


The Performance Data Logger (on the left, fig. 12-7) will print out in sequence all functions whether in alarm condition or not, and the printout of alarm conditions will be in RED. In an emergency, either logger can be used for the opposite log. When the alarm conditions are clear, the printout will be in BLACK. If a status request is in effect, the typewriter will continue to print out the remainder of plant status.

On the printout sheet, time and date appear on every 16th line, or unit of 20 numbers; since this part of the system uses an octal computer system and in the octal system, the final digits 8 and 9 are avoided.

If alarm-only printouts are needed for troubleshooting, an alarm log request will give a complete printout in RED of all circuits in alarm condition. Figures 12-9 A and B show a type of BELL LOG and PERFORMANCE LOG

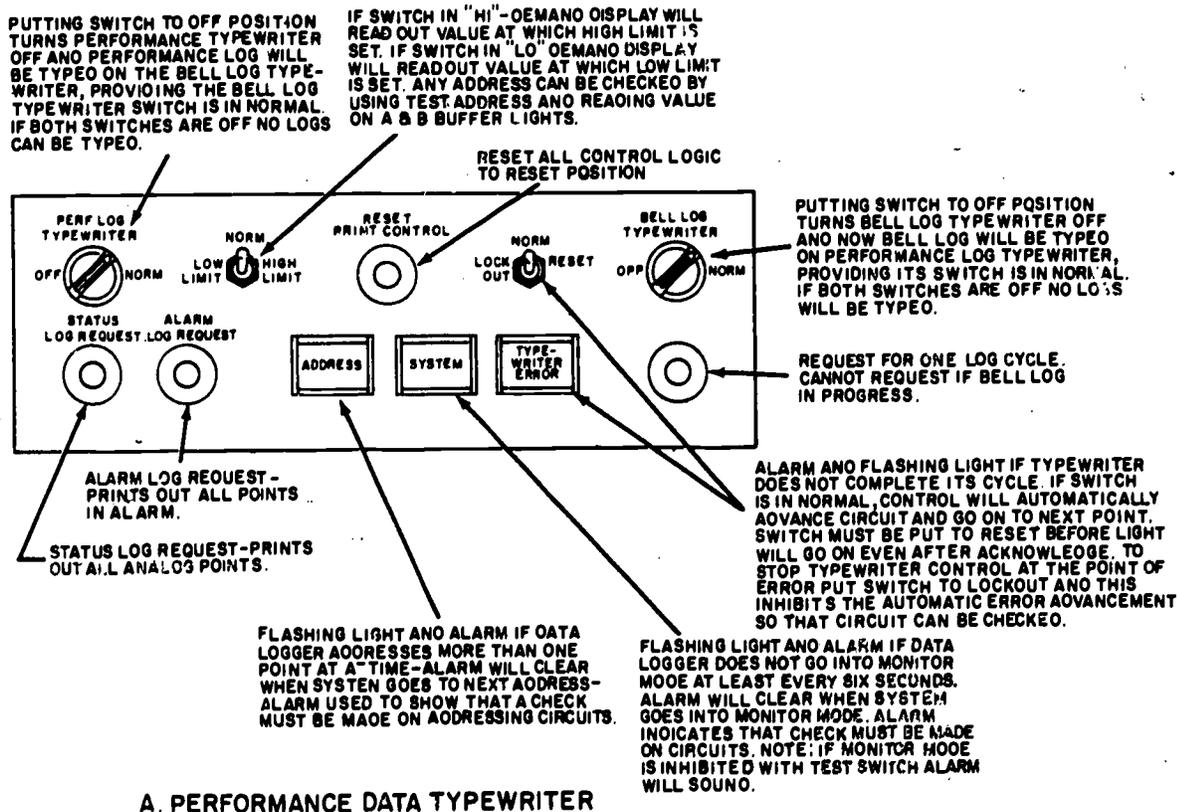

A. PERFORMANCE DATA TYPEWRITER

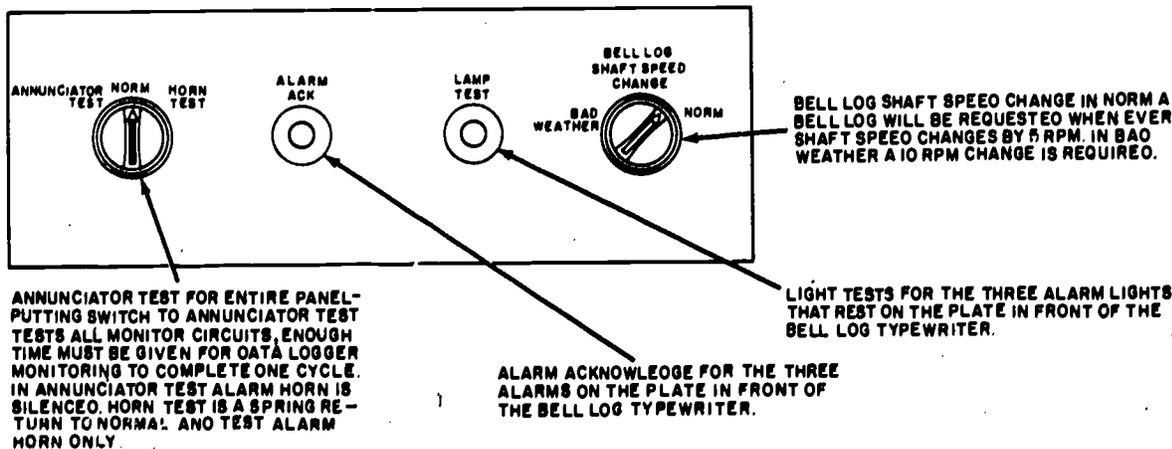

B. BELL LOG TYPEWRITER

Figure 12-8. — Typewriter controls

ELECTRICIAN'S MATE 3 & 2

LEGEND

CONT: THROTTLE CONTROL LOCATION AND MODE
 B-BRIDGE; E-ENGINE ROOM; D-DIRECT; O-OFF (USING MANUAL)
 EOT-BR: BRIDGE ENGINE ORDER TELEGRAPH POSITION
 B0-BRIDGE CON'ROL; B3-FULL AST; B2-2/3 AST; B1-1/3 AST;
 S0-STOP; F1-1/3 AHD; F2-2/3 AHD; F3-STANDARD;
 F4-FULL AHD; F5-FLANK
 EOT-ER: ENGINE ROOM ENGINE ORDER TELEGRAPH POSITION
 SAME AS EOT-BR

TIME	MON	DAY	CONT	EOT-BR	EOT-ER	THRST	RPM	TIME	MON	DAY	CONT	EOT-BR	EOT-ER	THRST	RPM	SMIP
2132.7	11	29	E	S0	S0	000	000									VOYAGE
2133.0	11	29	E	B0	S0	000	001									REMARKS
2133.2	11	29	B	B0	B0	000	001	2134.3	11	29	D	B0	B0	000	000	
2134.5	11	29	B	B0	B0	074	000									
2134.6	11	29	B	B0	B0	099	000									
2135.0	11	29	B	B0	B0	100	016									
2135.1	11	29	B	B0	B0	100	030									
2135.6	11	29	B	B0	B0	100	101	2136.7	11	29	B	B0	B0	100	101	
2137.1	11	29	B	B0	B0	004	101									
2137.3	11	29	B	B0	B0	000	058									
2137.8	11	29	B	B0	B0	000	000	2138.8	11	29	B	B0	B0	000	000	
2142.7	11	29	B	B1	B0	000	000									
2142.8	11	29	B	S0	B0	000	000									
2143.1	11	29	E	S0	S0	000	000	2144.1	11	29	D	S0	S0	000	000	
2200.0	11	29	D	S0	S0	000	000									
2202.3	11	29	O	S0	S0	000	000									
2202.8	11	29	O	S0	S0	000	000	2203.9	11	29	O	S0	S0	000	000	
2205.9	11	29	E	S0	S0	000	000									
2206.2	11	29	E	S0	S0	023	000									
2206.4	11	29	E													

Figure 12-9A. — Typical bell log.

40.186

that can be used with a printout format discussed in this chapter.

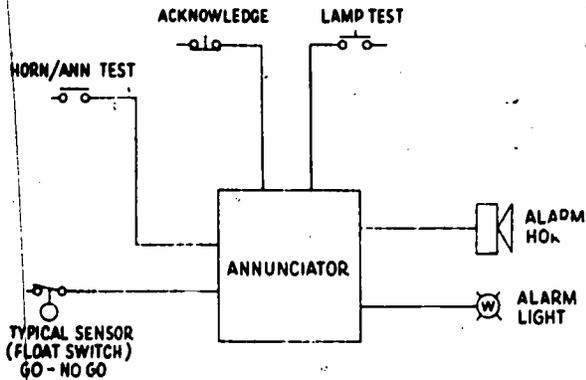


Figure 12-10 shows a basic alarm circuitry that will sound and/or indicate an alarm in a normal setup from a sensor. There are provisions for testing the alarm lights only (lamp test) or sounding an external alarm without affecting the alarm lights (horn/annun. test). The ACKNOWLEDGE pushbutton is used by the console operator to indicate that he is aware of the alarm. When he pushes this button, the blinking stops and the indicator remains lit until the alarm is cleared.

Figure 12-11 shows a basic interconnecting view of how the scanner connects multiple inputs and logs or indicates the information desired.

BRIDGE CONSOLE

40.188
Figure 12-10.— Basic monitor and alarm.

The bridge console (fig. 12-12) provides remote control of the throttle. The throttle


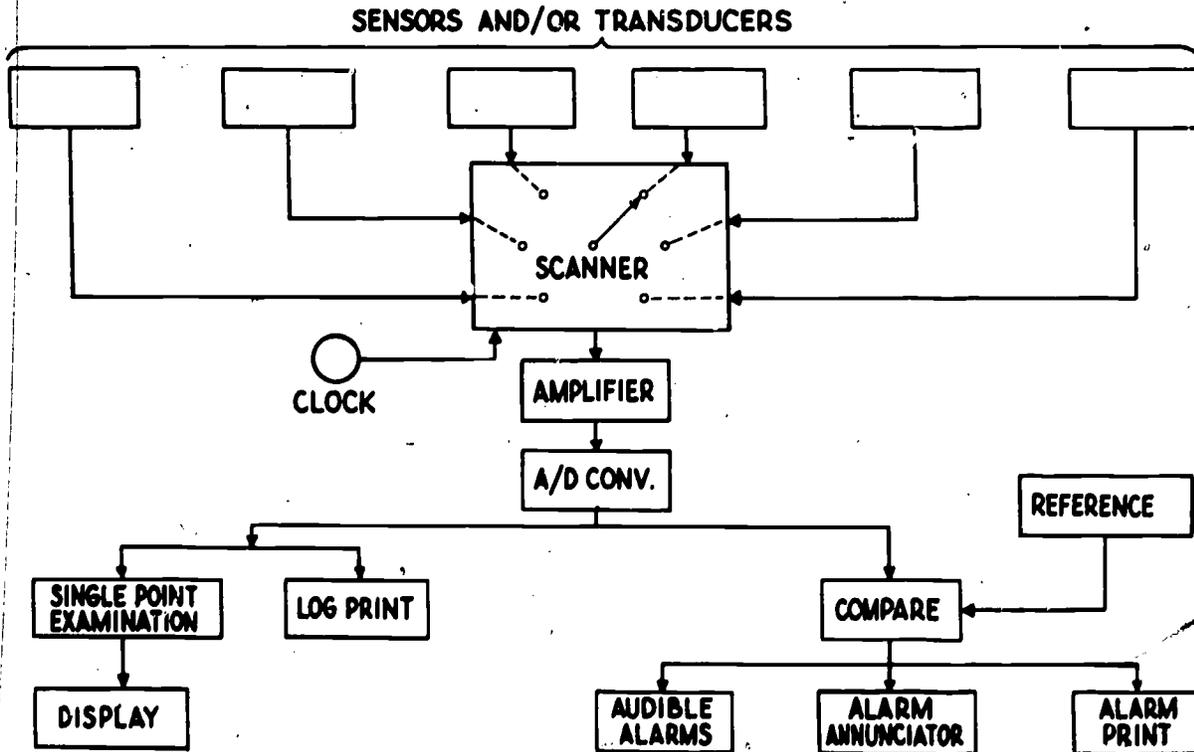


Figure 12-11.— Typical data logger.

40.189


12-11

THROTTLE VALVE POSITION
AHEAD ASTERN

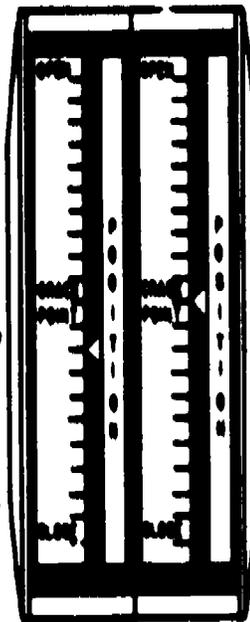

THROTTLE VALVE POSITION INDICATORS
INDICATES RELATIVE OPENING OF THE THROTTLE VALVES, AHEAD AND ASTERN, THE VALVES ARE ELECTRICALLY INTERLOCKED SO THAT ONE VALVE MUST BE CLOSED BEFORE THE OTHER CAN OPEN INDICATES RESPONSE OF THE THROTTLE VALVE, WHICH IS PARTICULARLY USEFUL WITH BRIDGE IN CONTROL

ENGINE ROOM THROTTLE

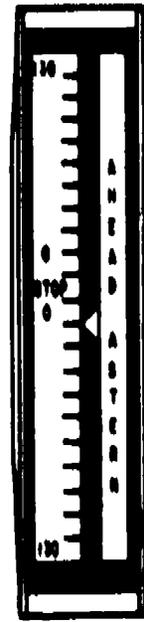

ENGINE ROOM THROTTLE
A POSITION INDICATOR, USED WHEN TRANSFERRING CONTROL TO BRIDGE TO POSITION BRIDGE HANDWHEEL PRIOR TO OPERATING. PUSH BRIDGE ACKNOWLEDGE BUTTON TO EFFECT TRANSFER.

THROTTLE CONTROL POWER OFF (ALARM)
WHEN LIT BRIDGE AND OR ENGINE ROOM CONTROLS ARE INOPERATIVE DUE TO SUPPLY VOLTAGES EITHER ABOVE OR BELOW NORMAL.

THROT CONTROL POWER OFF



SHAFT STOPPED



SHAFT STOPPED (ALARM)
LIGHT COMES ON 64 SECONDS AFTER SHAFT HAS STOPPED. IF SHAFT HAS NOT TURNED IN 128 SECONDS, LIGHT FLASHES AND BUZZER SOUNDS. THIS REMINDS THE BRIDGE TO KEEP SPINNING MAIN ENGINES.

WHEEL OFF STOP (ALARM)
LIGHTS WHEN CONTROL IS IN THE ENGINE ROOM WHEN LIT, BRIDGE HANDWHEEL MUST BE PLACED IN STOP POSITION

WHEEL OFF STOPPED



EOT OFF BRIDGE



EOT OFF BRIDGE (ALARM)
LIGHTS WHEN BRIDGE CONTROL SHAFT RPM AND DIRECTION ARE CONTROLLED BY BRIDGE THROTTLE HANDWHEEL.

PLANT MODE
INDICATES WHEN PLANT MODE SELECTOR SWITCH IS IN THE NORMAL POSITION

NORMAL PLANT MODE



MANEU PLANT MODE



MANEUVERING PLANT MODE
INDICATES THAT PLANT MODE SELECTOR SWITCH IS IN THE MANEUVERING MODE.

BRIDGE IN CONTROL
WHEN THROTTLE CONTROL SWITCH IS IN BRIDGE CONTROL POSITION

BRIDGE IN CONTROL



MACH SPACE IN CONTROL



MACHINERY SPACE IN CONTROL
INDICATES THAT THE THROTTLE CONTROL SWITCH IS IN THE ENGINE ROOM POSITION.

BRIDGE ACKNOWLEDGE (PUSHBUTTON)
AFTER ENGINE ROOM HAS TURNED SELECTOR SWITCH TO BRIDGE, LIGHT COMES ON CONTROL TRANSFER IS EFFECTED BY PRESSING THE ACKNOWLEDGE PUSHBUTTON

BRIDGE ACKNOWLEDGE



BRIDGE CONTROL AVAIL



BRIDGE THROTTLE CONTROL AVAILABLE (LIGHT)
SEE BRIDGE ACKNOWLEDGE

control handwheel and other necessary equipment for control of the propulsion plant are mounted on the left section of the console. The ship's helm and other steering and navigation equipment are mounted on the right section as shown in figure 12-13.

SENSORS

The sensing devices used with the automated controls are in most cases improved versions of detectors already receiving wide usage throughout the fleet. In all cases the manufacturers' technical manuals used with the system give complete installation, operation, and maintenance instructions.

Pressure Sensors

Pressure sensors are used to convert plant pressures to electrical signals for further transmission to the engineroom console. Two of the main types of sensors are the pressure-to-current transmitter and the pressure switch types.

The pressure-to-current transmitter (fig. 12-14) converts the applied pressure to a direct current proportional to the applied pressure. This current can then be applied to a meter (usually a microammeter) for remote indication. The meter is calibrated in the desired scale (psi).

The pressure switch type transmitter finds its application in the alarm circuitry on the engineroom console. At a given high or low pressure, electrical contacts within the switch housing are actuated completing or breaking a circuit and sounding an alarm.

Level Sensors

Three types of level sensors are generally employed throughout the system. Since pressure may be a function of level, two of the devices are the pressure sensors just mentioned; the pressure-to-current for indication and the pressure switch for alarm.

An additional level sensor is used in bilges and unvented tanks. Its operation is similar to that of a float switch.

Temperature Sensors

Temperature is measured by means of resistance temperature detectors (RTD). The RTD


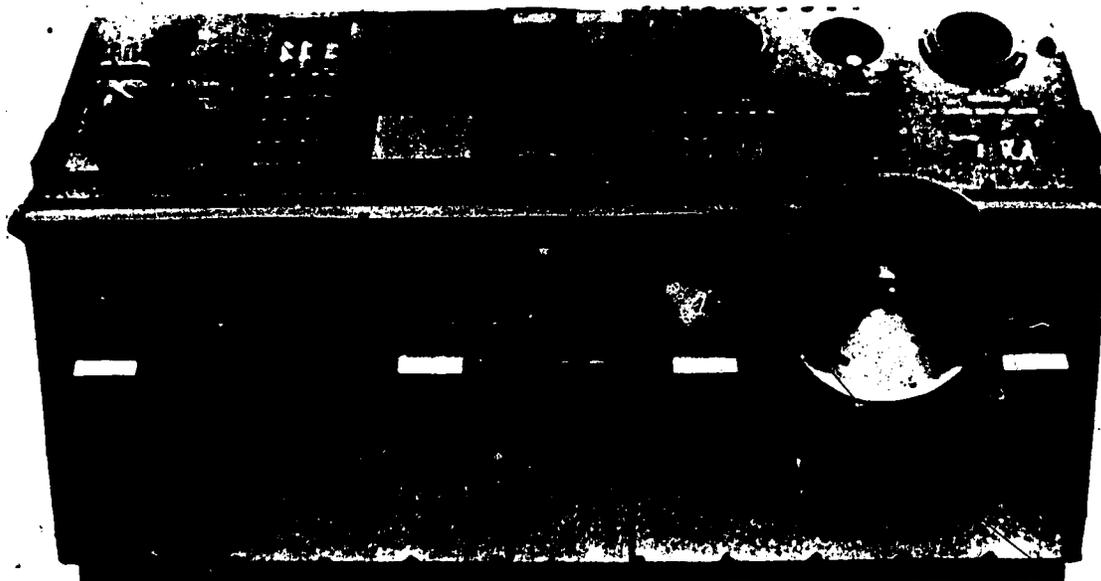


Figure 12-13.— Bridge control.

27.351

12-12 344

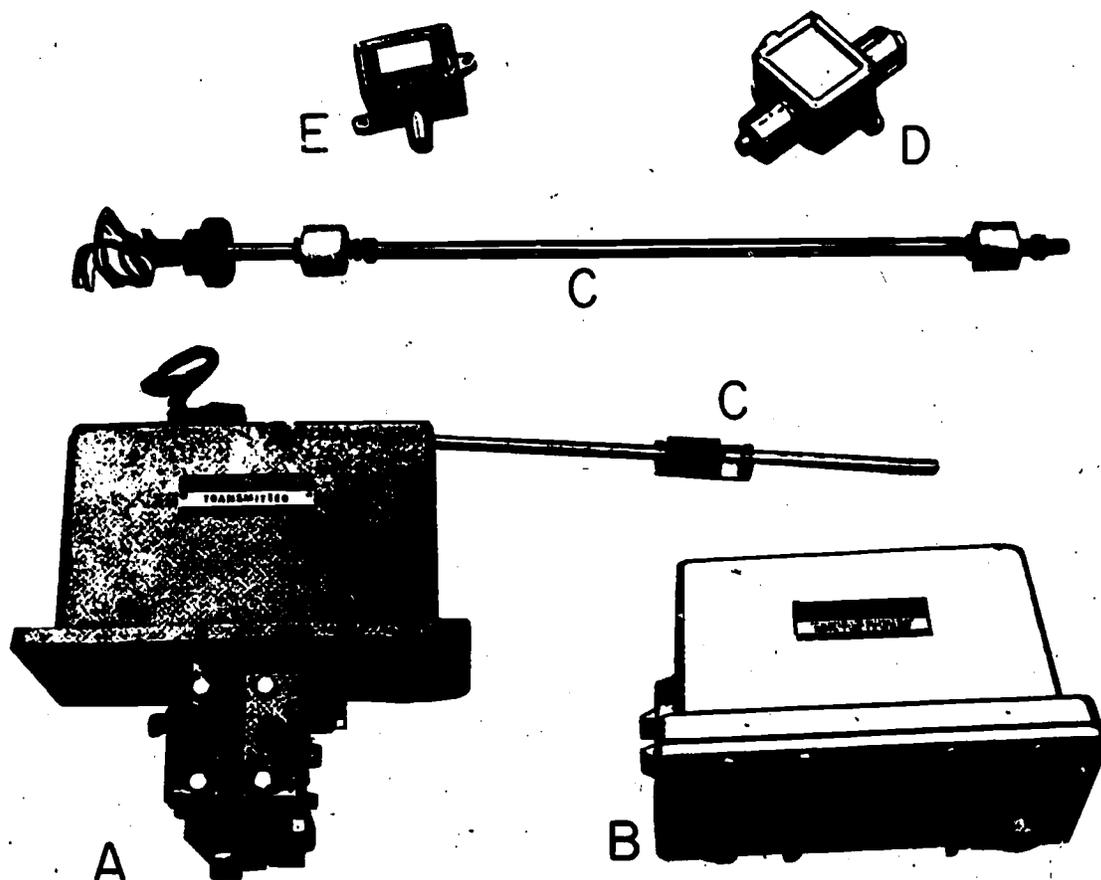

- (A) Differential Pressure-to-Current Transmitter
- (B) Pressure-to-Current Transmitter
- (C) Float Switch
- (D) Differential Pressure Switch
- (E) Pressure Switch

140.92

Figure 12-14.— Pressure and level sensors.

(fig. 12-15) consists of a sensing element encased in a protective tube. Since the electrical resistance of the element changes with temperature changes, the temperature can be determined by measuring the resistance.

For temperatures no greater than 600°F, a nickel resistance element is used. In this case, the RTD is either stem sensitive (the sensing element is located within a few inches of the stem) or tip sensitive (the sensing element

is within the tip of the detector tube which must be pressed against the material being measured). Above 600°F, a platinum element is employed in the stem-sensitive detector.

In most applications the RTD fits into a thermo well which is bored and threaded to receive the detector. When fitted in this way, the unit may be removed from the measured component or piping without disturbing the integrity of the component. Extra protection is also afforded to the element in this manner.

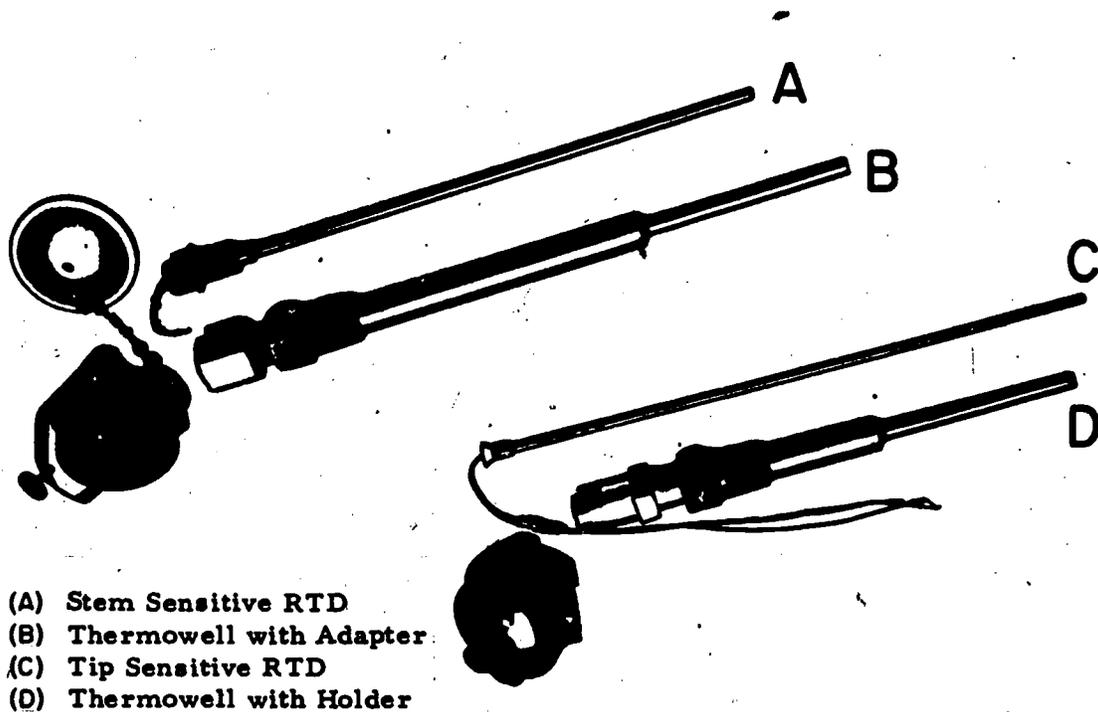


Figure 12-15. — Resistance temperature detectors.

140.93

Figures 12-16 A and B will give an idea of the amount of monitoring used on equipment to ensure normal system operation.

Figure 12-17 shows the simplified diagrams for signal conditioning and adjustments which may be made, if necessary, for proper operation.

Malfunctions in the sensor/detector circuits (shorts, grounds, etc.) will usually be printed out by the typewriter as indicating either full scale rating or a minus condition if a meter is pegged below zero. A sensor malfunction will usually have no immediate effect on normal operation of the rest of the monitoring system.

Synchronous timing generator malfunctions are usually limited to the date/time sensing information and readout with no effect on the throttle control system.

If malfunctions in the throttle control system develop in any control amplifier stage, the


throttle can either be operated by direct electrical controls located on the propulsion section or manually by the ahead or astern handwheel on the front of the console station (fig. 12-18). Direct electrical control will automatically remove the control power from the motor power supply when either the ahead or astern switches are operated.

DATA SCANNER

The DATA SCANNER (fig. 12-19) is the control section for the entire logging system. The functional components of each control module are defined as follows:

SYNCHRONOUS TIMING GENERATOR (22): Provides a 20-kHz signal for normal operation, and selected lower frequencies for troubleshooting the system.

REQUEST (25): Manually operated to select the mode of operation; determines what mode

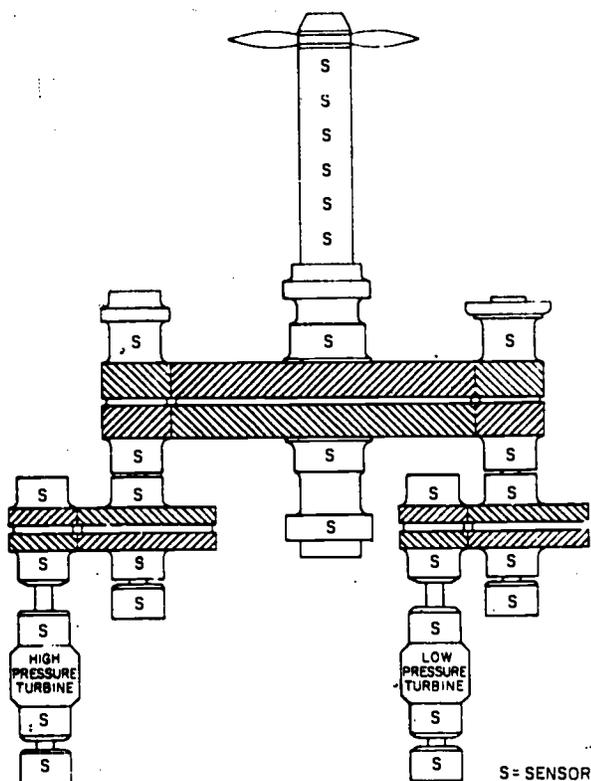

40.192

Figure 12-16A.—Typical main propulsion unit bearing temperature monitor.

(manual operation) bell log, alarm log, status log, or display the system will operate in.

PROGRAM CONTROL (23): Automatically operated; senses and delegates by priority the mode of operation the system will operate in.

POINT DRIVE (26): Controls the sequence of operation of the scanner whether one function or all the functions are to be logged or displayed.

PROGRAM CONTACT (39): Determines when the system will adjust for linearization, scaling, high and low alarm points, isolation amplifier gains.

SCANNER (27): Connects all sensors and actuator information into the system as determined by POINT DRIVE (26).


ISOLATION AMPLIFIER (28): Adjusts all analog inputs to have a required 10-volt output for the A/D CONVERTER.

LIMIT CHECK (34): Compares the binary digital signal input to a preset binary value for alarm conditions and supplies the information to the ALARM LOG for printout.

LINEARIZATION (32): Compensates for the non-linear characteristics between types of RTDs when used on different temperature levels.

SCALE FACTOR (33): Automatically divides by .6 to give a linear output due to a variable input range.

A/D CONVERTER (29): Converts an ANALOG voltage of 0-10 volts to a DIGITAL number

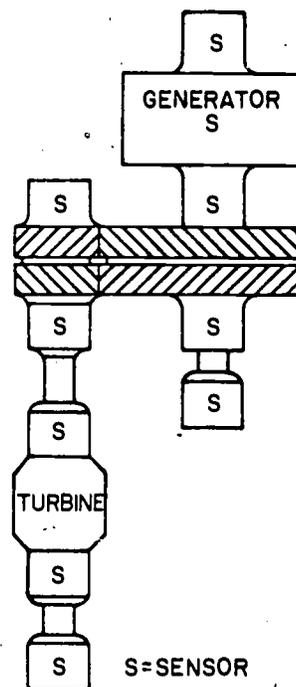

40.193

Figure 12-16B.—Typical turbine generator bearing temperature monitor.



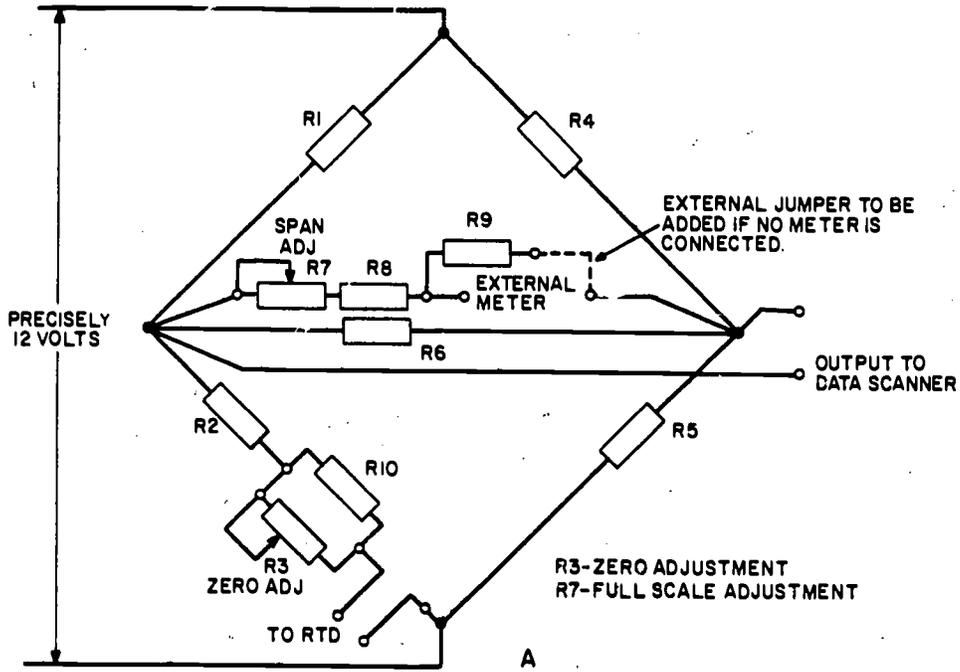


Figure 12-17A. — Typical RTD bridge circuit.

40.194

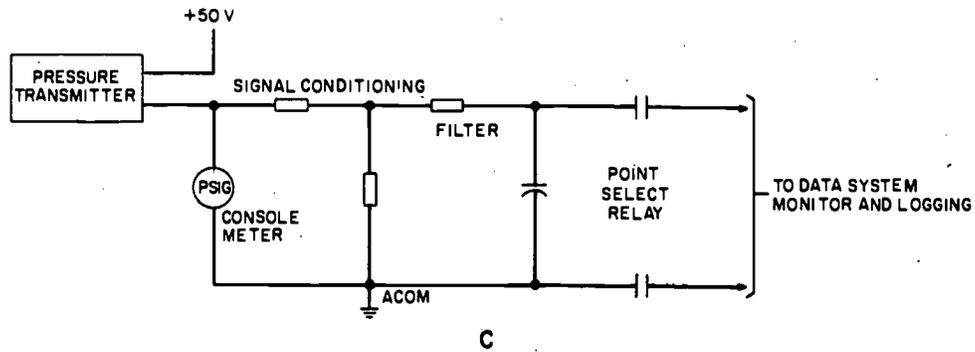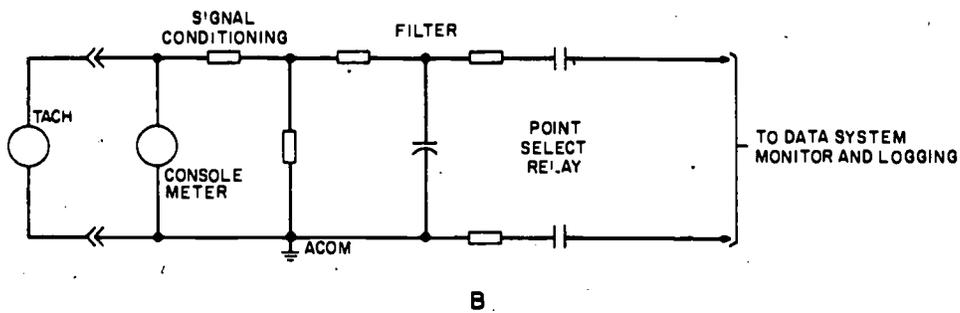

Figures 12-17B and C. — Simplified sensor circuits.

40.195

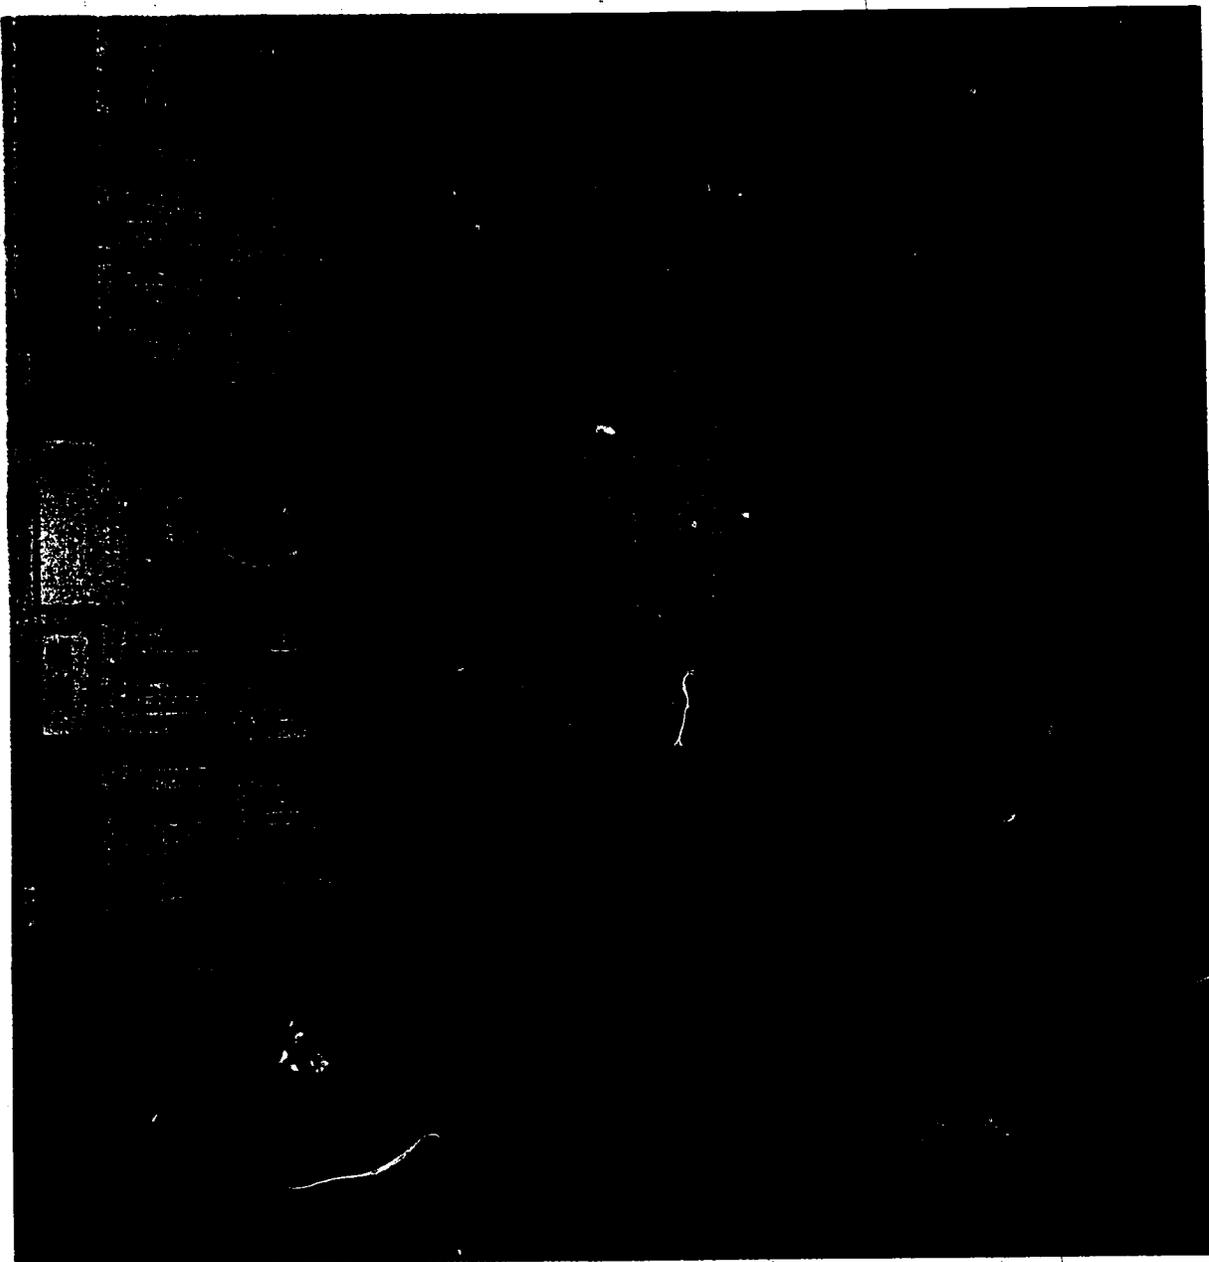


Figure 12-18.— Manual control station.

27.347

12-17 349

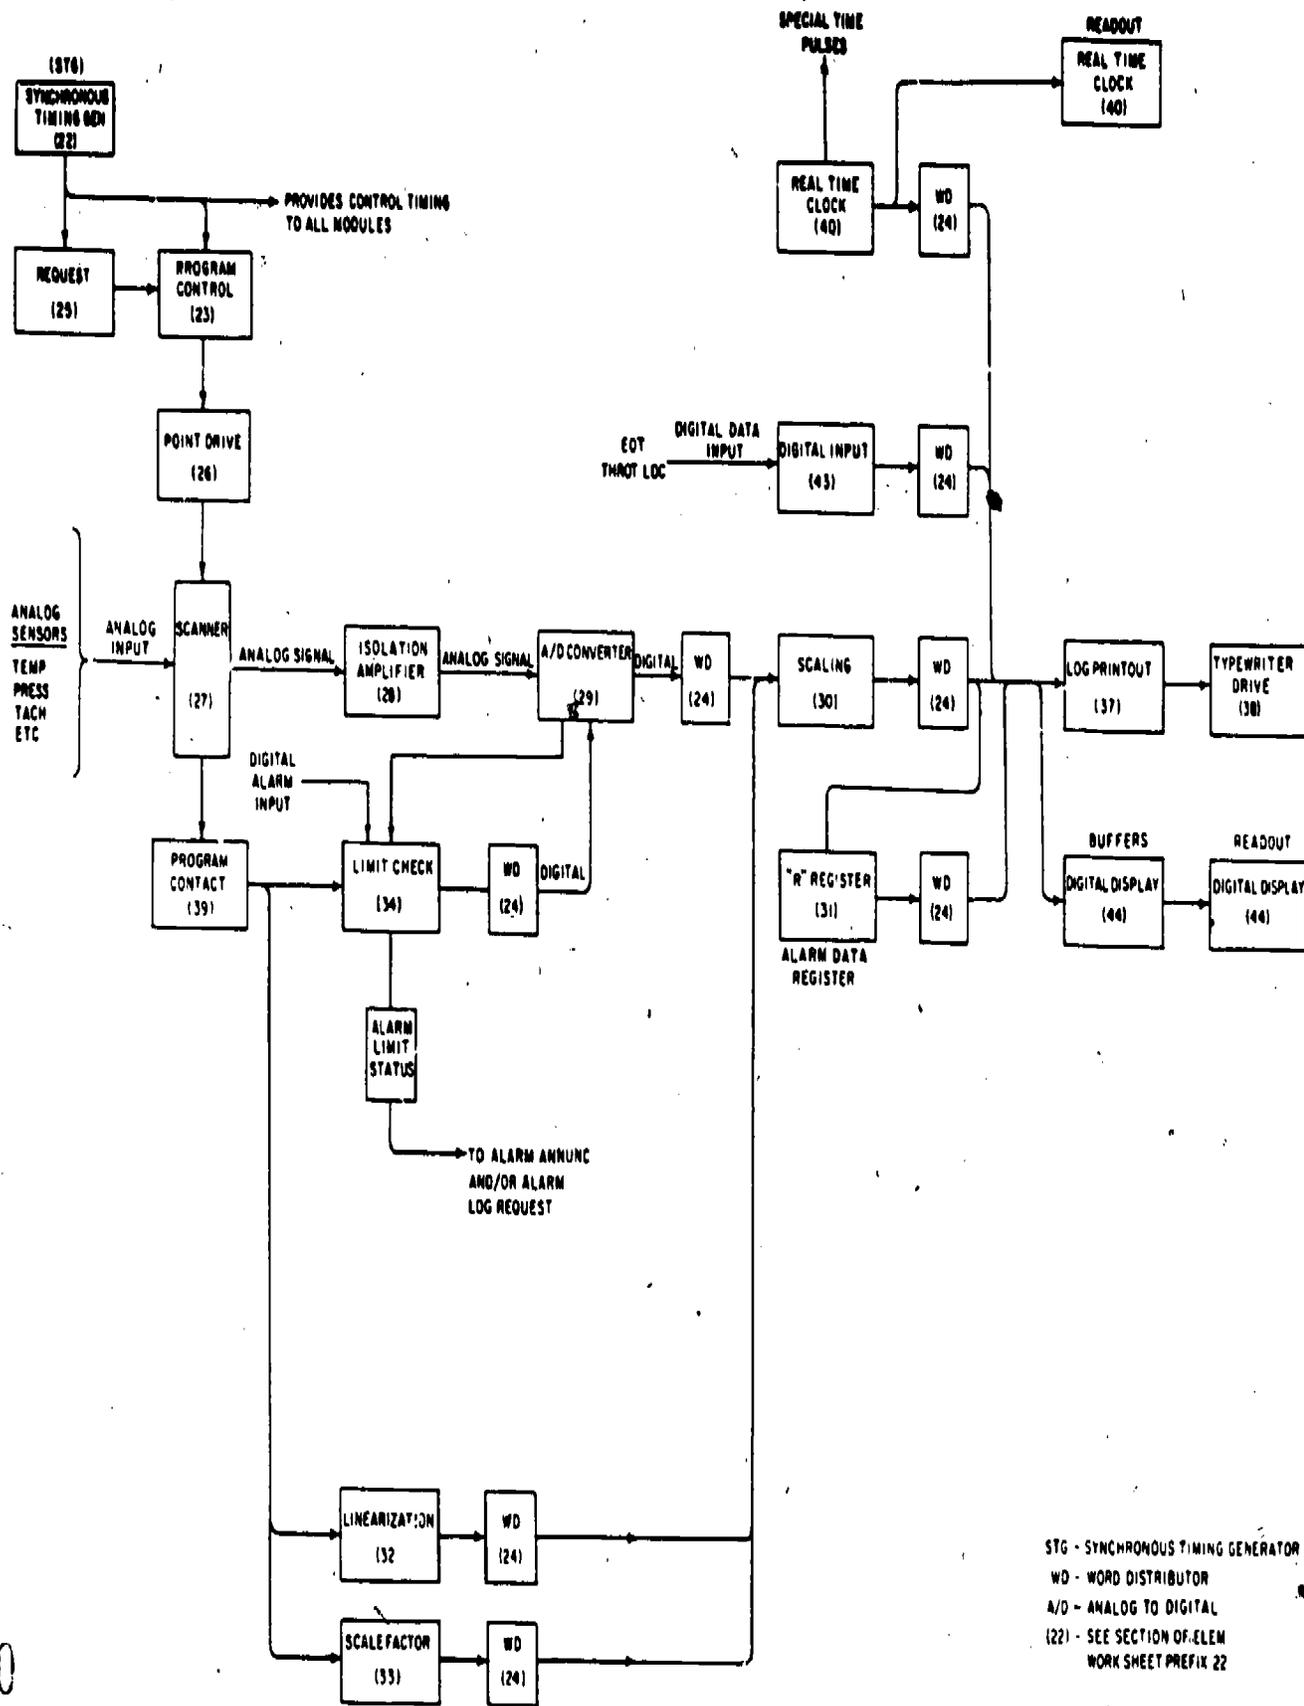


Figure 12-19. -- Block diagram of data scanner system.

12-18

350

351

of 0 to 999 (999 usually being a full-scale reading). If the information is requested and/or the address is in alarm, the A/D CONVERTER then transfers the values via the word distributor (24) to the scaling module (30). If neither of these conditions exists, the scanner executes "branch back" (return to starting point), picks up the next address, and repeats the process.

WORD DISTRIBUTOR (24): Transfers the required information/alarms to the proper modules for logging and/or displays.

SCALING (30): Does the arithmetic necessary for a linear reproduction (0 to 999 DIGITAL) by accepting inputs from the linearization or scale factor modules and whichever address is selected.

REAL TIME CLOCK (40): Develops and supplies time and date for display and printout on both typewriters as needed.

DIGITAL INPUT (43): Takes position of the engine order telegraph switch, throttle control location switch and month/day thumb switches for an input and converts into a DIGITAL source for display and printout.

R REGISTER (31): Stores the alarm information only until the demand for printout or display is requested.

LOG PRINTOUT (37): Contains the counters, controls and storage necessary to process the signal for operation of the typewriter(s).

TYPEWRITER DRIVE (38): Controls the typewriter selection (A or B), character (address) to be typed, interlocking and feedback controls for proper sequence of operation, code translators for printouts and print magnet drive.

DIGITAL DISPLAY (44): Displays any one of 377 addresses when dialed on one or more than one display module.

Information leaving the scaling module for display is sent directly to the digital display buffers and readouts (44) and appears at the readout units on the console face.

The entire operation from pickup of the input address to activation of the printout units requires a time span of 0.0367 milliseconds. The assembly will monitor the complete bank of 273 inputs in approximately 2 seconds

provided there are no requests or alarms conditions presented to the system during that time period.

THROTTLE CONTROL

Figure 12-20 is a block diagram of the throttle control system. A reference input signal may be taken from either bridge or engine-room reference handwheel potentiometer and fed to the system. Negative voltages are used for ahead speeds and positive for astern. The signal then passes through a common operational amplifier where it is inverted and then goes to the common circuit for both the ahead and astern turbines. The functions generators will accept only a signal of given polarity. The ahead function generator accepts positive signals and the astern function generator negative signals. The signal to the function generator is also used as a reference signal for the speed feedback system. This circuit compares the reference and speed feedback signals and uses the algebraic sum as the input to the speed error amplifier.

The signal to the function generator is adjusted within the amplifier so that the output is equivalent to the cube of the input. This is done to change the linear movement of the reference to the nonlinear characteristics of the throttle valve. Inversion once again takes place in the function generator.

The output of the function generator is matched with the speed error signal and the throttle position signal at the summing junction and the algebraic sum is fed to the summing amplifier. Inversion takes place and the output controls the action of the SCR power package.

The SCR power package will cause the pilot motor to drive in either direction depending upon the input. A positive input will cause the pilot motor to drive in a direction to open the throttle valve. A negative input will close the throttle valve. The SCR power package will be inhibited by limit switches if the motor travel exceeds a predetermined point of travel.

The pilot motor positions a pilot valve in the hydraulic actuator which ports oil in the proper direction to correctly position the throttle valve.

A reference signal for throttle position, which is controlled by the pilot motor, is fed back to the summing junction. This section cancels the input signal when the desired valve opening is reached.

During direct electrical control of the throttle, the contacts in the throttle location switch change

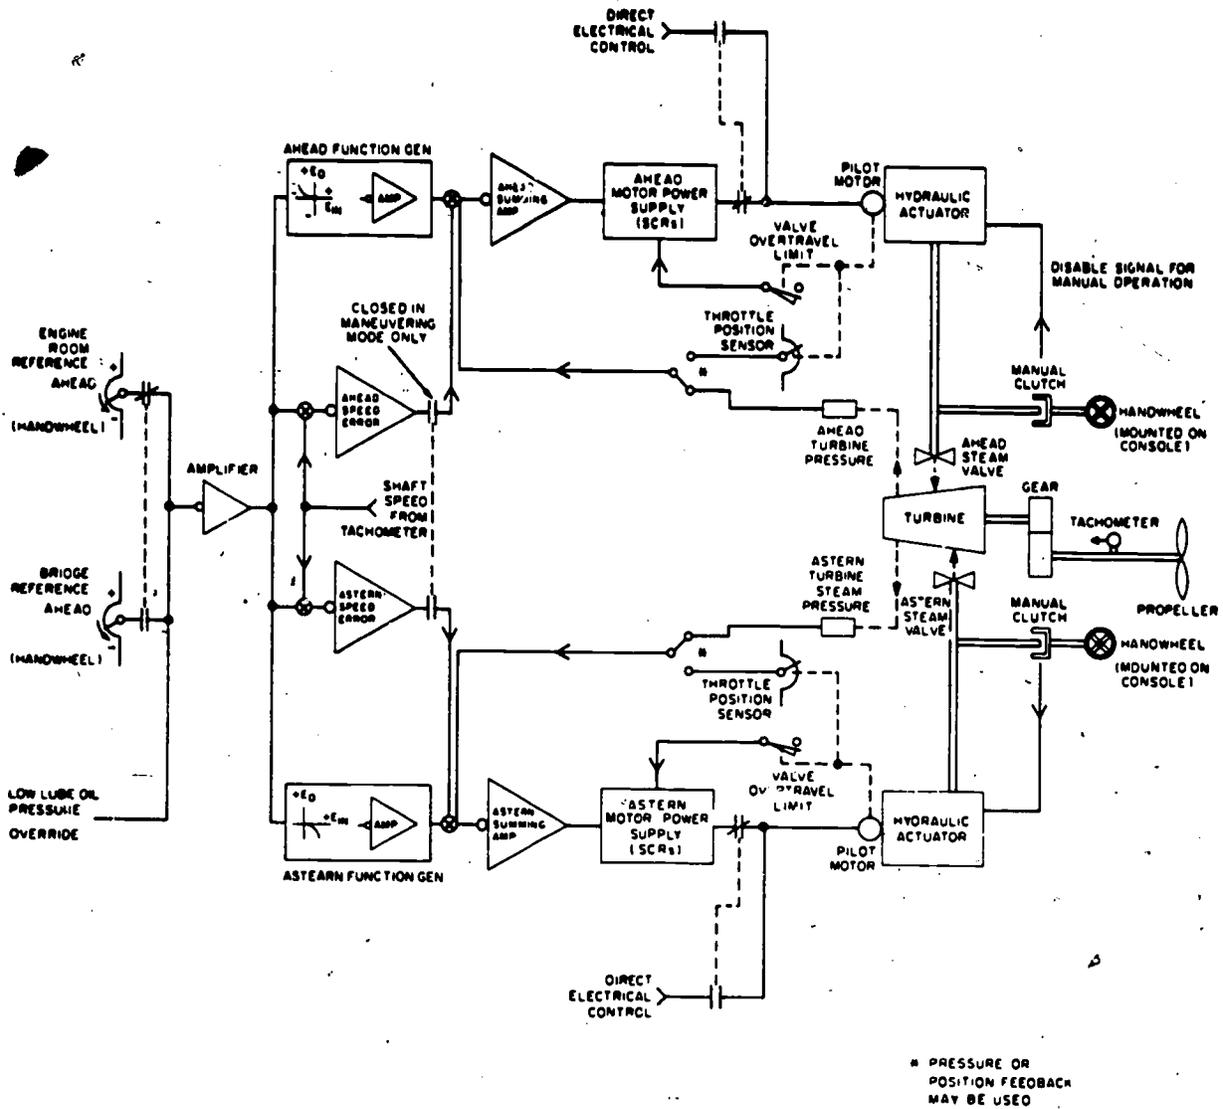


Figure 12-20. — Block diagram of throttle control system.

140.95

the circuitry eliminating the regulated signal and setting up the circuitry for signals from the direct throttle switches.

movement of the handwheel for manual throttle control.

During manual operation, the manual clutch is engaged and the hydraulic actuator is inhibited. In addition, the hydraulic system is vented to prevent a hydraulic lock and permit the

A tachometer generator on the shaft produces an output signal that is fed back as the speed error signal. This signal produces a rapid response from the system when the engineering plant is in the maneuvering mode. Under normal

Chapter 12—CENTRAL OPERATIONS SYSTEMS

steaming conditions the speed feedback signal is not utilized.

The signals for astern throttle movement are handled in the same manner but all the polarities are reversed.

POWER SUPPLIES

The consoles are supplied from the ship's 450-volt power system via a NO-BREAK POWER supply in case the ship's regular supply is lost. The battery supply will last approximately 40 minutes under normal load conditions. The 450-volt ship's power provides three voltages: 28, 50, and 12. The 28-volt supply is used for indicating lights and relays. It has a tolerance of 2 volts and is not as critical as the other supplies. The 50-volt supply is used for throttle

control; its tolerance is within 0.05 volts. The 12-volt supply, plus or minus 0.05 volts, is used with the RTD bridges and sensors. It is as critical as the need for accurate information.

The 50-volt and 12-volt supplies have adjustments to achieve the desired voltages. The 28-volt supply does not have any adjustments.

Incorporated in the alarm circuits is a high and low alarm monitor that will indicate if any power supply goes above or below a preset amount, warning the console operator of the problem.

Strict adherence to maintenance requirements is of paramount importance. Consult the maintenance requirement cards provided by the Planned Maintenance Subsystem and follow the procedures set down in manufacturers' technical manuals.

12-21354

CHAPTER 13

BASIC ELECTRONIC COMPONENTS AND CIRCUITS

Although there have been many attempts to explain the difference between the meanings of the words electricity and electronics, they are more alike than they are different. For instance, electricity and electronics are both concerned with the use of electricity to operate equipment. The field of electricity is usually concerned with its use in magnets, generators, motors, lights, and heaters; the field of electronics with the use of electricity in radio, television, radar, telephone, and other equipment in which electron tubes or transistors are needed.

Current and voltage cannot tell the difference between an electrical circuit and an electronic circuit. The components that have been built into the circuit determine how the current and voltage will be used to make the electrical or electronic equipment work. One of the most recently developed electronic components is the transistor. Transistors are constructed from solid materials, classified as semiconductors, whose resistance to the flow of electrons is between that of insulators and conductors.

Any circuit can be thought of in terms of the effects that resistors, capacitors, and inductors (coils) have on current or voltage. The effect that a resistor has on current or voltage is measured in terms of its resistance; the effect of a capacitor is measured in terms of its capacitance; and the effect of a coil is measured in terms of its inductance. The effect that each of these measurable properties has on current or voltage depends on whether the current is direct or alternating and, if alternating, how fast the current or voltage is changing (frequency).

As an Electrician's Mate, therefore, you will find it necessary to test resistors, capacitors, and inductors in an electrical or electronic circuit by measuring or otherwise determining the effects of their properties on the current or voltage of the circuit.

RESISTOR TESTING

As you already know, current passing through a resistor generates heat. If too much heat is generated, the resistor will be damaged. Wire in the wound resistor will become open, or some of the carbon in the composition resistor will burn away, thus, changing the resistance value; normally, but not always, to zero ohms or infinity.

RESISTOR RATINGS

The current-carrying capacity of a resistor is rated according to the amount of heat it can safely release in a given amount of time. Therefore, a resistor cannot be used in a circuit where current causes heat to build up faster than the resistor can dissipate it.

Since heat is a form of energy, the heat releasing rate of a resistor is measured in energy units called watts. Composition resistors are usually rated at 1/3, 1/2, 1, and 2 watts. The power ratings of wirewound resistors are larger.

RESISTOR TOLERANCES

A resistor will rarely measure the exact number of ohms specified by its label or color codes. The amount it will vary is called tolerance. Resistor tolerance is given as a percentage value which indicates the amount that a resistor may vary above or below its specified value. Standard tolerances for composition resistors are 5, 10, and 20 percent. Wirewound resistors may have tolerances as low as 1 or 2 percent.

Take a 1,000-ohm resistor 10 percent tolerance as an example. Ten percent of 1,000 is 100 ohms. Because of the tolerance factor, this resistor will measure somewhere between 100 ohms above and 100 ohms below the labeled value of 1,000 ohms. The range is from 900 to 1,100 ohms.

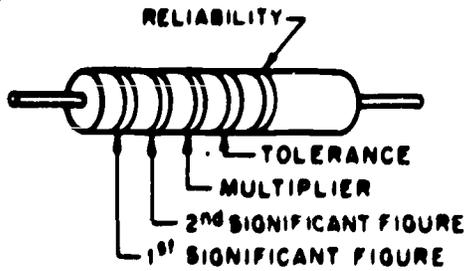


Figure 13-1. — Color Coded Resistor.

Resistor tolerance is not an indication of poor manufacturing. Closer tolerances can be achieved, but at greater expense. A resistor with a 20 percent tolerance will cost less than one with a 10 percent tolerance.

RESISTOR COLOR CODES

Wirewound resistors normally have their value in ohms and tolerance in percent stamped on them. For carbon or composition resistors a color code is used. For several years, resistance values have been coded by three colored bands painted around the body of the resistor. If the tolerance is either five or ten percent, a fourth color band is used; if 20 percent there is no fourth color band. The reliability level is indicated by a fifth color band, but only if the fourth band is shown. Positions of the bands are as shown in figure 13-1.

The first two color bands (1 and 2 of figure 13-1) indicate the first two digits in the colors and numbers table (table 13-1). The third band (3) is the multiplier and indicates the number of zeros that follow the first two digits. The fourth band (4) indicates the tolerance and is either gold or silver, for five or ten percent, respectively. The fifth band (5) indicates the reliability level per 1,000 hours as shown in Table 13-1.

In applying the reliability level table for a resistor color coded brown, the chance of failure will not exceed 1 percent for every 1,000 hours of operation of that resistor. In equipment such as the Navy's complex computers this is very significant. In a piece of equipment containing 10,000 orange fifth-band resistors, it means that no more than one resistor will fail during 1,000 hours of operation. This is very good reliability.

Always use a replacement resistor with a wattage rating equal to or higher than that of the original—never lower. Otherwise, the replacement will burn out. You can use the physical size of the resistor as a guide, if the replacement is the same type (carbon, metalized, or wirewound) as the original. The replacement should be the same physical size or larger.

RESISTORS WITH SPECIAL CHARACTERISTICS

Before proceeding further a brief description of special application resistors will be given. Wirewound resistors generally have a positive temperature coefficient, while carbon resistors have a negative temperature coefficient. In some applications, it is desirable to have a resistor in which resistance will change with ambient temperature change.

Thermistor

A thermistor is a special semiconductor device. It functions as a thermally sensitive resistor whose resistance varies inversely with temperature. Thermistors have large negative temperature coefficients; that is, as the temperature rises, resistance of the thermistors decreases, and as the temperature drops, their resistance increases. The resistance of a thermistor is varied not only by ambient temperature changes but also by heat generated internally by the passage of current.

Since the thermistor is basically a variable resistor, it is usually constructed from semiconductor material of greater resistivity than is used in transistors or semiconductor diodes. Therefore, the thermistor's response to ambient temperature variations does not track equally with that of the transistor semiconductor, so that compensation is achieved only at a few points of correspondence. As a result, the thermistor's greatest usage is in the field of temperature

Table 13-1. — Colors and Numbers

COLOR	SIGNIFICANT FIGURE	DECIMAL MULTIPLIER	RESISTANCE TOLERANCE	RELIABILITY LEVEL PER 1000 HRS.
BLACK	0	1	PERCENT :	
BROWN	1	10	...	1%
RED	2	1001%
ORANGE	3	1,00001%
YELLOW	4	10,000001%
GREEN	5	100,000	...	
BLUE	6	1,000,000	...	
VIOLET	7	10,000,000	...	
GRAY	8	100,000,000	...	
WHITE	9	1,000,000,000	...	
GOLD	...	1	5	
SILVER	...	01	10	
NO COLOR	20	

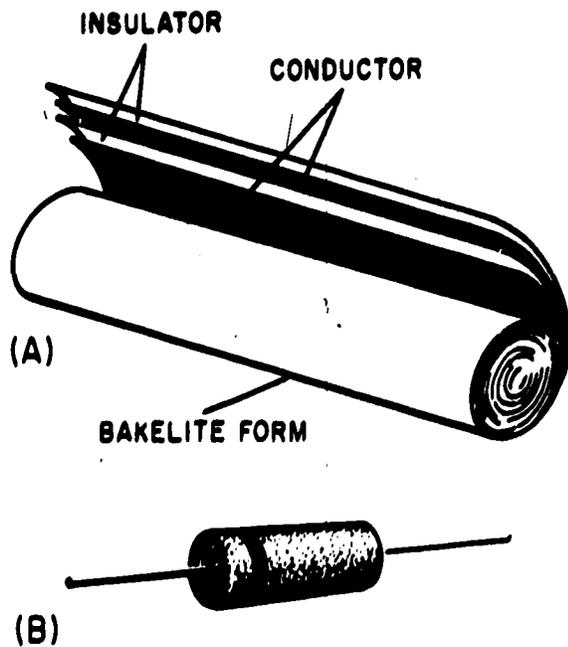


Figure 13-2.— Paper Capacitor.

BE2: 3

controls and measurements and power measuring equipment based on heating effect, such as circuits where there is liable to be a large surge of current when the equipment is first turned on. Although the thermistor is a semiconductor, it does not have intrinsic amplification capability, as does the transistor. It is used in thermal compensating circuits for transistor stabilization.

Varistor

Another type of resistor with special characteristics is the varistor. It may also be called a voltage-dependent resistor. When the voltage across the varistor increases, the resistance of the varistor decreases. Varistors are used in circuits to protect the circuit from high voltage surges. In the event the source voltage increases, the resistance of the varistor will decrease, thus drawing a large current from the source which will lower the voltage available to the remainder of the circuit.

CAPACITOR TESTING

The property of a capacitor that is measurable is known as capacitance, an indication of how many excess electrons the capacitor can store

on one plate to develop a specific charge. By definition, the unit of capacitance is farad. As defined, however, a farad is too large to be a practical unit of measurement. Instead, capacitors are measured in microfarads ($1/10^6$ or one millionth of a farad) or in picofarads ($1/10^{12}$ or one millionth of a millionth of a farad). The symbols for these units are μf and pf , respectively.

FIXED CAPACITORS



Fixed capacitors are constructed in such manner that they possess a fixed value of capacitance which cannot be adjusted. They may be classified according to the type of material used as the dielectric, such as paper, oil, mica, and electrolyte.

A PAPER CAPACITOR is one that uses paper as its dielectric. It consists of flat thin strips of metal foil conductors, separated by the dielectric material. In this capacitor the dielectric used is waxed paper. Paper capacitors usually range in value from about 300 picofarads to about 4 microfarads. Normally, the voltage limit across the plates rarely exceeds 600 volts. Paper capacitors are sealed with wax to prevent the harmful effects of moisture and to prevent corrosion and leakage.

Many different kinds of outer covering are used for paper capacitors, the simplest being a tubular cardboard. Some types of paper capacitors are encased in a mold of very hard plastic; these types are very rugged and may be used over a much wider temperature range than the cardboard-case type. Figure 13-2 (A) shows the construction of a tubular paper capacitor; part (B) shows a completed cardboard encased capacitor.


A MICA CAPACITOR is made of metal foil plates that are separated by sheets of mica, which form the dielectric. The whole assembly is covered in molded plastic. Figure 13-3 (A) shows a cutaway view of a mica capacitor. By molding the capacitor parts into a plastic case, corrosion and damage to the plates and dielectric are prevented in addition to making the capacitor mechanically strong. Various types of terminals are used to connect mica capacitors into circuits; these are also molded into the plastic case.

Mica is an excellent dielectric and will withstand higher voltages than paper without allowing arcing between the plates. Common values of mica capacitors range from approximately 50 picofarads to about 0.02 microfarad. Some typical mica capacitors are shown in figure 13-3 (B).

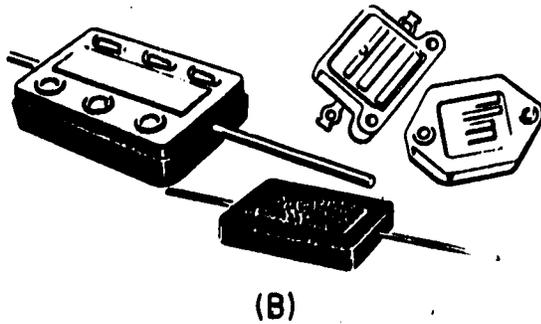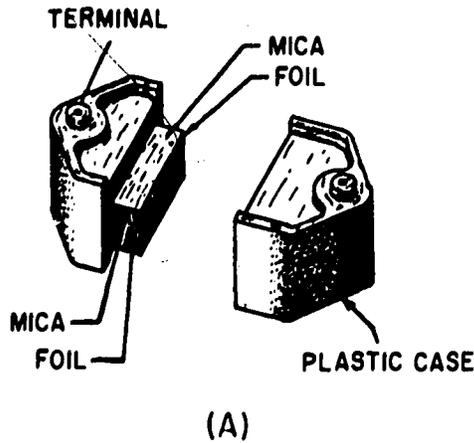

BE214
Figure 13-3.— Typical Mica Capacitors.

A CERAMIC CAPACITOR is so named because of the use of ceramic dielectrics. One type of ceramic capacitor uses a hollow ceramic cylinder as both the form on which to construct the capacitor and as the dielectric material. The plates consist of thin films of metal deposited on the ceramic cylinder.


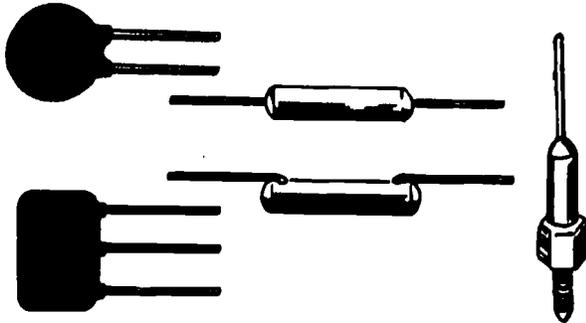


BE215
Figure 13-4.— Ceramic Capacitors.

A second type of ceramic capacitor is manufactured in the shape of a disk. After leads are attached to each side of the capacitor, the capacitor is completely covered with an insulating moisture-proof coating. Ceramic capacitors usually range in value between 1 picofarad and 0.01 microfarad and may be used with voltages as high as 30,000 volts. Typical capacitors are shown in figure 13-4.

ELECTROLYTIC CAPACITORS are used where a large amount of capacitance is required. As the name implies, electrolytic capacitors contain an electrolyte. This electrolyte can be in the form of either a liquid (wet electrolytic capacitor) or a paste (dry electrolytic capacitor). Wet electrolytic capacitors are no longer in popular use due to the care needed to prevent spilling of the electrolyte.

Dry electrolytic capacitors consist essentially of two metal plates between which is placed the electrolyte. In most cases the capacitor is housed in a cylindrical aluminum container which acts as the negative terminal of the capacitor (fig. 13-5). The positive terminal (or terminals if the capacitor is of the multisection type) is in the form of a lug on the bottom end of the

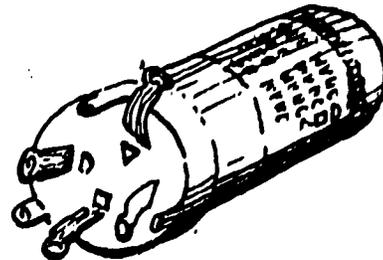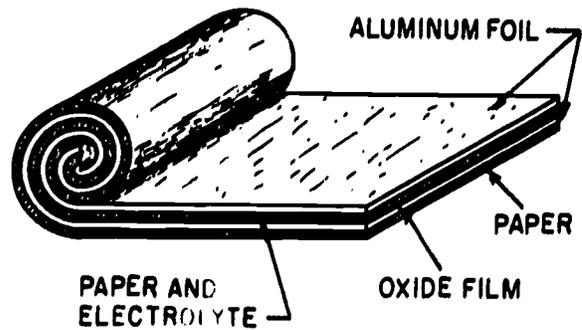

BE216
Figure 13-5.— Construction of an Electrolytic Capacitor.

353

container. The size and voltage rating of the capacitor is generally printed on the side of the aluminum case.

An example of a multisection type of electrolytic capacitor is depicted in figure 13-5. The cylindrical aluminum container will normally enclose four electrolytic capacitors into one can. Each section of the capacitor is electrically independent of the other sections and one section may be defective while the other sections are still good. The can is the common negative connection with separate terminals for the positive connections identified by an embossed mark as shown in figure 13-5. The common identifying marks on electrolytic capacitors are the half moon, triangle, square, and no identifying mark. By looking at the bottom of the container and the identifying sheet pasted to the side of the container, the technician can easily identify each section.

Internally, the electrolytic capacitor is constructed similarly to the paper capacitor. The positive plate consists of aluminum foil covered with an extremely thin film of oxide which is formed by an electrochemical process. This thin oxide film acts as the dielectric of the capacitor. Next to, and in contact with the oxide, is placed a strip of paper or gauze which has been impregnated with a paste-like electrolyte. The electrolyte acts as the negative plate of the capacitor. A second strip of aluminum foil is then placed against the electrolyte to provide electrical contact to the negative electrode (electrolyte). When the three layers are in place they are rolled up into a cylinder as shown in figure 13-5.

Electrolytic capacitors have two primary disadvantages in that they are POLARIZED, and they have a LOW LEAKAGE RESISTANCE. Should the positive plate be accidentally connected to the negative terminal of the source, the thin oxide film dielectric will dissolve and the capacitor will become a conductor (i. e., it will short). The polarity of the terminals is normally marked on the case of the capacitor. Since electrolytic capacitors are polarity sensitive, their use is ordinarily restricted to d-c circuits or circuits where a small a-c voltage is superimposed on a d-c voltage. Special electrolytic capacitors are available for certain a-c applications, such as motor starting capacitors. Dry electrolytic capacitors vary in size from about 4

microfarads to several thousand microfarads, and have a voltage limit of approximately 500 volts.

The type of dielectric used and its thickness govern the amount of voltage that can safely be applied to a capacitor. If the voltage applied to a capacitor is high enough to cause the atoms of the dielectric material to become ionized, an arc over will take place between the plates. If the capacitor is not self-healing, its effectiveness will be impaired. The maximum safe voltage of a capacitor is called its WORKING VOLTAGE and is indicated on the body of the capacitor. The working voltage of a capacitor is determined by the type and thickness of the dielectric. If the thickness of the dielectric is increased, the distance between the plates is also increased and the working voltage will be increased. Any change in the distance between the plates will cause a change in the capacitance of a capacitor. Because of the possibility of voltage surges (brief high amplitude pulses) a margin of safety should be allowed between the circuit voltage and the working voltage of a capacitor. The working voltage should always be higher than the maximum circuit voltage. Caution: Voltages higher than the working voltages may cause the capacitor to explode.

CAPACITOR COLOR CODING

Many capacitors have their value printed on them, but some use a color-coded system. The color code is the same as that for resistors, but the methods of marking the capacitors differ. The method for fixed mica capacitors is shown in figure 13-6.

A black dot in the upper left corner signifies that the capacitor has a mica dielectric. The center dot in the upper row indicates the first significant figure, and the upper right dot indicates the second significant figure of the capacitance value in picofarads (pf). The right dot in the lower row indicates the decimal multiplier or number of zeros to be added to the right of the two significant figures. The center dot (lower row) specifies the tolerance, which is the possible deviation of the actual capacitor value from that given by its dot markings. The left dot on the lower row deals with the temperature coefficient and applications. As an example, take a capacitor with upper row dots colored black, red, and green (reading from left to right according to the directional indicator). This is a mica capacitor; the significant figures are 2 and 5. Suppose

COLOR	CAPACITANCE		TOLERANCE	CHARACTERISTIC
	SIGNIFICANT FIGURE	DECIMAL MULTIPLIER		
BLACK	0	1	20 PERCENT	A
BROWN	1	10	2 PERCENT	B
RED	2	100		C
ORANGE	3	1,000		D
YELLOW	4			E
GREEN	5			F
BLUE	6			G
VIOLET	7			
GRAY	8			
WHITE	9			
GOLD		0.1	5 PERCENT	
SILVER		0.01	10 PERCENT	

BLACK DOT IDENTIFIES MICA CAPACITOR

CHARACTERISTICS

- A - ORDINARY MICA BYPASS
- B - SAME AS A-LOW LOSS CASE
- C - BYPASS OR SILVER MICA (± 200 PARTS/MILLION/C)
- D - SILVER MICA (± 100 PARTS/MILLION/C)
- E - SILVER MICA (0 TO +100 PARTS/MILLION/C)
- F - SILVER MICA (0 TO +50 PARTS/MILLION/C)
- G - SILVER MICA (0 TO -50 PARTS/MILLION/C)

Figure 13-6.— Color Code for Fixed Mica Capacitors.

20.376(71)

the lower row of dots (reading from right to left) are brown, red, and red. The brown dot requires the addition of one zero to the value of 25, resulting in 250 pf. The red center dot indicates that the actual capacitor value may vary from 250 pf by plus or minus 2 percent. The left red dot means a bypass or silver mica capacitor. Some mica capacitors have only three dots, indicating the first and second significant figures and the multiplier. Their tolerance is 20 percent and their rating is 500 volts. Try reading some of the capacitor values you see in electronic devices when they are exposed to view. Learning to read capacitor values is a matter of practice, much like reading resistor values.

CIRCUIT TESTING

Capacitance, inductance, and resistance are measured precisely by alternating current bridges. These bridges are composed of capacitors, inductors, and resistors in a wide variety of combinations. The bridges operate on the principle of the Wheatstone bridge, in which an unknown resistance is balanced against known resistances. The unknown resistance is calculated in terms of the known resistance after the bridge is balanced. One type of capacitance bridge circuit appears in simplified schematic form

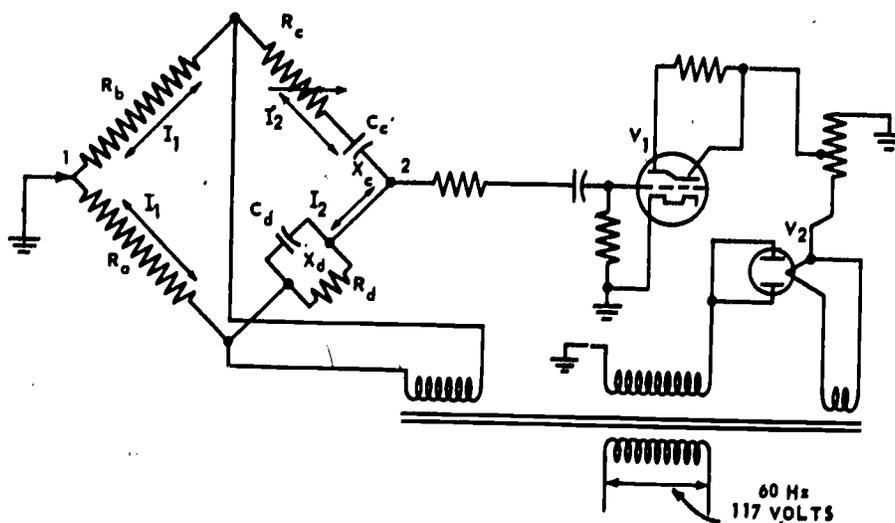



Figure 13-7.— Simplified Schematic of Capacity Checker.

20.344

in figure 13-7. When the bridge is balanced by adjusting the two variable resistors, no a-c voltage is developed across the input of indicator tube V1.


In the basic Wheatstone bridge circuit using d-c voltages and simple resistances, the balance is obtained when the voltage drops are equal across the ratio arms. In the a-c capacity bridge, it is insufficient to have equality of voltage drops in the ratio arms. The phase angle between current and voltage in the two arms containing the capacitors also must be equal in order to obtain a balance. When a balance is obtained, the current is equal on both sides of the bridge circuit.

The capacitance-inductance-resistance bridge of figure 13-8 not only measures capacitance, resistance, and inductance values, but is also used for special tests, such as the turn ratio of transformers and capacitance quality tests.

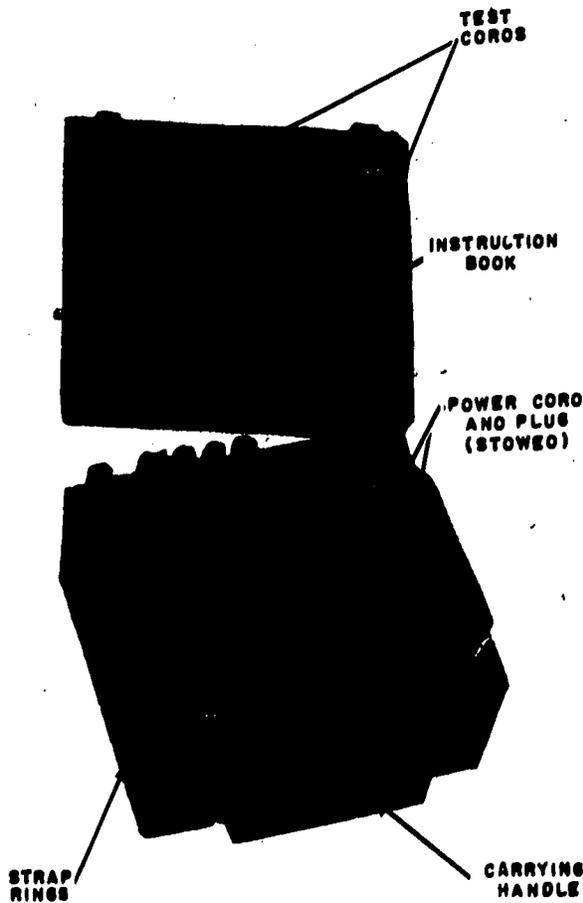

20.345

Figure 13-8.—Capacitance-Inductance-Resistance Bridge, Type ZM-11/U.

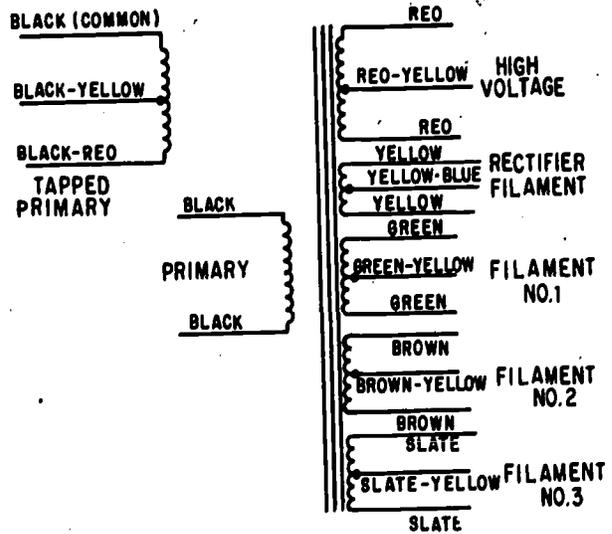

20.379(71)

Figure 13-9.—Color Coding of Small Power Transformer Leads.

It is a self-contained instrument, except for a source of line power. It has its own source of 1000-Hz bridge current with a sensitive bridge balance indicator, and adjustable source of direct current for electrolytic capacitor and insulation resistance testing, and a meter with suitable ranges for leakage current tests on electrolytic capacitors.

TRANSFORMER TESTING


Transformers ordinarily are tested by checking for shorts, measuring resistance of the individual windings, and measuring voltage outputs of each winding. The technical manual for the equipment that contains a transformer describes the transformer, specifies the terminals to test for each winding, and tells what each measurement should be. Transformers, of the size used in electronic equipment, usually are color coded as shown in figure 13-9. In an untapped primary, both leads are black. If the primary is tapped, one lead is common and is colored black, the tap lead is black and yellow, and the other lead is black and red.

On the transformer secondary, the high-voltage winding has two red leads, if untapped, or two red leads and a yellow and red tap lead, if tapped. On the rectifier filament windings, yellow leads are used across the entire winding,


and the tap lead is yellow and blue. If there are other filament windings, they may be green, brown, or slate. The tapped wire is yellow in combination with one of the colors just named; that is, green and yellow, brown and yellow, or slate and yellow.

An easy way to check a suspected malfunctioning transformer is to measure its output voltage. Use a voltmeter to measure across the proper terminals, and compare the readings obtained with the proper voltage given in the technical manual. If only one reading is in error, only that winding is at fault. However, the transformer will require replacement. If all the readings are in error, the trouble could possibly be a high- or low-input voltage. Consequently; always measure the input voltage as well as the output voltage.

If the voltage measures high or low at any of the output windings, the next step is to measure the resistance of each winding. Make sure the connections to the terminals are disconnected first. Power to the equipment must be secured prior to disconnecting a transformer. Once the leads are free, measure the resistance across each winding with an ohmmeter set to

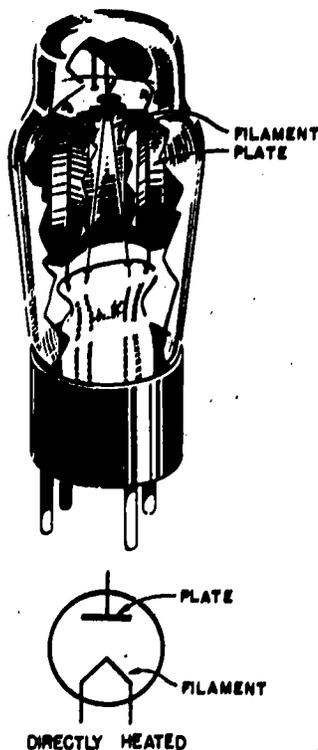

4.140A
Figure 13-10.—Cutaway of a Directly Heated Diode.

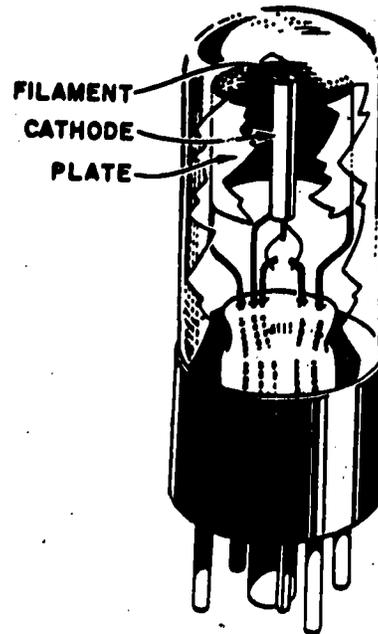

4.140
Figure 13-11.—Cutaway of an Indirectly Heated Diode.

the proper scale. Check each winding carefully, including any center taps. Next, test for shorts between windings and between windings and ground.

If no faults are indicated by the voltage or resistance readings, or by the tests for shorts, assume the transformer to be in proper operating condition. Then reconnect it in the circuit.

If a replacement is required, use only the one recommended by the manufacturer's technical manual. Always test for shorts and check the resistance of a new transformer before installing it in the circuit.

IDENTIFICATION OF CHASSIS WIRING

Standard colors used in chassis wiring for the purpose of circuit identification of the equipment are as follows. Caution should be used

when identifying wires using this code as wiring changes may have been made that failed to comply with the code.

Circuits	Colors
Grounds, grounded elements and returns	Black
Heaters or filaments, off ground	Brown
Power supply B plus	Red
Screen grids	Orange
Cathodes	Yellow
Control grids	Green
Plates	Blue
Power supply, minus	Violet (Purple)
A-c power lines	Gray
Miscellaneous, above or below ground returns, AVC, etc	White

DIODES

The simple diode tube contains a heated cathode and a cold plate. DI is a prefix signifying two. ODE is the suffix as in electrode, cathode, and anode. The plate collects electrons when the cathode is heated in a vacuum, and a positive potential exists on the plate with respect to the cathode.

One version of the diode is shown in figure 13-10 with its two elements indicated as plate and filament.

Another version of a diode is shown in figure 13-11. Its filament serves only as a heater.

In an electronic circuit the two electrodes of a diode act in the manner of a flow valve in a water pipe.

OPERATION

The behavior of a diode is observed after the plate and cathode elements have been connected in series with a battery and milliammeter, as shown in figure 13-12. Carefully observe polarity changes of the battery when it is used in arrangements A and B, respectively. The cathode is

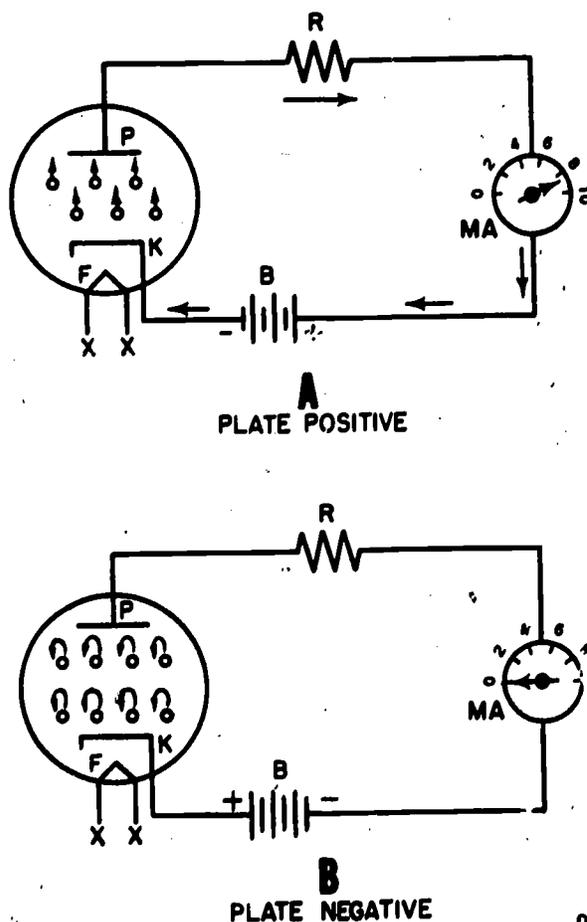


Figure 13-12.—Action of Diode.

20.1

brought up to normal temperature by applying rated voltage across the heater terminals. If the battery is connected so that the plate is positive with respect to the cathode (fig. 13-12A), the meter will indicate a current flow. When the battery is reconnected (fig. 13-12B) so that the plate is negative with respect to the cathode, the meter will indicate no plate current flow.

The total number of electrons emitted by the hot electrode at a given operating temperature is always the same regardless of the plate voltage. This same condition exists regardless of plate polarity because the electrons fly into the space surrounding the cathode to produce a cluster or cloud.

This cloud constitutes a negative space charge that constantly tends to repel the electrons toward, and into, the cathode as fast as they are being emitted. The negative charge on the plate of figure 13-12-B only repels the nearby

electrons within the cloud, but the action is so effective that none of the electrons reaches the plate (regardless of amount of voltage) as long as the plate remains negative.

With low values of positive plate voltage, only those electrons of the space-charge cloud that are nearest to the plate are attracted to it, and the plate current is low. As the plate voltage is increased, greater numbers of electrons are attracted to the plate and, correspondingly, fewer of those being emitted are repelled back into the cathode.

Eventually a plate voltage value (saturation voltage) is reached at which all the electrons being emitted are in transit to the plate, and none are repelled back into the cathode. The corresponding value of current is called the saturation current. Any further increase in plate voltage can cause no further increase in plate current flowing through the tube.

TYPES OF DIODES

Diodes that have been discussed thus far are of the high-vacuum type. There are other types of diodes that contain gas at a relatively low pressure.


The original use of the word, diode, was restricted to electron tubes. Scientific research has produced other devices that perform the same functions as the earlier diodes, although they are not electron tubes. These devices are semiconductor diodes and are discussed later.

TYPES OF CATHODES

Only a few substances can be heated to the high temperatures that are required to produce satisfactory thermionic emission without melting. Tungsten, thoriated-tungsten, and oxide-coated emitters are the types that are commonly used in electron tubes.

HEATING THE CATHODE

The electron-emitting cathodes of electron tubes are heated in two ways—directly, and indirectly. A directly heated cathode receives its heat by the passage of a current through the filament itself which serves as the cathode. An indirectly heated cathode comprises a metal sleeve that surrounds the filament but is electrically insulated from it. The sleeve serves as the cathode and receives its heat mostly by radiation. Both types are shown in figure 13-13.

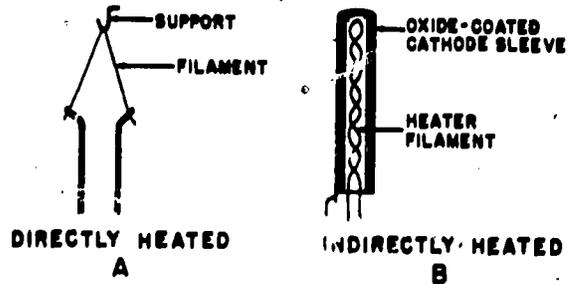

13.21
Figure 13-13.— Methods of Heating the Cathodes of Electron Tubes.

PHYSICAL CHARACTERISTICS OF ELECTRON-TUBE MATERIALS

The outer walls of an electron tube are constructed either of thin glass or metal. The larger the tube, the thicker the glass must be because of the greater weight of the atmosphere to be sustained on the walls of the tube.

Evacuation of air from a tube is required for two reasons—to prevent destruction of the cathode and heating element by oxidation or burning, and to allow the flow of current from cathode to plate without colliding with gas particles.

The external leads from the tube are electrically welded to the tube elements and brought out at the bottom through a special glass-metal fusion to make the envelope airtight. In metal tubes a glass button is used at the base to afford electrical insulation. The materials selected for the external leads have nearly the same coefficient of expansion as that of glass. Thus during heating and cooling periods, the glass expands and contracts the same amount as the metal and the vacuum seals are maintained.

The spacing of the electrodes in a tube is dependent on many factors but the two most important are frequency utilization and inter-electrode voltages.

The anode (plate) is made of materials that will not emit electrons by thermionic means at normal tube operating temperatures.

The plate is mounted externally with respect to the cathode. It is electrically insulated from the cathode and usually surrounds it in order to receive all of the cathode field of emission. The plate usually has a dark surface to radiate the heat caused by the plate current.

TYPES OF EMISSION

Electrons flow within a conductor when a potential difference is applied across the terminals of the conductor. These electrons break away from the outer shells of their parent atoms and move with a rapid vibratory motion, the velocity of which increases with temperature. At ordinary temperatures the particles do not leave the surface of the conductor because their velocity is not sufficient to overcome the attractive forces within the conductor.

To escape from a metallic surface, electrons must do work to overcome the forces of attraction which are always present. This amount of work is called the work function of the material. Increasing the heat intensity of a metallic emitter increases the kinetic energy of the so-called free electrons in the material.

THERMIONIC EMISSION

Thermionic emission is the process by which electrons gain sufficient energy by means of heat to escape from the surface of the emitter. Thermionic emission is the type of emission most frequently employed in electron tubes.

SECONDARY EMISSION

Emission of electrons from a body caused by the impact of other electrons striking its surface is called secondary emission. If a stream of electrons flowing at a high velocity strikes a material, the force may be great enough to dislodge other electrons on the surface. Secondary emission is not commonly used as a source of electrons. However, it does occur spontaneously in tubes and must be controlled. This problem is discussed later in this chapter.

GAS-FILLED TUBES

In the manufacture of high-vacuum tubes, as much of the air as possible is removed from the envelope. In some cases low-vacuum tubes are designed purposely to contain a specific gas in place of air—usually neon, argon, or mercury vapor.

The gas-filled tube normally has a higher plate current rating than a high-vacuum tube of the same physical dimensions. When ionization occurs, the tube presents a lower impedance to

the external circuit. The schematic symbol for a gas filled tube has a small dot within the circle, this indicates that the tube is gas-filled.


CONDUCTION IN GAS TUBES

In a gas-filled tube the electron stream from the hot cathode encounters gas molecules on its way to the plate. When an electron collides with a gas molecule the energy transmitted by the collision may cause the molecule to release an electron. This second electron may then join the original stream of electrons and thus be capable of liberating other electrons through collision with other gas molecules. This process which is cumulative is a form of ionization. The molecule that has lost an electron is called an ion and bears a positive charge. The tube in its ionized condition contains molecules, ions, and free electrons within the envelope. The positive gas ions are relatively large and in the vicinity of the cathode they neutralize a portion of the space charge. Thus electrons flow from cathode to plate with less opposition than in a high-vacuum tube.

The heavier positive ions are attracted toward the negative cathode and while moving toward it they attract additional electrons from the space charge.

The energy needed to dislodge electrons from their atomic orbits and to produce the ionization is supplied by the source which supplies the voltage between the plate and cathode. There is a certain voltage value for a particular gas-filled tube at which ionization begins. When ionization occurs large currents flow at relatively low voltage across the tube. The voltage at which ionization commences is known as ionization potential, striking potential, or firing point.

After ionization has started, the action maintains itself at a voltage considerably lower than the firing point. However, a minimum voltage is needed to maintain ionization. If the voltage across the tube falls below this minimum value, the gas deionizes and conduction stops. The voltage at which current ceases to flow is known as the deionizing potential or the extinction potential. The tube may therefore be used as an electronic switch that closes at a certain voltage and permits current to flow and then opens at some lower voltage and thus blocks the flow of current. Such a tube has almost infinite resistance before ionization and very low resistance after ionization.

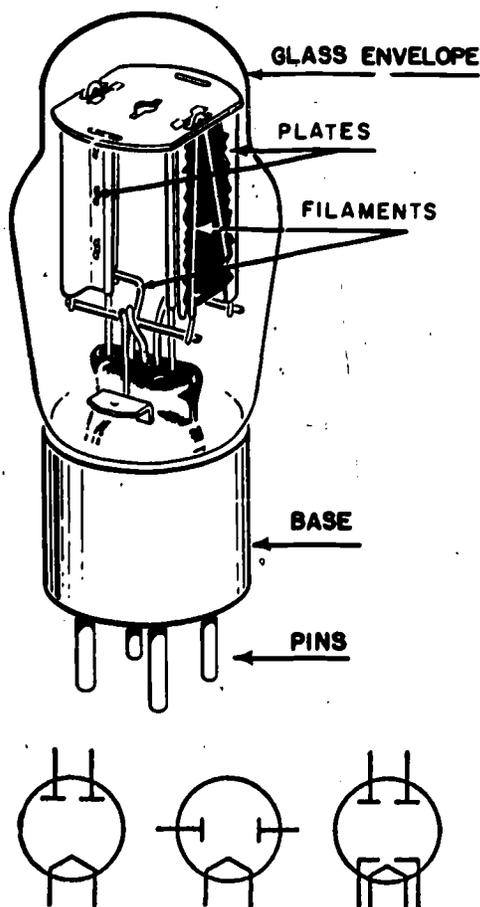

4.140(20C)

Figure 13-14. — Construction and Schematic Symbols of Duo-diodes.

GAS DIODES

The neon-glow lamp or neon bulb is a cold-cathode gas-filled diode. The cathode may have the same shape and size as the plate so that the tube can conduct in either direction depending only on the applied potential, or the structures of the cathode and plate may be such as to permit conduction in only one direction. Because the cathode is not heated in this type of tube no electrons are emitted to help in the ionization process. Therefore the firing potential for a neon-glow tube is higher than that for a tube in which a hot cathode is used, and the neon-glow tube is somewhat erratic in that the firing potential varies during the operation. The passage of current through the tube is indicated by a glow. The color of the glow depends on the gases that may be mixed with the neon. The glow is on the negative electrode or cathode.


When an alternating voltage is applied both electrodes are alternately surrounded with a glow discharge.

A neon-glow tube placed in an RF field of sufficient strength to ionize the gas in the tube will indicate the presence of such a field by glowing. A glow tube may also be used as a voltage regulator. Additional uses of glow tubes are as a source of light, as a part of a relaxation oscillator, as a rectifier, and to control circuit continuity in noise limiters.

Hot-cathode, mercury-pool diodes are specially designed to serve as rectifiers. Tubes of this type can pass much higher currents than high-vacuum tubes because the ionization of the mercury vapor partially dispels the cathode space charge.


In some cases, two or more diodes are included in the same envelope to conserve space. A tube which contains two plates and one or two cathodes is called a duo-diode or twin diode. Figure 13-14 illustrates the construction and schematic symbols of duo-diode electron tubes.

As a rule, electron tubes are not expected to last as long as resistors, capacitors, or other circuit components. This is due, in large part, to wearing out or breaking down of the filament or heater. To make it easy to remove and replace a tube, the base of the tube (fig. 13-14) is constructed in the form of a plug, which fits into a socket on the chassis. The

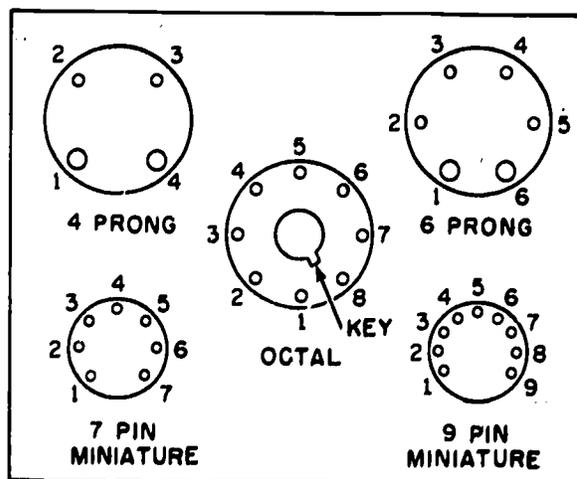

4.141

Figure 13-15. — Pin Numbering Systems for Several Tube Types.

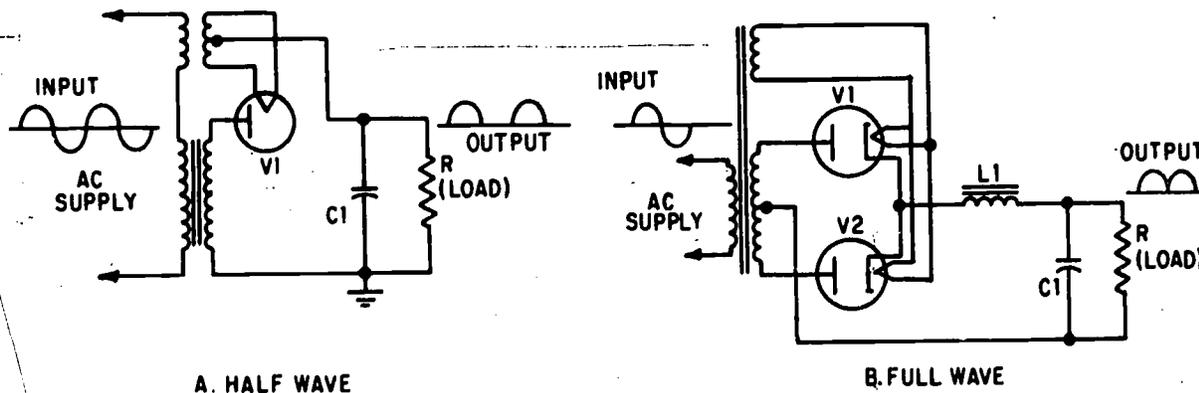

(A)20.37 (B)20.40.1

Figure 13-16.— Electron Tube Rectifier Circuits.

electrical connections between the tube elements and the circuit are completed through the plug terminals, called pins.

There are various types of tube bases, containing different numbers and sizes of pins. Each type of tube base has a guide or key to prevent the tube from being plugged into the socket improperly. To make circuit tracing easy, the tube pins are assigned numbers. At the BOTTOM of the tube or socket, the pins are numbered in a clockwise direction, as viewed from the bottom, beginning with No. 1 at the key or guide. The pin numbering systems for several types of tubes are shown in figure 13-15.

Ratings

Each diode has certain voltage, current, and power ratings. By definition, a rating is the limiting value which must not be exceeded to prevent permanent damage to a device, such as the diode. The filament or heater voltage and current values must be correct for proper operation of an electron tube. If heater current is too low, the cathode will not emit enough electrons. Too much heater or filament current may reduce the life of the tube or destroy the heater or filament.

Other important diode electron tube ratings are:

Plate Dissipation—the maximum average power, in the form of heat, which the plate may safely dissipate.

Maximum Average Current—the highest average plate current which may be handled continuously, based on the tube's permissible plate dissipation.

Maximum Peak Plate Current—the highest instantaneous plate current that a tube can safely carry in the direction of normal current flow.

Peak Inverse Voltage (PIV)—the highest instantaneous plate voltage which the tube can withstand acting in a direction opposite to that in which the tube is designed to pass current (plate negative—cathode positive).

DIODE TUBES

The electron tube diode is commonly used as a rectifier; that is, a device for converting alternating current to direct current. See figure 13-16. An a-c voltage constantly reverses polarity. Each time the voltage of the transformer reverses, it reverses the polarity of the voltages applied to the anode and cathode. The anode attracts electrons from the cathode only during the periods when it is positive.

Figure 13-16A shows a diode in a half-wave rectifier circuit or a circuit that rectifies only one-half of the a-c cycle. The transformer steps down the voltage to provide filament voltage for the diode and heater voltage. Alternating current flows through the secondary winding; the output of the circuit is pulsating direct current. When the plate of the diode in this circuit is positive, it attracts electrons from the filament and current flows through the tube. Electron travel from the plate through the transformer and return to the filament by way of the load resistor. The filament then becomes the positive terminal for the power supply,

the transformer lead becomes the negative terminal. As the potential changes, the plate becomes negative and no current flows through the diode. Since current flows through the diode during only half of the a-c cycle, a pulsating d-c is produced. Notice the input and output signals in figure 13-16A. This current can be smoothed out by means of a filter which enables current to flow when the rectifier is not operating.


For a more constant flow of current, both halves of the a-c cycle are rectified. See figure 13-16B. In this case, you have a full-wave rectifying circuit that has two diodes. The high-voltage secondary of the transformer is tapped in the center. One plate goes to one side of the secondary; the other plate to the opposite side of the secondary.

When the plate of diode V1 is positive, it pulls electrons from the filament and current flows through V1 to the plate and out through the center tap of the transformer. As the alternating current starts to flow in the other direction, the plate of diode V1 becomes negative and that of diode V2 becomes positive. Electrons are now attracted to the plate of V2. Current flows through V2 to the plate and out through the center tap of the transformer. Electron flow through the center tap is always in the same direction. Both halves of the a-c cycle are rectified and current flows all the time.

SOLID STATE DIODES

As you know conductors are substances made up of atoms whose outer-orbit electrons are loosely bound. At ordinary room temperature enough heat energy is applied to the atoms to permit large numbers of these electrons to be liberated (free electrons) and to drift aimlessly about from one atom to another. If a voltage is applied to the end of a conductor, free electrons will stream to the positive side as other electrons enter from the negative end. It is in this way that current flows through a conductor. As carriers of electricity, the electrons move from the negative to the positive side of the conductor.

In an insulator, on the other hand, the outer-orbit electrons are tightly bound and there are few free electrons. As a result, little current will flow when a voltage is applied to the end of the insulator. If the voltage is high enough to

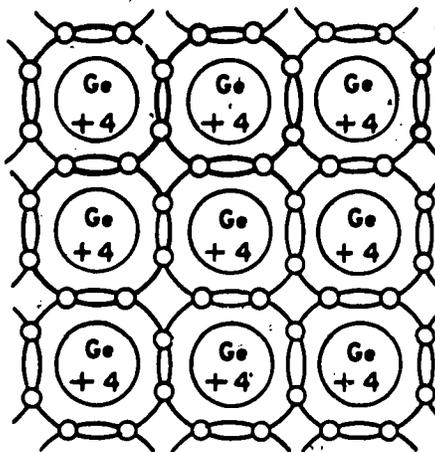

20,20

Figure 13-17. — Arrangement of Germanium Atoms in Diode Lattice.

rupture the insulator, however, current will flow which may be in the form of an arc.

There are solid substances, known as semi-conductors, whose outer-orbit electrons are not loosely bound, as in conductors, or tightly bound, as in insulators. Two examples are germanium and silicon. If a voltage is applied to a semi-conductor, current will flow but not as readily as in a conductor.

Atomic Theory

The germanium atom is pictured as having a nucleus of 32 protons and 32 orbiting electrons arranged in four concentric shells or orbits. The three shells closest to the nucleus are completely filled with 28 electrons, the outermost shell containing the remaining 4 electrons. The electrons of the outermost shell are called the valence electrons; they determine the chemical and electrical properties of the atom.

Since the outermost electrons are loosely bound to the nucleus at ordinary room temperature, many of them escape and wander as free electrons. Where an electron escapes from its atom, a "hole" is left in its place. The loss of the electron and the appearance of the hole converts the neutral atom into a positive ion. Thus, the hole is said to have a positive charge that is equal and opposite to the negative charge of the free electron.

When a hole appears in an atom, an electron from a neighboring atom may move in to fill this hole, leaving a hole in its place. Thus, a hole moves from the first atom to the second atom just as a free electron moves, except that the hole carries a positive charge instead of a negative charge. A rise in temperature or the presence of an electric field can force free electrons to move toward a positive pole. As free electrons move toward the positive pole, holes move toward the negative pole.

In a crystal of pure germanium, the atoms arrange themselves in a geometric pattern, each atom being relatively far from its neighbor. Though the crystal is a three-dimensional structure, figure 13-17 shows two dimensions only. The lines linking each germanium atom (Ge) to its neighbor represent a covalent bond consisting of one valence electron from each atom. Each germanium atom is linked with four other atoms, thus accounting for its four valence electrons. When an electron escapes from one of the atoms, it leaves a hole.

The number of free electrons in a germanium crystal can be increased by adding a small amount of an impurity, such as arsenic. An atom of arsenic has five valence electrons. It replaces one of the germanium atoms in the crystal, combining with its four neighbors and leaving one of its electrons free, as shown in figure 13-18(A). Such a germanium crystal is called an N-(negative) type.

Similarly, the number of holes in a germanium crystal can be increased by adding a small

amount of an impurity, such as boron. A boron atom has three valence electrons. When it replaces one of the germanium atoms in the crystal, the boron atom forms a covalent bond with its germanium neighbors, and leaves a hole for the missing electron as shown in figure 13-18(B). Such a germanium crystal is called a P-(positive) type.

The Semiconductor Diode

In figure 13-19A, a P-type semiconductor joins an N-type semiconductor to form a P-N junction diode. Each type of semiconductor contains a number of free electrons (indicated by -) and an equal number of holes (indicated by +). The N-type material, however, has more free electrons introduced by the five-valence impurity; the P-type material, on the other hand, has more holes introduced by the three-valence impurity. With a battery connected as shown in figure 13-19B (positive lead connected to the P-type material and negative lead to the N-type material), all the free electrons tend to move toward the positive lead and all the holes toward the negative lead.

Thus most of the free electrons and holes tend to move toward the junction between the two semiconductors. Because opposite charges attract, the electrons and holes rush toward each other and recombine as a free electron enters a hole. The effect of the applied voltage is to produce more free electrons in the N-type material, and more holes in the P-type material. Hence, there is a continuous movement of electrons and holes through the diode, thus creating



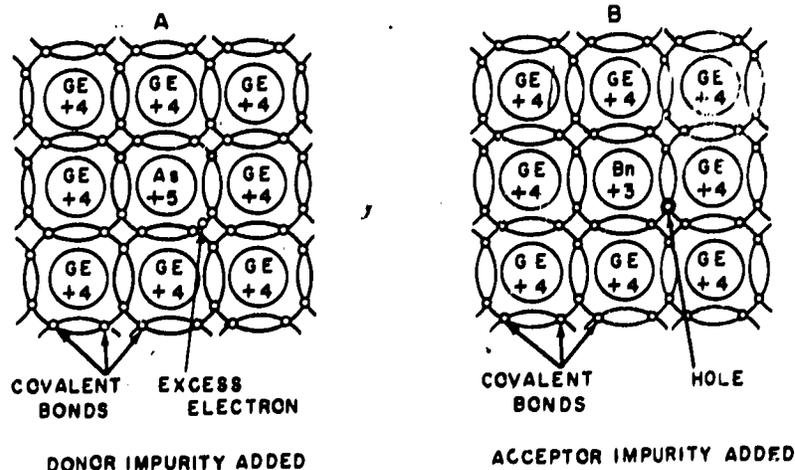



Figure 13-18. — A. Structure of N-Type Crystal. B. Structure of P-Type Crystal.

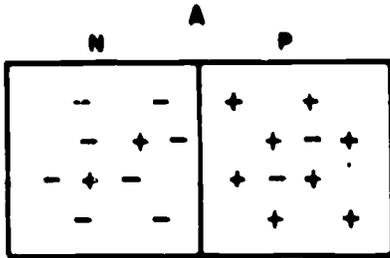

DISTRIBUTION OF FREE ELECTRONS AND HOLES WHEN N-TYPE AND P-TYPE CRYSTALS ARE JOINED TOGETHER.

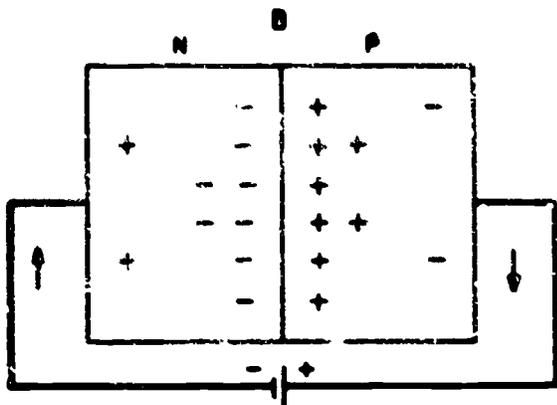


DISTRIBUTION OF FREE ELECTRONS AND HOLES WHEN VOLTAGE IS APPLIED IN FORWARD DIRECTION.

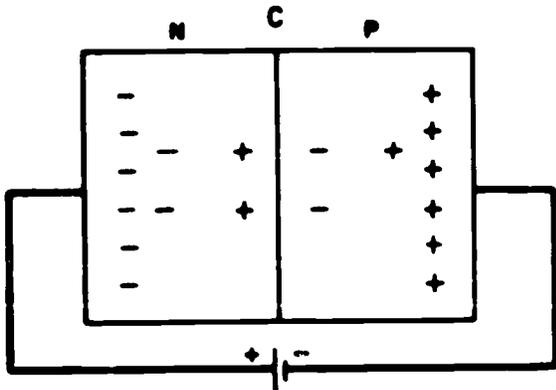


DISTRIBUTION OF FREE ELECTRONS AND HOLES WHEN VOLTAGE IS APPLIED IN REVERSE DIRECTION.

77.538
Figure 13-19.—Distribution of Holes and Free Electrons in Crystals.

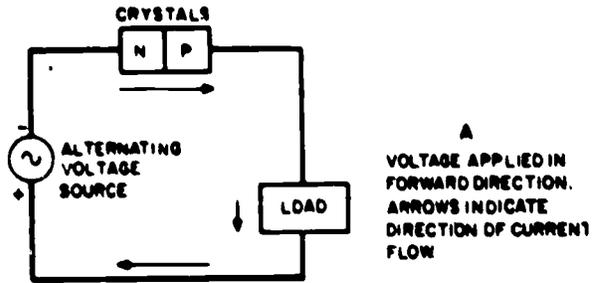

A
VOLTAGE APPLIED IN FORWARD DIRECTION. ARROWS INDICATE DIRECTION OF CURRENT FLOW

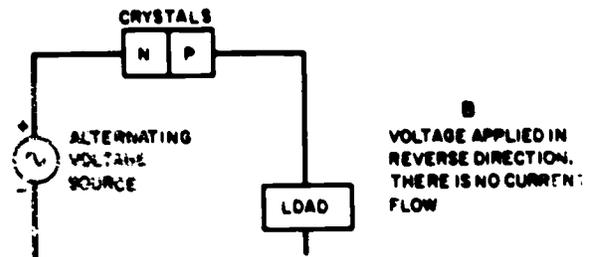

B
VOLTAGE APPLIED IN REVERSE DIRECTION. THERE IS NO CURRENT FLOW

77.339
Figure 13-20.—The Junction Diode as a Rectifier.

a relatively high current flow through the entire circuit as indicated by the arrows. When applied as shown in figure 13-19B, the voltage is said to be in the forward direction.

Now suppose the battery is reversed as shown in figure 13-19C. Again the free electrons flow toward the positive lead and the holes flow toward the negative lead. But since there are relatively few electrons and holes at the junction of the crystals, the flow of current across the junction is small and so is the current flow in the circuit. When applied as shown in figure 13-19C, the voltage is said to be in the reverse, or nonconducting, direction.


If a source of alternating current is applied to the diode connected in series with a load, the voltage for one-half cycle will be in the forward direction (figure 13-20A) and current will flow through the circuit. During the next half-cycle the voltage will be in the reverse direction (figure 13-20B) and no current will flow. This is how an N-P junction diode rectifies alternating current just as the electron-tube diode does.

TRANSISTORS

In figure 13-21, a thin piece of P-type material is sandwiched between two N-type semiconductor. The emitter terminal is on the left-hand

N-type semiconductor, the collector terminal on the other N-type semiconductor, and the base terminal on the P-type material. The junction between the left-hand (N-type) and the (P-type) semiconductors is the emitter-junction; the one between the right-hand (N-type) and the (P-type) semiconductor is the collector junction. The entire sandwich with its terminals is a junction transistor. The junction transistor consists of a single unit with the three distinct regions or layers being doped with controlled amounts of impurities. The schematic symbol for transistor is also shown in figure 13-21.

Note that the voltage from battery A is applied in the forward direction, relative to the emitter junction. Thus the impedance of this junction is low. On the other hand, the voltage of battery B is applied in the reverse direction relative to the collector junction. Therefore its impedance is high. As a result, electrons will flow readily from the emitter to the base, where some of them will combine with the holes in the P-type material. If the base material were made thin enough, nearly all the electrons entering the emitter will be attracted to the positive collector terminal and flow through the external collector circuit to battery B. That is, a flow of current in the emitter circuit will produce almost the same flow of current in the collector circuit. However, since the impedance (Z) of the emitter

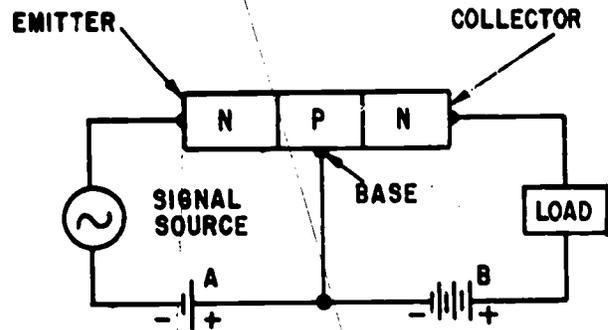


77.341

Figure 13-22.—N-P-N Junction Transistor Used as Amplifier.

circuit is low and that of the collector circuit is high, the power ($I^2 \times Z$) is greater in the collector circuit than in the emitter circuit. This explains how the junction transistor acts as a power amplifier—a device that increases the input signal without changing its characteristics a great deal. To indicate the obtainable increase in power, or gain (G), the impedance of the emitter circuit may be as low as 25 ohms, whereas the impedance of the collector circuit may be several megohms.

The basic amplifying circuit is shown in figure 13-22. Assume that the incoming signal is in the form of an alternating voltage. When connected into the emitter circuit, the signal source alternately adds to or subtracts from the voltage of battery A. Hence, the current flow through the low-impedance emitter circuit is respectively larger or smaller. Accordingly, a larger or smaller current flows through the high-impedance collector circuit (which contains the load in series). As explained previously, a low power input to the emitter circuit produces a large power output at the load in the collector circuit. The transistor is called an N-P-N junction transistor because of the arrangement of the N- and P-type crystals.


It is possible to form a P-N-P junction transistor by sandwiching an N-type semiconductor between two P-type semiconductors. Since the relative positions of the semiconductors are reversed in the P-N-P transistor, the polarities of the battery must be reversed; also, instead of electrons, holes flow from the emitter to the

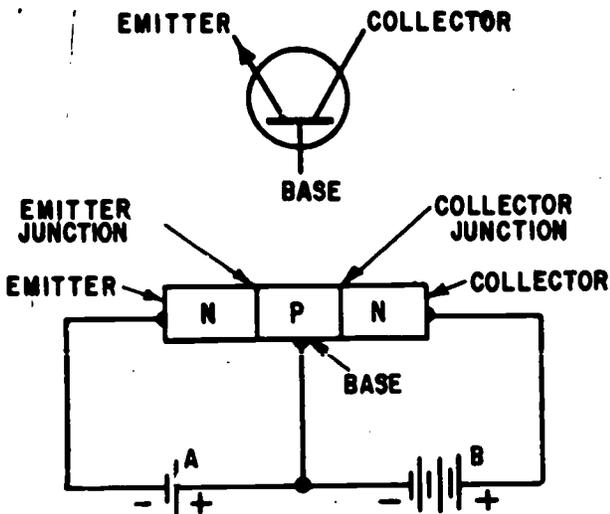

77.340

Figure 13-21.—Basic Junction Transistor Circuit.

1317
371

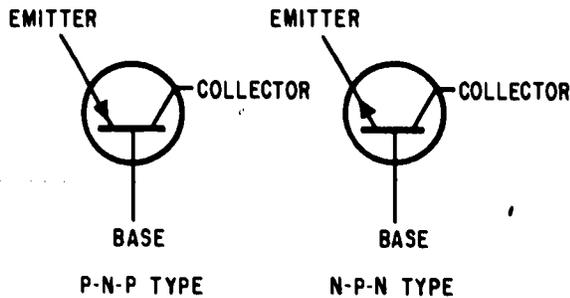

77,342
 Figure 13-23. — Schematic Diagrams of Transistor Types.

negatively charged collector terminal. Figure 13-23 shows the differences in the schematic symbols for the N-P-N and P-N-P transistors.

Transistors can carry out many of the functions of electron tubes. Transistors have certain advantages in that they consume less power, last longer, can take rough handling, and can be built much smaller and more compactly. Also, transistors have no filaments, so practically no heat is produced. However, excessive external or internal heat will increase the current flow across the junctions, and can result in breaking down the transistor.

TRANSISTOR LEAD IDENTIFICATION

You must be able to identify the leads or terminals of a transistor before it is connected into a circuit. As there is no standard method

of identifying transistor leads or terminals, it is quite possible to mistake one lead for another.

In figure 13-24 the bases of four pairs of transistors are shown. Each pair, while similar in appearance, has different elements connected to the leads. For the top transistor of the left-hand pair, the leads are emitter, base, collector, reading from left to right; for the bottom transistor of this pair, the leads are emitter, collector, and base. If one of these transistors was connected into a circuit as a replacement for the other, the circuit would not function properly or the transistor might be destroyed. The same general results apply for the other pairs of transistors. Note that in the right-hand pair, the cases can and are used for emitter or collector connections.

In replacing one transistor with another, do not rely on shape to determine proper connections. Be sure the leads are where they should be and that the transistor chosen as a replacement is suitable. If there is any doubt, consult the equipment manual or a transistor manual showing the specifications for the transistor being used.

CIRCUITRY

There are three basic ways of connecting a transistor in a circuit: common or grounded base (fig. 13-25), common or grounded emitter (fig. 13-26), and common or grounded collector (fig. 13-27). The connections differ in whether the base, emitter, or collector is part of (common to) the other two circuits. Regardless, of the connection, the output signal is taken from across the load.


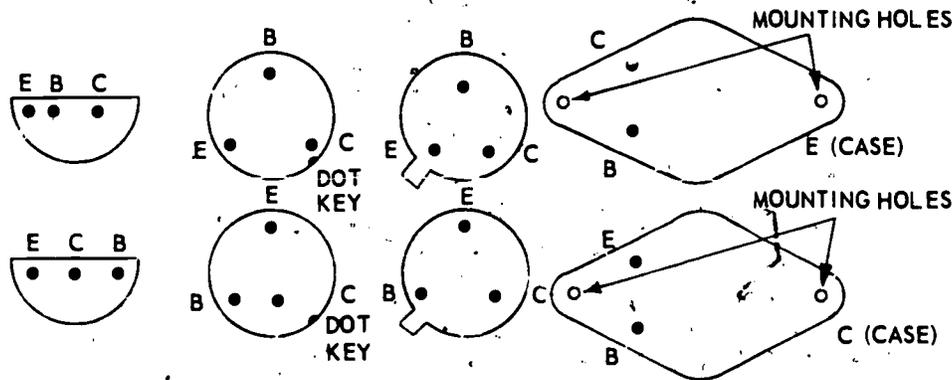



Figure 13-24. — Bottom View of Some Common Transistor Cases.

13-18372

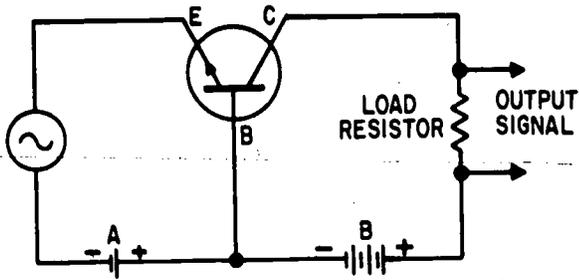


77.343

Figure 13-25.— Common Base Amplifier Circuit.

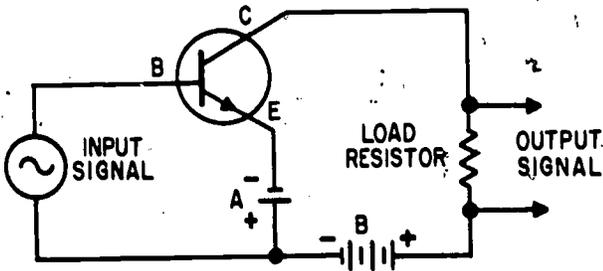

77.344

Figure 13-26.— Common Emitter Amplifier Circuit.

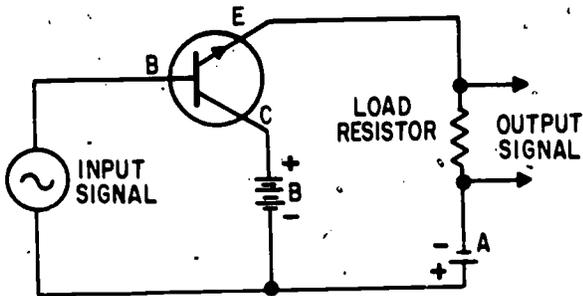

77.345

Figure 13-27.— Common Collector Amplifier Circuit.

Note that the symbols indicate the use of an N-P-N transistor in each circuit. With a P-N-P transistor, reverse the polarities of the battery. Each basic circuit has its own measurable properties, such as impedance or gain under given operating conditions. Which circuit is to be used depends upon the design requirements of a particular amplifier.

Table 13-2.— Transistor Amplifier Comparison Chart

AMPLIFIER TYPE	COMMON BASE	COMMON EMITTER	COMMON COLLECTOR
INPUT/OUTPUT PHASE RELATIONSHIP	0°	180°	0°
VOLTAGE GAIN	HIGH	MEDIUM	LOW
CURRENT GAIN	LOW (α)	MEDIUM (β)	HIGH (γ)
POWER GAIN	LOW	HIGH	MEDIUM
INPUT IMPEDANCE	LOW	MEDIUM	HIGH
OUTPUT IMPEDANCE	HIGH	MEDIUM	LOW


179.94

Table 13-2 compares characteristics of the three basic circuits.

ELECTRON TUBE TRIODES

Another kind of electron tube, the triode, is widely used as an amplifier of signals. As its name suggests, the triode has three elements: cathode, plate, and control grid. This grid is usually a metal screen or coil of fine wire inserted between the plate and cathode, but closer to the cathode. As long as the grid is uncharged, most of the electrons flowing from the cathode to the plate are free to move through the openings of the grid. Placing a negative charge on the grid has a repelling effect on the stream of electrons passing through the grid, and tends to reduce the number of electrons that do. Increase the negative charge, and fewer electrons pass through the grid. When the negative charge on the grid is made large enough, electrons do not pass between the cathode and plate (fig. 13-28A).

However, a positive charge placed on the grid attracts the electrons. Increase the positive charge, and more electrons are attracted to the grid. Some electrons strike the wire of the grid, but most of them flow through to strike the plate (fig. 13-28B) since the grid is mainly open space. The grid then regulates the flow of electrons much as a Venetian blind controls the amount of light that enters a room. Depending on the voltage applied to the grid, more or less plate current flows through it.

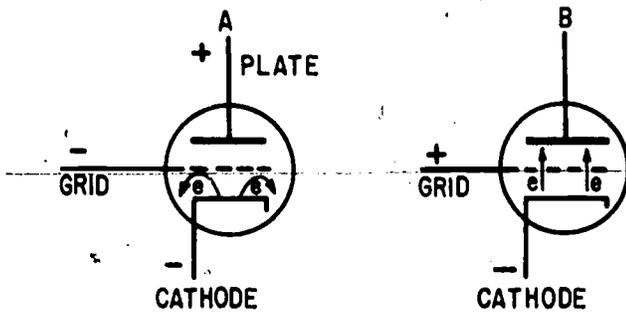


77.346
Figure 13-28.— Effect of the Grid in a Triode.

Of course, you can vary the plate current flow by making the plate more or less positive. But since the grid is closer to the cathode (the source of electrons), smaller variation in the charge of the grid has the same effect on the plate current as a larger variation on the charge of the plate. Weak signals change the charge and voltage on the grid, and so produce big changes in the plate current. In this way, the triode amplifies the weak signals.

The triode of figure 13-29 has three distinct circuits; the FILAMENT circuit consisting of the heater and A-battery or other source of heating current; the PLATE, or output, circuit consisting of the cathode, the electron flow from cathode to plate within the tube, the plate, the load, and the B-battery (commonly known as B+); and the GRID, or input, circuit consisting of the cathode, control grid, and the source of input voltage.

To demonstrate the use of a triode as an amplifier, assume that a small varying voltage

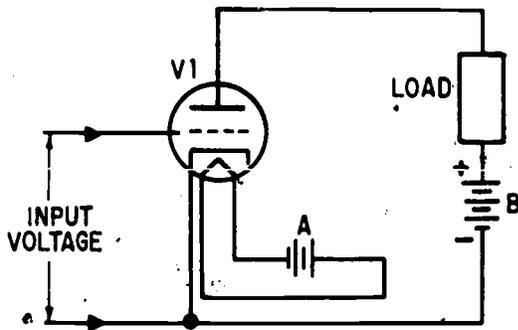

77.347
Figure 13-29.— Basic Triode Circuit.


is applied to the grid circuit. Since the charge on the grid varies with the applied voltage, the plate current flowing through the tube varies accordingly, causing similar variations in the current flowing through the load. If the load resistance is high, the resulting voltage drop ($I \times R$) across the load is also high and varies directly with the input voltage. Therefore, a small varying voltage applied to the input circuit of the triode produces a large varying voltage in the output circuit.

The triode can be compared to the transistor. The cathode operates like the emitter, the plate like the collector, and the grid like the base.

OSCILLATORS

An amplifier, such as the triode, can also be used as an oscillator—an electronic device that produces a constant signal of a certain frequency. As an oscillator, the triode feeds back to itself part of the signal it puts out. The feedback produces signals that oscillate, or vibrate, at a certain frequency. The resistance, inductance, and capacitance of the input circuit enable the triode to amplify only the signals that have the desired frequency. This is commonly known as the resonant frequency.

To demonstrate the use of a triode as an oscillator, connect the input circuit of the tube as shown in figure 13-30. This places an a-c voltage on the grid of the triode. The resulting

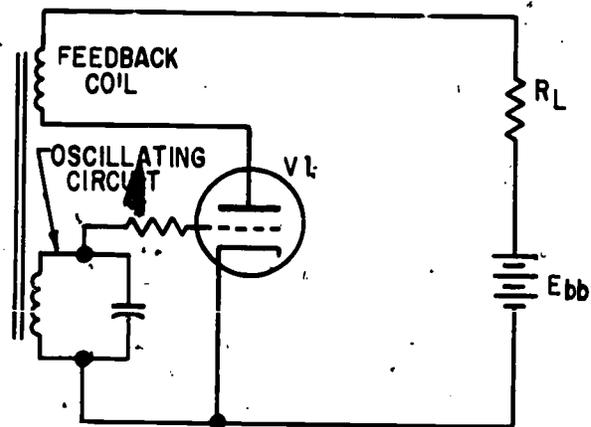

77.348
Figure 13-30.— Oscillator, Triode and Feedback Circuit.

plate current satisfies the needs of the load with enough left over to feed back to the oscillating circuit to compensate for its losses, and to remain in oscillation. The plate current feeds back through the so-called feedback coil that is coupled (connected) to the inductor of the oscillating circuit. In this way the feedback coil serves as the primary winding of a transformer; the inductor of the oscillating circuit as the secondary winding.

When proper values are selected for the inductor and the capacitor of an oscillating circuit, frequencies in millions, even billions, of hertz (cycles per second) can be generated.

Example. Assume that the value of an inductor is 20 microhenrys and that of a capacitor is 80 picofarads. Determine the frequency by using the formula:

$$\text{Frequency} = \frac{1}{2\pi \sqrt{L \times C}}$$

where $L = 20 \mu\text{h} = 2 \times 10^{-5}$ henrys and
 $C = 80 \text{pf} = 8 \times 10^{-11}$ farads

$$\begin{aligned} \text{Frequency} &= \frac{1}{2\pi \sqrt{2 \times 10^{-5} \times 8 \times 10^{-11}}} \\ &= \frac{1}{2\pi \sqrt{16 \times 10^{-16}}} = \frac{1}{2\pi \times 4 \times 10^{-8}} \\ &= \frac{10^8}{8\pi} = 4,000,000 \text{ Hz} \\ &= \text{(approximately)} \end{aligned}$$

MULTIELEMENT ELECTRON TUBES

Several elements other than the cathode, plate, and control grid are inserted in some electron tubes for special purposes. Tubes having more than these three elements are known as multielement tubes. A tetrode, for example, is a four-element tube. Its extra element is another grid called the screen grid. Another electron tube, the pentode, has three grids—a control grid, a screen grid, and a suppressor grid. All multielement tubes have special uses and some require special tube sockets. All of them, however, work on the same basic principle as the triode.

TETRODES

The tetrode is also an amplifying tube. Its fourth element, the screen grid, is mounted between the control grid and the plate. See

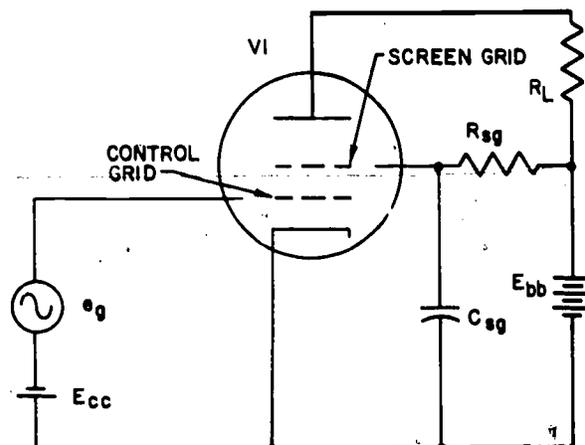


Figure 13-31.—Basic Tetrode Amplifier Circuit.


figure 13-31. The screen grid has a positive charge with respect to the cathode; it attracts a steady flow of electrons from the cathode. Because the mesh of the screen grid is relatively large, most of the attracted electrons pass through it and, in turn, are attracted by the plate. Thus the screen grid supplies an electrostatic force that pulls electrons from the cathode to the plate.

As long as the plate voltage is higher than the effective screen grid-to-cathode voltage, plate current in a tetrode depends mostly on screen-grid voltage and little on plate voltage. Thus a tetrode is better as an amplifier than a triode. Also, the screen grid reduces capacitance by serving as an electrostatic shield between the control grid and the plate. Reducing grid-to-plate capacitance results in high amplification and keeps the amplifier from oscillating.

Figure 13-31 illustrates a basic tetrode amplifier circuit. R_{sg} is the screen-dropping resistor that maintains the screen-grid operating voltage; C_{sg} is the screen-bypass capacitor that maintains the screen grid at a constant voltage.

PENTODES

The pentode's fifth element, or suppressor grid, is located between the screen grid and the plate. The suppressor grid is connected

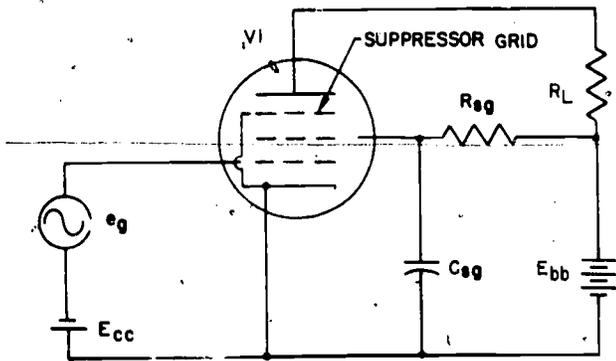

77.350

Figure 13-32.—Basic Pentode Amplifier Circuit.

internally or externally to the cathode. Figure 13-32 shows the internal connection.


Electrons flowing from the cathode to the plate cause the plate to give off electrons by secondary emission, which means freeing of electrons by bombarding them with other electrons. Being negative with respect to the plate, the suppressor grid keeps the secondary emission electrons from leaving the plate and interfering with the operation of the tube. The main electron stream is hardly affected by the presence of the suppressor grid.

Since the suppressor grid is negative with respect to the screen grid or plate, it does not draw current. Therefore the relationships of voltages and currents are essentially the same as those in the tetrode.

The pentode has replaced the tetrode in radio frequency (RF) amplifiers because it permits a somewhat higher amplification in moderate values of plate potential. In some special-purpose pentodes, the suppressor grid serves as a signal grid.

METHODS OF BIASING

In some amplifier circuits, d-c voltage in the grid circuit is supplied from a fixed source, such as a battery or other power supply (fig. 13-33). This type of voltage is known as fixed bias. In another type, called self-bias, voltage is developed across a resistor by tube current or input signal. Cathode bias and grid-leak bias are forms of self-bias.

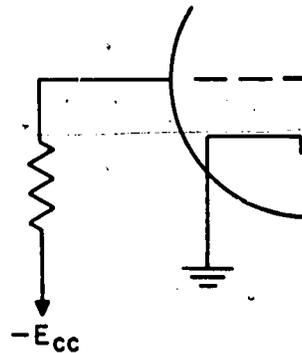


77.351

Figure 13-33.—Schematic of Fixed Bias.

CATHODE BIAS

This form of self-bias is illustrated in figure 13-34. When the cathode of an electron tube is biased positively with respect to the grid, the electron tube operates exactly as though an equivalent negative bias is applied to the grid. Since current flow within an electron tube is from the cathode to the plate, a resistor can be inserted in the cathode line to produce a voltage drop (cathode bias) as long as the plate current flows continuously. Since cathode current always flows in the same direction, the voltage drop remains more positive at the cathode. Thus, plate current flow within the electron tube itself produces a positive cathode bias.

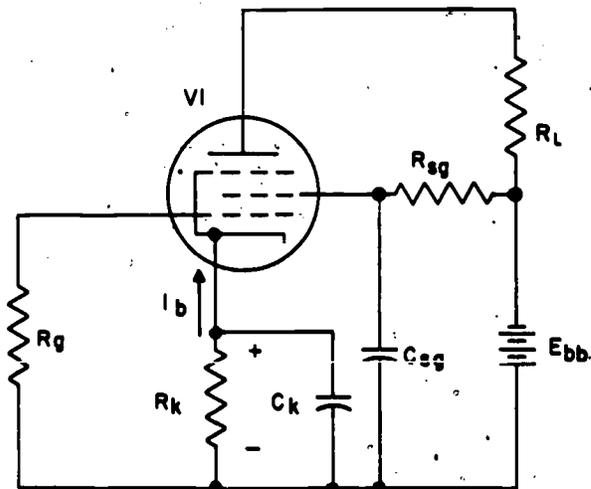


77.352

Figure 13-34.—Obtaining Cathode Bias.

GRID-LEAK BIAS


Grid-leak bias is obtained by allowing grid current flow, produced by an a-c signal input, to charge a resistance-capacitance (RC) network in the grid-cathode circuit. Two basic circuits are used to develop this form of self-bias: shunt and series (fig. 13-35). The methods of developing grid voltage in these circuits are similar, but the physical connections of the network components are different.

The grid-cathode circuit is used in both basic circuits as a diode rectifier to develop a d-c voltage proportional to the positive peak input (driving) signal amplitude. A grid-leak

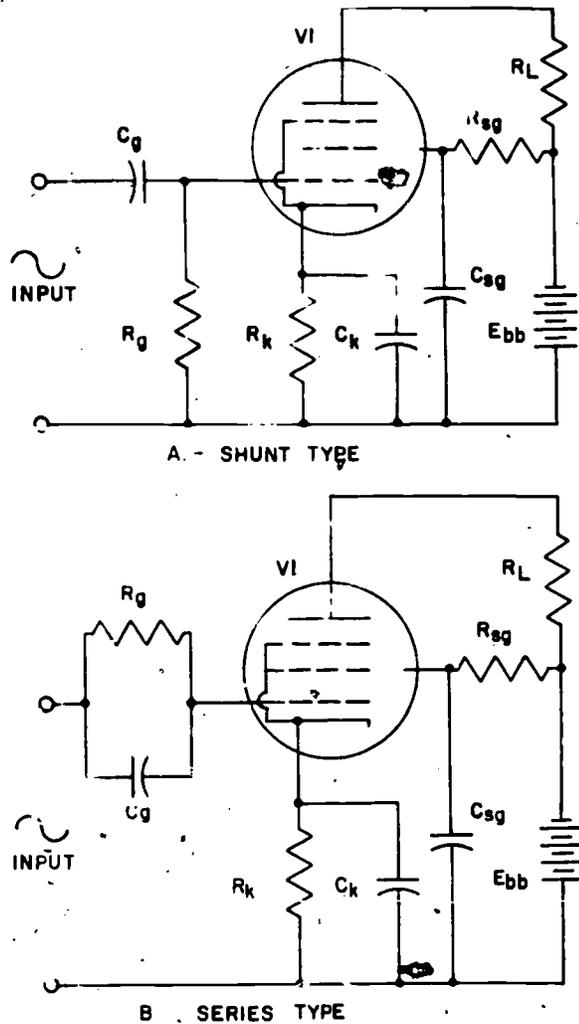

77.353

Figure 13-35. — Grid-Leak Bias Connections.

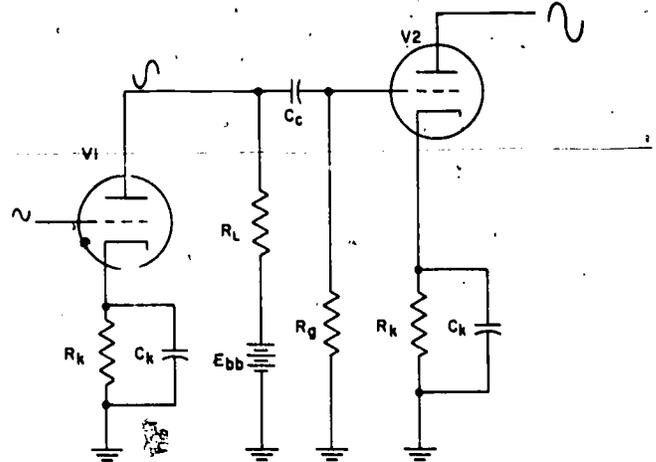

77.354

Figure 13-36. — RC-coupled Amplifier.

capacitor (C_g) operates as a coupling capacitor to apply the input signal to the grid. On the positive input signal excursions, the grid is driven positive causing grid current to flow between grid and cathode and through a grid-leak resistor (R_g). The result is to produce a d-c voltage across R_g which is polarized negatively at the grid.

COUPLING METHODS

Usually more than one amplifier is needed to increase the amplitude of a feeble input signal to the required output value. The amplifiers are cascaded, that is, connected in series so the output of one goes to the input of another. Cascaded amplifier stages are connected (coupled) by resistance-capacitance (RC) networks, impedance (LCR) networks, transformers, or direct coupling. Though some coupling networks respond to frequency better than others, the basic method of coupling is the same whether the amplifiers are used singly (as input or output coupling devices) or in cascade.

RC COUPLING

RC coupling involves the use of two resistors and a capacitor, as shown in figure 13-36. Because of their rather high frequency response, small size, and economy of operation, RC-coupled amplifiers are nearly always used where voltage amplification is desired with little or no power


output. Since the plate resistor (R_L) and grid resistor (R_g) are not frequency responsive, the overall frequency response is limited basically by the capacitive reactance of the coupling capacitor (C_c) between the plate and grid circuits, plus the effect of shunt wiring and cathode-to-ground capacitances across the network. With direct current (zero frequency) the coupling capacitor separates or blocks the plate voltage of the driving stage from the grid bias of the driven stage, so that bias or plate or element voltages are not effected between stages. Note that, with respect to alternating current, the tubes are in parallel with R_L .

In the conventional RC amplifier, signal voltage variations on the grid produce plate current variations through the plate resistor, and the resulting voltage developed across it represents an amplified replica of the input signal but 180 degrees out of phase. The amplified signal is coupled through capacitor, C_c and applied to the grid of the next stage across the grid resistor. The same cycle of operation is repeated for each stage of the cascaded amplifier.

RC-coupled amplifiers generally have a low gain, or ratio of signal output to signal input; therefore, they are seldom used in RF amplifiers. They have special applications, such as test equipment.

IMPEDANCE COUPLING

When an inductor is substituted for the plate load resistor in an RC-coupled circuit, an impedance-coupled circuit (fig. 13-37) results. The impedance coupled and RC-coupled circuits operate in the same manner as far as C_c and R_g are concerned; the basic difference lies in the effect of plate impedance. By using an impedance in the plate circuit, there is a smaller voltage drop for a given voltage supply. Therefore, a lower supply source will provide the same effective plate voltage, smaller loss in power ($I^2 R$), and better overall efficiency. Low frequency response depends on obtaining a high inductive reactance in the plate circuit and requires a large number of turns for good low-frequency response. The distributed capacitance associated with a winding of many turns produces a large shunting capacitive reactance with a consequent drop in high-frequency response. Since the impedance of the plate circuit varies with frequency, the response is not as uniform as that of the RC coupling.

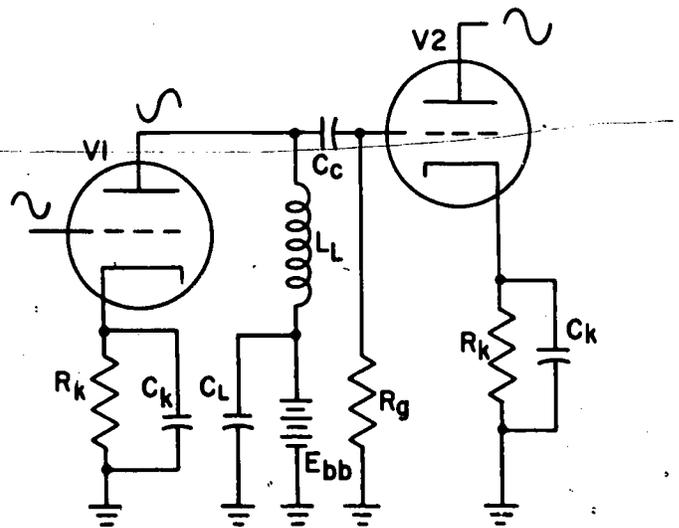


77.355
Figure 13-37. — Impedance Coupled Amplifier.

The impedance-coupling circuit is used where a limited response over a relatively narrow band of frequencies is required. As a result, impedance coupling is usually found in amplifier stages, such as intermediate-frequency or radio-frequency stages. Its use in audio frequency stages has generally been discontinued in favor of the RC or transformer coupling, except for special designs.

TRANSFORMER COUPLING

In transformer coupling (fig. 13-38) the primary of a transformer is connected as the plate load, and the secondary provides the output signal, either to the next stage or an output device. Frequency response, gain, and output become more difficult to predict because they depend primarily on the transformer design. Basically, transformer coupling provides additional gain, through the use of a step-up turns ratio of primary to secondary, but this gain usually does not exceed 2 or 3 to 1. Since there is no physical d-c connection between stages, plate and bias voltages are kept separate, and the a-c signal is coupled from the plate of one stage to the grid of the following stage by mutual inductive coupling between primary and secondary windings.

Transformer coupling is generally used for interstage applications with electron tubes having

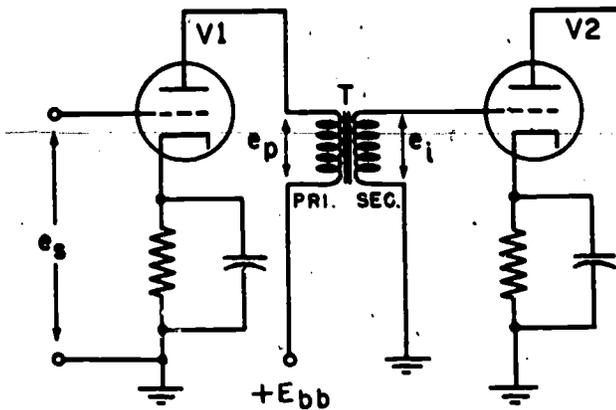

- - INPUT SIGNAL.
- - PRIMARY SIGNAL VOLTAGE.
- - INPUT VOLTAGE TO SECOND TUBE.

20.97

Figure 13-38.—Transformer Coupled Voltage Amplifier.

plate resistances of 5 to 10 thousand ohms maximum, since higher plate resistances require excessively large transformer primary inductances. For output stages, lower plate resistances are used, and the transformer is carefully designed to handle larger plate currents. Generally speaking, a lower plate current produces fewer d-c core saturation effects.

Since the impedance transformation in a transformer varies as the square of the turns

ratio between primary and secondary, output and input matching is possible and is a common practice. For interstage applications, matching is not always used, because power output is not required; in these cases, more attention is given to the step-up ratio to provide a higher voltage gain.

The limitations of frequency response generally restrict the use of transformer coupling to audio circuits which do not require an exceptionally wide bandpass or frequency response, but do require voltage or power outputs.

DIRECT COUPLING

In a direct-coupled amplifier (fig. 13-5.), the plate of the driver stage is connected to the grid of the driven stage, and the coupling network is eliminated. Since the plate and bias circuits are not isolated by a transformer or coupling capacitor the direct-coupling circuitry is slightly complicated by the arrangement necessary to produce an effective negative bias.

Because a coupling network is not inserted between the output of one tube and the input of the following tube, there is no phase distortion, time delay, or loss of frequency response. Since the plate and grid of the tubes are directly connected, the low-frequency response is extended to direct current (zero frequency). The high-frequency response is limited only by the tube interelectrode-to-ground capacitance, plus


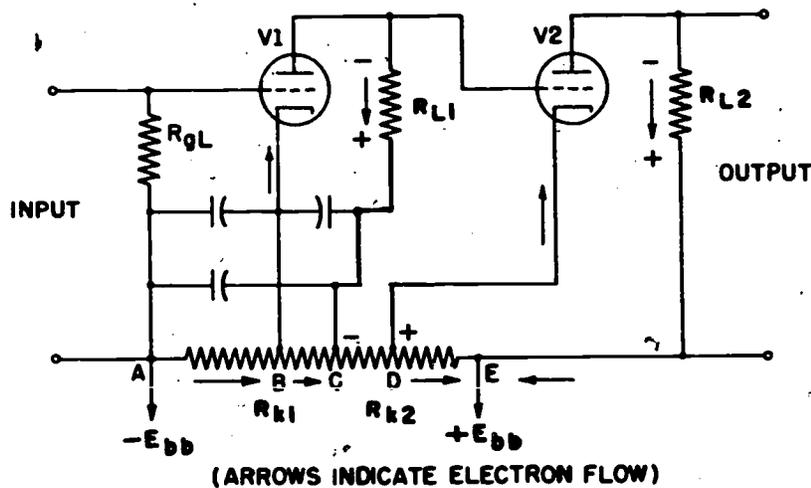


Figure 13-39.—Direct Coupled Amplifier.

20.102

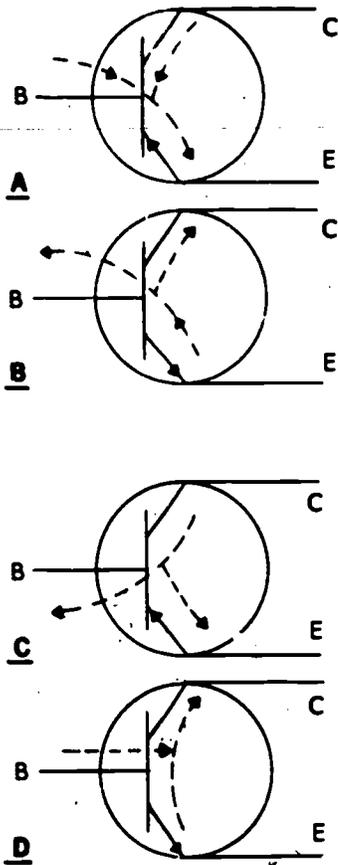

179.95

Figure 13-40.— Base Lead Current Flowing into, or out of, the Base Material in NPN and PNP transistors.

the circuit distributed wiring capacitance. By appropriate matching (or mismatching) of tubes, high values of amplification and power output may be obtained.


Since the use of more than two stages requires plate voltages two or more times the normal value for one tube, plate supply considerations limit direct coupling to a few stages. Any change in the supply voltage affects the bias of all the tubes and is cumulative; therefore, special voltage supply regulation circuits are necessary. Noise and thermal effects in tubes produce circuit instability and drift that limit the use of this type of coupling in audio or RF amplifiers.

Because of its ability to amplify direct current (zero frequency), direct-coupled circuitry is often used in computer circuits, and in the output circuits of video amplifiers. It is also used in pulse circuits because response is practically instantaneous.

BASE LEAD CURRENT

The amount of transistor current depends on several variables, such as type of bias, (fixed bias, self-bias), magnitude of the input signal, basic transistor connection, type of transistor, and direction of current flow in the base lead. For example, if the base lead current is flowing into the base material in the PNP (fig. 13-40A), or out of the base material into the base lead in an NPN (fig. 13-40B), more current is flowing in the emitter. If the reverse is true (fig. 13-40C and D), then more current is flowing in the collector.

The transistor amplifiers described earlier were biased in forward and reverse directions

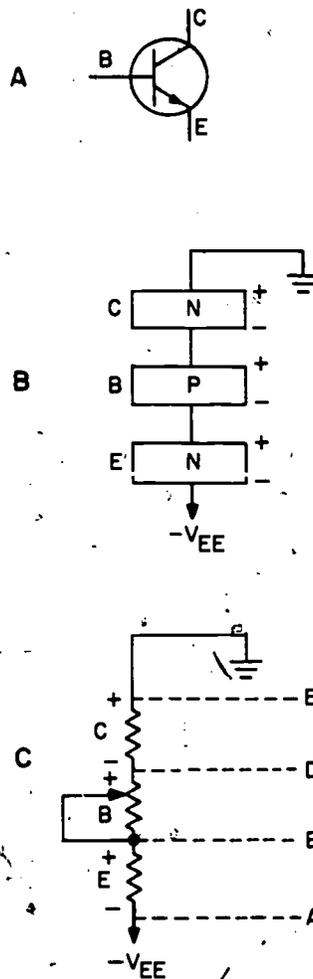

179.104°

Figure 13-41.— Schematic Diagram of an NPN Transistor Broken Down to Equivalent Electrical Representation and Resistance Equivalent.

through the use of two batteries. The purpose for using two batteries was to simplify the explanation of transistor operation. In actual practice, two batteries are seldom used. Single source biasing will point out the necessity for knowing in which direction base lead current is normally flowing.


SINGLE SOURCE BIASING

Single source biasing has the advantage of using the existing power supply to satisfy the needs for transistor biasing. This not only eliminates the need for a separate power supply, but also simplifies circuit wiring. The main reason for simplification is that both the collector and the base require voltages, which possess the same polarity with respect to the emitter, for biasing purposes.

A transistor with its three doped elements may be simplified to three resistances in series with each other. Figure 13-41A shows the schematic diagram of an NPN transistor. Its three elements can be broken down into their equivalent electrical representation (fig. 13-41B). Now, by application of a negative source to the emitter material, that point is made the most negative in the branch, while the collector material is the least negative. In figure 13-41C, point B is less negative than point A, or positive in respect to point A. In effect, the base is made positive in respect to the emitter, and the requirements for forward bias in an NPN transistor are met.

The base material, being situated between the collector and the emitter, will always find itself electrically at some potential between the collector and the emitter. Also, the base is represented in figure 13-41C as a variable resistance to show that an increase in forward bias should decrease this resistance. When the arm moves from point B to point D, the total resistance in the circuit is effectively decreased, flow from point D is at the same potential as point B with respect to point A, giving more forward bias; and more current is allowed to flow from the collector to the emitter. When the arm is moved back to point B, the total resistance is increased, decreasing the current flow in the circuit; now point B is less positive than point D with respect to point A, resulting in less forward bias.


Figure 13-42 illustrates the PNP, again three equivalent resistances are used and this time

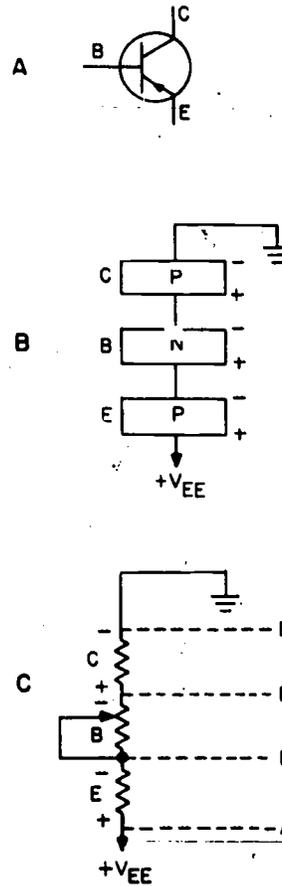

179.105
Figure 13-42.—Schematic Diagram of PNP Transistor Broken down to Equivalent Electrical Representation and Resistance Equivalent.

a positive source is applied to the emitter source terminal. It may be noted that point A is the most positive point in the network and that point B is less positive than point A, while point D is less positive than (negative with respect to) point B. In this PNP, the bias is negative with respect to the emitter, which satisfies the forward bias requirement for this type of transistor. Once more, the base is shown as a variable resistance to illustrate that forward bias can be increased or decreased.

The addition of a single resistor from the base to the emitter source terminal simply shunts the base-emitter junction, further decreasing its resistance, permitting more forward

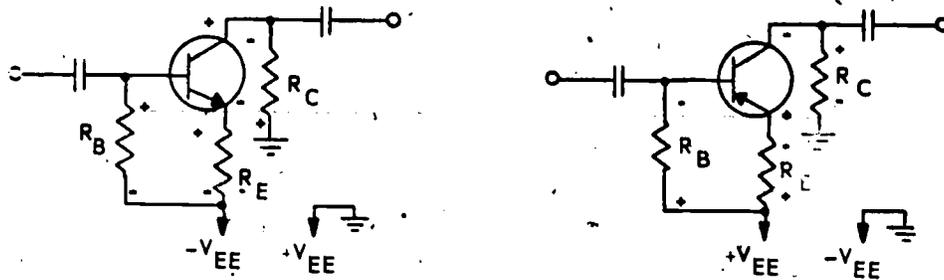


179.106

Figure 13-43.— Establishing Transistor Polarities.

bias to be applied. Should the base current flow increase and, consequently, the transistor current flow, with signal input, you should check the value of R_B ; an open base resistor would allow a greater difference of potential to be felt between the base and the emitter and therefore more current through the transistor. The base-emitter resistor reduces the resistance of the base-emitter junction, reducing the amount of forward bias with no signal applied. A direct short circuit from the base to the emitter would of course cause all signal to be lost and an excessive amount of current flow through the device. By considering the transistor as being three resistances in series, you can always establish the polarity of any given material in respect to an adjacent material, regardless

of the polarity of the source, as shown in figure 13-43.

The NPN transistor may have its collector connected to a positive source as shown in figure 13-44A. In this case, point E of figure 13-44C is positive in respect to point D, point D is positive in respect to point C, and point C is positive with respect to point B. The base is positive with respect to the emitter, and, therefore, it is forward biased. In figure 13-44B a PNP transistor has a negative source on its collector, making point E (fig. 13-44C) negative with respect to point D, point D negative with respect to point C, and point C negative with respect to point B. The base is thus negative with respect to the emitter and in a PNP this

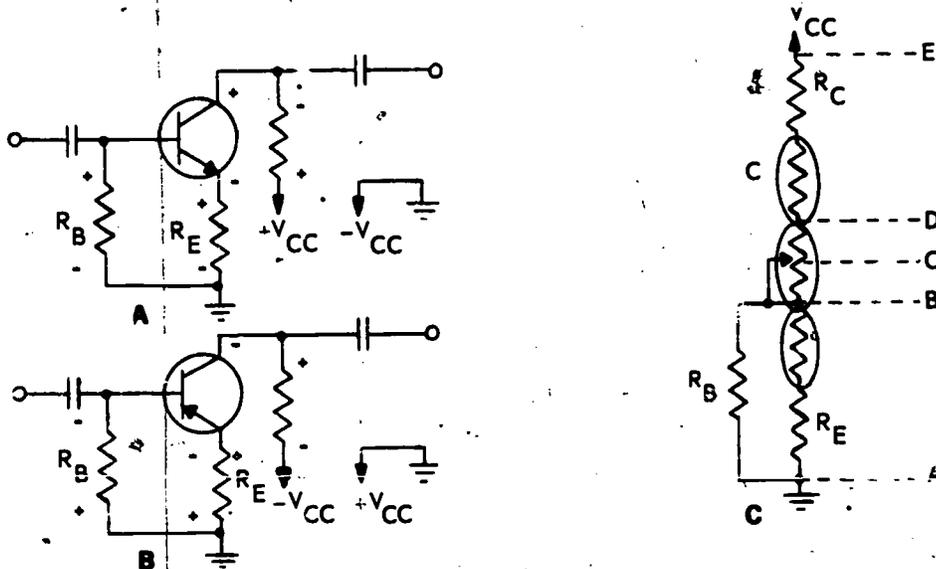

179.107

Figure 13-44.— NPN and PNP Transistor Circuit.

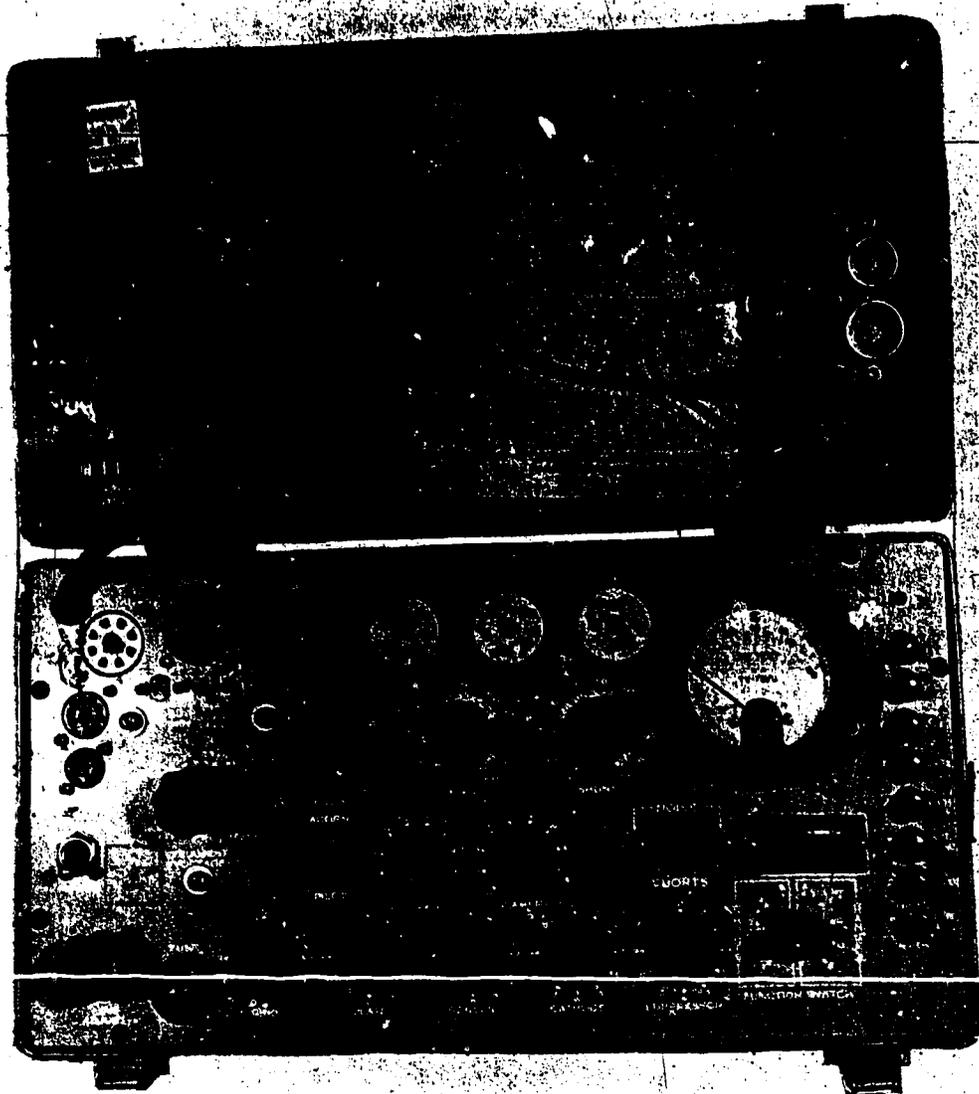


Figure 13-45.— Electron Tube Test Set.

AT105

is forward bias. In both cases R_B is shunting the base to emitter junction.

TESTING ELECTRON TUBES

There are two types of equipment in general use for testing electron tubes: emission and transconductance testers. The emission tester indicates the ability of a tube to emit electrons from its cathode. Transconductance testers not only indicate this ability of an electron tube

but also the ability of its grid voltage to control plate current. The TV-7/U tube tester (fig. 13-45) is a typical, general-purpose transconductance-type of tester. With the front-panel controls of this tester, you adjust (or switch) the various potentials necessary for testing tubes. The tube data chart (booktype) that is supplied with the tester, lists the control settings for the most common types of tubes.

Before inserting a tube in the correct test socket, make certain that the front-panel controls are set to the positions listed in the data chart

for that tube. This precaution is necessary to prevent excessive voltage from being applied to the tube elements (especially the filament).

LINE VOLTAGE ADJUSTMENT AND TEST

The line voltage adjustment is necessary so that the line voltage applied to the primary of the transformer can be preset to an operating value. A 93-volt potential is used as a test reference point, regardless of the variations caused by different tube loads or fluctuations in the a-c supply. Applied voltages may range from 105 to 130 volts and still be adjustable. Depressing the LINE TEST button connects the meter of the tube tester to read the "B" supply voltage. The test equipment is calibrated at the factory so that the meter pointer is approximately centered when the voltage across the primary is 93 volts. Since various types of electron tubes draw different values of currents, a LINE ADJUSTMENT rheostat (connected in series with the primary) is provided. The primary voltage can thus be set to the designed operating voltage before any test is begun. A small protective lamp which will burn out on overload is connected in series with the primary of the transformer to prevent equipment damage.

SHORT CIRCUIT AND NOISE TEST

It is very important that the technician apply the test for short-circuited elements to a tube of doubtful quality before any other tests are made. This procedure protects the meter (or any other indicator) from damage. Also it follows logically that, if a tube under test has elements which are short-circuited, there is no further

need to apply additional tests to that tube. Short-circuit tests are usually sensitive enough to indicate leakage resistance less than about one-fourth megohm. The proper heater voltage is applied so that any tube elements which might short as a result of the heating process will be detected. The short-circuit test is similar to the test used to detect noisy (microphonic) tubes caused by loose elements. Since the only difference between the two tests is in the sensitivity of the device used as an indicator, the noise test is discussed as part of the short-circuit test.

Figure 13-46 shows a basic circuit used for detecting shorted elements within a tube. With the switch set to position 2 as shown, the plate of the tube under test is connected to the leg of the transformer secondary containing the neon lamp. All the other elements are connected through switches to the other leg of the secondary. If the plate element of the tube is touching any other element within the tube, the a-c circuit of the secondary is completed and as a result, both plates of the neon lamp glow. If no short exists, only one plate of the neon lamp will glow. Each of the other elements is tested by means of the switching arrangement shown. Resistor R2 limits the current through the neon lamp to a safe value. Resistor R1 bypasses any small alternating currents in the circuit which might be caused by stray capacitance and thus prevents the neon lamp from indicating erroneously. Tapping the tube lightly is recommended to detect loose elements which might touch when the tube is vibrated.

The circuit used to test for shorts is similar to the basic circuit of figure 13-46 by means of the function switch the electrodes of the tube under test are switched in turn across a neon

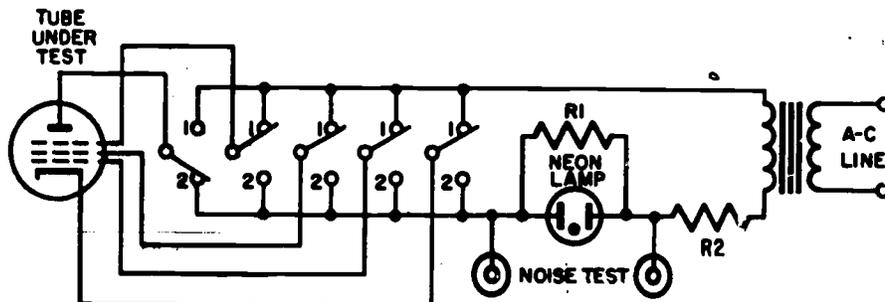


Figure 13-46.— Basic Circuit Used for Short Circuit and Noise Tests.

AT106


SHORTS lamp, which is connected in series with the secondary of the transformer. Shorted tube elements (and any other internal tube connections) complete the a-c circuit, causing both plates of the neon lamp to glow. Momentary flashes of the neon SHORTS lamp may be caused when the switch is rotated. These flashes are caused by the charging of the small interelectrode capacitances of the tube when the voltage is applied, and do not indicate short circuits. If the tube under test has a shorted element, the neon lamp will glow continually on one or more switch positions. Since the filament circuit and other internal tube connections will show up as short circuits in this test, the tube data chart should be consulted for pin connection information before interpreting the results of the test.

The noise test is used to check for intermittent shorts or microphonic noise. The circuit used is the same as that employed for the short-circuit test. In tests for noise, the antenna and ground terminals of a radio receiver are connected to the NOISE TEST receptacles. Any intermittent short between tube electrodes permits the a-c voltage from the power transformer to be applied momentarily to the neon lamp.

The brief oscillation of this lamp contains various radiofrequencies which are reproduced as audible signals in the receiver speaker. A less sensitive noise test can be made using a pair of headphones instead of the radio receiver. The tube should be tapped while it is being tested.

GAS TEST

In all electron tubes, except some types of rectifier tubes and thyratrons, the presence of any appreciable amount of gas is extremely undesirable. When gas is present, the electrons emitted by the cathode collide with the molecules of gas. As a result of these collisions, electrons (secondarily emitted) are dislodged from the gas molecules, and positive gas ions are formed. These ions are attracted by (and cluster around) the control grid of the tube, absorbing electrons from the grid circuit in order to revert to the more stable gas molecules (not ionized). If the amount of gas in the tube is appreciable, the collisions between the numerous gas molecules and the cathode-emitted electrons release many secondarily emitted electrons, and the resulting flow of grid current is high.

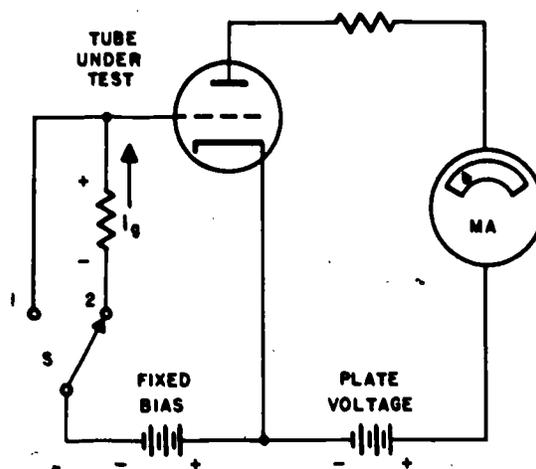


AT107
Figure 13-47.— Basic Circuit Used for Gas Test.

The basic circuit used for the gas test is shown in figure 13-47. With switch S set to position 1, a certain value of plate current is measured by the d-c milliammeter. If there is no gas (or a negligible amount) present in the tube, setting switch S to position 2 does not change the plate-current reading. If gas is present, current flows through the grid resistor (large value), causing a voltage drop to develop with the polarity as shown. The net effect is to reduce the negative bias voltage on the grid of the tube resulting in an increase of plate current. Small plate current increases are normal; large increases indicate excessive gas.

The value of the grid resistor used in the typical tube tester is 180,000 ohms. Two push-button switches, labeled GAS No. 1 and GAS No. 2, are used for gas test. GAS No. 1 button is first depressed and the plate current reading on the meter is noted. Depressing the button marked GAS No. 2 inserts the 180,000-ohm resistor into the grid circuit. If gas is present in the tube, the grid current that flows reduces the normal bias on the tube and increases the plate current measured by the meter. A tube with a negligible amount of gas produces an increase in plate current of less than one scale division when GAS No. 2 button is depressed. An increase of more than one scale division indicates an excessive amount of gas in the tube.

CATHODE LEAKAGE TEST

When a tube which used an indirectly heated cathode develops noise, it is almost a certain

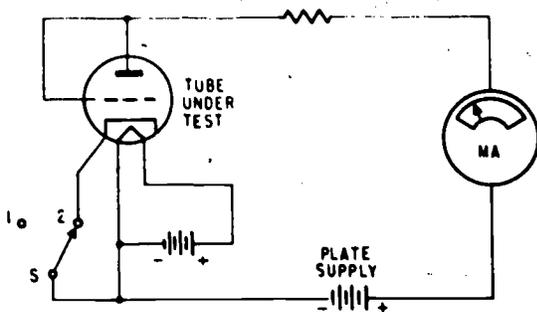

AT108
Figure 13-48.—Basic Circuit Used for Cathode Leakage Test.

indication that a leakage path is present between the cathode sleeve and the heater wire. This assumption is justified because in the design of a tube the heater must be placed as close as possible to the cathode so that maximum tube efficiency is attained. Continual heating and cooling of the tube structure may cause small amounts of the insulation between the cathode and heater to become brittle or deteriorate, leaving a high resistance leakage path between these elements. Under extreme conditions the insulation may shift enough to allow actual contact of the elements. Since the heater and cathode are seldom at the same potential, any form of leakage causes noise to develop in the tube.

The cathode normally is maintained at a higher positive potential, because cathode bias is the most common type of bias utilized. The heater circuit is usually grounded to chassis, either on one side of the filament supply or by a center-tap arrangement. Therefore, if a resistance path is present, a leakage current may flow from the heater to the cathode. Thus, in effect the cathode functions in the same manner as the plate of a tube; that is, it receives electrons. Assuming the existence of a high-resistance short, the current flow from the heater to the cathode will vary with any vibration of the tube because vibration varies the amount of resistance. If the cathode and heater are completely shorted (zero ohms), it is impossible for the tube to develop any cathode bias.

A cathode leakage test is sometimes made while a tube is being tested for short-circuited elements or noise. However, some tube-testing instruments incorporate the cathode leakage test


as an additional test which is not part of the short-circuit test. Figure 13-48 shows a basic circuit which is used to detect leakage between the heater and cathode elements of a tube. With switch S set to position 2, a certain value of plate current flows.

When switch S is set to position 1, the cathode becomes a floating element; if no leakage path is present, the plate current should fall to zero. If the elements are completely shorted, the plate current reading remains the same as the initial reading (switch S in position 2); if they are only partially shorted, a plate current less than normal but greater than zero is indicated.

FILAMENT ACTIVITY TEST

The filament activity test is used to determine the approximate remaining life of an electron tube insofar as the longevity of the cathode emitter is concerned. The test is based on the principle that the cathode in almost all electron tubes is so constructed that a decrease of 10 percent of the rated heater voltage causes no appreciable decrease in emission.

On a tube-testing equipment incorporating this test there is a two-position switch (FILAMENT ACTIVITY TEST) which has one position marked NORMAL and the other marked TEST. The switch remains in the NORMAL position for all tests other than the filament activity test. When the switch is set to the TEST position, the filament (or heater) voltage which is applied to the tube under test is reduced by 10 percent.

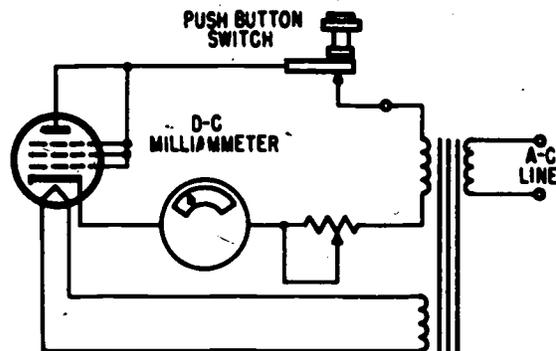

AT109
Figure 13-49.—Basic Circuit Used for Emission Test.

The filament activity test is performed as follows: After the quality test is made, the TUBE TEST button is held depressed, and the filament activity test switch is set to TEST position. If the indicator shows a decreased reading after a reasonable time is allowed for the cathode to cool, the useful life of the tube is nearing its end.

RECTIFIER TEST

The circuit used for testing full-wave rectifiers, diodes, and OZ4 (cold cathode-rectifier) tubes is an emission test circuit which is similar to the basic circuit of figure 13-49.

An a-c voltage of definite value is applied to the tube under test, and the meter indicates the rectified plate current. The two sections of a full-wave rectifier are tested separately.

The button for testing OZ4 tubes provides a higher a-c voltage than is normally used for heater (or filament) type rectifiers. The button for diode tubes provides a lower voltage than that used for regular rectifiers, and also inserts a protective series resistance.

QUALITY TEST

For the quality test, the d-c grid bias for the tube under test is supplied by a rectifier tube. The correct value of this grid bias is obtained when the bias control is rotated to the setting listed in the test data chart, for the tube being tested. An a-c voltage (4.7 volts rms), which is taken from a separate winding on the power transformer, is applied in series with the grid bias. This voltage causes the grid to deviate in positive and negative directions from the d-c bias level, thereby effecting the grid-voltage change required for a dynamic transconductance test. The plate voltage of the tube under test is supplied by a rectifier tube. The meter which indicates the plate current change is in the return circuit of the rectifier supply. The meter indicates the tube condition in arbitrary numerical units from 0 to 12'. The tube test data book, mounted inside the cover of the equipment, lists the minimum numerical value of meter reading for satisfactory performance. Tubes reading below this value are not considered suitable for use in military equipment. The shunt control is used to control the sensitivity of the meter. Setting of the dial is required

only when the function switch is in the RANGE (A) SHUNT position. The setting for this switch is determined by the type of tube being tested and is listed in the tube data chart.

TESTING

Transistors should be checked with the Transistor Test Set TS-1100/U, figure 13-50. If a test set is not available, it is possible to test transistors with a multimeter or a vacuum tube voltmeter (VTVM).

The TS-1100/U is designed to measure the current gain (Beta) and collector leakage current (I_{CO}) of a transistor. It will also detect short circuits.

Beta is defined as the ratio of change in collector current to a change in base current, collector voltage being constant. I_{CO} is a measure of leakage current between the base and collector, when the base-collector junction is reverse biased and the emitter-base junction is open circuited.

With a transistor tester, beta may be measured with the transistor in or out of its circuit. You must remove the transistor from its circuit to test for shorts and to measure I_{CO} .

SEMICONDUCTOR TESTING

When using a multimeter to test semiconductors, to avoid loading the circuit, the multimeter must have a sensitivity of at least 20,000 ohms per volt on all voltage ranges; the ohmmeter circuits must not pass a current exceeding 1 milliamperere. The VTVM should have an input resistance of 11 megohms or more, and must have an isolation transformer between the meter and the powerline.

Three tests can be accomplished on the transistor by using the multimeter. However, the transistor must be removed from the circuit for testing.

Determine the type of transistor, whether PNP or NPN. The same resistance test can be performed on the transistor as on the diode. The transistor has two junctions, the emitter-base and the collector-base. Because each junction can be treated as a diode, the same readings hold true.

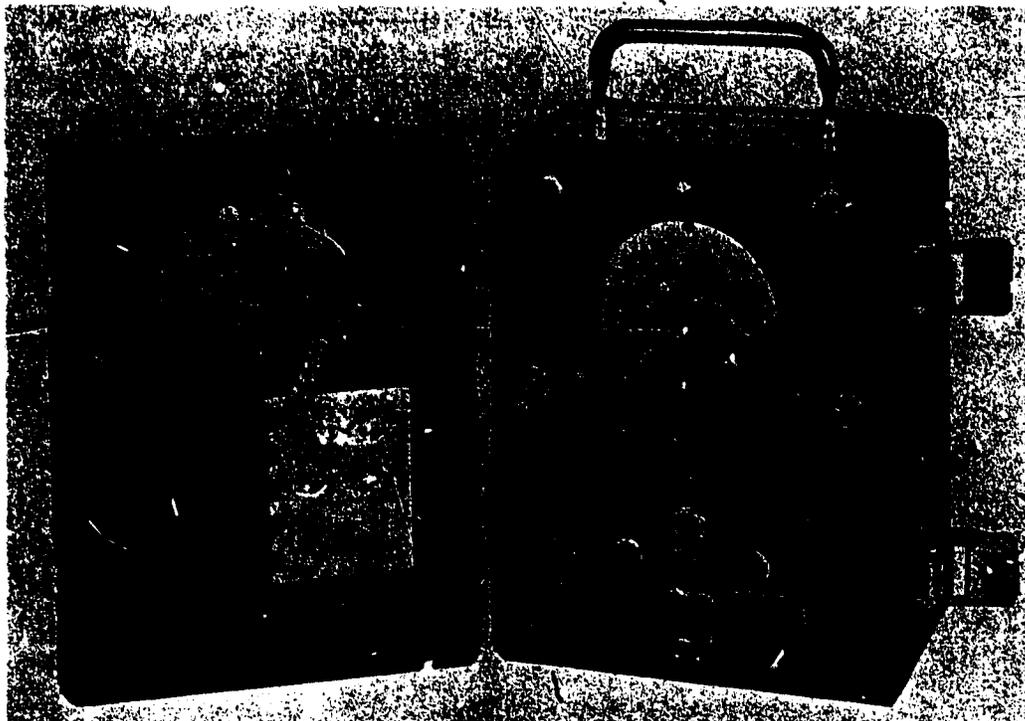


Figure 13-50.— Transistor Test Set TS-1100/U.

72.37

Before testing a diode, its polarity must be determined. The diode usually is marked with a plus (+) or minus (-) sign. Connect the test leads to the diode in a forward bias condition, that is, the positive lead to the positive side of the diode and the negative lead to the negative side. Current will now flow easily, and if a reading of 1000 ohms or less is obtained, this part of the test is good. If a higher reading is obtained, the diode is open.

Connect the test leads to the diode in a reverse bias condition—the positive lead to the negative side of the diode and the negative lead to the positive side. Current will not flow readily, and a reading in excess of 10,000 ohms should be obtained. If a reading under 10,000 ohms is obtained, the diode is shorted.

As a general rule, the front-to-back ratio should be at least 10 to 1.

When testing power transistors, the same ratio (10 to 1) holds true, except that the reverse resistance must be in excess of only 1000 ohms.

Since damage to transistors could occur when using voltages above approximately 6 volts, care must be taken to avoid using resistance

scales where the internal voltage of the ohmmeter is greater than 6 volts. This higher potential is usually found on the higher resistance scales. Excess current might also cause damage to the transistor under test. Since the internal current limiting resistance generally increases as the resistance range is increased, the low range of the resistance scale should also be avoided. Basically, if we stay away from the highest resistance range (possible excessive voltage) and the lowest resistance range (possible excessive current), the ohmmeter should present no problems in transistor testing. Generally speaking, the RX10 and RX100 scales may be considered safe.

The polarity of the battery, as well as the voltage value, must be known when using the ohmmeter for transistor testing. Although, in most cases, the ground or common lead (black) is negative and the hot lead (red) is positive, this battery set-up is not always the case.

It is possible to reverse the polarity of the ohmmeter leads by changing the function switch position. This means that the black or common lead is now the positive battery and the

red lead is the negative battery. Caution: Although the jacks of the meter may show a negative sign under the common and a positive sign under the other jack, these do not indicate the internal polarity of the battery to the jack.

- BEFORE making any resistance measurements, make sure that all power to the circuit under test has been disconnected and that all capacitors have been discharged.


- Do not use an ohmmeter which passes more than one milliampere through the circuit under test.

- Ensure that all test equipment is isolated from the power line either by the equipment's own power supply transformer or by an external isolation transformer.

- Always connect a ground lead between COMMON for the circuit under test and COMMON on the test equipment.

- Do not short circuit any portion of a transistor circuit. Short circuiting individual components or groups of components may allow excessive current to flow, thus damaging components.

- Do not remove or replace any transistors in an energized circuit.

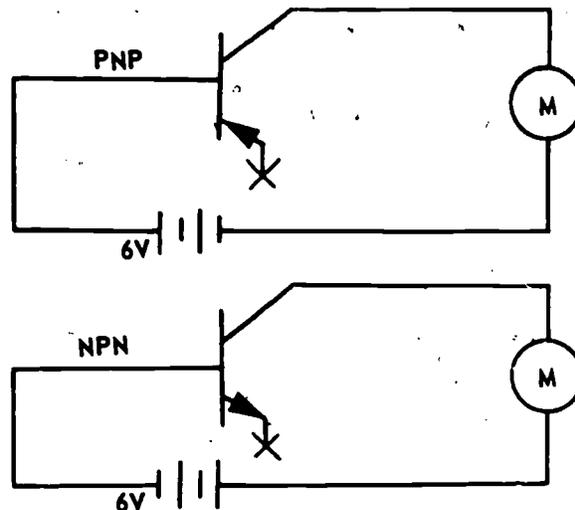

71.99

Figure 13-52. — Transistor Leakage Current Test.

ICO TEST


High collector leakage current (I_{CO}) is caused by old age and excessive temperatures. I_{CO} is greatly dependent on ambient temperature, thus care must be taken to see that temperature is controlled when measuring I_{CO} .

One sign of a defective transistor is instability of I_{CO} . Whenever I_{CO} increases slowly while being measured, it is quite evident that the transistor is defective. Excessive leakage current indicates transistor deterioration and usually is accompanied by lower than normal beta. Common causes of excessive I_{CO} include age, high ambient temperature, and contaminants that form on the emitter-base junction or collector-base junction.

Figure 13-51 shows the test circuit for measuring I_{CO} . The transistor must be out of the circuit for this test. If I_{CO} were measured with the transistor in the circuit, the indicated I_{CO} would be higher than the actual I_{CO} due to shunt current paths in the circuit.

To perform the leakage current test, the manufacturer's specifications should be consulted to ascertain the allowable limits. Determine the type of transistor and set up one of the tests shown in figure 13-52, using a 6-volt battery and milliammeter.

If the leakage current is twice as much as the specification sheet calls for, replace

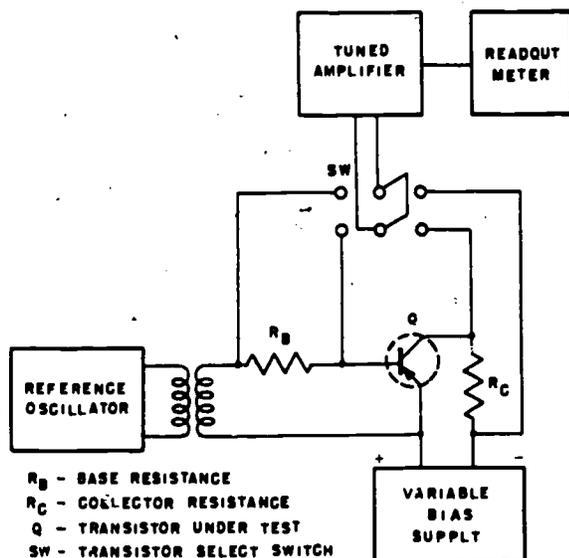

124.223

Figure 13-51.—Measuring Beta, Using Transistor Test Set TS-1100/U.

the transistor. If no specifications are available, use the following rule of thumb:

1. Silicon transistor—less than 1 microamp.
2. Small germanium transistor—less than 10 microamps.
3. Medium germanium transistor—less than 100 microamps.
4. Power transistors—less than 1 milliamperere.

The beta test can be accomplished by inserting a 10,000-ohm resistor between the collector-base junction and connecting the meter to the emitter and collector as shown in figure 13-53.

Once the resistance is obtained on the meter, use the following formula to figure the gain: $B = 1200 \div R$. The letter B represents gain, 1200 is a constant, and R is the resistance read on the meter.

Check the manufacturer's specification for the gain of each transistor. If the specifications are not available, use the following rule of thumb:


1. Silicon transistors—5 times or more.
2. High-frequency transistors—10 times or more.
3. All other transistors—15 times or more.

Whenever a particular transistor is suspected to be faulty, it may be tested in the circuit if there are no low resistance shunts (such as coils, forward biased diodes, low value resistors, etc.) across any of its leads. A low resistance shunt across any two of the transistor leads can easily cause erroneous indications on the transistor test set.

Erroneous indications can be eliminated by removing the suspected transistor from the circuit. Some manufacturers have simplified the removal and replacement of transistors by using transistor sockets. Whenever a circuit board without transistor sockets is encountered, transistors will have to be carefully unsoldered in order to test them out of circuits.

MEASUREMENTS IN TRANSISTOR CIRCUITS

The many types of transistor base connection arrangements require that the leads be properly identified to secure correct hookup to the tester.

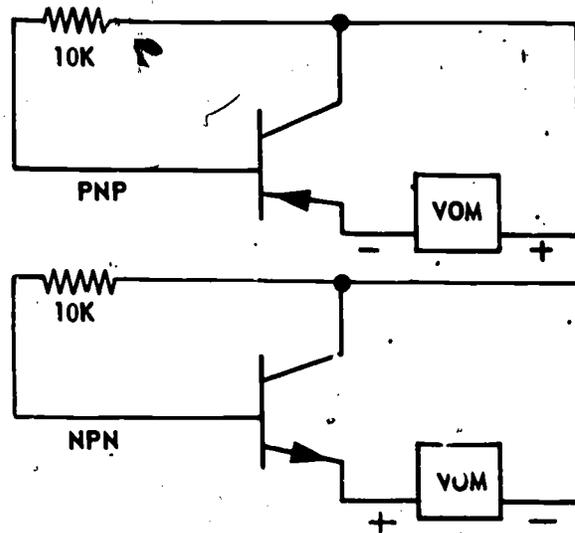

71.100

Figure 13-53.— Transistor Gain Test.

The TS-1100/U test socket arrangement is compatible with some transistor types, but not all types. If the leads are long enough, it is generally possible to effect proper hookup by bending them. If the leads are too short, it will be necessary to use the test cable and alligator clips provided with the tester. In all cases, however, the transistor leads should be identified and then matched up with the tester connections.

The advantage of the TS-1100/U lies not only in its accuracy and simplicity, but also in its use of a-c as the testing current. This eliminates interference from direct currents and voltages that may be present and permits measurement of the gain of a transistor in-circuit, thus making it unnecessary to unsolder or disconnect the transistor for this test. This is particularly advantageous where the transistor is mounted on a module printed wiring board.

The test set has the following additional features: a switch marked PNP-NPN, which selects the proper bias polarity for the type of transistor under test; a temperature alarm indicator lamp, which will light when the ambient temperature surrounding the equipment exceeds 50°C; and a switch marked TEST, which checks the test set battery output.

The test set is also equipped to indicate a short between any two of the three elements of the transistor under test. With the transistor in-circuit, it will also indicate a short if the

Chapter 13—BASIC ELECTRONIC COMPONENTS AND CIRCUITS

circuitry between any two of the transistor elements has a resistance of 500 ohms or less. To determine whether the short is in the transistor itself or in the associated circuit, it is necessary to remove the transistor from the circuit.

A table in the instruction manual for the test set gives a numerical listing of the transistors

that can be tested. The technical manual for the test set provides information concerning the collector bias to be applied for a particular transistor and the maximum permissible collector leakage current. When the instrument is adjusted according to the instruction book, the value of beta will be indicated directly on the meter.

CHAPTER 14

LOGIC SYSTEMS

The technological advances made in data processing systems in the recent past are astonishing. The reasons for these advances are two-fold. With each system development there arises new applications of the system, and with each new system application, an insight to further developments is realized. An offshoot from these advances has been the development of equipment-operating logic systems.

One major contributing factor to these advances has been the transistor. Transistors are small in size, have low power consumption, have a long life and allow extremely flexible circuit design. They may be connected in series, in parallel, or in series-parallel to provide logic functions.

The technician, when studying data systems, usually studies number systems and Boolean Algebra. Number systems are the languages of computers. Computer problems are coded in numbers (usually binary or octal). Boolean Algebra is the language of the designer and programmer. However, a knowledge of these two subjects is not necessary for understanding the logic circuits that the electrician's mate will encounter. For the EM who wishes additional information in this field, the *Navy Electricity and Electronics Training Series*, Module 13 (NAVEDTRA 172-13-00-79), is a good reference.

CONCEPTS OF LOGIC

The basic logic circuit is as simple as a battery, switch and light bulb connected in a series circuit loop. When the switch is closed the bulb is ON (logic 1); when the switch is open the

bulb is OFF (logic 0). An electronic logic circuit either provides an output pulse (voltage) or it provides no output pulse, depending on the various input pulses (voltages). The output pulse functions the same as the light bulb turned ON; no pulse output functions the same as the light bulb turned OFF. In logics, the presence of a pulse represents a logic 1 (light bulb ON); the absence of a pulse represents a logic 0 (light bulb OFF).

POLARITY OF LOGIC


The polarity of logic circuits is determined by the manufacturer at the time of design. In positive logic, the more positive (least negative) voltage is a logic 1, while the least positive (more negative) voltage is a logic 0 (fig. 14-1A).

In negative logic, the more negative (least positive) voltage is a logic 1, while the least negative (more positive) voltage is a logic 0 (fig. 14-1B). Because of the many different configurations in the variety of logic circuits, you **MUST** check the logic polarity in the manufacturer's technical manual before working on any logic circuit. The wrong polarity would cause the output to be wrong.


Positive logic is used in all discussions in the remainder of this chapter.

LOGIC SYMBOLS

The technician has worked with electrical and electronic symbols that represent

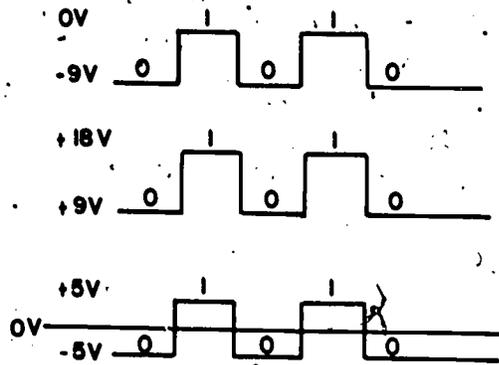

POSITIVE LOGIC
(A)



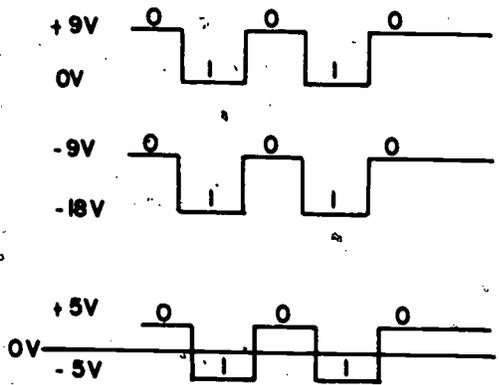


NEGATIVE LOGIC
(B)

Figure 14-1.—Logic Signals.

77.375

components of a circuit. See figure 14-2(A) and 14-2(B). Both of these circuits have a similar function. In figure 14-2(A) when there is a signal at A and at B there will be an output at Z. In the simple electrical circuit shown in 14-2(B) when switches A and B are closed, the bulb at Z will light and we have an output. Both of these circuits perform similar functions, therefore, we can use one symbol (fig. 14-2(C)) to represent the AND function. This symbol can be used to represent any AND circuit. The circuit can have any number of inputs. However, in logic circuits

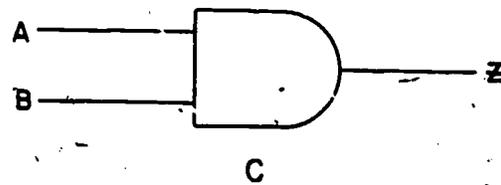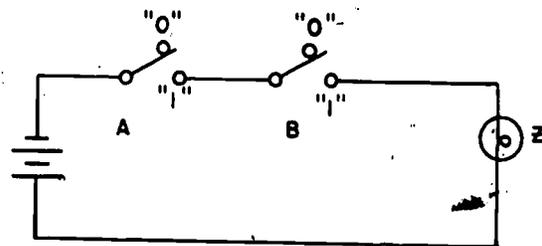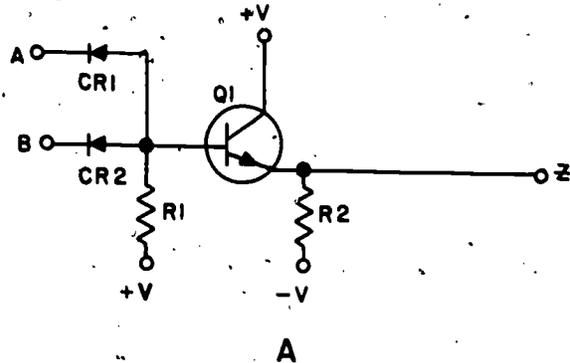

77.356.1

Figure 14-2.—AND Symbol and Circuits.

the AND function is usually limited to three inputs.

TRUTH TABLES

A table that identifies the input(s) and output of a logic function is identified as a Truth Table. See table 14-1. The different states of any functional logic circuit are read from left to right and in sequence from top to bottom. The first state is: 0 voltage at input contacts A and B, with 0 voltage output at Z. If there had been more inputs to the function, more lines would be required to show every possible

Table 14-1.—AND Truth Table

CONTACTS	INPUT		OUTPUT
	A	B	Z
VOLTAGE	0	0	0
	0	1	0
	1	0	0
	1	1	1

77.371

combination of signals that can be applied. Each horizontal line identifies the state of the input and output signals.


Truth tables are usually made with a 1 representing a high voltage and a 0 representing a low voltage. Different companies and designers use different voltages as high and as low signals. However, the same voltage levels are usually used throughout a logic system.

AND CIRCUITS


The logic symbol for an AND circuit (Fig. 14-2(B)) represents a circuit whose output assumes the 1-state when and only when all inputs are in the 1-state. All AND elements, whether a simple bulb and series contacts or an electronic switching device, must comply with the TRUTH in table 14-1. The truth table shows the conditions or states that must be present at the inputs for an output of 0 or 1. It is just as important to recognize the 0-state as it is to recognize the 1-state. Both states have meanings to the technician working with logic.

OR CIRCUITS

Another example of a circuit that the technician has worked with, and that he may not have recognized as a logic circuit, is an OR circuit. A set of parallel contacts that control a bulb makes up an OR circuit. See figure 14-3 if contacts A or B are closed, bulb Z will light. If either one or both contacts A and B are closed,

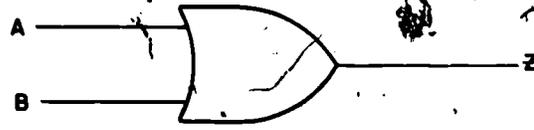

OR SYMBOL
A

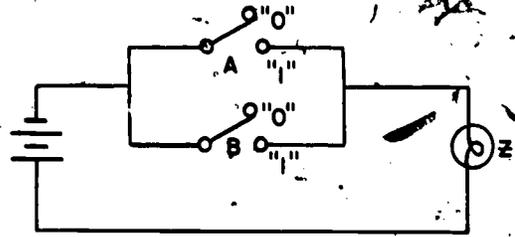

OR CIRCUIT
B

77.358.1

Figure 14-3.—OR Symbol and Circuit.

bulb Z is lighted. This is a simple OR circuit. The block diagram in figure 14-3A is the symbol that can be used to represent any OR circuit. The output of an OR circuit assumes the 1-state if one or more of the inputs assume that 1-state. See truth table 14-2.

NOT CIRCUIT

The logic symbol for a NOT circuit (fig. 14-4 A and B) represents circuits whose output assumes the 0-state when the input is in the 1-state. The output assumes a 1-state when the input is in the 0-state. In the NOT circuit the output is inverted (opposite of the input). In figure 14-4C, with an input of 1 at contact A, the relay is energized and opens contact R, the bulb Z is off (output 0). With contact A open (0 input) the relay is deenergized and contact R closes, bulb Z in ON (output 1). All NOT elements, whether a simple circuit as in figure 14-4C or an electronic switching device, must comply with the TRUTH table in table 14-3.

The symbol in figure 14-4(B) is the NOT circuit preceded by an amplifier. The amplifier will be explained later in this chapter.

Table 14-2.—OR Truth Table

CONTACTS	INPUT		OUTPUT
	A	B	Z
VOLTAGE	1	0	1
	0	1	1
	1	1	1
	0	0	0

Table 14-3.—NOT Truth Table


INPUT	OUTPUT
A	Z
1	0
0	1

77.377


77.372



A. NOT SYMBOL

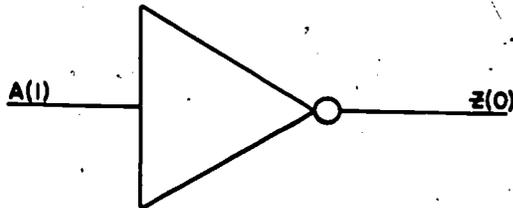

B. NOT SYMBOL WITH AMPLIFIER

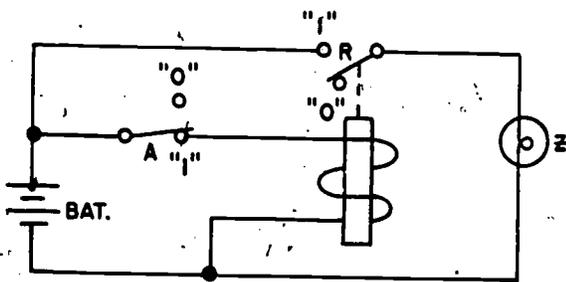


C

77.376


Figure 14-4.—NOT Symbol, Amplifier, and Circuit.

14-5B when contacts A and B close, the relay operates and contact R opens, bulb Z is off, and the output is 0. This may be considered a negative or a NOT output. This is another circuit that has a counterpart in logic, the NOT AND or NAND circuit. The NAND circuit assumes the 0-state when and only when all inputs assume the 1-state. The symbol for the NAND is made by adding the symbol (○) for an inverter to the output of the AND. (See figure 14-5A.)

You see Truth Tables that use the 1 and 0 (from the binary number system) simply for convenience. Table 14-4A is the truth table for a NAND circuit. Notice in Table 14-4B that the state symbols could have been O for open and S for shut instead of the 0 and 1.

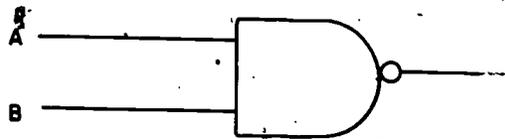

A. NAND SYMBOL

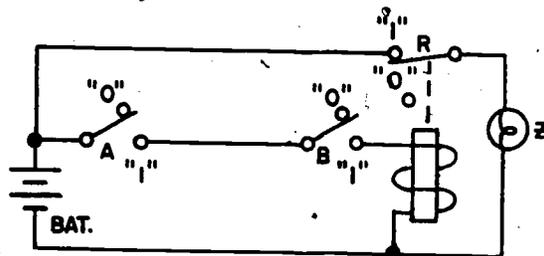

B. NAND SYMBOL AND CIRCUIT

77.359.1

Figure 14-5.—NAND Symbol and Circuit

NAND CIRCUITS

The NAND circuit is very similar to the AND circuit. Both circuits require all inputs to be 1 in order to change the output. In figure

Table 14-4.—NAND Truth Table

CONTACTS	INPUT		OUTPUT	CONTACTS	INPUT		OUTPUT
	A	B	Z		A	B	Z
VOLTAGE	0	0	1	VOLTAGE	0	0	S
	1	0	1		1	0	S
	0	1	1		0	1	S
	1	1	0		1	1	0

A

B

77.373

Table 14-5.—NOR Truth Table

CONTACTS	INPUT		OUTPUT	CONTACTS	INPUT		OUTPUT
	A	B	Z		A	B	Z
VOLTAGE	0	0	1	VOLTAGE	0	0	S
	1	0	0		1	0	0
	0	1	0		0	1	0
	1	1	0		1	1	0

A

B

77.374

NOR CIRCUIT


The NOR circuit is very similar to the OR circuit, as both circuits require only one of the inputs to be in a 1-state to change the output. In figure 14-6B, if contact A or B or both close, the relay is operated contact R opens, bulb Z is off and the output is 0. Notice that the inverter symbol (O) has been added to the output of the OR symbol in figure 14-6A. The output assumes the 1 state when and only when the inputs assume a 0-state. Table 14-5 is the truth table

for a NOR circuit. The significant difference between the AND and the NAND, and between the OR and the NOR was the inversion of the output signals.


The NOR circuit in figure 14-6(A) is almost identical to the NOT circuit, (figure 14-4(C)). The major difference between the NOR and NOT circuits, is the NOR circuit will always have two or more inputs in parallel.

INHIBIT


The INHIBIT circuit shown in figure 14-7 is also a combination of an AND and a NOT

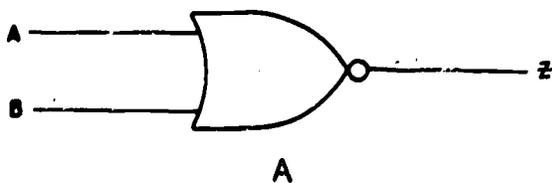


A

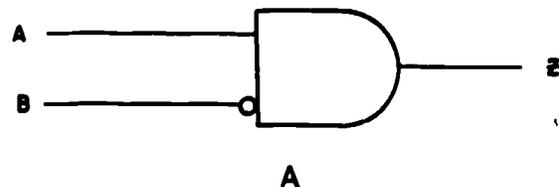

A

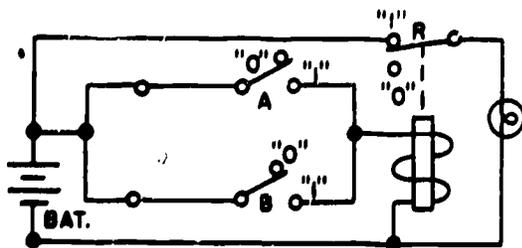

B

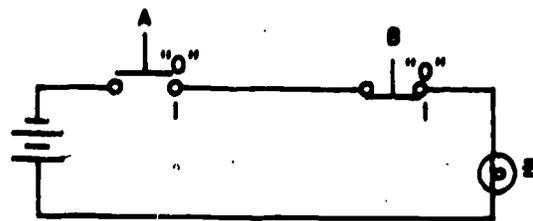

B

77.360.1

Figure 14-6.—NOR Symbol and Circuit.

77.361.1




Figure 14-7.—INHIBIT Symbol and Circuit.

operation, but the NOT operation is placed in one of the input legs. (In the example shown, the inversion occurs in the B input leg, but in actual use it could occur in any leg of the AND gate. In figure 14-7B, contact A is normally open and contact B normally closed. If contact A is closed the bulb Z is turned on, output 1-state. If contact A is closed and contact B is operated or opened, there is no current supplied to the bulb, Z = 0. Therefore, we can state that contact B inhibits the operation of output Z. Notice that the truth table 14-6 shows the position of contacts A and B, if we consider that 1 is the operated position and 0 is the NOT operated position. NOTE: Whenever the symbol for the NOT or inverter appears in a logic diagram, it indicates signal inversion.

EXCLUSIVE OR CIRCUIT

The Exclusive OR circuit is a modified OR circuit. Figure 14-8B shows one Exclusive OR circuit. To simplify the drawing, the symbol in figure 14-8C is used. When a signal is present at input contact A or B (1-state), the output bulb Z is ON (output 1-state). If the inputs at contacts A and B are both in the 1-state or 0-state, the output Z is in the 0-state.

The Exclusive OR circuit is a modified OR circuit. The circuit in figure 14-8A shows two inhibitors on the AND inputs and the AND outputs connected into an OR circuit. In figure 14-8B, an input 1 on A completes the circuit through the battery through B's contacts in the

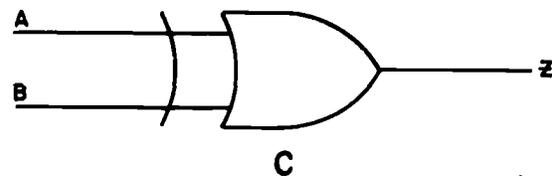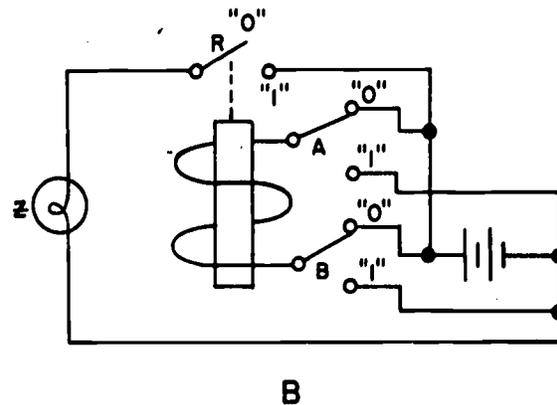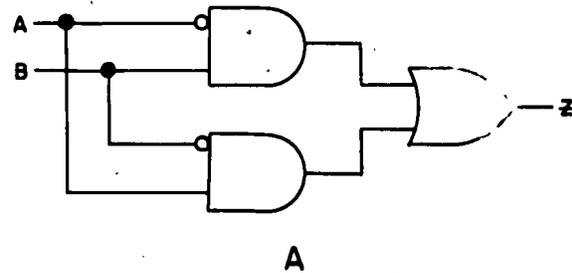

77.379

Figure 14-8.—EXCLUSIVE OR Symbol and Circuit.

Table 14-8.—INHIBIT Function Table

CONTACTS	INPUT		OUTPUT
	A	B	Z
VOLTAGE	0	0	0
	1	0	1
	0	1	0
	1	1	0

77.378

zero position putting power to the relay; contact R closes, the bulb Z is on (output 1). Contacts A and B of figure 14-8B inhibit each other. To complete the circuit to the relay coil, one contact must be in 1 position and the other contact in the 0 position. If both inputs are 1 or 0 the output is 0.

Logic symbols are used rather than the detailed circuitry in electronics to simplify the circuits for signal tracing. The same is true for figure 14-8A which is the Exclusive OR circuit with three logic symbols. In figure 14-8C, the three logic symbols are combined under one symbol thus simplifying the signal tracing; the

output is still the same, as shown in TRUTH Table 14-7 for the Exclusive OR circuit.

Table 14-7 is the TRUTH table for the Exclusive OR circuit. By adding an inverter to the Exclusive OR output, the exclusive OR

Table 14-7.—EXCLUSIVE OR Truth Table


CONTACTS	INPUT		OUTPUT
	A	B	Z
VOLTAGE	1	1	0
	1	0	1
	0	1	1
	0	0	0

77.380

becomes an Exclusive NOR. Figure 14-9 is the symbol for the Exclusive NOR circuit; table 14-8 is the Exclusive NOR TRUTH TABLE.

FLIP-FLOPS

The logic symbols for flip-flops are shown in figure 14-10. Symbol A shows two inputs, set (S) and clear (C), and two outputs, 1 and 0. A pulse applied to the S input will cause the outputs to be as indicated on the symbol. Conversely, a pulse applied to the C input will cause the outputs to be the NOT function of those indicated on the (A) symbol. In symbol (B), a trigger has been added. A pulse applied to the T input will cause the flip-flop to change its state, so that whichever logical output was

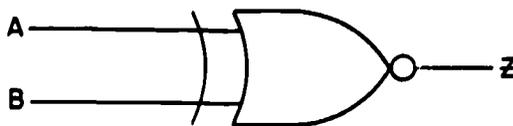

77.381

Figure 14-9.—EXCLUSIVE NOR Symbol.

Table 14-8.—EXCLUSIVE NOR Truth Table


CONTACTS	INPUT		OUTPUT
	A	B	Z
VOLTAGE	0	0	1
	1	0	0
	0	1	0
	1	1	1

77.382

present previously will be reversed. Symbol (C) shows a flip-flop with a single input, T. The action of the input pulse is the same as described for the T input of symbol (B).


MULTIVIBRATOR

The single-shot multivibrator (fig. 14-11) is activated by the input signal. The amplitude, wave shape and duration of the input signal is usually indicated on the diagram. The output signal shape, amplitude, duration, and polarity are determined by the circuit characteristics of the single-shot multivibrator, not by the input signal. The normal inactive state of its single-shot output is the 0-state. When activated, it changes to the indicated 1-state, remains there for the characteristic time of the device, and returns to the 0-state. The duration of the on-time of the single-shot multivibrator will normally need to be included on a tagging line inside the symbol. When required, stylized waveforms indicating duration, amplitude, and rise and fall time may be used.

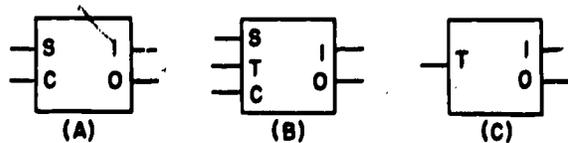

77.382

Figure 14-10.—FLIP-FLOP Symbols.

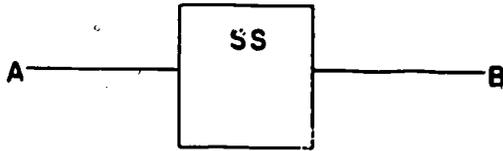

77.363

Figure 14-11.—SINGLE SLOT Multivibrator Symbol.

SCHMITT TRIGGER


The Schmitt trigger (fig. 14-12) is activated when the input signal crosses a specified turn-on threshold toward the indicated 1-state, and remains active until the input signal crosses a specified turn-off threshold toward the 0-state. The output signal shape, amplitude, and polarity are determined by the circuit characteristics of the Schmitt trigger and not by the input signal. The normal inactive state of the Schmitt trigger output is the 0-state. When activated, it changes to the indicated 1-state, and remains there as long as the input exceeds the threshold value.

MEMORY

The MEMORY circuit (Fig. 14-13) has a set (S) and a reset (R) terminal for inputs with one output terminal. A set signal, when applied, causes a continuous output even when the set signal is removed. A reset signal will cause the output to return to the 0 or off- state.


PULSER

The PULSER (Fig. 14-14) generates pulses that drive Shift Registers, Binary Counters, or Steppers. An input at terminal ① produces a 10

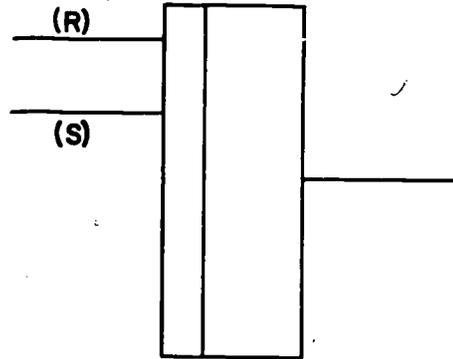

77.365

Figure 14-13.—Memory Symbol.

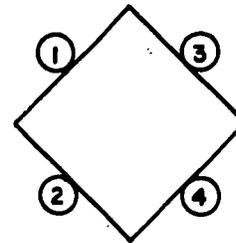


77.366

Figure 14-14.—Pulser Symbol.

milli-second negative output pulse at terminal ③ followed immediately by a 5 micro-second negative pulse at terminal ④. An input signal at terminal ② (not used in this chapter) would produce a 150 micro-second negative pulse at terminal ④. The negative pulse decreases the +10V output to +5V. The PULSER input terminal ① must be deenergized to restart the series of pulses.

STEPPER

The STEPPER (Fig. 14-15) has step (ST), reset (R) and set (S) input terminals with as many as five output terminals (for a 5-bit stepper). It can be compared to a group of flip-flops, one for each output. A pulse on the reset (R) terminal causes all outputs to cease (0-state). A pulse on the S terminal sets up the

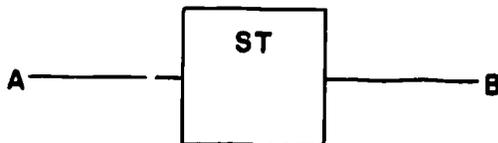

77.364

Figure 14-12.—Schmitt Trigger Symbol.

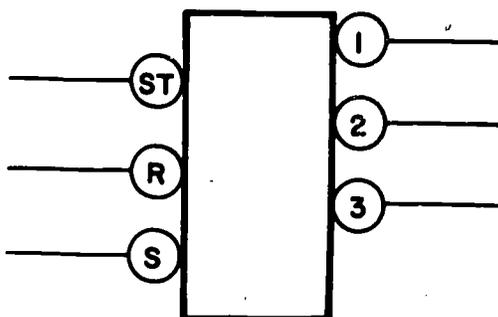


Figure 14-15.—Stepper Symbol.

77.367

flip-flops for operation with the outputs off. A pulse on the ST terminal causes the first flip-flop to shift with terminal 1 going to the 1, or on state. Another pulse on the ST causes terminal 1 to shift to the 0-state and terminal 2 to shift to the 1-state. Subsequent pulses cause similar shifts through as many output terminals as are used. Once a terminal has an output it remains until another pulse is applied to the ST or R terminals.

AMPLIFIERS

The logic symbols for amplifiers are shown in figure 14-16. When more than one type of amplifier is used, the symbol usually includes an alpha-numerical code to identify the type, for instance, SCR. The SCR would identify an amplifier with a Silicon Controlled Rectifier.

The signal converter (Fig. 14-17) may be a simple voltage divider or a saw tooth generator. It will still be represented on the logic diagram

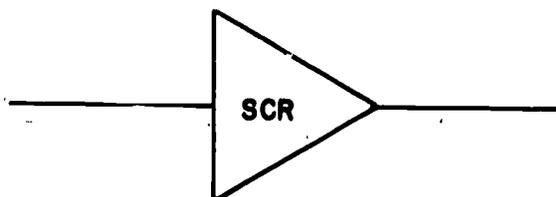


Figure 14-16.—Amplifier Symbol.

77.368

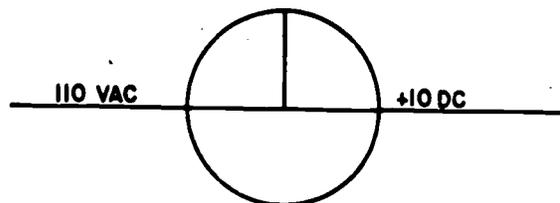


Figure 14-17.—Signals Converter Symbol.

77.369

by a symbol that identifies its function. The diagram may include the voltage input and output and their wave shapes. The technical manual for a system will have a section devoted to the description of each function and identification of each part in the circuit of the function.

Not all of the above logic circuits will be used by the electrician's mate nor are they intended to be a listing of all the logic circuits that exist. They are however, a sample which includes the most common ones and will give you an idea of what can be seen in the realm of logic.

Although it is possible to go much deeper into theory and into the individual logic circuitry consisting of transistors, diodes, resistors, etc. the electrician's mate is not expected to be able to design nor to go very deeply into the repair of logic components. Understanding the signals going into and out of the logic symbols will enable him to follow an operation on a drawing and find a problem when one exists. Most repairs will consist of replacing one printed circuit board plug-in module or an integrated circuit with a new one.

APPLICATION OF LOGIC CIRCUITRY

In order to provide application of the knowledge you have accumulated about logic up to this point, part of a theoretical logic operated elevator system has been developed. This material is NOT intended to teach the elevator system. Although this circuit is theoretical and cannot be used to troubleshoot a particular

system, by studying the material and learning the principles or rules for reading logic prints and troubleshooting, you will be able to troubleshoot any logic control system. (See figure 14-18, sheets 1 and 2 at the end of this chapter.) Only the DOWN and HIGH-SPEED contactor circuits are shown along with one switch to operate them. In actuality there would be switches at all levels for sending the elevator to all other levels. There would also be sensors along the elevator trunk to tell the system when to slow and/or stop. Normally, there is also additional circuitry for the UP contactor and a LOW-SPEED contactor, circuitry for engaging and disengaging the locking bars, and other safety type circuits.

INTRODUCTION TO LOGIC DIAGRAMS

A complete elevator circuit would fill three or four full size plans with much jumping from one to the other and back again. In order to take this into account figure 14-18 was set up to show how this is accomplished and also to take advantage of it. Notice that each figure (sheet 1 and sheet 2) is numbered along one side. That is the locator system for a particular signal from one sheet to the other. Take, for instance, the first AND circuit on the left side of sheet 1. One of the inputs is clearly shown but the other has a number (2-01) for the input. This number refers you to that portion of the other sheet, i.e. sheet 2, at the 01 level (somewhere across the page from 2-01) of the page. Normally this would connect you with more circuitry but in order to simplify this diagram for our purposes an explanation is given instead.

Before getting into the details of the operation let us make the following assumptions: the elevator platform is on the main deck, and, of course, that is the location of the pushbutton switch to send it to another level. We will only go into the circuitry for starting the elevator platform in the DOWN direction at HIGH-SPEED toward the second deck. We will assume that it will operate normally and will slow at the proper time and stop upon reaching the second deck. This is a cable-operated CARGO elevator and therefore, locking bars engage whenever the platform stops at a deck in order to steady it even with the

deck. All the logic circuits use +10 volts as the 1 or ON state and 0 volts as the 0 or OFF state.

Remember that you do not need to completely understand what is going on inside the logic component to trace the signal as long as you realize what inputs are necessary to result in outputs for that particular component.

SIGNAL TRACING

Refer to figure 14-18 sheet 1, starting at the left side. When the button is pushed for sending the elevator to the second deck, a +48v circuit is completed to a signal converter which puts out a +10v signal to logic circuit A2B (AND). A2B requires both inputs to produce an output, so, referring to 2-01 of sheet 2, we find that the platform must be at the main deck for this switch to initiate a move. A2B sends a signal simultaneously to A7D and A8B, both of which, being OR logic networks, pass the signal on the A9B (AND) and A8D (OR) respectively. A9B already has one input from B8A (NOT) which gives a continuous output as long as there is no signal input to it, therefore A9B passes the signal on to set the memory in A10B which will now give continuous output until reset.

Leaving that signal standing for a moment, return to A8D (an OR) which was at the same time passing along its signal to A16A and A19C. A16A is a PULSER which, upon receiving the +10v signal on its input terminal, causes the signal which was already present on its terminal ③ to drop from +10v to +5v for one milli-second. This drop in signal level is felt at the reset terminal of STEPPER A18 causing it to reset and all of its output signals, if any, to cease. After a one milli-second delay, the voltage at the set terminal of A16A drops from +10v to +5v for five micro-seconds which is sensed at the set terminal of A18 and sets it up to start with a signal from A16B (on A18's step input terminal). This step input is now there as A10B second deck memory sent an output signal through A12D and A16B so now A18 produces a steady +10v signal at terminal ①. This signal now allows A19C (AND) (which we left with one input signal awhile back) to set the memory in the DOWN (B5A) and through A15C to the memory in HIGH-SPEED (A11C).

At this point the pushbutton can be released as the memories A10B, A11C, and B5A as well as stepper A18 all have continuous outputs.

Continuing on from the second deck memory A10B, the signal goes through OR circuits A12A and A12B to additional circuitry for disengaging the locking bars and ringing the warning bell.

In the meantime, the HIGH SPEED memory A11C, sends its signal through B4C (OR) down to A13D (AND) where it combines with the output from the DOWN memory (B5A) and signal that locking bars are disengaged (2-14) and produces a signal from A13D. A13D in turn sends a signal through B9D (OR) to an SCR amplifier which delivers 120v and energizes the DOWN contactor. At the same time A13D sent a signal up to B6A OR which passes it on to A19D AND. A19D now has inputs from B6A, A18(1) and B8E (which has an output since it has no input) and the signal can be passed on to the SCR amplifier which produces 120v to energize the HIGH-SPEED contactor. The elevator now commences to move, cutting off the platform location signal (2-10) to A12D (deenergizing A16B Pulser).

As the elevator approaches the second deck, sensors send a signal into A12D which still has an input from 2nd DK MEMORY A10B. A12D (via 2-10) passes the signal on to PULSER A16B which sends its negative pulse to the step terminal of A18. A18 then cuts off the output from terminal ① and produces a steady +10v output at terminal ② which is applied through other circuitry (not shown) to start the motor in low speed. At the same time A12D was sending a signal to PULSER A16B a signal was also being sent (not shown) to reset the HIGH-SPEED memory. Since the platform has now moved past the slow sensor A12D is again without an output.

As the platform reaches the second deck, another signal is sent through A12D (via 2-10), A16B sends another pulse, and A18 cuts off the signal on terminal ② and produces one at terminal ③. The output from A18(3) is applied through circuitry (not shown) which resets all the memories, stopping the elevator, and causes engagement of the locking bars. The warning bell now ceases to ring and the operation is over.

MAINTENANCE

Many logic operated equipments are designed for relatively easy repair. Rather than trying to find which transistor, resistor, etc. is faulty, one module can be easily removed and replaced with one from on-board spares.

LOCATING MODULES IN A CONTROL CABINET

Each module is a separate unit with up to five separate logic circuits on one board. For instance, a NOT INVERTER board has five separate NOT circuits while the OR and AND boards may have four circuits but a MEMORY board may have only three and a STEPPER only one. Circuit boards having the same logic circuits may be interchangeable. In some systems, each separate circuit on a board may have an indicating light on the front which lights up when that particular circuit is in the 1-state (has an output). These circuits are labeled from top to bottom of each board, A through E (if 5 circuits are on the board).

The plug-in modules are arranged in rows inside the cabinet. These rows are labeled A, B, C, etc., depending upon the number of rows used. Each module in each row is, in turn, labeled 1, 2, 3, etc., depending upon the number of modules in the row. The circuits in the drawings are labeled according to their locations.

Now we can locate any circuit on the diagram by its label. Take the first AND circuit on the left in figure 14-18, sheet 1, A2B. We know it is in row A, the second module from the left, and the second circuit from the top of the board. We can tell if it is passing its signal by looking at the light labeled B on that module.

TROUBLESHOOTING (IDENTIFYING FAULTY PRINTED CIRCUIT CARDS)

Take another example, B9D, the last OR circuit in the DOWN contactor circuit. If, while troubleshooting a problem, we look at the B row, ninth module, and light D is not on, we know that A13D must pass a signal so we look

ELECTRICIAN'S MATE 3 & 2

to see if A13D's light is on. If not, we can go to B5A, B4C, or the other input to A13D (labeled here 14-18). In this way the fault can be located and a new circuit card installed while the faulty one is being repaired (normally sent to the factory),

The total equipment diagram, of course, covers much more than was covered here but by being able to read and understand the logic diagrams an electrician's mate should be well on his way to being able to maintain the total system.

403

14-12



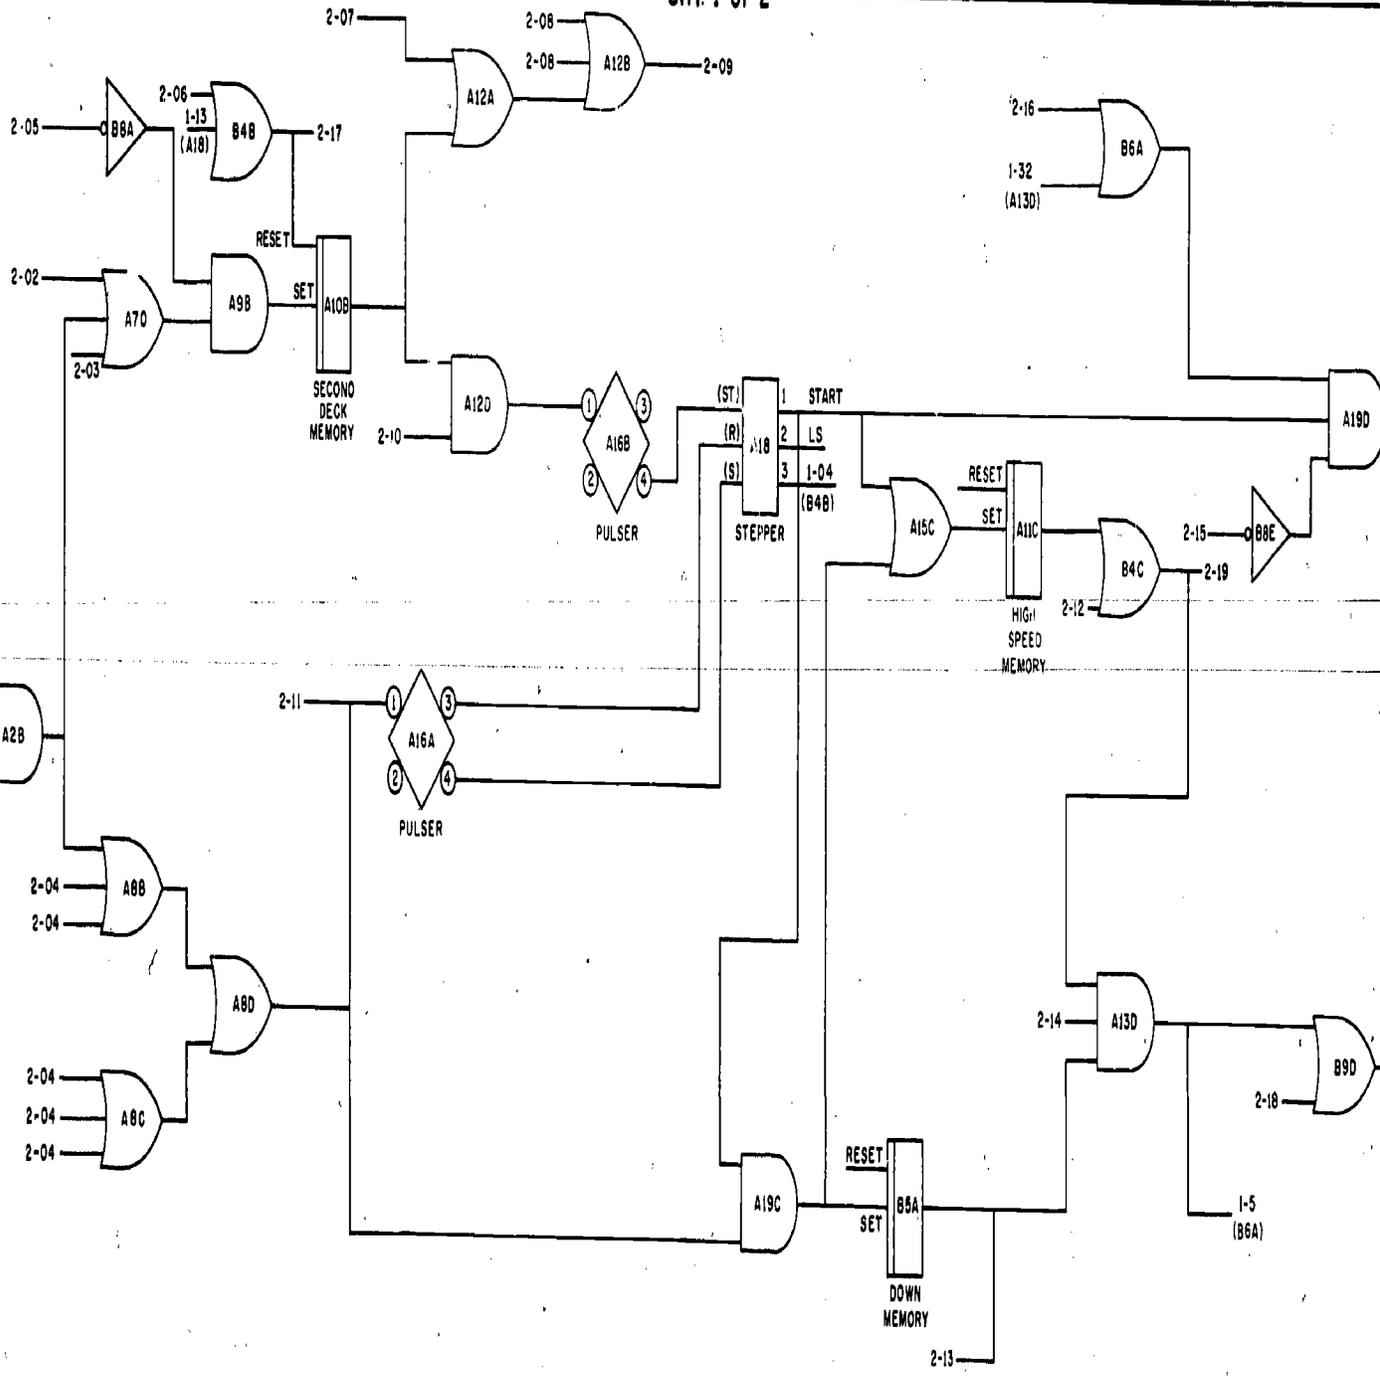


Figure 14-18.-Elevator Logic Diagram.

404

 405



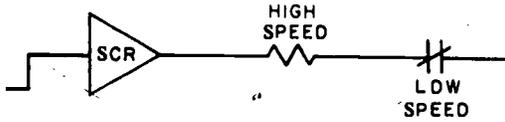

- 2-01 PROXIMITY SWITCH INDICATING CAR AT MAIN DECK (1-16)
- 2-02 FROM CIRCUIT COMPARABLE TO A2B FOR SWITCH LOCATED AT 3RD DECK (1-08)
- 2-03 FROM CIRCUIT COMPARABLE TO A2B FOR SWITCH LOCATED AT 4TH DECK (1-10)
- 2-04 FROM OTHER SWITCHES WHICH WOULD REQUIRE DOWN MOVEMENT (1-24, 1-29)
- 2-05 SIGNAL FROM CIRCUIT INDICATING LOW SPEED SIGNAL IN EFFECT (1-04)
- 2-06 SIGNAL CAUSED BY ABNORMAL CONDITION - SLACK CABLE, ETC. (1-03)
- 2-07 SIGNAL FROM MAIN DECK MEMORY CIRCUIT (1-01)
- 2-08 SIGNALS FROM OTHER DECK LEVELS - 3RD DECK, 4TH DECK (1-01)
- 2-09 TO CIRCUITRY FOR DISENGAGING LOCKING BARS AND RINGING WARNING BELL (1-02)
- 2-10 SIGNAL FROM OTHER CIRCUITRY WHICH TELLS LOCATION OF PLATFORM (1-12)
- 2-11 SIGNAL FROM OTHER CIRCUITRY WHICH REQUIRES MEMORY SET (1-19)
- 2-12 SIGNAL FROM LOW SPEED MEMORY (1-16)
- 2-13 SIGNAL TO RESET UP MEMORY (1-36)
- 2-14 SIGNAL THAT CONDITIONS ARE OK - LOCKING BARS DISENGAGED, ETC. (1-27)
- 2-15 SIGNAL FROM LOW SPEED CIRCUITRY (1-14)
- 2-16 SIGNAL FROM "UP" CIRCUITRY (1-13)
- 2-17 SIGNAL TO RESET ALL OTHER "MEMORIES" (1-04)
- 2-18 SIGNAL FROM MANUAL ELECTRIC (JOG) OPERATION (1-29)
- 2-19 SIGNAL TO "UP" CIRCUITRY (1-15)

CHAPTER 15

ELECTRICAL AUXILIARIES

Electrician's Mates are required to maintain various types of electrical equipment aboard ship.

This chapter explains the operating principles of some of the most widely-used types of auxiliary equipment and describes methods and procedures for operating and maintaining them.

SMALL CRAFT CIRCUITRY AND COMPONENTS

Small craft perform an important function in the daily routines of all naval vessels. When their parent ships are at sea, they serve as duty life boats and also as troop carriers or assault boats. In port, they are used for transporting stores and liberty parties and for conducting other ship's business.

The electrical system covered here is representative of those found on a large number of ship's boats and small craft. The electrical system consists of the (1) engine starting system, (2) ignition system, and (3) battery charging systems.

ENGINE STARTING SYSTEM

The engine starting system will vary, depending on whether the boat is equipped with a gasoline engine or a diesel engine. For example, a gasoline engine-driven boat includes an electrical ignition system; whereas, a diesel engine-driven boat often includes an electric air heater. The majority of the Navy's small boats are powered by diesel engines due to the safety hazard of using gasoline, however some gasoline engine driven boats are in use.

The engine starting system consists essentially of a storage battery, starting motor, and suitable controls.

STORAGE BATTERY

The lead acid storage battery provides the power source for starting small boat engines. The battery also functions as a voltage stabilizer in the electrical system, and supplies electrical power for a limited time when the electrical load exceeds the output of the boat's generator. The boat battery for a 24-volt starting system normally consists of four individual six-volt batteries connected in series. The advantages of using six-volt batteries are ease of handling the smaller batteries and easy replacement of any single battery in the event of a defective cell.

Periodic inspection of the storage battery is essential in maintaining maximum efficiency and long life of the battery. Batteries that are used to start motor-boat engines are subjected to moderately heavy use and may require frequent charging in addition to the charging provided by the engine generator or alternator.

Specific Gravity

The ratio of the weight of a certain volume of liquid to the weight of the same volume of water is called the specific gravity of the liquid. The specific gravity of pure water is 1.000. Sulfuric acid has a specific gravity of 1.830; thus sulfuric acid is 1.830 times as heavy as water. The specific gravity of a mixture of sulfuric acid and water varies with the strength of the solution from 1.000 to 1.830.

As a storage battery discharges, the sulfuric acid is depleted and the electrolyte is gradually converted into water. This action provides a guide in determining the state of discharge of the lead-acid cell. The electrolyte that is usually placed in a lead-acid battery has a specific gravity of 1.350 or less. Generally, the specific gravity of the electrolyte in standard storage batteries is

adjusted between 1.210 and 1.220. On the other hand the specific gravity of the electrolyte in submarine batteries when charged is from 1.250 to 1.265, while in aircraft batteries when fully charged it is from 1.285 to 1.300.

Hydrometer

The specific gravity of the electrolyte is measured with a hydrometer. In the syringe type hydrometer (fig. 15-1), part of the battery electrolyte is drawn up into a glass tube by means of a rubber bulb at the top.

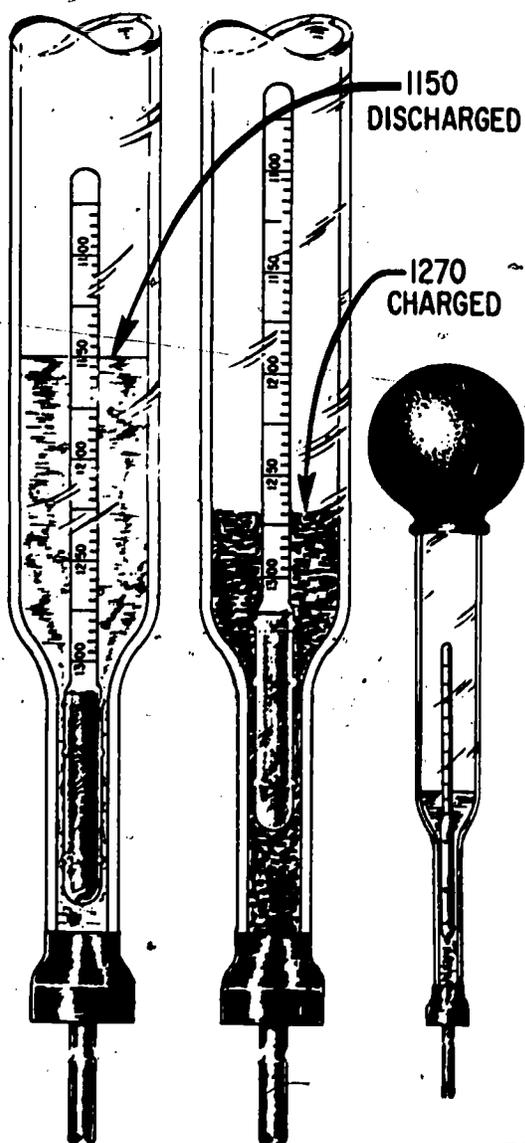


Figure 15-1.— Type-B hydrometer.

The hydrometer float consists of a hollow glass tube weighted at one end and sealed at both ends. A scale calibrated in specific gravity is laid off axially along the body (stem) of the tube. The hydrometer float is placed inside the glass syringe and the electrolyte to be tested is drawn up into the syringe, thus immersing the hydrometer float into the solution. When the syringe is held approximately in a vertical position, the hydrometer float will sink to a certain level in the electrolyte. The extent to which the hydrometer stem protrudes above the level of the liquid depends upon the specific gravity of the solution. The reading on the stem at the surface of the liquid is the specific gravity of the electrolyte in the syringe.

The Navy uses two types of hydrometer bulbs, or floats, each having a different scale. The type-A hydrometer is used with submarine batteries and has two different floats with scales from 1.060 to 1.240 and from 1.120 to 1.300. The type-B hydrometer is used with portable storage batteries and aircraft batteries. It has a scale from 1.100 to 1.300. The electrolyte in a cell should be at the normal level when the reading is taken. If the level is below normal, there will not be sufficient fluid drawn into the tube to cause the float to rise. If the level is above normal there is too much water, the electrolyte is weakened, and the reading is too low. A hydrometer reading is inaccurate if taken immediately after water is added, because the water tends to remain at the top of the cell. When water is added, the battery should be charged for at least an hour to mix the electrolyte before a hydrometer reading is taken.

CAUTION: Hydrometers should be flushed daily with fresh water to prevent inaccurate readings. Storage battery hydrometers must not be used for any other purpose.

Corrections

The specific gravity of the electrolyte is affected by its temperature. The electrolyte expands and becomes less dense when heated and its specific gravity reading is lowered. On the other hand, the electrolyte contracts and becomes denser when cooled and its specific gravity reading is raised. In both cases the electrolyte may be from the same fully charged storage cell. Thus, the effect of temperature is to distort the readings.

Most standard storage batteries use 80°F as the normal temperature to which specific gravity readings are corrected. To correct the specific gravity reading of

BE.39

a storage battery, add 1 point 3°F to the reading for each 3°F above 80° and subtract 1 point for each 3°F below 80°.

Adjusting Specific Gravity

Only authorized personnel should add acid to a battery. Acid with a specific gravity above 1.350 is never added to a battery.

If the specific gravity of a cell is more than it should be, it can be reduced to within limits by removing some of the electrolyte and adding distilled water. The battery is charged for 1 hour to mix the solution, and then hydrometer readings are taken. The adjustment is continued until the desired true readings are obtained.

Mixing Electrolyte

The electrolyte of a fully charged battery usually contains about 38 percent sulfuric acid by weight, or about 27 percent by volume. In preparing the electrolyte distilled water and sulfuric acid are used. New batteries may be delivered with containers of concentrated sulfuric acid of 1.830 specific gravity or electrolyte of 1.400 specific gravity, both of which must be diluted with distilled water to make electrolyte of the proper specific gravity. The container used for diluting the acid should be made of glass, earthenware, rubber, or lead.

When mixing electrolyte, **ALWAYS POUR ACID INTO WATER**—never pour water into acid. Pour the acid slowly and cautiously to prevent excessive heating and splashing. Stir the solution continuously with a nonmetallic rod to mix the heavier acid with the lighter water and to keep the acid from sinking to the bottom. When concentrated acid is diluted, the solution becomes very hot.

Treatment of Acid Burns

If acid or electrolyte from a lead-acid battery comes into contact with the skin, the affected area should be washed as soon as possible with large quantities of fresh water, after which a salve such as petrolatum, boric acid, or zinc ointment should be applied. If none of these salves are available, clean lubricating oil will suffice. When washing, large amounts of water should be used, since a small amount of water might do more harm than good in spreading the acid burn.

Acid spilled on clothing may be neutralized with dilute ammonia or a solution of baking soda and water.

Capacity

The capacity of a battery is measured in ampere-hours. As mentioned before, the ampere-hour capacity is equal to the product of the current in amperes and the time in hours during which the battery is supplying this current. The ampere-hour capacity varies inversely with the discharge current. The size of a cell is determined generally by its ampere-hour capacity. The capacity of a cell depends upon many factors, the most important of these are as follows:

1. The area of the plates in contact with the electrolyte.
2. The quantity and specific gravity of the electrolyte.
3. The type of separators.
4. The general condition of the battery (degree of sulfating, plates buckled, separators warped, sediment in bottom of cells, etc.).
5. The final limiting voltage.

Rating

Storage batteries are rated according to their rate of discharge and ampere-hour capacity. Most batteries, except aircraft and some used for radio and sound systems, are rated according to a 10-hour rate of discharge—that is, if a fully charged battery is completely discharged during a 10-hour period, it is discharged at the 10-hour rate. Thus if a battery can deliver 20 amperes continuously for 10 hours, the battery has a rating of 20 × 10, or 200 ampere-hours. Thus the 10-hour rating is equal to the average current that a battery is capable of supplying without interruption for an interval of 10 hours. (NOTE: Aircraft batteries are rated according to a 1-hour rate of discharge.) Some other ampere-hour ratings used are 6-hour and 20-hour ratings.

All standard batteries deliver 100 percent of their available capacity if discharged in 10 hours or more, but they will deliver less than their available capacity if discharged at a faster rate. The faster they discharge, the less ampere-hour capacity they have.

The low-voltage limit, as specified by the manufacturer, is the limit beyond which very little useful energy can be obtained from a battery. For example, at the conclusion of a 10-hour discharge test on a battery, the closed-circuit voltmeter reading is about 1.75 volts per cell and the specific gravity of the electrolyte is about 1.060. At the end of a charge, its

closed-circuit voltmeter reading, while the battery is being charged at the finishing rate, is between 2.4 and 2.6 volts per cell. The specific gravity of the electrolyte corrected to 80°F is between 1.210 and 1.220. In climates of 40°F and below authority may be granted to increase the specific gravity to 1.230. Other batteries, of higher normal specific gravity, may also be increased.

Test Discharge

The test discharge is the best method of determining the capacity of a battery. Most battery switchboards are provided with the necessary equipment for giving test discharges. If proper equipment is not available, a tender, repair ship, or shore station may make the test. To determine the battery capacity, a battery is normally given a test discharge once every 6 months. Test discharges are also given whenever any cell of a battery after charge cannot be brought within 10 points of full charge, or when one or more cells is found to have less than normal voltage after an equalizing charge.

A test discharge must always be preceded by an equalizing charge. Immediately after the equalizing charge, the battery is discharged at its 10-hour rate until either the total battery voltage drops to a value equal to 1.75 times the number of cells in series or the voltage of any individual cell drops to 1.55 volts, whichever occurs first. The rate of discharge should be kept constant throughout the test discharge. Because standard batteries are rated at the 10-hour capacity, the discharge rate for a 100 ampere-hour battery is 100/10, or 10 amperes. If the temperature of the electrolyte at the beginning of the charge is not exactly 80°F, the time duration of the discharge must be corrected for the actual temperature of the battery.

A battery of 100-percent capacity discharges at its 10-hour rate for 10 hours before reaching its low-voltage limit. If the battery or one of its cells reaches the low-voltage limit before the 10-hour period has elapsed, the discharge is discontinued immediately and the percentage of capacity is determined from the equation

$$C = \frac{H_a}{H_t} \times 100$$

where C is the percentage of ampere-hour capacity available, H_a the total hours of discharge, and H_t the total hours for 100-percent capacity. The date for each test discharge should be recorded on the storage battery record sheet.

For example, a 100-ampere-hour 6-volt battery delivers an average current of 10 amperes for 10 hours. At the end of this period the battery voltage is 5.25 volts. On a later test the same battery delivers an average current of 10 amperes for only 7 hours. The discharge was stopped at the end of this time because the voltage of the middle cell was found to be only 1.65 volts. The

percentage of capacity of the battery is now $\frac{7}{10} \times 100$,

or 70 percent. Thus, the ampere-hour capacity of this battery is reduced to $0.7 \times 100 = 70$ ampere hours.

State of Charge

After a battery is discharged completely from full charge at the 10-hour rate, the specific gravity has dropped about 150 points to about 1.060. The number of points that the specific gravity drops per ampere-hour can be determined for each type of battery. For each ampere-hour taken out of a battery a definite amount of acid is removed from the electrolyte and combined with plates.

For example, if a battery is discharged from full charge to the low-voltage limit at the 10-hour rate and if 100 ampere-hours are obtained with a specific gravity drop of 150 points, there is a drop of $\frac{150}{100}$, or 1.5 points per ampere-hour delivered. If the reduction in specific gravity per ampere-hour is known, the drop in specific gravity for this battery may be predicted for any number of ampere-hours delivered to a load. For example, if 70 ampere-hours are delivered by the battery at the 10-hour rate or any other rate or collection of rates, the drop in specific gravity is 70×1.5 , or 105 points.

Conversely, if the drop in specific gravity per ampere-hour and the total drop in specific gravity are known, the ampere-hours delivered by a battery may be determined. For example, if the specific gravity of the previously considered battery is 1.210 when the battery is fully charged and 1.150 when it is partly discharged, the drop in specific gravity is $1.210 - 1.150$, or 60 points, and the number of ampere-hours taken out of

the battery is $\frac{60}{1.5}$, or 40 ampere-hours. Thus the number

of ampere-hours expended in any battery discharge can be determined from the following items.

- I. The specific gravity when the battery is fully charged.

2. The specific gravity after the battery has been discharged.
3. The reduction in specific gravity per ampere-hour.

Voltage alone is not a reliable indication of the state of charge of a battery except when the voltage is near the low-voltage limit on discharge. During discharge the voltage falls. The higher the rate of discharge the lower will be the terminal voltage. Open-circuit voltage is of little value because the variation between full charge and complete discharge is so small—only about 0.1 volt per cell. However, abnormally low voltage does indicate injurious sulfation or some other serious deterioration of the plates.

Types of Charges

The following types of charges may be given to a storage battery, depending upon the condition of the battery:

1. Initial charge.
2. Normal charge.
3. Equalizing charge.
4. Floating charge.
5. Emergency charge.

INITIAL CHARGE.—When a new battery is shipped dry, the plates are in an uncharged condition. After the electrolyte has been added it is necessary to convert the plates into the charged condition. This is accomplished by giving the battery a long low-rate initial charge. The charge is given in accordance with the manufacturer's instructions, which are shipped with each battery. If the manufacturer's instructions are not available, reference should be made to the detailed instruction in current directives.

NORMAL CHARGE.—A normal charge is a routine charge that is given in accordance with the nameplate data during the ordinary cycle of operation to restore

the battery to its charged condition. The following steps should be observed:

1. Determine the starting and finishing rate from the nameplate data.
2. Add water, as necessary, to each cell.
3. Connect the battery to the charging panel and make sure the connections are clean and tight.
4. Turn on the charging circuit and set the current through the battery at the value given as the starting rate.
5. Check the temperature and specific gravity of pilot cells hourly.
6. When the battery begins to gas freely, reduce the charging current to the finishing rate.

A normal charge is complete when the specific gravity of the pilot cell, corrected for temperature, is within 5 points (0.005) of the specific gravity obtained on the previous equalizing charge.

EQUALIZING CHARGE.—An equalizing charge is an extended normal charge at the finishing rate. It is given periodically to insure that all the sulfate is driven from the plates and that all the cells are restored to a maximum specific gravity. The equalizing charge is continued until the specific gravity of all cells, corrected for temperature, shows no change for a 4-hour period. Readings of all cells are taken every half hour.

FLOATING CHARGE.—A battery may be maintained at full charge by connecting it across a charging source that has a voltage maintained within the limits of from 2.13 to 2.17 volts per cell of the battery. In a floating charge, the charging rate is determined by the battery voltage rather than by a definite current value. The voltage is maintained between 2.13 and 2.17 volts per cell with an average as close to 2.15 volts as possible.

EMERGENCY CHARGE.—An emergency charge is used when a battery must be recharged in the shortest possible time. The charge starts at a much higher rate

than is normally used for charging. It should be used only in an emergency as this type charge may be harmful to the battery.

dangerously explosive. No smoking, electric sparks, or open flames should be permitted near charging batteries.

Charging Rate

Normally, the charging rate of Navy storage batteries is given on the battery nameplate. If the available charging equipment does not have the desired charging rates, the nearest available rates should be used. However, the rate should never be so high that violent gassing occurs. **NEVER ALLOW THE TEMPERATURE OF THE ELECTROLYTE IN ANY CELL TO RISE ABOVE 125°F (52°C).**

STARTING MOTORS

The starting, or cranking motor is a low-voltage d-c series motor used to start internal combustion engines by rotating the crankshafts. It is flange mounted on the engine flywheel housing and is supplied with current from the battery. All starting motors are similar in design and consist essentially of a frame, armature, brushes, field windings, and drive mechanism. The armature shaft is supported on bronze bearings equipped with wick oilers. The number of field poles and brushes vary according to the cranking requirements, and the operating voltage corresponds to that of the generator.

Charging Time

The charge must be continued until the battery is fully charged. Frequent readings of specific gravity should be taken during the charge. These readings should be corrected to 80°F and compared with the reading taken before the battery was placed on charge. If the rise in specific gravity in points per ampere-hour is known, the approximate time in hours required to complete the charge is as follows:

The starting motor has low resistance; it is designed to operate under heavy load with relatively high horsepower for short periods of time. The high horsepower is accompanied by a high current that creates considerable heat, and if operated for any considerable length of time will result in failure of the motor due to overheating. Hence, the starting motor must be operated for not more than 30 seconds at a time, and at about two-minute intervals to allow the heat to dissipate. The starting current on most small boats is over 600 amperes.

rise in specific gravity
in points to complete charge

$$\frac{\text{rise in specific gravity in points}}{\text{per ampere-hour}} \times \text{charging rate in amperes}$$

The starting motor is equipped with a drive mechanism (fig. 15-2) that transmits the power from the motor to the engine. The function of the drive mechanism is to (1) engage the drive pinion with the flywheel for cranking the engine, (2) provide a gear reduction between the drive pinion and flywheel, and (3) disengage the drive pinion and flywheel after the engine is started.

Gassing


When a battery is being charged, a portion of the energy is dissipated in the electrolysis of the water in the electrolyte. Thus, hydrogen is released at the negative plates and oxygen at the positive plates. These gases bubble up through the electrolyte and collect in the air space at the top of the cell. If violent gassing occurs when the battery is first placed on charge, the charging rate is too high. If the rate is not too high steady gassing which develops as the charging proceeds, indicates that the battery is nearing a fully charged condition. A mixture of hydrogen and air can be

When the starting motor is operated, the drive mechanism causes the drive pinion to mesh with the teeth of the flywheel ring gear, thereby cranking the engine.

The gear reduction is necessary because the starting motor must rotate at a relatively high speed with respect to the engine cranking speed to produce sufficient output power to crank the engine. Thus, a gear reduction ratio of 15 to 1 will permit the starting motor to rotate at 1500 rpm while cranking the engine at 100 rpm.

As soon as the engine is started, the drive mechanism causes the drive pinion to disengage from

15-6
412

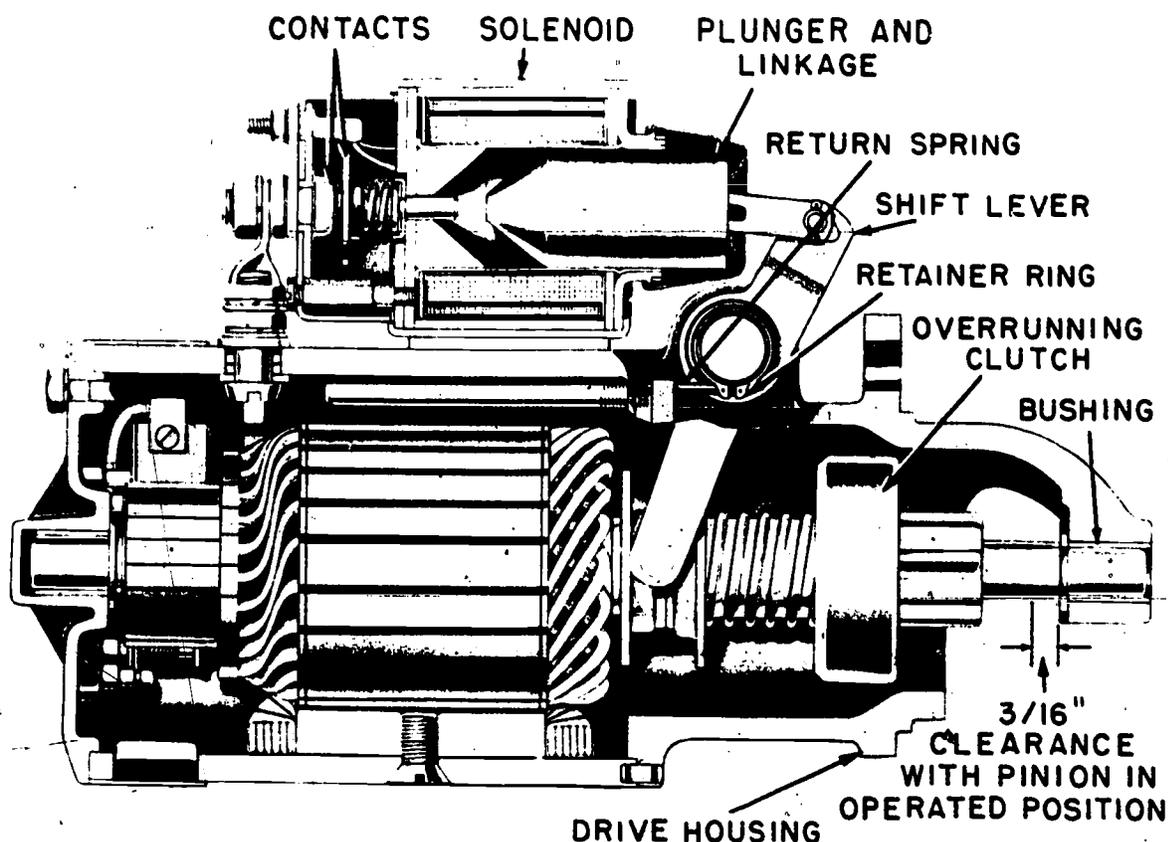

75.173(77A)

Figure 15-2.—Overrunning clutch drive with solenoid-operated switch.

the flywheel. The engine speed increases immediately and may soon attain speeds up to 1000 rpm. If the drive pinion is allowed to remain in mesh with the flywheel, the engine would drive the starting motor at speeds up to 15,000 rpm resulting in serious damage to the motor.

The overrunning clutch drive type of starting motor is described here (fig. 15-2). It provides positive engaging and disengaging of the starting motor drive pinion and the flywheel ring gear. This drive mechanism utilizes a shift lever that slides the clutch and drive pinion assembly along the armature shaft so that it can be engaged and disengaged with the flywheel ring gear. The clutch transmits cranking torque from the starting motor to the engine flywheel, but permits the pinion to overrun the armature after the engine starts. Thus, power can be transmitted through the overrunning clutch in only one direction. This

action protects the starting motor from excessive speed during the brief interval that the drive pinion remains engaged with the flywheel ring gear after the engine has started.


When the shift lever is operated, the clutch assembly is moved along the armature shaft until the pinion engages with the flywheel ring gear. The starting-motor contacts are closed when the movement of the shift lever is completed, causing the armature to rotate, and thereby cranking the engine.

After the engine starts, it spins the pinion faster than the armature of the starting motor is rotating. This action causes the pinion to spin independently or overrun. When the starting-motor switch is opened, the shift lever releases, causing the drive spring to pull the over-running clutch drive pinion out of engagement with the engine flywheel ring gear.

Controls

The solenoid switch (figs. 15-2, 3) is used on some starting motors equipped with over-running clutch drives to close the circuit to the starting motor and also to engage the pinion with the flywheel ring gear. It is mounted on the motor frame and consists of pull-in coil and a hold-in coil provided with a spring-loaded plunger. A heavy contact disk is attached to one end of the plunger, and the other end is connected by linkage to the shift lever. Both coils are connected in series with a starter switch located on the instrument panel. When the starter switch is operated, both coils are energized (from the battery) and the plunger is pulled so that the pinion engages with the flywheel ring gear. The pull-in coil draws a comparatively heavy current necessary to complete the plunger movement. The hold-in coil aids the pull-in coil. Continuation of the plunger movement closes the switch contacts, thereby permitting the starter motor to crank the engine. As soon as the solenoid switch is closed (and the pinion shifted), the pull-in coil is shorted by the switch contacts in the starting-motor circuit so that only the hold-in coil is energized to retain the plunger in the operated position.

When the starter switch is released, the tension of the return spring in the drive assembly actuates the plunger to open the circuit to the starting motor.

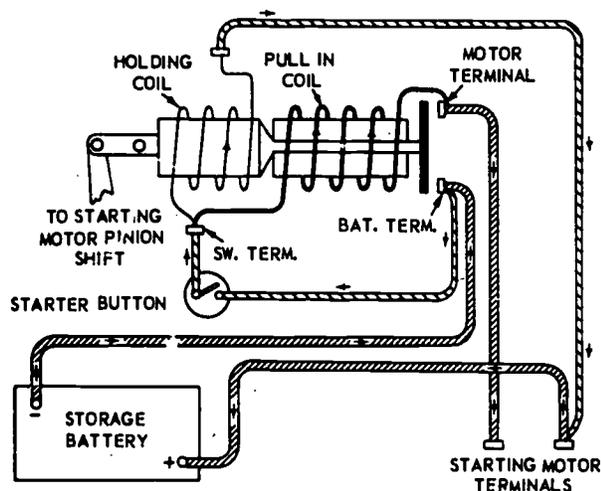

77.161

Figure 15-3.—Solenoid switch diagram.

IGNITION SYSTEMS

Ignition of the fuel-air mixture in the cylinders of a gasoline engine is initiated by an electric spark. The spark is produced by the ignition system that functions to step up the relatively low voltage of the battery and to deliver the high voltage to the spark plugs at the proper time. The high voltage is capable of forcing current across the electrodes of the spark plugs. The hot spark created across the electrodes ignites the fuel-air mixture. A discussion of the battery ignition system, the transistorized ignition system, and air heaters follows.

Battery Ignition System

A battery ignition system consists of (1) the battery, (2) the ignition coil, (3) the ignition distributor, and (4) spark plugs (fig. 15-4). The battery and generator supply the voltage and current for the ignition system. The battery is required for starting, but after the engine starts, the generator carries the ignition load.

Ignition Coil

The ignition coil (fig. 15-5) is a pulse transformer that steps up the low battery, or generator, voltage to the high voltage necessary to jump the gaps at the spark plugs in the engine cylinders. It consists of a primary winding having a few hundred turns of relatively heavy wire, a secondary winding having many thousand turns of very fine wire (up to 100 times as many turns of wire as the primary), and a laminated soft-iron core. The secondary winding is usually wound around the soft-iron core, and the primary winding surrounds the secondary winding. This subassembly is enclosed in a laminated soft-iron shell that serves to concentrate the magnetic field.

The entire subassembly is placed in a steel case, and the remaining space is usually filled with oil to improve insulation and reduce the effects of moisture. The case is hermetically sealed with a molded insulating cap that carries two primary terminals and the high-tension terminal.

The primary circuit of the ignition system (fig. 15-4) is from the battery, through the ignition switch to the primary terminal of the ignition coil, through the primary winding, and out the other primary terminal to the distributor. When the

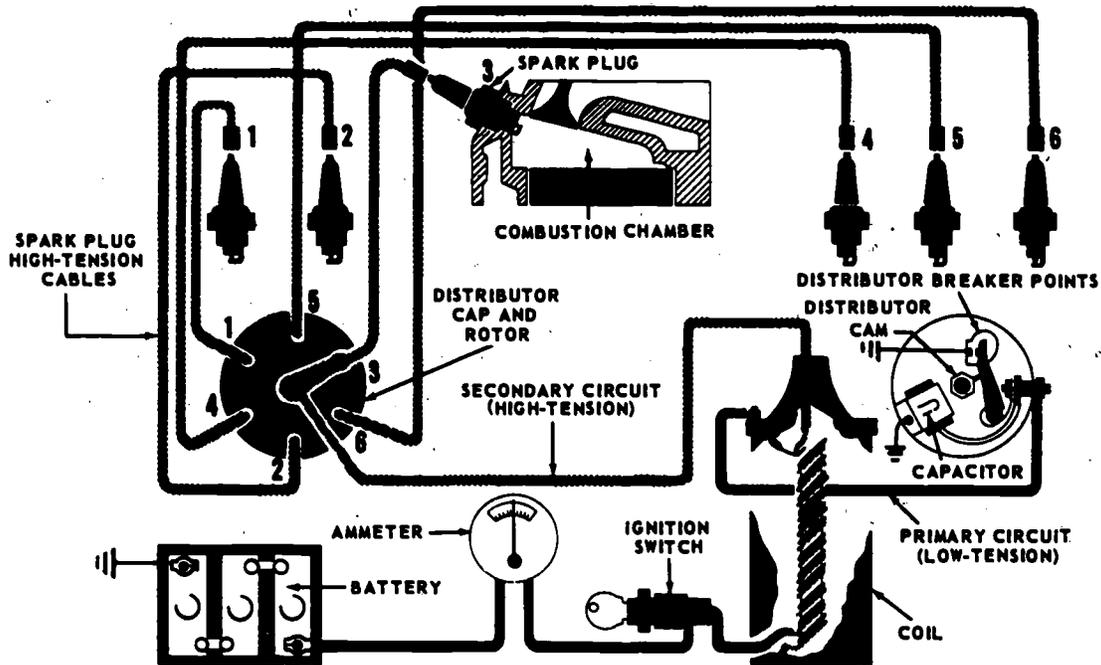


Figure 15-4.— Battery ignition system.

81.138


ignition switch is in the ON position and the contacts in the distributor are closed, current flows from the battery, through the primary winding of the ignition coil, through the contacts of the distributor, and back to the battery through ground. The current produces a magnetic field around the windings of the ignition coil. When current begins to flow through the winding, self-induction occurs and prevents the current and consequently the magnetic field from reaching their maximum values instantly. A small fraction of a second (called build-up time) is required for this action to occur. During this time energy is being stored in the magnetic field of the coil. When the cam lobe strikes the breaker-lever rubbing block, the breaker contact points open, thereby interrupting the primary circuit.

When the breaker contacts in the distributor begin to open, the primary current tends to continue to flow because of the self-induction of the winding. If it were not for the ignition capacitor connected across the breaker contacts, current would continue to flow between the separating points. This current would form an arc that would burn the points badly and would also drain away

most of the energy stored in the coil. Thus insufficient energy would be left in the coil to produce the necessary high voltage surge in the secondary.

The ignition capacitor, however, provides a path around the points during the instant they begin to separate. Thus, the capacitor acts as a storage reservoir for the energy otherwise dissipated as an arc across the points, and also as a check on the current, quickly bringing it to a stop in the primary circuit. As a result of this action the magnetic field produced by the current quickly collapses. The rapid collapse of the magnetic field in cutting the windings of the ignition coil induces a high voltage in both the primary and secondary windings. The voltage in the primary winding may reach 250 volts (further charging the capacitor); whereas, the secondary winding (which may have 100 times as many turns as the primary) may reach 25,000 volts.

The voltage normally increases to a value sufficient to produce a spark across the spark-plug gap connected to the secondary of the ignition coil through the distributor rotor, cap

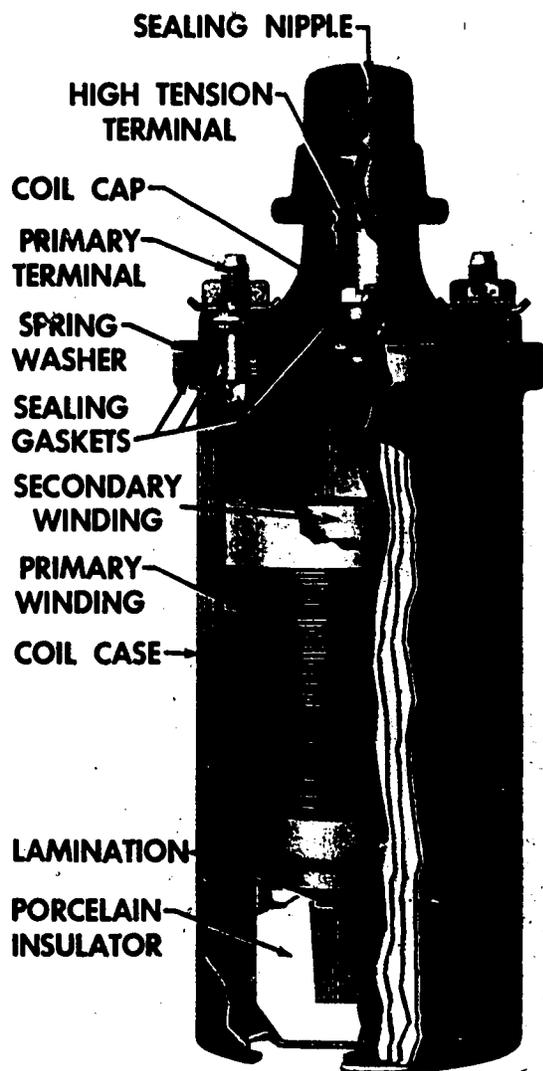

77.156

Figure 15-5.— Ignition coil.

insert, and high tension lead. This voltage is usually from 4,000 to 18,000 volts, depending on such variables as engine speed, engine compression, mixture ratios, width of spark-plug gap, and others.

As a spark appears at the spark-plug gap, the energy in the ignition coil drains from the coil through the secondary circuit to sustain the spark for a small fraction of a second, or for several degrees of crankshaft revolution. During

this interval the capacitor discharges back through the primary circuit, producing an oscillation of the current in the primary circuit during the brief interval required for the primary circuit to return to a state of equilibrium. This sequence is repeated as each lobe of the breaker cam moves under and past the rubbing block on the breaker lever to cause the contacts to close and open. Normally, ignition coils do not require any service except to keep all terminals and connections clean and tight.

Ignition Distributor

The ignition distributor (fig. 15-6) opens and closes the primary ignition circuit and distributes the high-voltage surge to the proper spark plug at the correct time in the engine cycle. The distributor includes a drive shaft with breaker cam and spark advance mechanism, a breaker plate with contacts, and a rotor.

The shaft with the breaker cam is usually driven by the engine camshaft at one-half the engine speed through spiral gears. The distributor contacts are held closed by spring pressure and opened by the breaker cam, which always has the same number of lobes as there are cylinders in the engine.

The primary circuit through the ignition distributor includes the distributor contacts and capacitor (fig. 15-6). As the breaker cam rotates, the cam lobes move around under the contact arm, causing the distributor contacts to open and close (fig. 15-6B). Thus, the distributor contacts open and close once for each cylinder with every rotation of the breaker cam, and one high-voltage surge is produced by the ignition coil for each cylinder with every two revolutions of the crankshaft.

The capacitor connected across the distributor contacts provides a quick collapse of the magnetic field in the ignition coil in order to produce the high-voltage surge, it also protects the distributor contacts from arcing.

The secondary circuit through the ignition distributor includes the distributor rotor, distributor cap with high-tension terminals, and the spark plugs (fig. 15-4). The high voltage surge in the ignition coil secondary is conducted through the high-tension lead by way of the center terminal of the distributor cap to the rotor. The rotor is mounted on the breaker cam and rotates with it. During each revolution, a metal spring and segment on the rotor (fig. 15-6A) connect the center terminal of the distributor cap with each outside

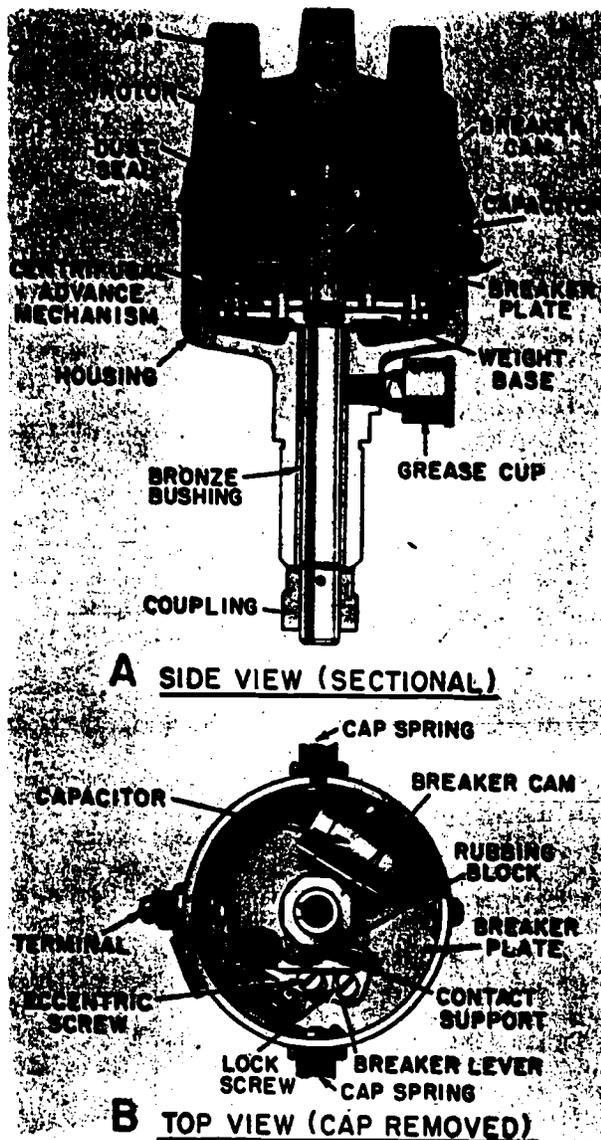


Figure 15-6.— Ignition distributor. 77.185

terminal in turn. This action directs the high-voltage surges from the ignition coil to the various spark plugs in the engine according to the fire order.

Spark Plugs

The spark plug (fig. 15-7) in a spark ignition system provides the gap across which the high-tension voltage

jumps to create a spark that ignites the compressed fuel-air mixture. It consists of a center (insulated) electrode that is connected to the secondary of the ignition coil through the distributor, and a side (grounded) electrode. The center electrode extends through a porcelain insulator that is supported by a circular metal shell. The side electrode protrudes from the edge of the metal shell and is positioned so that a gap exists between it and the center electrode. The base of the shell is threaded to allow it to be screwed into a tapped hole in the cylinder head.

The size of the spark-plug gap depends on the engine compression ratio, the characteristics of the combustion chamber, and the ignition system. At one time a gap of 0.025 inch was practically standard on all engines. However, manufacturers now specify gaps of from 0.030 to 0.040 inch to permit more readily igniting the increased mixtures (by weight) used in the higher horsepower engines.

Spark plugs are designed so that the temperature of the firing end is sufficiently high to burn off carbon and other combustion deposits, but not high enough to cause preignition and deterioration of the insulator and electrodes.

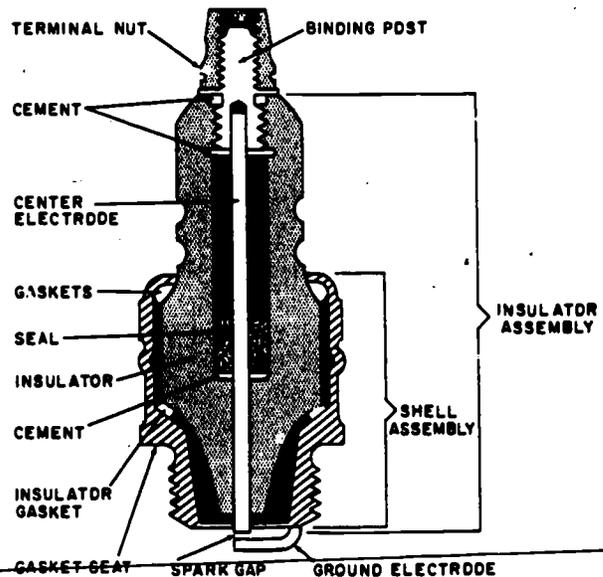


Figure 15-7.— Spark plug. 77.158

The temperature of the insulator depends on the characteristics of the spark plug and on the burning fuel in the combustion chamber. The temperature of the burning fuel in the combustion chamber varies with the engine design, compression ratio, fuel-air ratio, and cooling system. The heat absorbed by the tip of the spark plug from the burning fuel travels up the insulator to the metal shell, to the cylinder head, and to the water jacket. As the temperature in the combustion chamber increases, the heat absorbed by the insulator increases. The tip of the spark plug will have a lower temperature if the length of the path that the heat must travel to reach the cooling system is short as compared to the heat transfer when the path is long. Hence, plugs with short paths are called COLD PLUGS; plugs with long paths are called HOT PLUGS.

Engine manufacturers select plugs that will provide good performance for average operating conditions. However, if the engine is operated for long periods under full-load or overload conditions, the standard-equipment spark plug will operate at too high a temperature and preignition will result. Hence, it will be necessary to install a colder plug to carry off the heat more rapidly. On the other hand, if the engine is operated for long periods at part throttle, the standard-equipment plug may tend to foul due to the accumulation of carbon at reduced temperature, thereby resulting in poor engine performance. Hence, it will be necessary to install a hotter plug to concentrate the heat and burn off the accumulated products of combustion. Refer to the manufacturer's specifications for spark plug gap clearance.

Transistor Ignition System

A knowledge of transistors will be necessary for the understanding of the transistor ignition system which follows. It may be helpful to review chapter 13 before going on in this chapter.

The transistor ignition system is a relatively new development. The output of the conventional ignition system is limited to the amount of current in the primary circuit. Approximately 5 amperes can be carried in the primary circuit and still maintain a reasonable distributor contact point life. This is because the contact points will arc and burn if more current is interrupted. Because the transistor ignition system has not been used in the Navy, only a brief discussion is given in this chapter. At present the shipboard electrician

is seeing more and more equipment such as voltage regulators and motor controllers using transistors and other solid-state devices. Figure 15-8 is a typical contact controlled transistor ignition system. The only differences between this and a conventional ignition system are the transistor amplifier, a special ignition coil, and the two resistors R3 and R4. The conventional distributor is used without any modification. Basically this system operates in the following manner.

When the ignition switch (fig. 15-8) is turned to the start position (assume the distributor contacts are closed) it bypasses resistor R-3 (to give maximum voltage during cranking) and current enters the amplifier and flows through the resistor R-2, the transistor TR-1, the resistor R-1, the distributor contact points and to ground, the primary of the ignition coil and resistor R-4 to ground. As soon as the engine turns over and the distributor points open, interrupting the flow of current through the emitter-base of the transistor (marked E and B in figure 15-8), the transistor immediately "shuts off" the emitter-collector current (marked E and C). The flow of electrons in this system is indicated by the solid and dashed arrows on figure 15-8. The dashed arrow indicates the flow of the control (bias) current, the solid arrow the collector current. When the transistor is forward biased, as this one is when the distributor points are closed (the base is negative and the emitter is positive), the electrons flow as indicated by the arrows. When the distributor points are open, the base becomes positive and electron flow stops. When the emitter-collector current stops, the collapsing field of the primary of the ignition coil induces a high voltage in the secondary of the coil and this high voltage is fed via the distributor rotor to the proper spark plug. This procedure is repeated each time the distributor control points open and close. In this system the distributor contact points are carrying only a very small current to control the transistor (turn it on and off), thus contact life is greatly increased. At the same time the ignition coil is carrying a higher primary current than is possible on a conventional system, thus a higher secondary voltage output and a better spark for improved ignition.

There are several kinds of transistor ignition systems. They may vary in design but their operating principles are similar. The main difference is that in some systems the transistor is triggered by a magnetic pulse generator or a special distributor instead of by contact points.

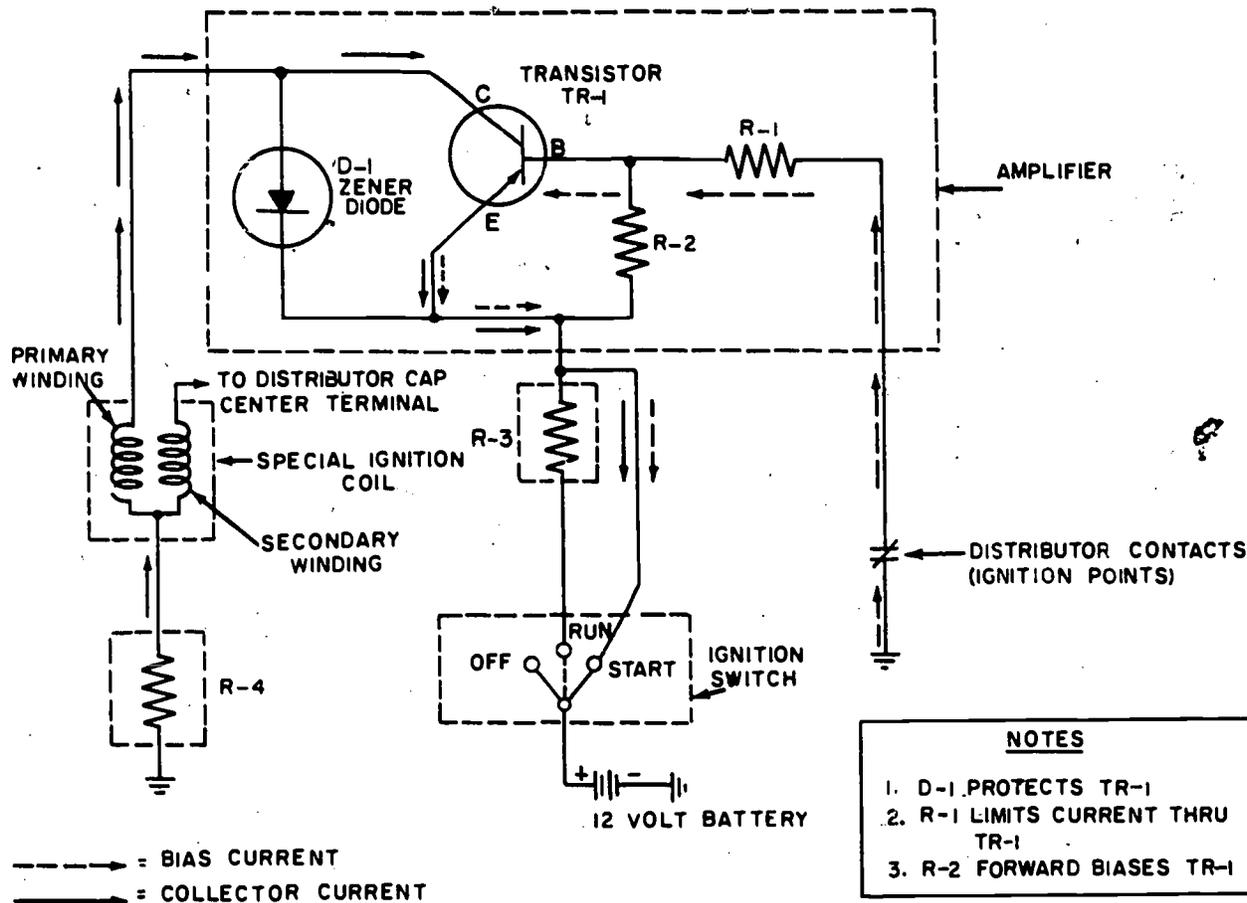


Figure 15-8.—A typical contact controlled transistor ignition system.

77.251

If you ever need to make repairs to a transistor ignition system, consult the manufacturer's manual and trouble-shooting chart. In these systems, one flash of current in a reverse polarity may damage some parts of the system beyond repair.

Air Heaters


Ignition in a diesel engine is accomplished by a combination of fuel injection and compression. Diesel engines normally require a longer cranking period than gasoline engines, and at low ambient temperatures they are more difficult to start because the heat of compression may not be sufficient to ignite the fuel-air mixture. Therefore, at low temperatures it is

necessary to preheat the engine by means of an electric air heater, or to furnish an auxiliary low-ignition temperature fuel during the starting period by means of a pressure primer system.

The glow-plug and grid-resistor type heaters are not used extensively because of the heavy load imposed on the starting battery at the time that the cranking motor is heavy.

The flame primer (fig. 15-9) is the most widely used type of air heater for preheating diesel engines when starting at low temperatures. It is essentially a small, pressure oil burner with electric ignition. The fuel oil is sprayed into the engine air-intake manifold with a manually operated pump, and ignited by means of a spark plug, ignition coil, and vibrator. The device

15-14

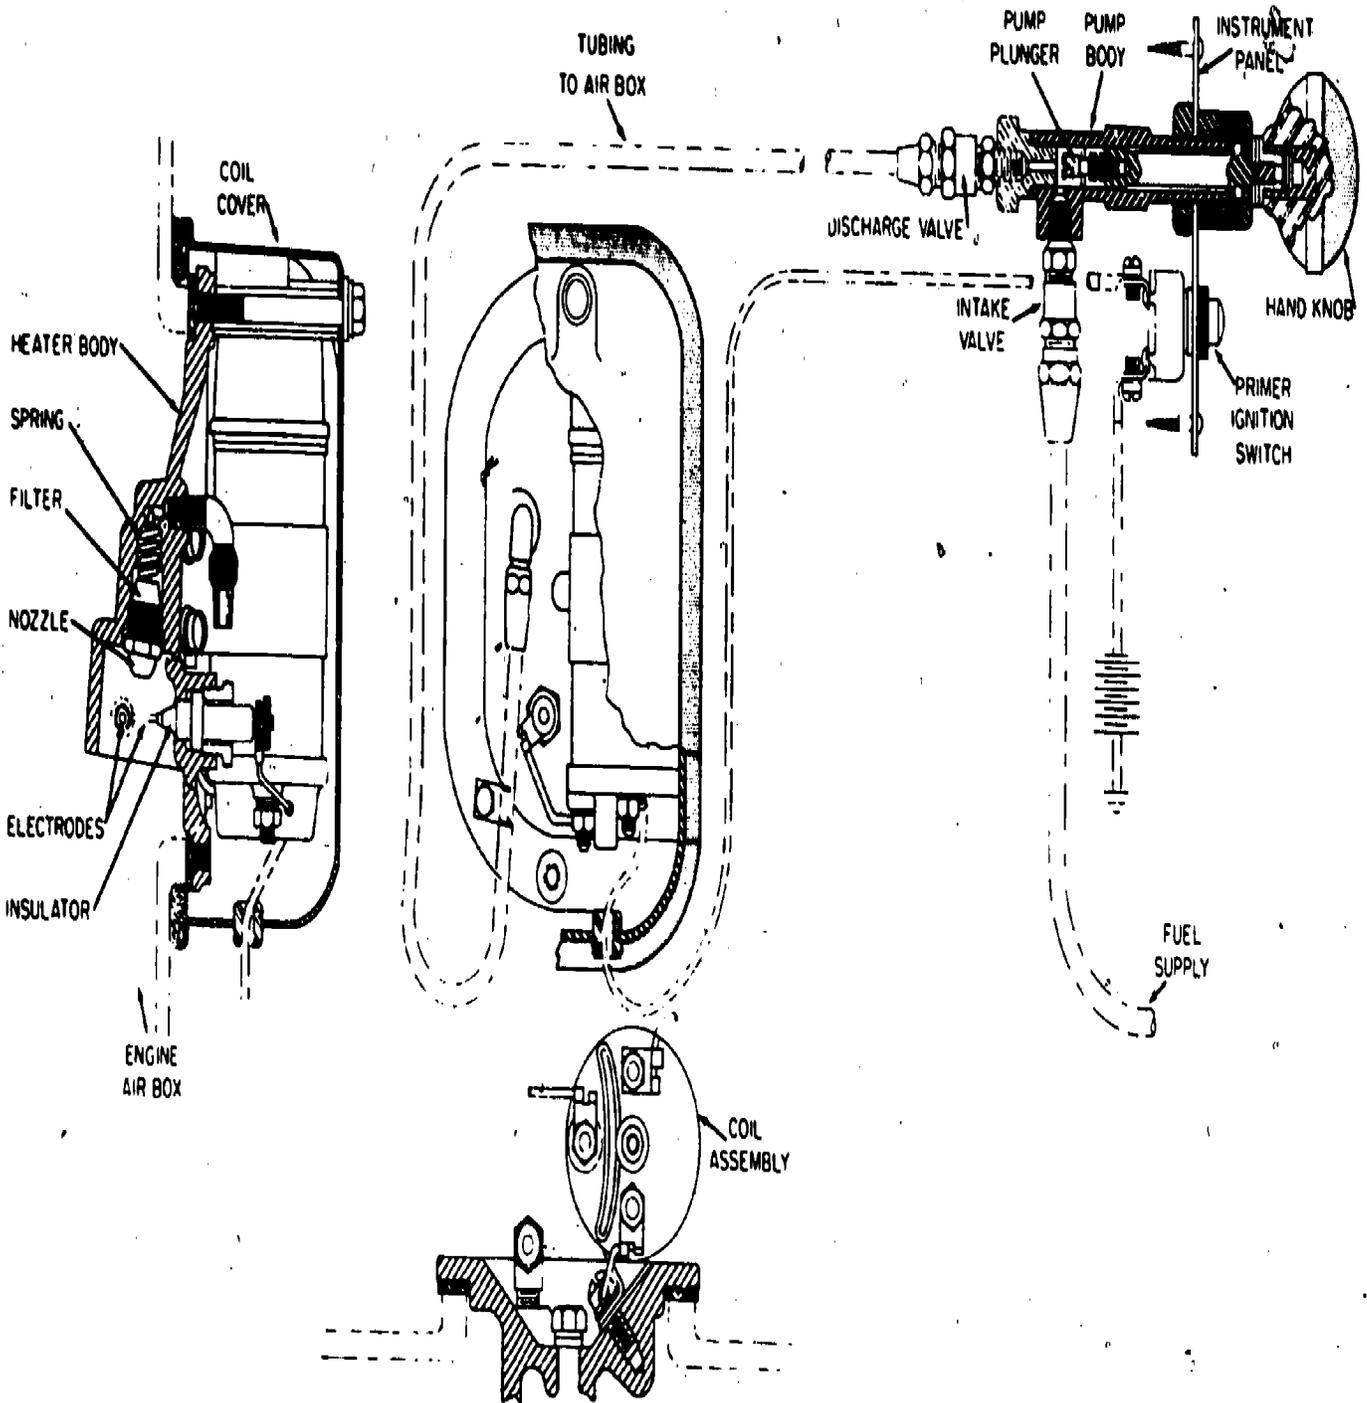

ELECTRICIAN'S MATE 3 & 2

420

421

75.189

Figure 15-9.— Flame primer.

consists of two assemblies. One unit contains the burner, ignition coil, and vibrator. The other unit comprises the pressure pump and ignition switch. The principal advantage of the flame primer is that it imposes a negligible load on the starting battery.


BATTERY CHARGING SYSTEMS

In order to maintain the battery in a fully charged condition, it is necessary that the discharge current be balanced by a charging current supplied from an external source, such as a battery-charging generator or a battery-charging alternator. If the discharge current exceeds the charging current for an appreciable period, the battery will gradually lose its charge and then will not be capable of supplying the necessary current to the electrical system.

D-C GENERATOR

The d-c battery charging generators are rated according to the particular application, and are designed for clockwise or counterclockwise rotation. They are supplied for use with either a 6-, 12-, or 24-volt system.

The ungrounded generator (fig. 15-10), very often has one end of the field circuit connected internally to terminal A- and the other end connected externally through terminal F and the voltage regulator to terminal A+. In the ungrounded system the circuits are completed through a return ungrounded wire.

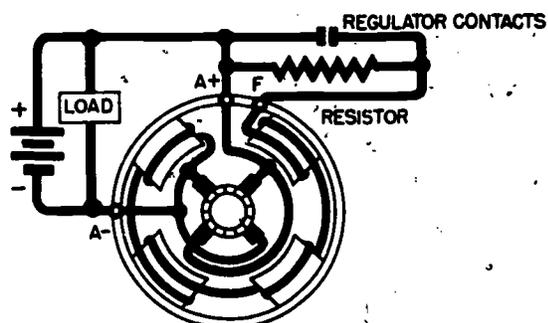

77.152

Figure 15-10.—Battery-charging ungrounded d-c shunt generator (heavy duty).

Shunt generators require some form of regulation to control the output current and prevent the generator from exceeding its maximum rated voltage when the speed increases.

Regulators operate on the principle of inserting a control resistance in series with the generator field circuit to reduce the voltage and output of the generator as required by the operating conditions. Generators are classified as externally grounded, internally grounded, and ungrounded according to the system used to connect the control resistance in the field circuit. Ungrounded generators use HEAVY DUTY regulators.

CURRENT AND VOLTAGE REGULATOR (HEAVY DUTY)

The current and voltage regulator (fig. 15-11), is a three-unit regulator designed for use with the ungrounded shunt generator. It consists of a cutout relay, voltage regulator, and current regulator.

The internal wiring is similar for all regulators of this type, except that the internal connections vary according to whether the regulator is designed for use with a grounded (one-wire) system or an ungrounded (two wire) system.

Cutout Relay

The cutout relay (fig. 15-11) has a shunt coil and a series coil assembled on one core. The shunt coil and resistor R1 comprise a series circuit that is connected across the generator so that generator voltage is impressed on this circuit at all times. The series coil is connected in series with the charging circuit so that the generator output passes through it. When the generator is not operating, the armature is held away from the core by the tension of a coil spring so that the contacts are open and the circuit is incomplete between the generator and battery.

When the generator is operating and the voltage reaches the value for which the cutout relay is adjusted, the magnetic field produced by the shunt coil overcomes the spring tension and pulls the armature toward the core to close the contacts of the cutout relay and complete the circuit between the generator and the battery.

If the generator slows down, or stops, and the voltage decreases to a value less than the battery voltage, a reverse current will flow through the series coil. When the reverse current increases to the value for which the cutout relay is adjusted; the spring tension overcomes the magnetic field and pulls the armature away from the core to open the contacts and open the circuit between the generator and the battery.

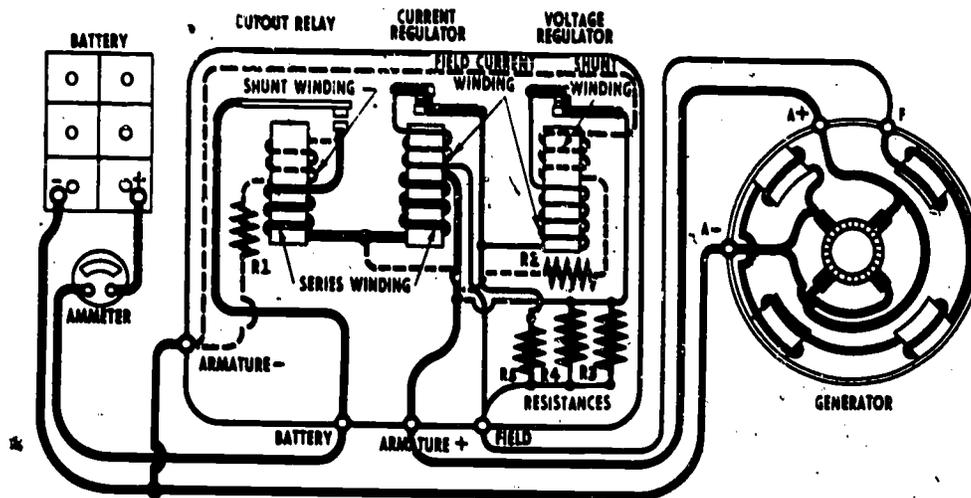


Figure 15-11.— Three-unit current and voltage regulator (heavy duty) wiring diagram.

77.155

Voltage Regulator

The voltage regulator (fig. 15-11) has a shunt coil and a field current coil assembled on one core. The shunt coil and resistor R2 comprise a series circuit that is connected across the generator, thereby placing generator voltage across this circuit at all times. The field-current coil is connected in series with the generator field circuit when the current regulator contacts are closed so that field current passes through it.

When the generator voltage is low, the armature is held away from the core by the tension of a coil spring so that the contacts are closed and the resistance is shorted out of the generator field circuit, permitting the generator voltage to increase. The external field circuit connection to the generator armature by way of the regulator (when both the current-regulator and voltage-regulator contacts are closed) is from terminal F of the generator to the field terminal of the regulator, through the field-current coil and contacts of the current regulator, through the field-current coil and contacts of the voltage regulator, to the armature terminal of the regulator, and back to terminal A+ of the generator.

When the generator is operating and the voltage reaches the value for which the voltage regulator is adjusted, the magnetic field produced by the shunt and field-current coils overcomes the spring tension and pulls the armature toward the core to open the contacts of the voltage regulator. This action inserts parallel

resistors R3 and R4 in series with field circuit to reduce the generator field current and voltage. The external field circuit connection to the generator armature by way of the regulator (when the voltage regulator contacts are open) is from terminal F of the generator to the field terminal of the regulator, through parallel resistors R3 and R4, to the armature terminal of the regulator, and back to terminal A+ of the generator.

Current Regulator

The current regulator (fig. 15-11) has a series coil and a field-current coil assembled on one core. The series coil is connected in series with the charging circuit when the cutout relay contacts are closed so that full generator output passes through it. The field-current coil is connected in series with the field circuit when the current-regulator contacts are closed (assuming that the voltage regulator contacts are also closed) so that field current flows through it.

When the generator voltage is low, the armature is held away from the core by the tension of a coil spring so that the contacts are closed, and resistors R3 and R4 are shorted out of the field circuit to permit the field current and generator output to increase. The external field circuit connection to the generator armature by way of the regulator (when both current-regulator and voltage-regulator contacts are closed) is from terminal F of the generator to the field terminal of the regulator, through the field-current coil and contacts of the current

regulator, through the field-current coil and contacts of the voltage regulator, to the armature terminal of the regulator, and back to terminal A+ of the generator.

When the generator is operating and the output reaches the value for which the current regulator is adjusted, the magnetic field produced by the series and field-current coils overcomes the spring tension and pulls the armature toward the core to open the contacts of the current regulator. This action inserts the effective parallel combination of resistors R3, R4, and R5 in series with the field circuit to reduce the generator output. The external field circuit connection to the generator armature by way of the regulator (when the current regulator contacts are open and the voltage regulator contacts are closed) is from terminal F of the generator to the field terminal of the regulator, through resistor R5, and the field current coil and contacts of the voltage regulator, in parallel with resistors R3 and R4, to the armature terminal of the generator, and back to terminal A+ of the generator.

A-C GENERATOR

A belt-driven alternator is being used on certain small boats with large electronic loads. The

system of using a three-phase alternator and rectifying its a-c output to charge the boat batteries and supply the d-c loads is comparable to the system found on modern automobiles (fig. 15-12). The alternator has several advantages over the d-c generator, it is smaller in size than a comparable d-c generator, requires less maintenance, and supplies charging current at idling speeds. In systems using d-c generators, the output voltage is normally too low at idle or low speeds to supply charging current.


The three-phase a-c output of the stator is fed to a rectifier bridge consisting of six silicon diodes.

The silicon diodes are normally located in the end-bell of the alternator. The rotor of the alternator has one coil and two six-fingered rotor halves and in effect is a twelve-pole rotor. Direct current (for field excitation) is supplied to the rotor coil through a pair of brushes and slip rings.

The electrical equipment is designed to operate at a specific voltage irrespective of the speed of the engine (prime mover) and the alternator.

Regulator

The alternator's regulator (fig. 15-12) controls the d-c output. It consists of the (1) load relay, (2) voltage regulator, (3) current limiter, and (4) feed-through capacitors to prevent radio interference.

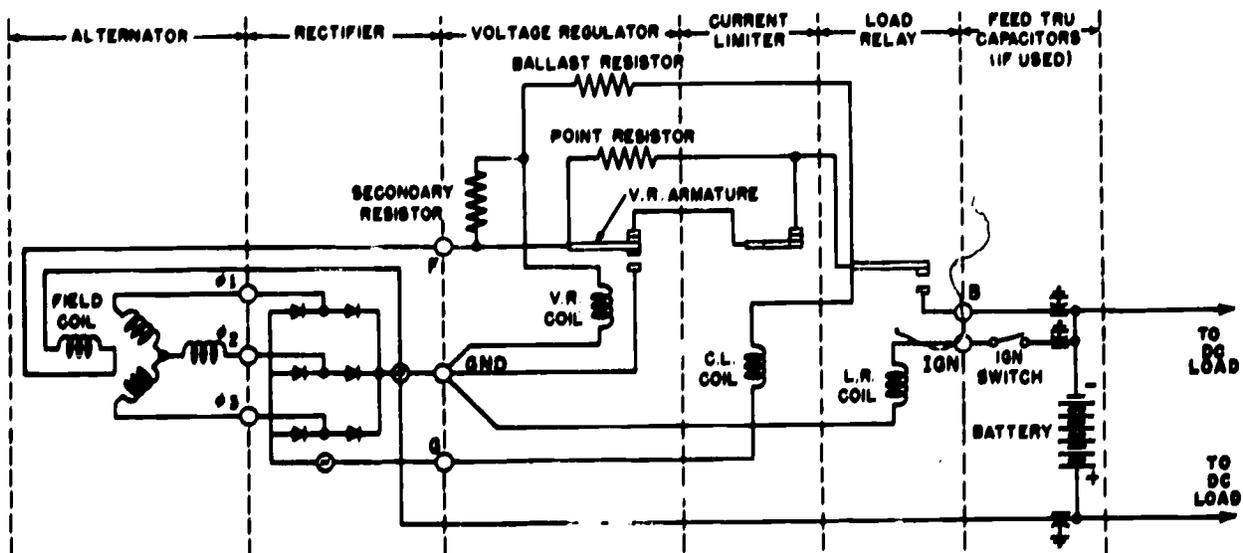

75.178.2

Figure 15-12.—Schematic wiring diagram of a typical automotive type alternator and regulator.

15-17
424

LOAD RELAY.—The load relay acts as a switch to connect the battery to the alternator system when the engine is running, and to open the circuit when the engine is not in operation. The load relay is operated by the ignition switch when a gasoline engine is employed such as in an automobile. On an automobile when the ignition switch (fig. 15-12) is turned on, it connects the load-relay coil to the battery and the contacts close.

When a diesel engine is used, the load relay may be energized through a pressure switch in the fuel oil line.

The regulator controls the alternator field strength and thereby regulates the output voltage (fig. 15-12). The point resistor and contacts are connected in series with the alternator rotor d-c field coil. The voltage regulator (VR) coil and its ballast resistor are series connected across the d-c output terminals (GND) and (G) of the rectifier via the CL coil. Therefore, any variation in output voltage will change the magnetic strength of the VR coil.

When the alternator speed is low and/or the electrical load is heavy, the VR coil will cause the VR armature to vibrate on the upper contact. This action periodically inserts the point resistance in the field circuit to control the output voltage. This condition is called top contact operation.

When the alternator speed is high and/or the load is light, the VR armature vibrates on the bottom contact and periodically inserts a direct short which shorts out the entire d-c field coil of the alternator. This action intermittently weakens the field magnetism sufficiently to hold the output voltage to the proper value for this load and speed condition.

CURRENT LIMITER.—The current limiter protects the alternator and rectifier by limiting the current output of the alternator (fig. 15-12). The current limiter (CL) coil is connected in series with the negative terminal of the rectifier and the load circuit. When the current exceeds the rating of the alternator, the CL coil will cause the CL armature to vibrate and insert enough point resistance intermittently in the d-c field to limit the output current to the proper value.

On 6-volt regulators of this type, a temperature compensator is used to adjust the voltage regulator action to different temperatures. The temperature compensator consists of

a bimetallic strip, located at the spring end of the VR armature. When the temperature changes, the bimetallic strip bends thereby causing a change in the armature spring pressure.

ELECTROHYDRAULIC STEERING GEAR

The steering gear is one of the most vital auxiliaries aboard ship. It must be thoroughly dependable and have sufficient capacity for maximum maneuverability. The types of steering gear listed in the sequence of their development are the (1) steam, (2) electromechanical, and (3) electrohydraulic types. The electrohydraulic steering gear was developed to meet the excessive power requirements of naval vessels having larger displacements and higher speeds with the attendant increase in rudder torques.

CONSTRUCTION

The majority of steering gear installations in new construction naval vessels are of the electrohydraulic type. The electrohydraulic steering system installed in one class of destroyer escort (fig. 15-13), consists essentially of (1) a ram unit (2) a power unit, and (3) the remote control unit (not shown).

Ram Unit

The ram unit is mounted athwart ship and consists of a single ram that operates in opposed cylinders. The ram is connected by links to the tillers of the twin rudders and is moved by the oil pressure built up in either of the cylinders, the oil from the opposite cylinder flowing to the suction side of the pump.

The tie rods that connect the two cylinders also serve as guides for a sliding crosshead attached to the ram to prevent the ram from rotating. The crosshead also provides mechanical limits to the ram travel at 42° of rudder angle. At this position the crosshead contacts copper facing on the stop collars and prevents further movement.

A rack is attached to the ram and engages two gears, the rotation of which is transmitted to the respective differential control boxes through the followup shaft.

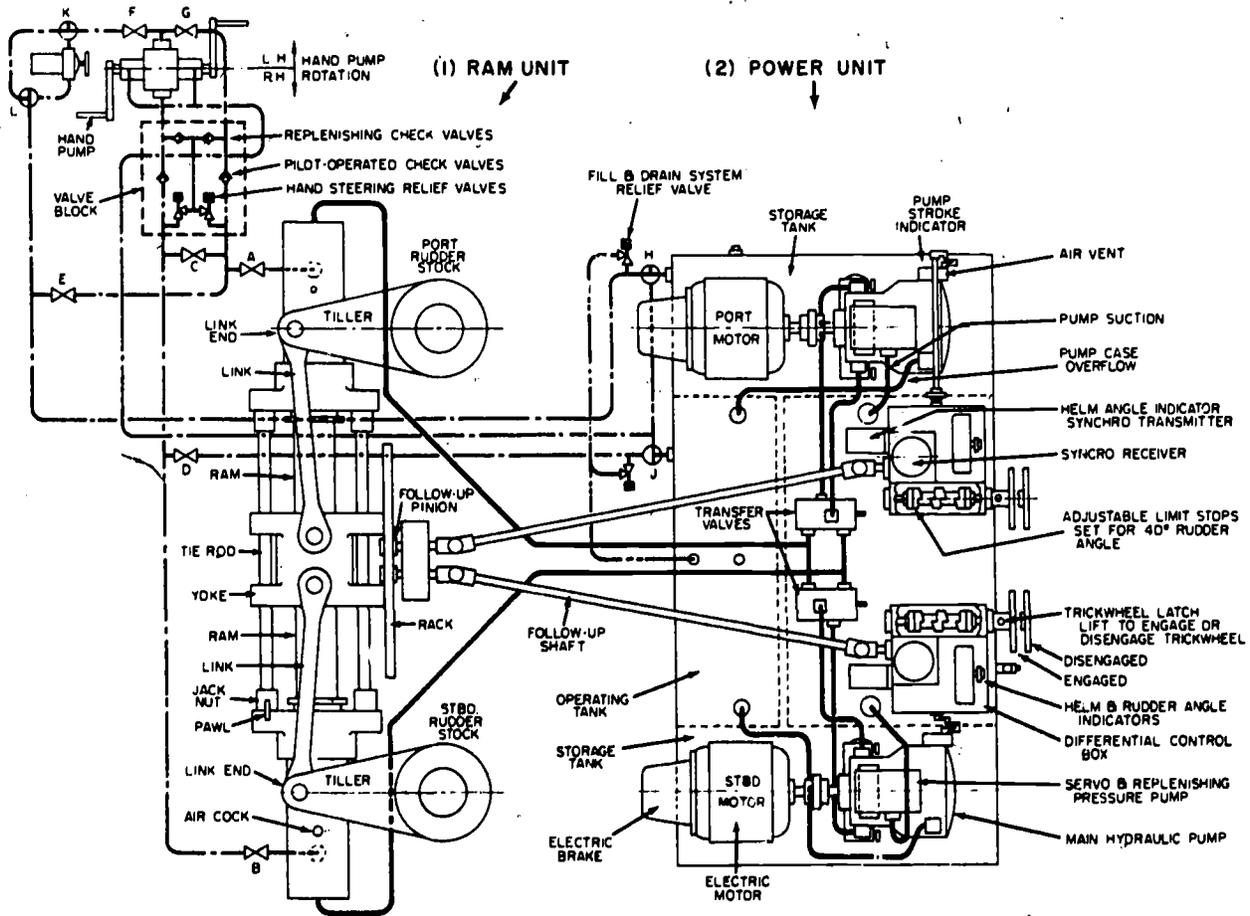


Figure 15-13.— Electrohydraulic steering gear.

27.82

Power Unit

The power unit consists of two pumping systems, which include two motor-driven pumps, two 4-way transfer valves with operating gear, relief valve, two differential control boxes, two "trick" wheels, and a hand emergency gear all mounted on a bedplate, which is the top of an oil reservoir. Steering power is derived from either pumping system acting alone. The system not in use serves as a standby source in case of emergency.

The two pumps (port and starboard) are identical in size and design, and are of the variable delivery axial piston type. Each main pump unit includes a built-in vane type servo pump, pressure control and replenishing valves, and two

main relief valves. Each main pump is stroked through a rotary servocontrol.

Each pump is driven by a 20-hp, 1200-rpm, 440-volt, 3-phase, 60-hertz induction motor through reduction gears and a flexible coupling. A disk type electric brake which is automatically set when deenergized, is provided on each motor.

The pumps of the power unit are connected to the ram cylinders by a high pressure piping system. The two 4-way transfer valves are interposed in this piping, and their positions determine which pump is connected to the cylinders in the ram unit. The hand lever, which moves both valves simultaneously, is located on the power unit between the "trick" wheels, and has three latched positions. The latched positions are

marked P, N, and S, which denote port pump connected, neutral (ram locked), and starboard pump connected, respectively.

The transfer valves, which are of the ported piston type, are mounted on the power unit bed-plate between the motors. When the valves are in the neutral (RAM LOCKED) position, the ports of the pipes to the ram cylinders are blocked, and the two pipes from each pump are connected through ported passages in their respective valves. If either or both pumps are started and put on stroke, oil will circulate through the valve and back to the pump. Movement of the transfer valves in either direction connects the selected pump to the ram cylinders, and the opposite pump remains bypassed.

The drain pipes from the ram cylinders lead to the reversible hand pump, which provides a means for emergency steering under limited rudder torques. The relief valve in the emergency steering system is set at 500 psi. The oil flow is through pilot-operated blocking valves that prevent the ram from overhauling the pump and kicking back the handles. When moving the ram with the hand pump, the main transfer valves must be set in the RAM LOCKED position and the drain valves beneath the cylinders must be open.

The mechanical differential control box serves to correlate the signal from the ram followup assembly and from the steering control system into a single order to the hydraulic pump.

The stroking lever and output shaft on each differential control box actuate a rotary servo valve that controls the associated main pump on the power unit. In response to movements transmitted through the control box, the pump discharge is varied between zero and maximum, and in either direction of flow.

In normal steering from the pilot house, a synchro transmitter is turned by the steering wheel. This synchro transmitter is electrically connected to a synchro receiver in the steering gear room. The synchro receiver is geared to the LOWER bevel gear in the differential control unit, and its rotation is transmitted through gearing to a cylindrical cam. A follower roller, which engages a groove in the cylindrical cam, is mounted on an arm keyed to the output shaft of the control box.

For example, assume that the rudder is amidship and it is desired to obtain 20° right rudder. The rotation of the lower bevel gear

causes rotation of the cylindrical cam, which, in turn, imparts a motion to the servocontrol valve through the cam roller. This motion of the servocontrol valve puts the pump on stroke. Oil pressure is then applied in the port cylinder, forcing the ram to starboard to give right rudder.

A rack, attached to the ram, rotates the follow-up shaft, which is geared to the UPPER bevel gear in the differential control unit. The movement of the ram and rudders (in response to the stroking of the pump) causes the upper bevel gear to rotate in a direction opposite to that of the lower bevel gear. This action rotates the cylindrical cam in the opposite direction, tending to cancel the movement of the control input and bring the servocontrol valve back to the neutral position to return the pump stroke to neutral and stop the pumping of oil.

Thus, the rudders are of 20° right rudder, the cam is returned to neutral, and the pump is returned to zero stroke until further movement of the steering wheel causes repetition of the cycle. The same sequence occurs if the control is from the trick wheel in the steering compartment.

An engraved dial, graduated in rudder degrees, is mounted on top of the differential control box. Two concentric pointers (one geared to the control pump input and the other geared to the rudder followup) indicate the positions of the helm and rudders, respectively. A helm-angle synchro transmitter, also mounted on the differential control box, actuates a synchro receiver in the steering console in the pilot house. This receiver positions a pointer to indicate to the helmsman the angle that is ordered rather than the actual rudder angle. The ordered angle is called the helm angle.

Remote Control System

The remote control system provides control from the pilot house for normal steering. This system consists of a synchro transmitter mounted in the steering console and a synchro receiver mounted on each pump differential control box (port and starboard). A cable selector switch in the pilot house and a similar switch in the steering compartment permit a choice between the port or starboard steering cables. The selection of the control cable is made by the operation of the cable selector switches in the

pilot house and in the steering gear room to the desired (port or starboard) position.

The synchro-receiver selector switch in the steering gear room is then set to connect the synchro receiver, on the active power unit, to the steering console synchro transmitter. The rotary motion of the synchro receiver is transmitted through gearing to the input of the differential control box (stroking mechanism previously described).

The helm angle-indicator synchro transmitters on the differential control boxes in the steering gear room are electrically connected to their associated steering-control synchro receivers. These transmitters under all conditions of operation actuate their associated helm-angle indicator synchro receivers in the pilot house console through their associated cables.


The 120-volt, single-phase power for the remote control system is supplied to the steering power panel through a 450/120-volt transformer from the steering power transfer switchboard.

The 120-volt, single-phase power for the indicator synchro transmitters is supplied from the I.C. switchboard.

Magnetic Controller

The motor of each steering gear pump is provided with a nonreversing across-the-line starter and a maintained-contact master switch (fig. 15-14). The starter is supplied with 440-volt, 3-phase, 60 hertz power from the steering power transfer switchboard located in the steering engineer room.

The pump motor on either power unit is started or stopped by operating the maintained-contact pushbutton, on the associated pushbutton station, to the desired position. When the maintained-contact start pushbutton is pressed, the circuit is completed to the operating coil, M, of the line contactor. This action energizes the operating coil and closes the contactor in the motor starter to connect the motor to the line.

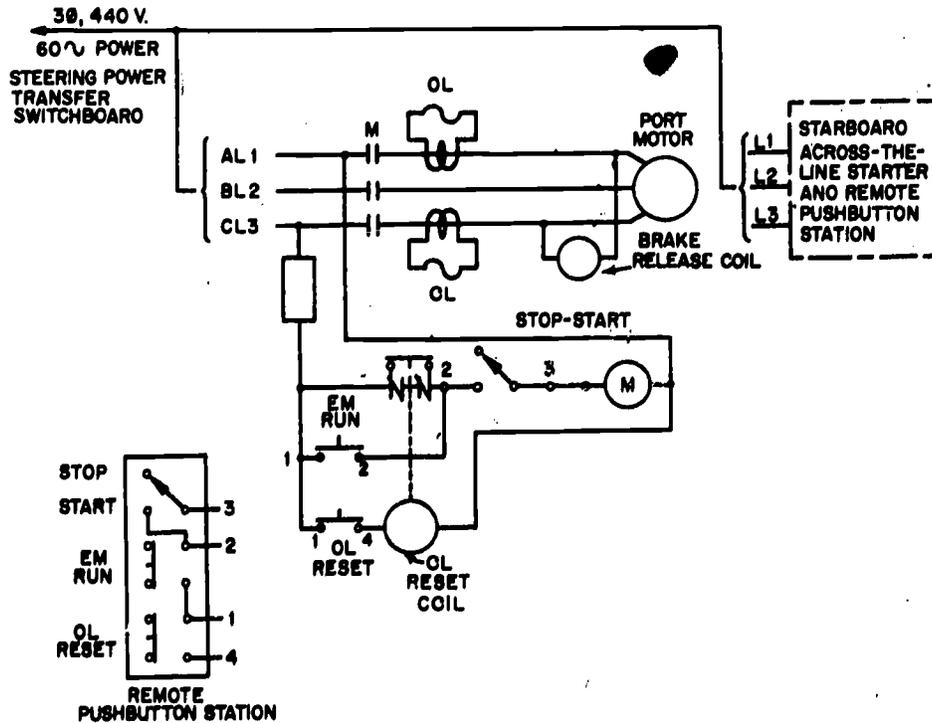

77.189

Figure 15-14.— Nonreversing across-the-line starter steering gear pump motor.

The motor will continue to run until the contactor operating coil, M, is deenergized because of loss of voltage, tripping of the overload relay, or by pressing the stop pushbutton.

The motor starter is provided with overload and low-voltage release protection. The overload relays are of the thermal type, similar to those installed in the anchor windlass starter (discussed later on in this chapter). The low-voltage release protection is provided by use of the maintained-contact master switch.

If the operating coil, M, is deenergized due to failure of the line voltage or tripping of an overload relay, the contactor will reclose and restart the motor when voltage is restored or when the overload relays are reset by means of the reset pushbutton.

In an emergency the motor can be run (even though the overload relays have been tripped) by holding the EM-RUN pushbutton closed with the START pushbutton in the operated position. If the overload condition has not been corrected, the motor will operate only as long as the EM-RUN pushbutton is held closed.

OPERATION

The steering gear is normally secured with the rudders amidship and with the transfer valve shift lever in the neutral (N) position, which hydraulically locks the ram and rudders.

To operate the port power unit, using the port steering cable:

1. Set the valves and plug cocks of the hydraulic system in accordance with the operating diagram for the steering gear for normal power operation.
2. Set the transfer valve shift lever in the neutral (N) position.
3. Press the start pushbutton to start the port pump motor.
4. Engage the trick wheel and turn it until the helm indicator (pointer) corresponds with the rudder angle indicator.
5. Move the transfer valve shift lever to the PORT (P) position to connect the port pump unit to the ram.
6. Close the port and starboard circuit breakers on the 120-volt steering power panel to energize the synchro receiver selector switch and the cable selector switch in the steering gear room.
7. Turn the synchro-receiver selector switch and the cable selector switch (in steering gear room) to the PORT positions.

8. Turn the cable selector switch (in pilot house) to the PORT position to energize the remote control synchro transmitter to steer from the bridge.

9. Disengage the trick wheel on the port unit and engage the trick wheel on the idle (starboard) unit.

To shift from the port power unit, using the port steering cable, to the starboard power unit, using the starboard steering cable:

1. Press the start pushbutton to start the starboard (idle) pump motor.
2. Notify the pilothouse to keep wheel motionless during change of units.
3. Allow rudder angle indicator to line up with helm indicator; then operate the transfer valve shift lever to the starboard (S) position to connect the starboard pump to the ram. Transfer the remote control from the port to the starboard unit by operating the synchro-receiver selector switch (in steering gear room.)
4. Transfer the cable selector switch (in steering gear room) and cable selector switch (in pilot house) to the STARBOARD positions.
5. Disengage trick wheel and steer from the bridge.
6. Press the stop pushbutton to stop the port motor and engage the trick wheel on this unit.

To steer from the trick wheel:

1. Select the power unit to be used and follow the procedures described previously for operating the port power unit.
2. Engage the trick wheel of the selected power unit.
3. Deenergize the remote control system by operating the synchro-receiver selector switch in the steering gear room to the OFF position.
4. Steer the ship as directed from the bridge.

To operate by hand emergency steering:

1. Set the valves and plug cocks of the hydraulic system in accordance with the operating diagram for the steering gear for hand steering.
2. Set the transfer valve shift lever in the NEUTRAL(N) position.
3. Crank the hand pump in the proper direction until the desired rudder angle is obtained.

When the hand pump is used for emergency steering, the ship's speed and rudder angles must be controlled so that the pressures in the ram cylinders will not exceed the setting of the relief valve, which is installed in the emergency steering system.

To secure the steering gear when steering under power operation:

1. Request the pilothouse to put rudders amidship or use the trick wheel for this purpose.
2. Operate the transfer valve shift lever to the NEUTRAL (N) position.
3. Deenergize the remote control system by turning the synchro-receiver selector switch and the cable selector switch (in the steering gear room) and the cable selector switch (in the pilot house) to the OFF positions. Open the port and starboard circuit breakers on the 120-volt steering power panel.
4. Stop the pump motor by pressing the associated STOP pushbutton.

The maintenance of the steering gear must be in accordance with the instructions contained in the manufacturers' technical manuals for the equipment installed aboard your ship.

WINCHES

Winches are installed on ships for a variety of rope and line operations; types of winches installed vary according to the equipment to be handled and the kind of power available on the ship. Winches are classified by both type and drive. There are two general types of winches, drum and gypsy.


DRUM AND GYPSY

The drum type winch may have from one to four horizontally mounted drums on which wire rope is wound for raising, lowering or pulling loads. The drum winch may also include one or two gypsy heads. If only one gypsy head is required, the design of newer winches is such as to permit ready removal of the gypsy-head and reassembly on the opposite end of the drum shaft. Drum winches may be driven by electric motors (a-c or d-c) electrohydraulic drive, steam, air, gasoline engine, or by hand.

The gypsy winch has one or two horizontally mounted gypsy heads around which several turns of line must be taken to prevent slippage when snaking or hoisting a load.

Gypsy winches are driven by electric motors (a-c or d-c), steam, or air. It is not possible to cover all the various winches therefore coverage is given on a representative winch as found on many auxiliary ships.

Winches on numerous auxiliary ships are often referred to as deck winches or cargo winches (fig. 15-15). This is a combination drum and gypsy type winch.

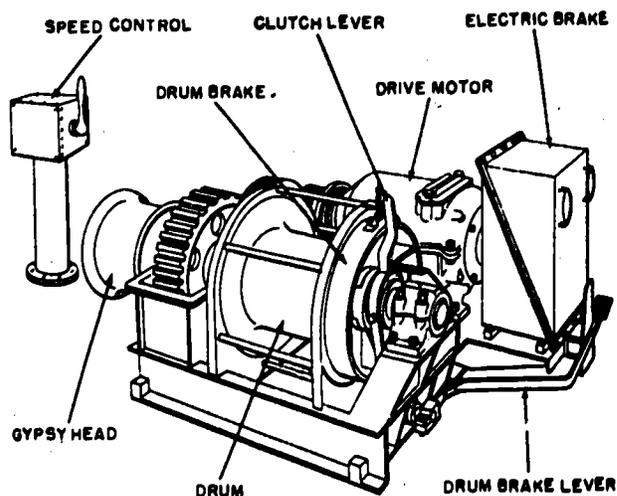

80,149

Figure 15-15.—A simplified representative winch.

Electric Windlasses

Electric windlasses are powered by an electric motor which drives a wildcat(s) and head(s) directly through suitable reduction gearing. The electric power for the motor is either alternating current or direct current.

Destroyers are provided with a direct motor-driven windlass with a single wildcat mounted vertically and a working head located above the wildcat and keyed to the vertical shaft. This system is discussed in more detail later.

Cargo ships, transports, and auxiliary ships are generally provided with horizontal shaft, self-contained, electric drive windlasses with the motor and reduction gearing located on the windlass bed plate on the open deck. These windlasses have combined facilities for anchor handling and warping and consist of two de-clutchable wildcats on the main shaft and two warping heads on the shaft ends, all driven through suitable reduction gearing by the electric motor.

The motors are reversible, variable speed, 230-volt d-c and are provided with magnetic brakes to hold the load in case of power failure or under service conditions. Controls are of dual magnetic type to provide both straight reversing characteristics for warping and dynamic lowering characteristics for anchor handling. Transfer switches allow selection of the proper

characteristics. When used for anchor handling, the control usually provides five speeds in each direction with adequate torque in hoist directions and dynamic braking in all lowering points. For warping, the control characteristics are substantially identical in both directions. A single controller master switch is provided and located on deck adjacent to the windlass.

Electric-Hydraulic Windlasses

Electric-hydraulic windlasses are installed on ships having alternating current power supply. They are particularly adapted for anchor handling with its varying load conditions due to the wide range of speed and torque characteristics afforded. The hydraulic drive was developed to overcome all the operating and installation objections inherent with either steam or direct electric driven windlasses. The electric hydraulic windlass drive is similar to the electric drive except, instead of having the electric motor coupled direct to the reduction gearing, the power is transmitted from the electric motor through a variable stroke hydraulic transmission to obtain a wide range of output shaft speed.

The electric motor for a hydraulic windlass is usually a single-speed, squirrel-cage type. Electric control is required only for light starting duty as the motor is started under no load condition. The motor is direct coupled to the pump unit of the hydraulic transmission also known as the A-end. Fluid under pressure is delivered from the A-end to the hydraulic motor unit, B-end, through piping. The B-end is coupled to a suitable reduction gear which drives the windlass shaft.

Windlass speed is determined by varying the stroke of the pump A-end. This is done by control handwheels, located on the weather deck and at the pump. These handwheels also control the direction of rotation of the windlass and are suitably marked. The stroke at which the A-end is set determines the quantity of hydraulic fluid delivered to the B-end, which in turn determines the speed at which the B-end rotates as its displacement is constant.

The power plant of a typical hydraulic windlass installation for large combatant or auxiliary vessels consists of two units. Each unit comprises a constant-speed, horizontal, squirrel-cage, electric motor driving a variable stroke hydraulic pump through suitable reduction gearing. The electric motors are provided with magnetic brakes designed to hold 150 percent of the motor-rated torque and to set on loss of power to prevent the anchor dropping in case of power

failure. The power units are arranged, port and starboard, in the windlass room. Normally the port unit drives the port windlass half, and the starboard unit, the starboard half. Transfer valves, however, are provided in the oil lines which, when properly set, allow the port power unit to operate the starboard windlass, and vice versa.

DESTROYER ANCHOR WINDLASS

Anchor windlasses are installed on ships primarily for handling and securing anchor and chain used for anchoring the ship. In addition, most windlasses are provided with capstans or gypsy heads for handling line and for mooring and warping operations.

The anchor windlass installed aboard destroyers consists of a two-speed motor directly connected through reduction gears to a vertical shaft on which are mounted a capstan and a wildcat (fig. 15-16). The capstan and wildcats are located on the weather deck, and the electric

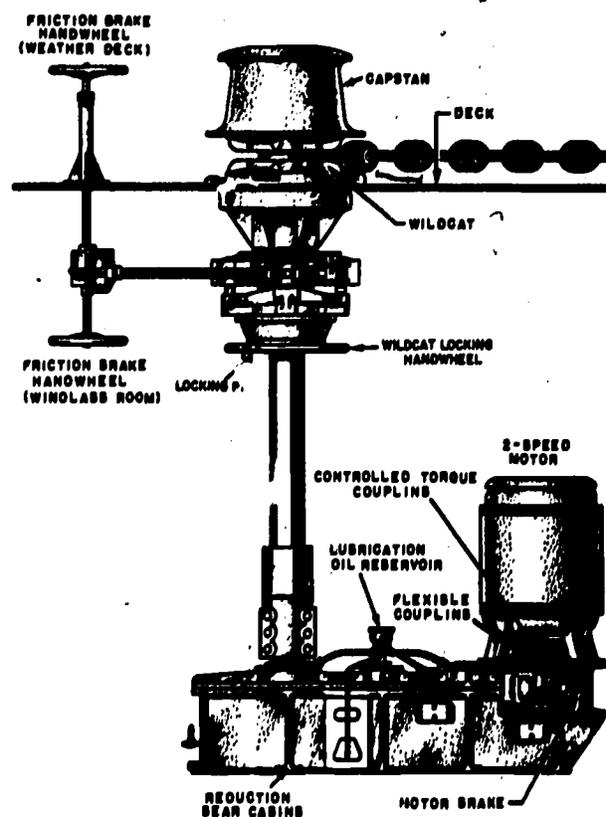


Figure 15-16.—Anchor windlass.

3.224

motor and the across-the-line starter are located in the windlass room on the next deck below. The windlass is designed to operate in both directions to raise or lower either the starboard or port anchor. Only one anchor or chain may be raised or lowered at any one time; the other is shackled to the deck.

Construction

The windlass is driven by a two-speed (full speed and one quarter speed), 3-phase, 440-volt, 60-hertz motor connected to the reduction gear by a controlled torque coupling. The controlled torque coupling is provided to prevent undue stresses when the anchor is being housed. In all cases the anchor should be housed by shifting the drum master switch to the low speed position before the anchor enters the hawsepipe.

An electric brake, mounted just below the controlled-torque coupling, will release when power is applied and will set when power is disconnected or fails. The electric brake is designed to stop and hold 150 percent of the rated load when the anchor and chain are being lowered at maximum lowering speed, in the event of power failure.

The wildcat is designed to hoist one anchor and 60 fathoms of 1-1/4-inch diehook chain in not more than 10 minutes on the high speed connection without exceeding the full-load rating of the motor. On the low-speed connection the wildcat is designed to hoist the anchor and 60 fathoms of chain without overloading the motor, and to exert a pull on the chain at least three times that required to hoist the anchor and 60 fathoms of chain.

The capstan is designed to heave a 6-inch circumference manila line at a speed of 50 feet per minute with a line pull corresponding to the full-load motor torque.

The capstan head is keyed directly to the drive shaft while the wildcat is connected to the drive shaft through a driving head and a locking head. The wildcat is keyed to the driving head and the locking head is keyed to the drive shaft. Vertical blocks sliding in slots in the locking head are raised (by the locking handwheel) into slots in the driving head to connect the two heads. The mechanism is called the locking gear. The wildcat and sleeve run free

on the same shaft until connected to the shaft by a locking head located below the weather deck. The capstan can be run independently for warping by disconnecting the locking head and holding the wildcat by means of the brake band on the brake drum. The handwheel can be pinned in the LOCKED or UNLOCKED positions and should always be fully locked or fully unlocked.

A handbrake is provided on the wildcat shaft to control the anchor handling. It is designed to operate in either direction of rotation of the wildcat and to stop and hold the anchor when dropped from a depth of 45 to 60 fathoms. The brake is operated by means of a handwheel located on the weather deck and a duplicate handwheel in the windlass room.

Operation

The windlass is operated by a drum master switch on the weather deck and a duplicate switch in the windlass room. It is important to remember that if the windlass is run with the locking handwheel in the LOCKED position, the wildcat will revolve. In this case, if the chain is engaged in the whelps on the wildcat, the chain should be free to run. Exercise care to select the proper direction of rotation and be certain that the windlass is properly lubricated.

The motor can be operated from either master switch No. 1 (on the weather deck) or from master switch No. 2 (in the windlass room) but master switch No. 1 predominates. When the associated on-off switch located on master switch No. 1 is operated to the ON position, master switch No. 1 takes over the control from master switch No. 2 (if both switches are operated simultaneously).

The anchor windlass is used alternately to handle either the starboard or the port anchors. The windlass is operated by a reversible motor in either of two directions. These directions may be hoist for the starboard anchor (lower for the port anchor) and hoist for the port anchor (lower for the starboard anchor). However, only one anchor can be handled at a time.

The motor starter (fig. 15-17) is equipped with four thermal overload relays to protect the motor against overloads. Overload relays 1SOL and 2SOL are in the slow-speed motor circuit and overload relays 1FOL and 2FOL are in the fast-speed motor circuit. If an overload occurs

ELECTRICIAN'S MATE 3 & 2

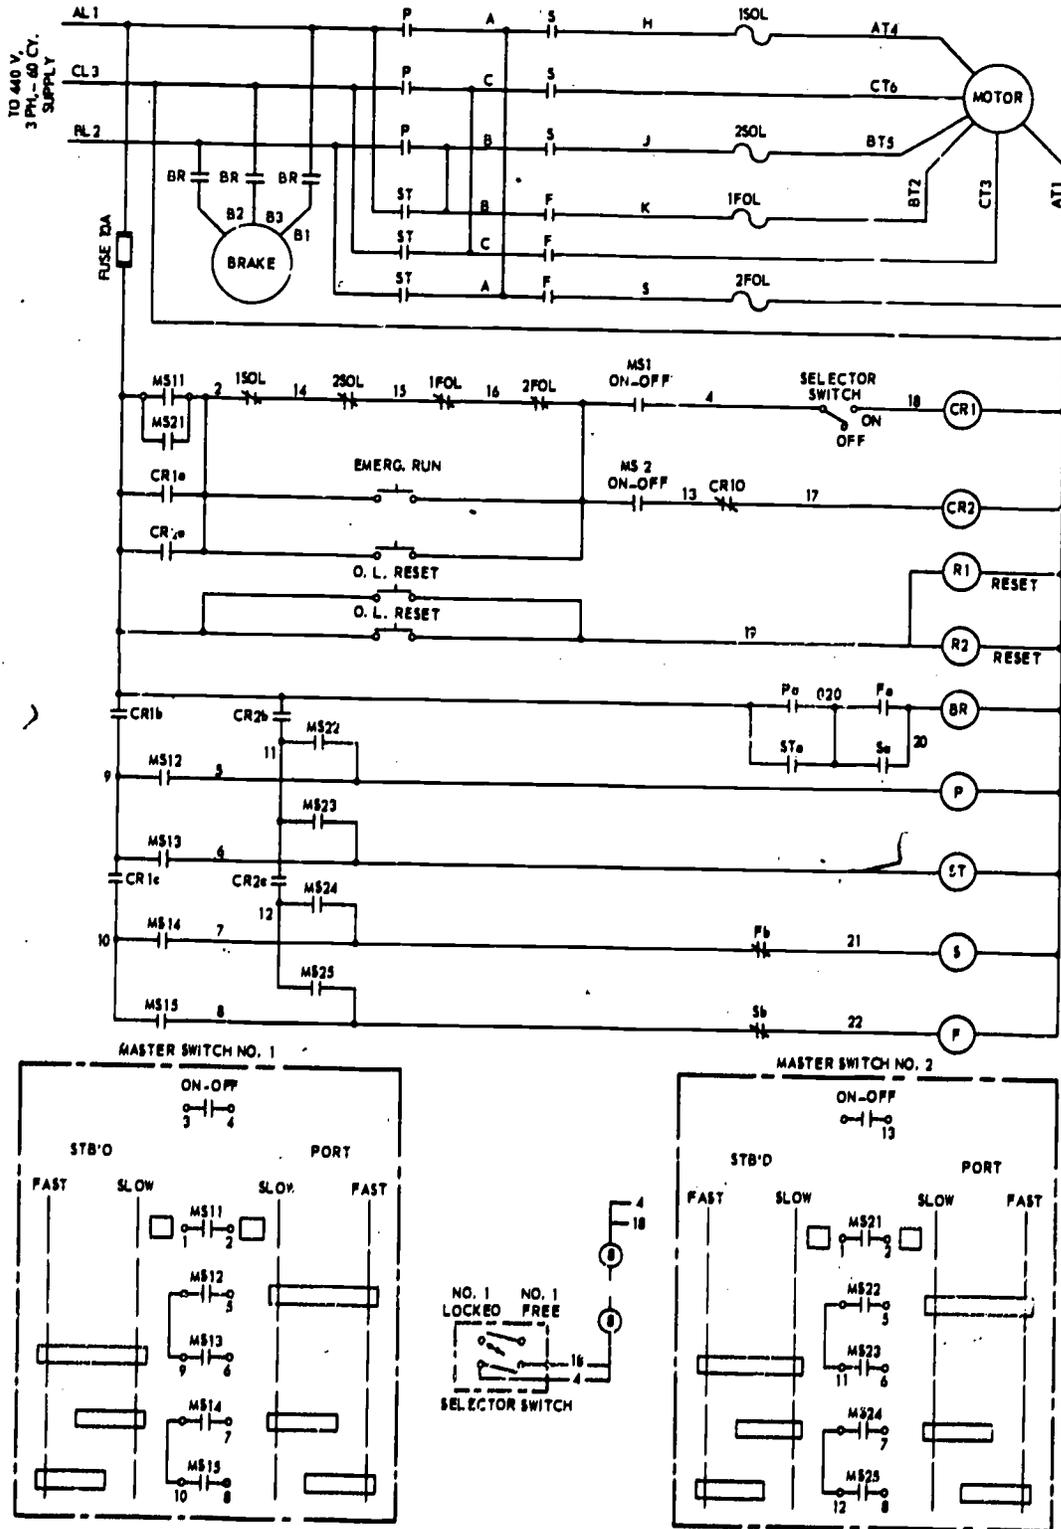


Figure 15-17.— Reversing across-the-line starter for two-speed anchor windlass.

77.186

in the slow-speed or fast-speed circuit, the SOL or the FOL relays will operate to trip the slow-speed, S, or the fast-speed, F, contactors respectively. The motor can be operated in the event of an emergency by holding either of the EMERG-RUN pushbuttons down and operating the master switch in the usual manner. To reset the overload relays, press the OVERLOAD RESET pushbuttons in the event of an overload or voltage failure. The master switch must be returned to the OFF position to restart the motor.

To start the motor in the port (hoist) direction for slow speed by master switch No. 1, operate the associated on-off switch on the ON position and move the controller handle forward to the SLOW PORT (hoist) position. This action closes contacts MS11 momentarily to energize the operating coil of relay CR1 and to close its contacts CR1a to provide a holding circuit for relay CR1, and to open its normally closed contacts CR1d to prevent operation of relay CR2 at this time. At the same time, contacts CR1b close to prepare the circuit to controller contacts MS12 and MS13, and contacts CR1c close to prepare the circuit to controller contacts MS14 and MS15.

When the controller handle is moved further toward the SLOW PORT position, contacts MS11 open; controller contacts MS12 close to energize the operating coil, P, and close the port contactor in the motor starter; also, contacts, Pa, close to provide the circuit to the motor brake relay, BR. At the same time, controller contacts MS14 close to energize the operating coil, S, and close the slow-speed contactor in the motor starter. Contacts Sa close to energize the brake relay, BR, and close its contacts to release the motor brake. Also, the normally closed contacts, Sb (in the circuit to the operating coil, F, of the fast-speed contactor), open. The motor is now connected for hoisting the port anchor at slow speed.

When the controller handle is moved further to the FAST PORT position, contacts MS15 close and contacts MS14 open. Contacts MS15 close before contacts MS14 open so that the operating coil, S, is kept energized through the normally closed contacts, Fb. When contacts MS14 open, operating coil, S, deenergizes and closes contacts Sb to energize the operating coil, F. This action opens contacts Fb to deenergize the operating coil, S, and open the slow speed contactor. When the slow-speed contactor opens, contacts Sb close to complete the circuit to the fast-speed contactor in the motor starter. The motor is now connected for hoisting the port anchor at fast speed.

To hoist the starboard anchor, the same sequence occurs except that controller contacts MS13 energize the operating coil, ST, to close the starboard contactor instead of controller contacts MS12 energizing the operating coil, P, to close the port contactor.

If it is desired to operate the motor by master switch No. 2, operate the associated on-off switch to the ON position and move the controller handle to the PORT or STARBOARD SLOW position. This action closes contacts MS21 momentarily to energize the operating coil of relay CR2 (if relay CR1 is not energized). The sequence of operation for master switch No. 2 is the same as that for master switch No. 1, except that contactors P, ST, S, and F are energized through the CR2 contacts instead of through the CR1 contacts. Master switch No. 1 can be locked out by turning the selector switch to the No. 1 LOCKED position. In this position the selector switch opens the circuit to relay CR1 and prevents its operation.

Maintenance of the electrical components of the anchor windlass should be in accordance with the instructions listed in chapter 8 of this rate training manual. More detailed information concerning the maintenance of this equipment is contained in the manufacturer's instruction books furnished with the specific equipment.

ELEVATORS

The elevator installations aboard aircraft carriers usually consist of hydraulic or electric types for airplane elevators and electrohydraulic or electromechanical types for freight, mine, bomb, torpedo, and ammunition elevators.

We will discuss the electric and electrohydraulic elevators, and the electronic control system of some elevators.

ELECTRIC (ELECTROMECHANICAL) ELEVATORS

The platform on electric elevators is raised and lowered by groups of cables which pass over sheaves and then to the hoisting machinery drums. The hoisting drums, coupled together, are driven through a reduction gear unit by an electric motor.

The motor is of the two-speed type. The control arrangements being such that the elevator starts

and runs on the high speed connection, the low speed being used for deceleration as the elevator approaches the upper or lower limit of travel.

The 2-speed electric motor is controlled through a system of contactors, relays, limit switches, and selector switches. Automatic operation is obtained by selecting the levels between which the platform is to run. The start pushbutton can then be used to close contactors through safety switches to operate the elevator at high speed. Just before reaching the desired level, the control transfers the motor to the low-speed winding through the action of cam-operated limit switches. On reaching the desired level, the control circuit is disconnected by a cam-operated stop switch, thus releasing the contactors and setting the brake to stop the platform.

For safety in operation, all doors at each level are interlocked to prevent operation unless they are closed. Also, all hatch covers are interlocked to prevent elevator operation unless they are fully opened. The protective features incorporated in the control are (1) slack-cable switches to prevent operation of the elevator if any cable should become slack, (2) emergency stop switches at each level served, (3) over-travel switches to stop the elevator if it should fail to stop at the uppermost level, and (4) overload protection.

Elevator controllers are designed with a double-break feature that prevents maloperation if any one contactor, relay, or switch should fail to function properly. Pushbuttons are interlocked to prevent operation of the elevator unless the platform is at the same level as the pushbutton. Some elevators are equipped with hatchway door mechanical interlocks to prevent opening the door unless the platform is at the same level.

A governor-actuated safety device is provided under the platform to grip the guide rails and stop the platform in the event of overspeed in the DOWN direction. Also, spring bumpers are provided at the bottom of the hatchway to prevent mechanical damage to the hull or platform due to overtravel in the DOWN direction.

Operation

The operation of the elevator depends on the position of the selector switch, which determines between which decks the elevator will run. This

switch also renders all master switches inoperative, except those pertaining to the selected levels.

Suppose the selector switch is set in the second platform to the third deck position (fig. 15-18). In this position the control is set up for the elevator to operate between the second platform and the third deck and closes contacts ①, ②, ④, ⑤, and ⑦. (The third deck is above the second platform.) Contact ② shorts out the first platform stop pushbutton, contact ① places the third deck pushbutton station in the circuit, and contacts ④ and ⑤ short out the first platform DOWN-STOP switches, respectively. Contact ⑦ places the second platform pushbutton station in the circuit.

If the overtravel, slack cable, door switches, stop pushbuttons, and overload relay contacts are in their normally closed positions, the control circuit is energized and set up for operation.

When the second platform UP pushbutton (fig. 15-18) is momentarily pressed, the UP auxiliary relay, UR, and the UP control relay CRU are energized. This action closes contacts CRU and UR1, which energizes the up contactor, U, in the across-the-line starter. The UP auxiliary relay, UR, also closes contacts UR2, (and opens UR3) which energizes the high-speed contactor, HS. Contactor HS applies voltage to the motor and energizes the brake-release solenoid. The elevator moves upward until it mechanically operates the UP-SLOW limit switch located at the third deck. Operation of the limit switch deenergizes the up auxiliary relay, UR. This action closes contacts UR3 and energizes the LS coil, which transfers the motor from the high-speed, HS, to the low-speed, LS, contactor. The elevator continues upward at low speed until it mechanically operates the UP-STOP limit switch located at the third deck. Operation of the limit switch deenergizes the up contactor, U, which deenergizes the brake-release solenoid and operates the motor brake to stop the motor. An indicating light shows when the elevator reaches the selected deck.

The elevator can be stopped at any time by pressing the stop lever at the pushbutton station located on the selected level, or, in this case, the third deck. To restart the elevator, press the UP pushbutton lever at the second platform or the DOWN lever at the third deck.

In the event of an overload, one of the overload relays will open the control circuit, set

the brake and deenergize the motor. The overload relay must be reset for normal operation by pressing the reset button that projects through the door of the enclosing case.

In the event of supply voltage failure, the line contactors will open and deenergize the motor. To resume operation of the elevator, an UP or DOWN pushbutton lever must be pressed.

As mentioned before, additional protection is provided through a system of series-connected interlocks in the control circuit consisting of door, slack cable, and overtravel switches. If a cable should become slack or if the elevator should overtravel, the elevator can be operated by holding in the SLACK CABLE bypass pushbutton PBS, located inside the controller case. When either one of these pushbuttons is operated, the motor will run only on low speed.

If an overload should occur, the elevator can be operated (in case of an emergency) in the

usual manner if the EMERG-RUN lever of either pushbutton station is held in the depressed position.

The up and down current control relays, CRU and CRD, respectively, are provided to ensure proper operation in the event of malfunctioning of other relays or contactors.

ELECTROHYDRAULIC ELEVATOR

The electrohydraulic elevators use hoisting cables and drums in much the same manner as the electric elevator. In this system however, the cable drums are driven through reduction gears by a hydraulic motor.

Raising, lowering, or speed changes are accomplished by varying the stroke of the variable delivery hydraulic pump through differential gearing. Figure 15-19 shows a typical arrangement scheme for operation of the electrohydraulic bomb elevators.

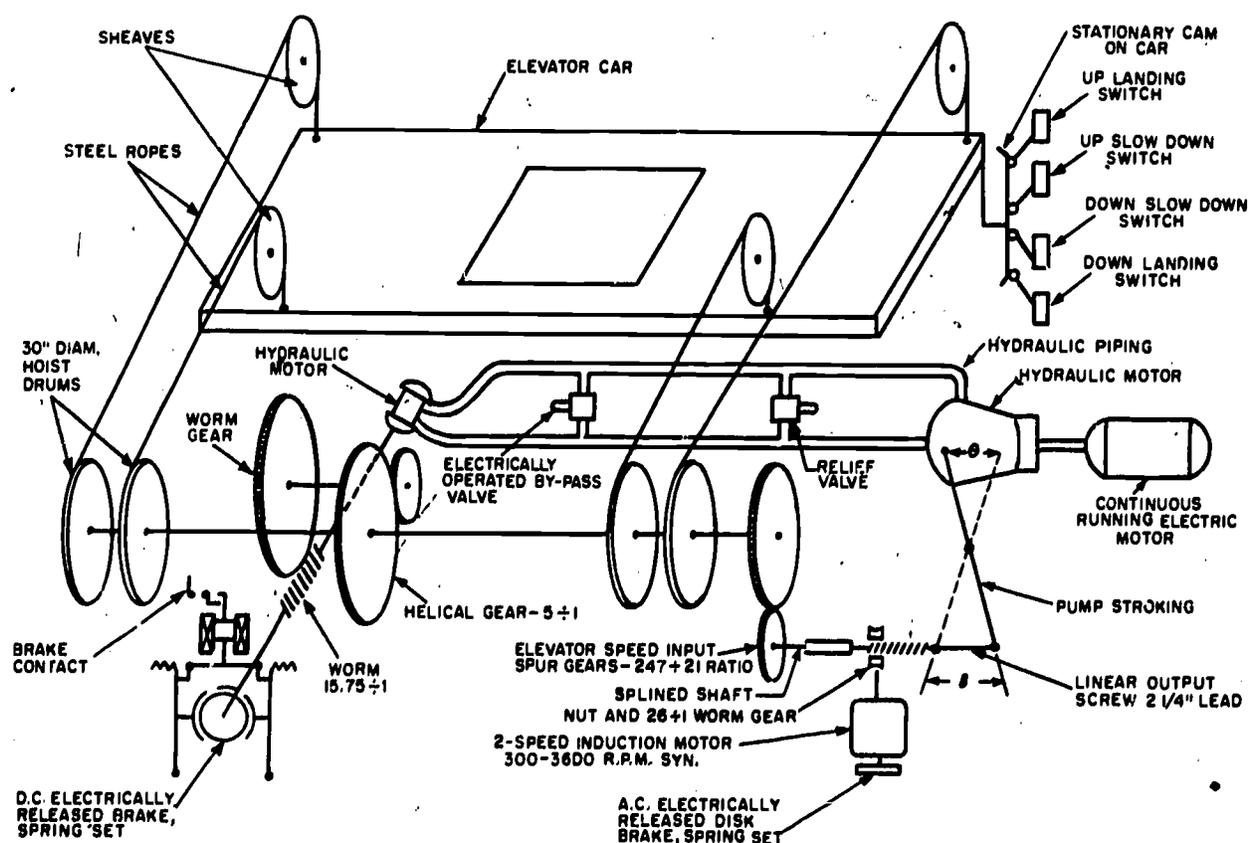


Figure 15-19.— Bomb elevator power plant and control scheme.

27.281

Control

The elevators use a followup type control system so that the pump is put on stroke by a pilot motor and the stroke is taken off by the motion of the platform working on the followup control,

On some elevators the pilot motor is started by depressing an operating pushbutton. The pilot motor moves the pump control piston to the ON-STROKE position and the elevator accelerates to full speed. Upon approaching the selected level a platform mounted cam trips a slow-down switch which deenergizes the pilot motor. Movement of the platform then returns the stroke of the pump to the neutral position and on reaching the selected level a stop switch deenergizes the brake solenoid to set the brake and stop the elevator.

By reversing the direction of rotation of the pilot motor and hence the direction of movement of the control piston of the pump, the elevator may be moved in the opposite direction.

Another system, where the pilot motor is a d-c motor the speed of which is varied by a rheostat type control, gives an infinite number of platform speeds ranging from approximately 3 to 10 feet per minute. In installations of this type, a rheostat control is provided on the platform and a duplicate control is provided in the elevator machinery room.

Several methods are used for stroking the pump for emergency operation.

By disclutching the "followup" control system from the control stroking unit and manually holding in a pushbutton, thereby releasing the

electric motor brake to free the machinery, a handwheel may be used to stroke the pump. Another method is to rotate the pilot motor armature by attaching a handwheel to an extension on the armature shaft, and thus stroking the pump.

ELECTRONIC CONTROLLED ELEVATORS

Elevators installed on some new naval ships use static controls (no moving parts); wherein electronic devices perform the functions of previously used relays, contactors, and limit switches.

The electronic controlled elevator system components (fig. 15-20) include the elevator cam target, the sensing heads, the static logic panels, the motor (magnetic) controller, and a 3-phase drive motor. These function as follows:

1. Elevator cam targets are steel cams or vanes, mounted on the elevator platform to actuate the sensing heads.

2. The sensing heads are mounted up and down the elevator trunk bulkhead and are used for many elevator functions, such as slowing and stopping, high-speed up and down stops, governing overspeed, preventing overtravel, and door interlock functions.

3. The static logic panel is a solid state, low power system that performs those functions normally associated with limit switches, relays, and contactors (fig. 15-21). The logic modules consists of proximity switches, signal converters, retentive memories, reset memories, shift registers, duo-delay timers, and pulses with appropriate logic elements and circuitry.

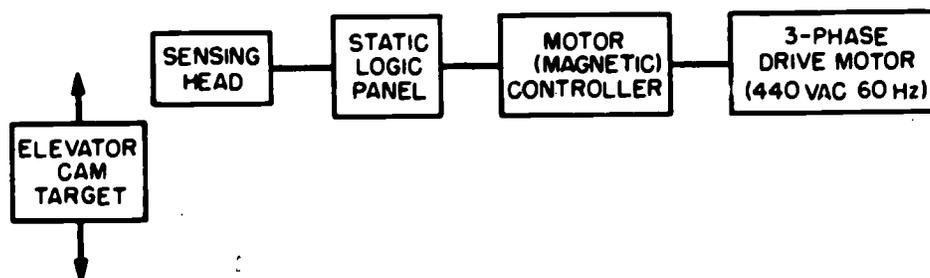


Figure 15-20.—Block diagram of electronic controlled elevator system.

77.289

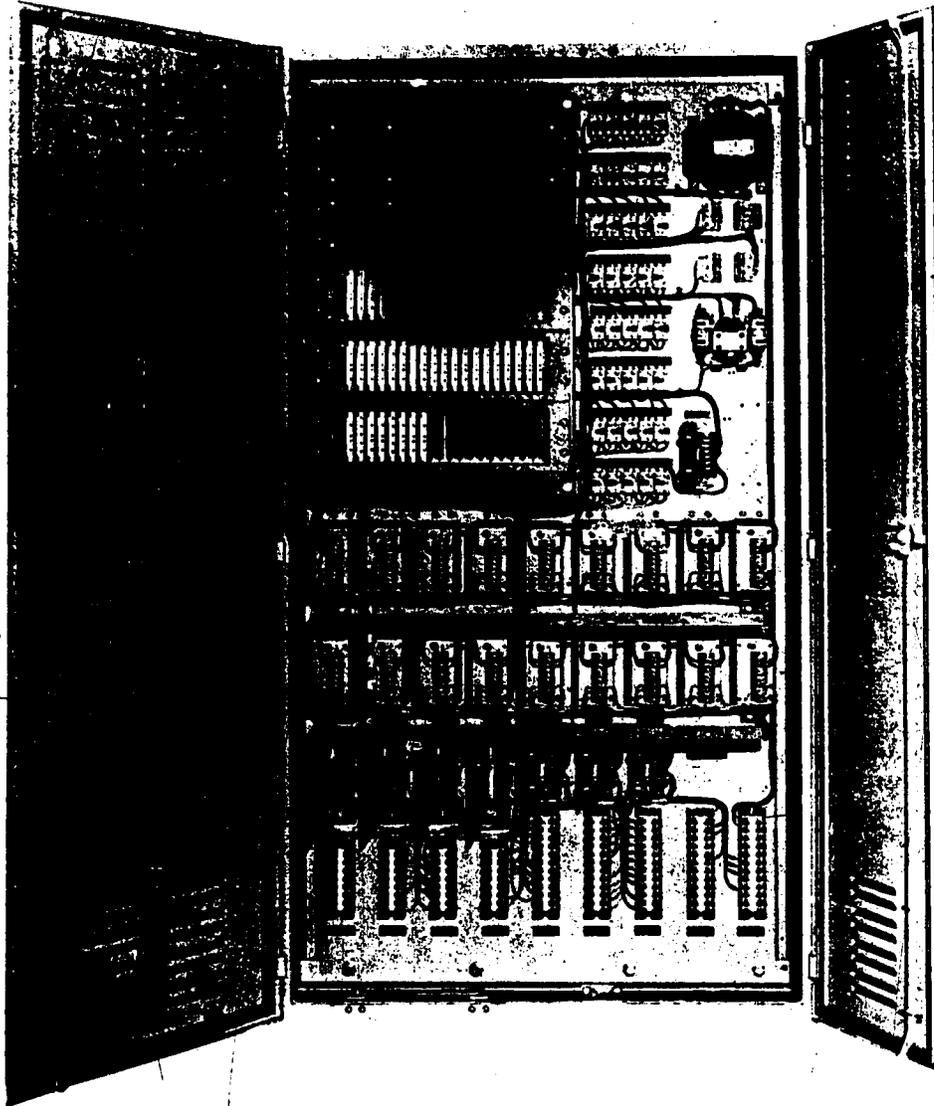


Figure 15-21.— A static logic panel at the sixth level for a cargo elevator.

77.290

4. The motor controller (fig. 15-22) energizes appropriate contactors to control the speed and rotation of the motor.


5. The three-phase, 400 volt, 60 hertz motor drives the elevator.

Proximity Limit Switches

Proximity limit switches (electronic limit-switches) are used extensively to control elevator

movement. Basically, the proximity switch consists of a remotely located sensing head and a logic module that amplifies the sensing head voltage to a positive 10 volt level used by the static logic control system. The voltage output is +10 volts when the cam target on the elevator car is moved in front of the sensing head mounted on the elevator shaft. The voltage output is zero when the cam is moved away from the sensing head (deactuated). The metallic elevator target to be sensed must enter the sensing zone to

15-32
439

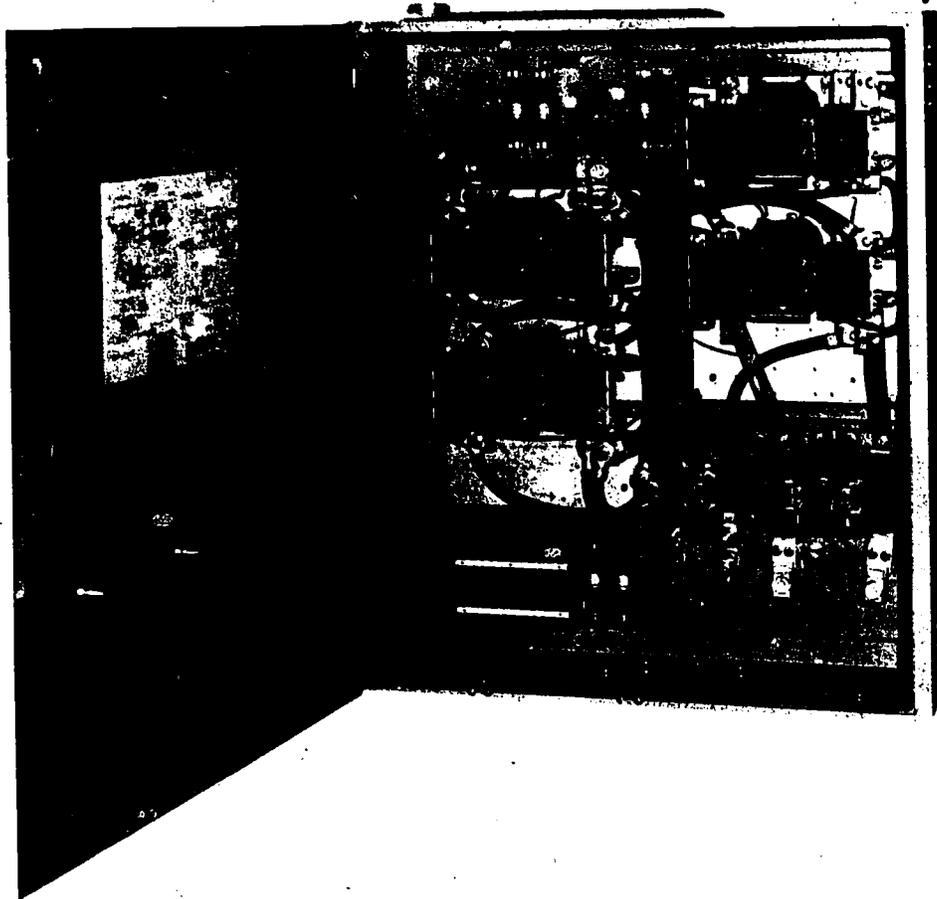

77.291

Figure 15-22.—A-c magnetic reversing controller for a 2-speed, 2-winding motor for a cargo elevator.

create a signal. The signal strength depends primarily on the distance between the face of the sensing head and the target.

Operation of a proximity limit switch may be best explained by examining the basic circuits and components. First is the power supply (fig. 15-23), consisting of the 115/15 volt transformer, D1, D2, C1, R1, and R2. The voltage across D2 is used to bias the succeeding amplifier stages. The zener diode (D2) has a breakdown voltage of 12 volts which protects the following stages from overvoltages.

SENSING HEADS.—The sensing heads (fig. 15-23) consists of two coils connected in series opposition, which when energized by mutual inductance from a third coil, are balanced by

means of a tuning slug. A resistor connected in parallel with the top sensing coil is used for positioning the sensing heads. An output voltage is produced by the sensing head when an elevator cam target enters the field resulting in an output to terminals 3 and 5.

A.C. AMPLIFIER.—The input to the a-c amplifier is supplied by the sensing head at terminals 3 and 5 (fig. 15-23). The sensing head signal is amplified by three cascaded amplifier stages consisting of Q1, Q2, and Q3 with suitable biasing networks. The amplifier output is fed through a rectifier consisting of D3, D4, D5, and D6. This signal is filtered by the RC network of C11 and R18 to drive the following Schmitt-trigger.

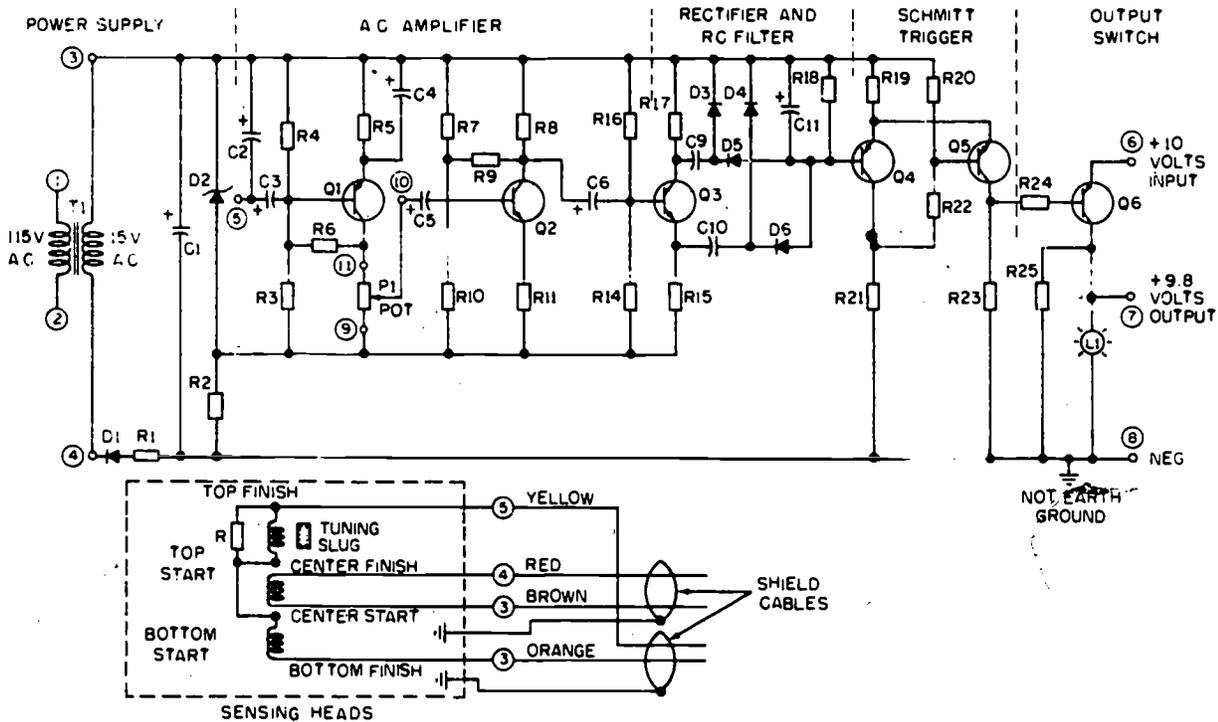


Figure 15-23.— Schematic diagram of proximity limit switch.

77.292

SCHMITT-TRIGGER.—The Schmitt-trigger, consisting of Q4 and Q5, presents a voltage across R23 which is used to bias the output switch transistor Q6 to its ON or OFF state.

OUTPUT SWITCH.—The proximity switch supplies only the switching power. Proximity limit switch terminals 6 and 8 connect to a 10 volt d-c static logic power source. This power source is supplied at terminals 7 and 8 and the proximity light is lit when Q6 switches to ON state.

When the target is in the sensing zone, the sensing head has an output which is amplified, rectified, and filtered, switching the output of the Schmitt-trigger off. This turns the output switch, Q6, (fig. 15-23) to its ON position. Thus, with the target in the sensing zone, there is an output and the status light L1 is on.

Maintenance

As with all electrical and electronic equipment, preventative maintenance must be performed on a routine basis and in accordance

with the Planned Maintenance Subsystem and the manufacturer's instruction manuals. Good housekeeping practices and routine adjustments play important parts in the maintenance of elevator controllers.

Be sure to pay special attention to the proximity switches. Do not test the control circuitry with a megger because the high voltage generated by a megger can easily damage electronic components. If a proximity switch does not pick-up or drop-out properly, the following checks may be made on the amplifier at the panel: (1) check the indicating lamp for operation, (2) measure voltage and frequency input and output at T1 transformer (all measurements are to be taken with high impedance meters greater than 1 megohm), and (3) measure dropout voltages between terminals # 3 and # 5 of the proximity switch with and without the cam target at the pickup point. See the manufacturer's manual for proper tolerance values.

If any of the above measurements are out of tolerance you should first check for metal,

other than the metal target, in the sensing field. The null point of the sensing head may need adjusting. This is accomplished by removing the soft plug in the tuning slughole of the sensing head and turning the slug with an Allen wrench. Remove the wrench when checking the null point.

The amplifier sensitivity is adjusted by removing the plug button on the top right of the amplifier and adjusting the potentiometer (PI) screw. Be careful when inserting the screwdriver. Clockwise rotation reduces pickup voltage, while counterclockwise rotation will increase the pickup voltage. This adjustment is very sensitive, and must be executed cautiously.

Dropout voltage cannot be adjusted and is dependent upon tolerance of resistors in Schmitt-Trigger circuit. If dropout voltage is not within tolerance, check values of resistors R19 through R23.

If above checks and adjustments do not correct the trouble, the problem must be internal

to amplifier and necessitates removing the amplifier from the panel for servicing.

UNDERWAY REPLENISHMENT SYSTEM

The underway replenishment (UNREP) system is a high speed heavy weather, day or night method of transferring missiles and other loads between a noncombatant supply ship and a combatant ship while underway at sea (fig. 15-24). The system is made up of two major units: the SENDING UNIT located on the delivery ship, and the RECEIVING UNIT located on the receiving ship.

In operation, the sending and receiving units are connected through a ram tensioner by a 1-inch diameter wire rope (highline) to form an integral system. A fast trolley is pulled back and forth along the highline between the ships

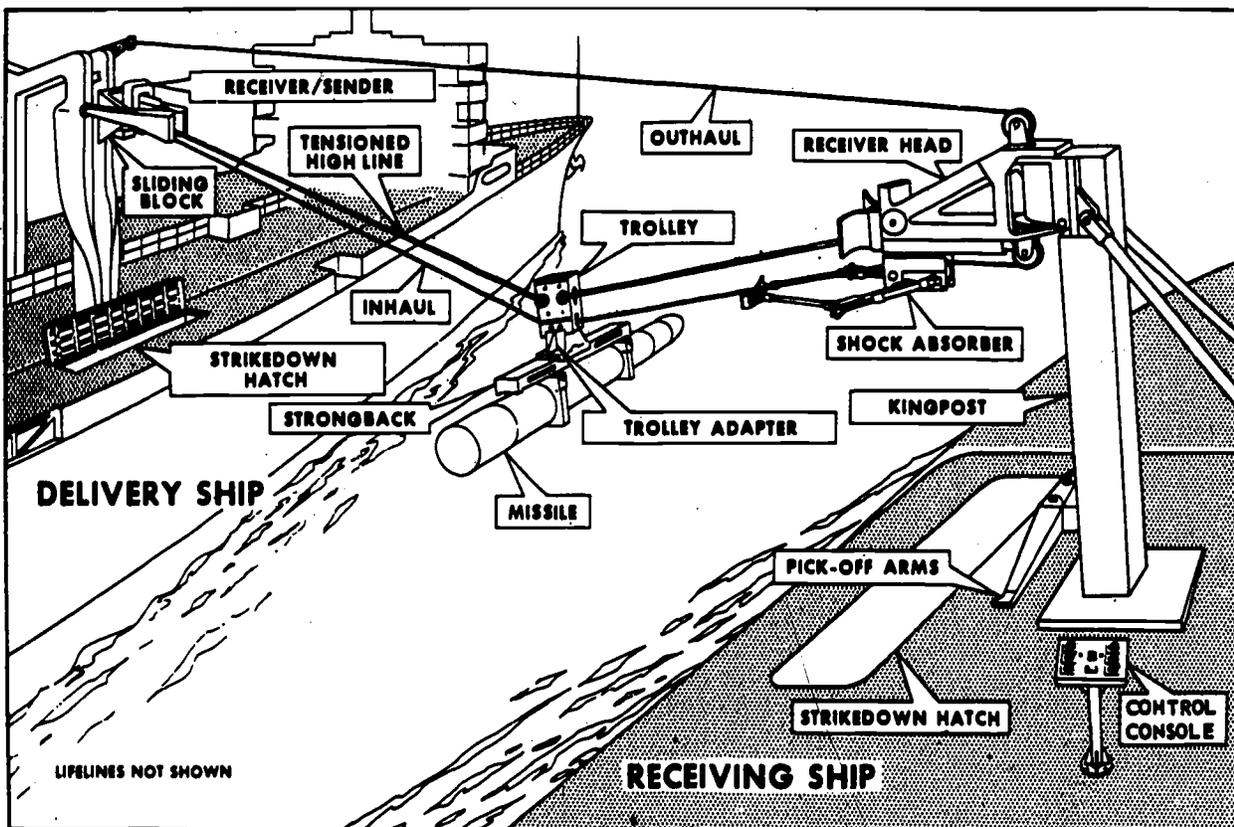


Figure 15-24.— UNREP system.

58.167

by the electrohydraulic winch-tensioned inhaul and outhaul lines, supplied by the delivery ship. The receiving unit can function to return missiles or other loads back to the supply ship.

DELIVERY SHIP


The delivery (supply) ship has the missiles racked below deck with the necessary facilities to deliver a missile to the receiving ship. Figure 15-25 shows the steps the missile goes through during the move and names the equipment that moves the missile.

Four-Direction Fork Truck

The 4-D battery powered fork truck is designed to operate in close quarters. The fork truck is used to move the missile and storage cradle from storage to the centerline elevator.

Centerline Elevators

The centerline elevators are used in the AE UNREP system to move missiles from the lower deck storage to the second deck. When missiles

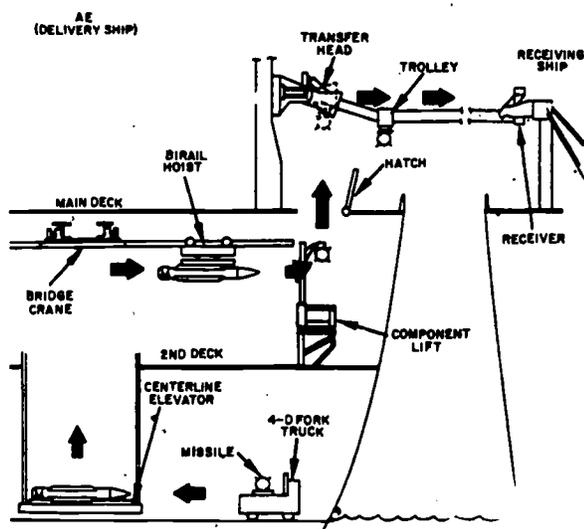

27.328

Figure 15-25.—UNREP equipment used to move missile from storage to receiving ship.

are stored at the second deck, instead of a lower level, the centerline elevator is not used. The second deck has the overhead birail tracks and necessary equipment for delivery of the missile to topside.

A strongback is manually connected to the missile when it reaches the second deck to facilitate the careful handling of the missile as it moves through the system.

Bridge Crane

The bridge crane (fig. 15-25) moves the birail hoist into the centerline elevator. Here the birail hoist mates with the strongback and lifts the missile from its storage cradle to a lock-on position on the birail hoist. The bridge crane then pulls the birail hoist from the elevator area to the birail track.

Birail Hoist

The birail hoist is an air-driven car that rolls along an overhead track on the second deck. The birail hoist transports the missile to the component lift.

The birail hoist lowers a spider to mate with the strongback and raise the missile from the centerline elevator. After the strongback is raised and secured to the birail hoist, the hoist is moved to align with the birail tracks. At this point the missile can be turned around (180 degrees), if necessary, by the birail hoist. The need for turning the missile depends upon the receiver ship's strikedown equipment.

Component Lift

When the birail hoist has the missile centered over the component lift, the component lift arms swing out and mate with the strongback. The birail hoist unlatches and returns for the next missile. The component lift raises through the hatch to the main deck and onto the transfer head where the strongback is then connected to the trolley for transporting. The above-deck equipment on the delivery ship is comprised of a kingpost, transfer head, tensioned highline, and the ram tensioner.

Highline and Ram Tensioner

The trolley travels between the AE and the receiving ship on a tensioned wire rope called

the highline (fig. 15-24). The highline is tensioned at 18,000 to 20,000 pounds during ship-to-ship replenishment operations to hold the weight of a load of about 5,000 pounds. The highline stays tensioned even when the distance between the two ships changes and when the ships roll toward each other or from each other.

The highline winch (fig. 15-26) has a 200 hp electric motor. The motor operates at 440 volts, 3 phase, 60 hertz power, and 180 amperes when working at a full load.

In order to keep the wire rope from tangling during operation of the UNREP winches, a hydraulic operated antibirdcager is installed. This unit keeps a steady tension on the wire rope at the winches.

The ram tensioner (fig. 15-26) is a unit that helps the highline winch operator to keep the highline tight. When the ram tensioner cannot

haul in or pay out the highline fast enough to keep the correct tension, the highline winch operator hauls in or pays out the highline to help the ram tensioner maintain the correct tension.

Inhaul and Outhaul Winches

Wire ropes from two winches (fig. 15-27 and 15-28) control the missile transfer during ship-to-ship transfer operation. The outhaul winch pulls the trolley, which is holding the missile and riding on the tensioned (outhaul) highline, to the receiving ship. After the missile has been delivered, the inhaul winch returns the empty trolley by pulling it back to the AE with a wire rope.

The highline winch and the inhaul/outhaul winches all have the same electrical, mechanical, and hydraulic system. The electric motors on

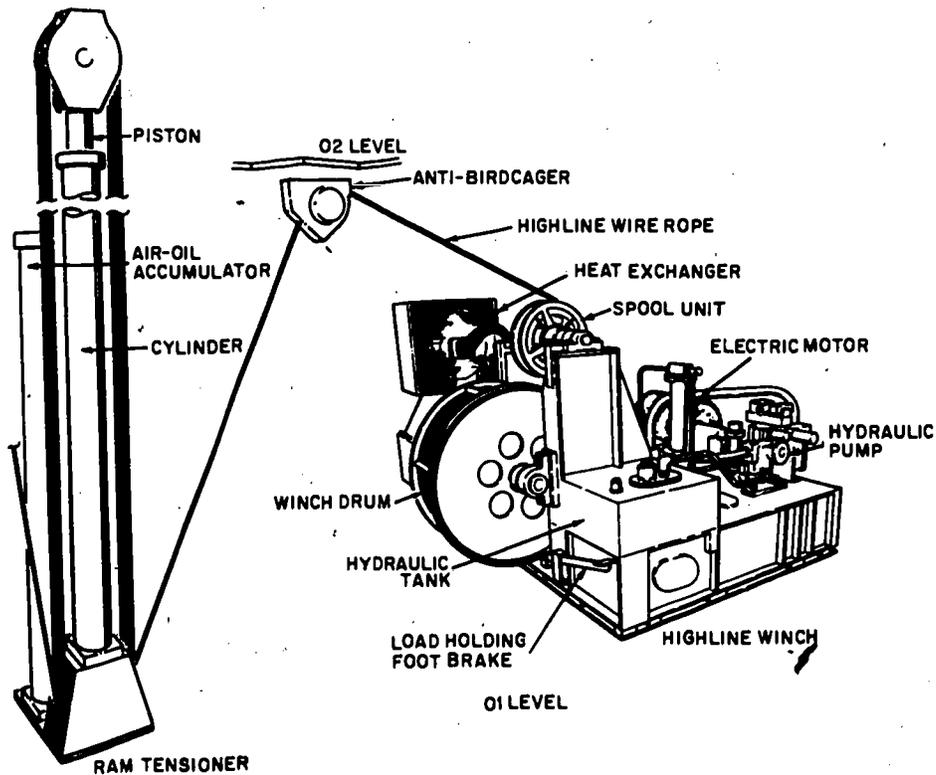


Figure 15-26.— Highline winch.

27.329

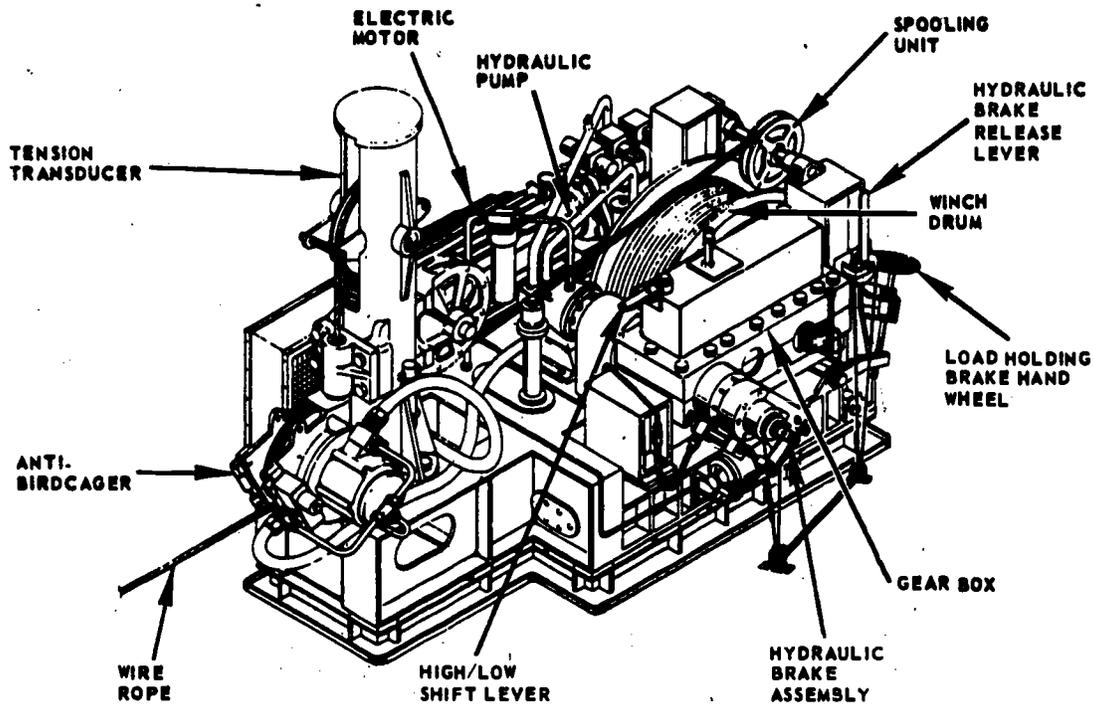


Figure 15-27.— Parts of the inhaul/outhaul winch.

27.330

the winches drive three pumps: the servo pump, main pump, and makeup pump. A shipboard overview of components of an AEUNREP system is illustrated in figure 15-28.

RECEIVING SHIP

The UNREP receiving (combatant) ship receives the missile with the receiving unit (fig. 15-29). The receiving unit consists basically of a king-post, a receiving head, an elevator, a carriage return hydraulic power unit, and a remote control console. The receiving head is supported by the kingpost and the elevator operates vertically on the kingpost. The trolley is captured by the receiving head. On the other head are shock absorbers (called jackknives) that slow the trolley, and arms that steady it while the missile is being removed by the elevator.

The elevator takes the strongback and load from the trolley and deposits them on the strike-down elevator. Lateral orientation of the elevator

arms is controlled by swing of the receiving head and regardless of roll, pitch, height of the load, and station alignment, the arms assume the correct position to receive the strongback supporting the load. A quick acting mechanism in the trolley (called pickoff probes) releases the strongback when the elevator arms are fully closed and locked in slots in the strongback.

UNREP gear varies from ship to ship. For example, one type is stationary; another must be stowed like a crane boom to keep it from interfering with the ship's armament. One type will service only one strikedown elevator, whereas another may have the capability of swinging around to service both port and starboard elevators.

The specific operations of the elevator are controlled by the console operator by means of pushbutton switches on the remote control console.

Control Console

The electrical system provides the controls and signals necessary to operate the receiving

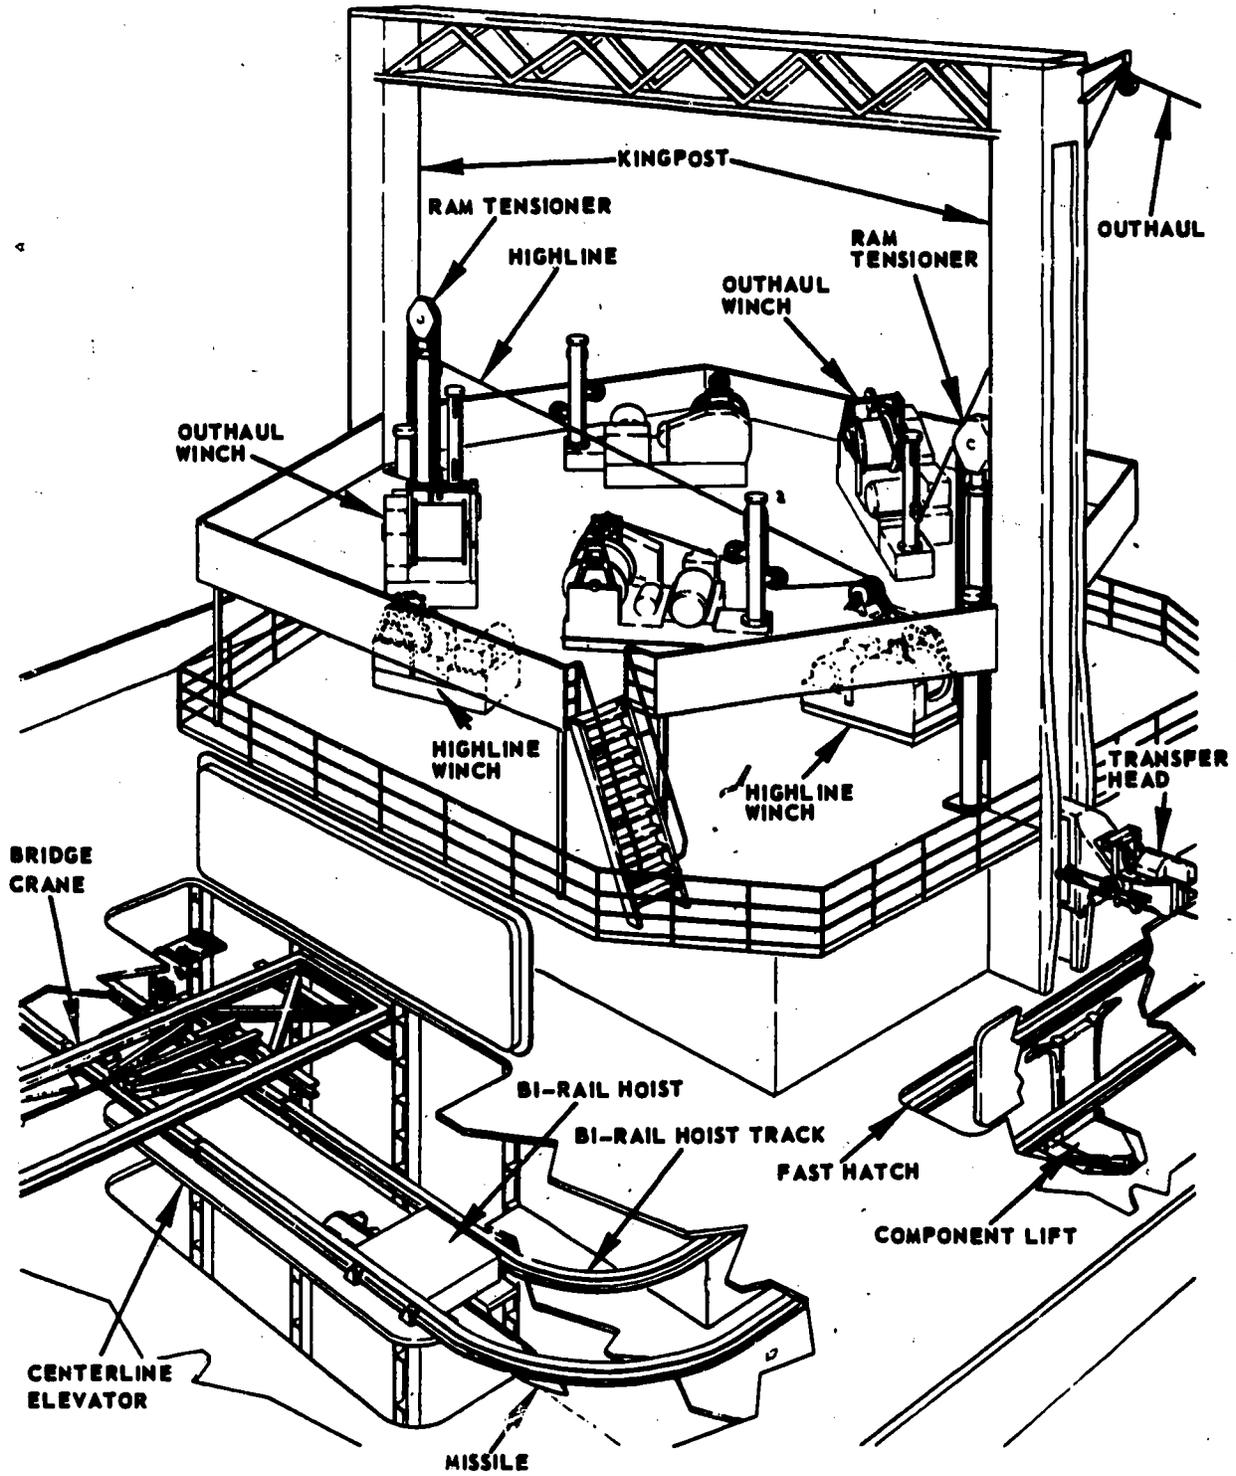


Figure 15-28.— Top view of AE UNREP system (view looking aft).

27.331

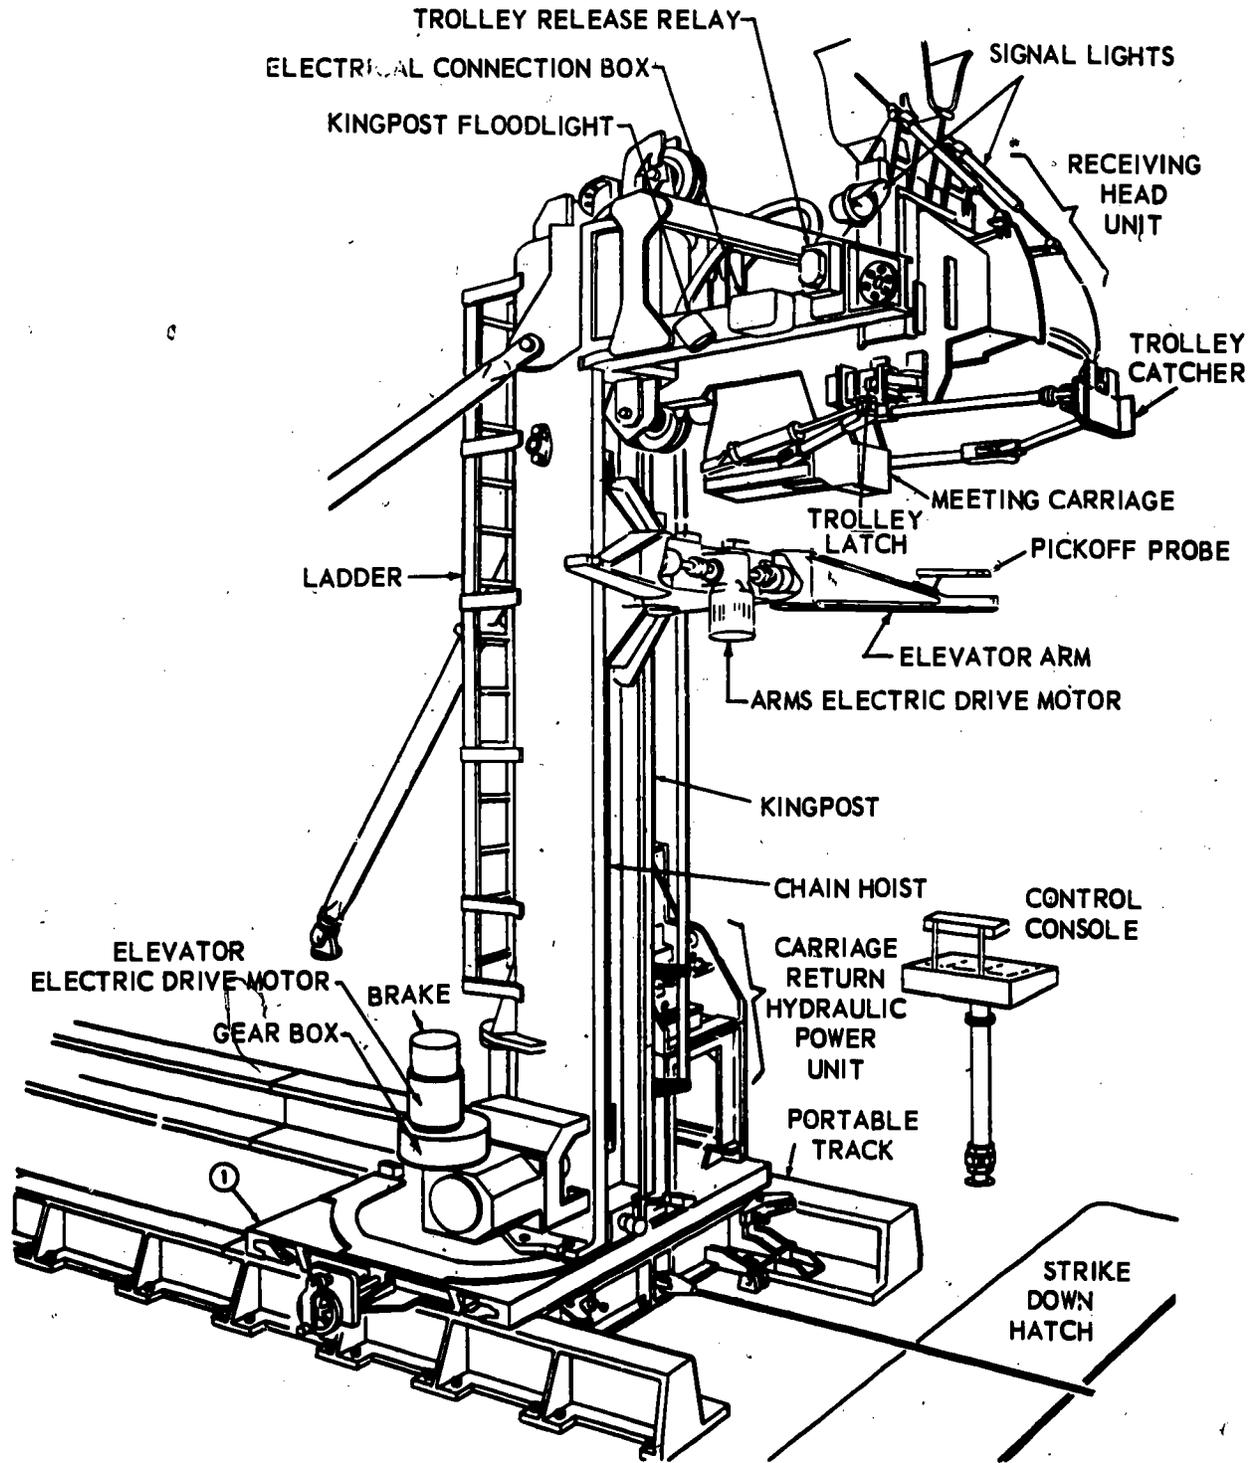


Figure 15-29. — Receiving unit.

27.333

15-40
117

unit from a remote control console (figs. 15-29 and 15-30). The control console is a portable aluminum box housing upon which the control switches and indicator lights are installed. Switches are grouped on the console by their control function.

The power switch is in the upper right-hand corner of the control console and connects and disconnects the 440 volts a-c ship power supply to all the electrical components of the receiving unit. The main electrical operations of the system are to (1) raise and lower the elevator, (2) open and close the elevator arms, (3) immobilize the meeting carriage when receiving the missile and when indexed-stowing the missile, (4) release

the trolley latch, and (5) operate the transfer signal holdup light.

An ultraviolet night light is installed above the console to illuminate the switch panel during night operation. When in use, the control console is installed on a pedestal near the receiving unit. When not in use, the control console is stowed within the console stowage box.

Elevator Drive Control System

The elevator drive control system raises and lowers the elevator. The elevator mechanism is supported by the kingpost. A chain hoist, located within the kingpost, is attached to the elevator

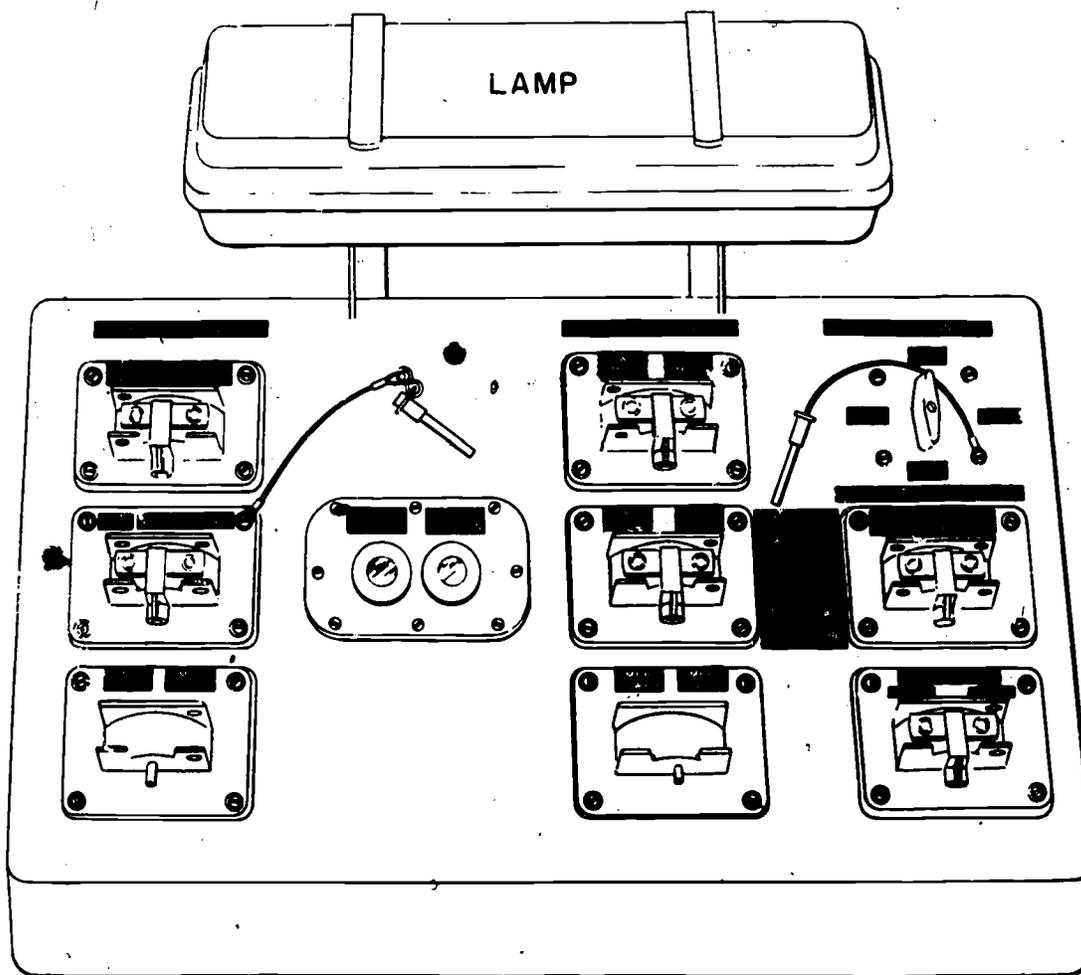


Figure 15-30.—Control console on receiving ship.

27,334

and is driven by a bidirectional electric motor for elevator operation. The motor is mounted on the side of the kingpost near the base (fig. 15-29). The 5-hp motor operates on 440 volts a-c, 3-phase, 60-hertz at 1800 rpm. It is a watertight motor and drives the elevator through a worm-gear type speed reducer. A solenoid operated disc brake, installed on top of the elevator drive motor, performs fast action in stopping and starting the motor, thereby permitting the swift and accurate positioning required by the system. The operator at the console can stop the elevator at any position along the kingpost.

Electrical circuits provide the means to raise the elevator with the arms open and unloaded, or with the arms closed and loaded and to lower the elevator with the arms open and unloaded, or with the arm closed and loaded. Emergency circuits bypass the normal control switches to provide a built-in safety for emergency operation but should never be used unless an emergency arises.

Arms Rotation Control System

The arms rotation control system controls the opening and closing of the elevator arms for both normal and emergency operations. The arms system consists of an electric motor (fig. 15-29), a speed reduction gear box, and a cross-shaft, worm gear mechanism. The 1-1/2-hp electric motor is bidirectional and is watertight. It operates on 440 volts a-c, 3 phase, 60 hertz at

1800 rpm. The components, as a unit and with the necessary control circuitry, function to open and close the arms of the elevator.

Meeting Carriage Control System

The meeting carriage (fig. 15-29) receives and cushions the incoming missile with the trolley catcher and jackknife units. The meeting carriage is pushed back horizontally about 20 inches, moving from the fully extended RECEIVED position to the fully compressed INDEXED position. The carriage is held in the indexed position by the trolley, which is retained by the trolley latch. When the trolley latch is released, the trolley is pulled from the receiving head. Hydraulic pressure is automatically supplied to the carriage return cylinder which extends the cylinder and moves the meeting carriage to the received position.

During operation when the trolley enters the receiving head, the jackknife folds back and mechanically operates an electrical limit switch. This action automatically energizes the carriage return solenoid valve (fig. 15-31B), and allows the hydraulic fluid within the carriage return cylinder to bleed off into the reservoir (fig. 15-31A). As the trolley moves all the way into the receiving head, the meeting carriage is pushed back into the indexed position and the cylinder is collapsed. When the meeting carriage solenoid valve is deenergized, the supply port to the cylinder is open and hydraulic pressure pushes

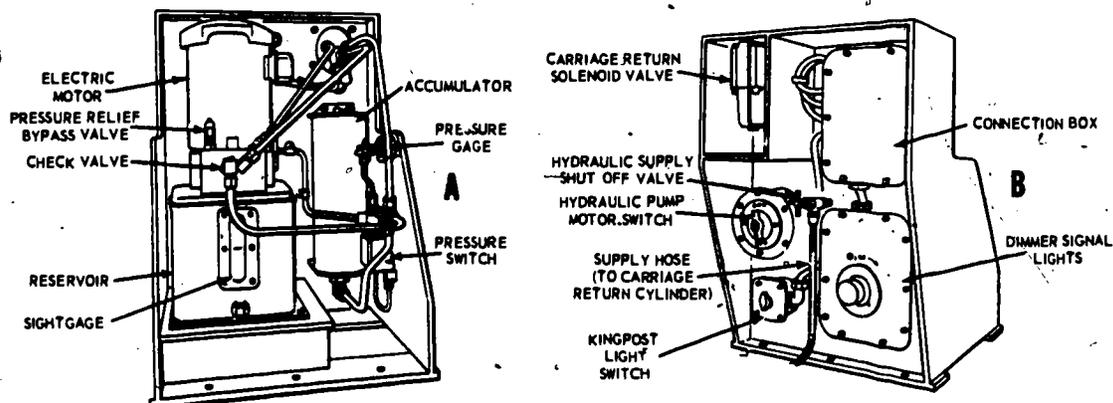


Figure 15-31.—Carriage return hydraulic power unit.

27.335

the meeting carriage into the received position. Upon trolley release, the jackknife and limit switch also return to their normal operating positions.

An electric motor mounted vertically on top of the reservoir (fig. 15-31A) operates a positive displacement gear type hydraulic pump located inside the reservoir. The motor is a 3 phase, 440 volt, a-c, 60-hertz, waterproof motor with a rating of 1-1/2 hp at 3600 rpm. Operation of the hydraulic pump motor is automatic and maintains the hydraulic fluid supply pressure at about 1000 psi. During operation whenever the supply pressure within the accumulator is below 950 psi the oil pressure switch (fig. 15-31A) will close electrical contacts and start the pump motor operating. As the pressure inside the accumulator reaches 1000 psi the oil pressure switch electrical contacts will open and stop the motor.

The automatic controls can be overridden by the console operator.

Trolley Latch Release

The trolley latch (fig. 15-29) consists primarily of a latch pin and trunnion assembly, a locking arm, a solenoid, two limit switches, and a manually operated release lever. The latch will automatically fall into the latch hole in the side of the trolley when the trolley has been pulled into the receiving head sufficiently to push the meeting carriage into the indexed position.

The trolley latch release system has a blue signal light (not shown) located on the opposite side of the receiving head unit, and a blue indicator light located at the control console (fig. 15-30). The purpose of the electrical circuit is to provide a visual indication for the winch operator on the supply ship and the console operator on the receiving ship that the trolley is latched. When the trolley is latched, the blue trolley latched lights are illuminated and are extinguished when the trolley is released.

The trolley latch signal light circuit receives 110 volt a-c power from the 450/120-volt transformer. The 440 volt a-c power to the transformer is controlled by the power switch located on the control console.

The automatic trolley latch system can be manually controlled by releasing the latch either by the operator energizing the trolley release solenoid from the control console or by manually pulling the release handle on the side of the kingpost.

Transfer Signal Holdup Light

The transfer signal holdup light circuit has an amber signal (shown in fig. 15-29) located on the receiving head unit. An amber indication light is located on the control console. The purpose of the electrical circuit is to give a visual indication to the winch operator on the supply ship and console operator on the receiving ship when the ships are becoming too far off station. Whenever the receiving head trains more than 30 degrees off station, the lights are illuminated. This light circuit also enables the console operator to signal the winch operator to temporarily stop operation.


The holdup transfer signal light circuit receives 120-volt a-c power from the 440/120-volt transformer. The 440-volt a-c power to the transformer is controlled by the power switch located on the control console.

ELECTRIC FORK LIFT TRUCK


Electric fork lift trucks are primarily used for the handling, transporting, and warehousing of materials in confined areas where engine exhaust fumes cannot be tolerated (fig. 15-32). The larger vehicles are electric powered, front-wheel drive, rear wheel power-steering fork lift trucks (fig. 15-32A). A 36 or 24-volt storage battery is required to furnish power for the traveling, steering and lifting mechanism. The drive mechanism includes an electric drive (traction) motor, coupling, power axle assembly and control. Control of the travel circuit provides one automatic accelerating speed plus four forward and four reverse controlled speeds.

The lifting mechanism includes an electric motor, hydraulic pump, hydraulic reservoir, hoist, tilt, and side shift cylinders, directional control valve, forks, and controls.

The vehicle steering system consists of a steering motor, pump, steering gear assembly, power steering unit, trailing axle, and controls.

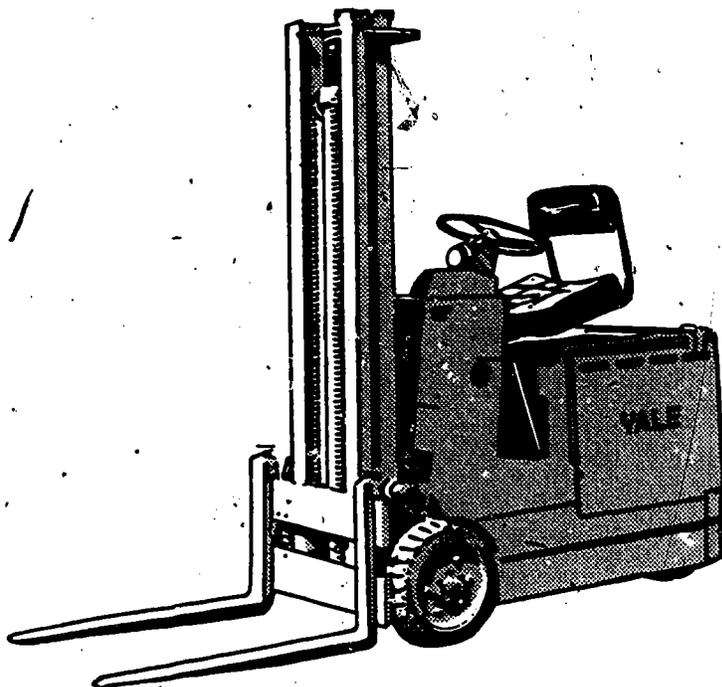

A

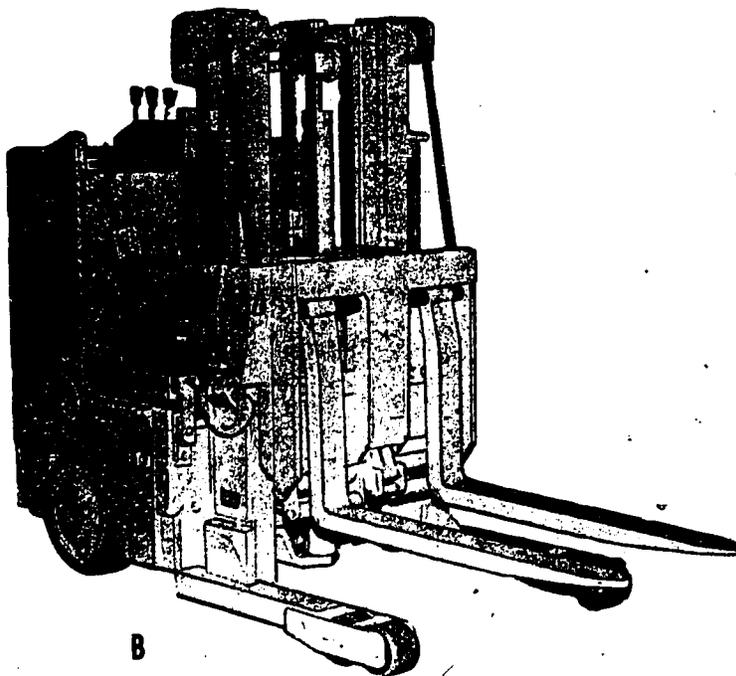

B

Figure 15-32.— Electric fork lift truck.

5.58(77C)A

15-4451

The brake system consists of a master cylinder, mechanical parking brake and hydraulic service brakes.

Truck speed control is accomplished by controlling the average power delivered to the drive motor over a given period of time. Most fork lifts have speed controls which are of INCREMENTAL TYPE, whereby a bank of resistors is inserted into or shorted out of the circuit, in order to obtain speed control. The STEPLESS TYPE in the newest forklift truck uses silicon controlled rectifiers (SCR) control circuitry. The incremental-type truck control is similar to a car with a standard shift, and the stepless type of control is similar to a car with an automatic transmission which will provide for smooth control of the speed.

Many of today's shipboard requirements for material handling operations necessitate very smooth acceleration of the electric truck. Smooth acceleration for a major portion of the speed range is highly desirable and permits accurate maneuvering of the truck for spotting loads in congested areas.

The electrical system (fig. 15-33) may be logically divided into a power circuit and a control circuit. These two circuits comprise the circuitry for the hydraulic pump motor, the steer motor, and the drive motor.

PUMP MOTOR

The hydraulic lift pump motor power circuit consists of the pump motor and contacts of the pump relay coil (P). The pump motor control circuit consists of the pump relay coil (P), and lever valve switches that are actuated by a hydraulic control valve.

To operate the truck's lift system, the battery switch must be closed and the key switch turned on. The movement of one of the lever valve switches, starts the hydraulic-lift pump motor. When the levers are returned to neutral, the pump motor stops.

STEER MOTOR

The steer motor power circuit consists of the steer motor and contacts of the steer relay coil (S). The steer motor control circuit has a

relay-coil (S) and, on the seated-type fork lifts, a steer switch that is closed when the operator is seated, therefore the motor is in continuous operation while the operator is seated. This permits power steering even though the truck is not moving.

DRIVE MOTOR AND CONTROLLER

The drive motor controller regulates the speed of the series drive motor by means of solid state control circuitry integrated with magnetically operated devices. This circuitry enables heavy loads to be handled at low speeds with very little battery current, resulting in extra hours of operation. For full speed cruising, the solid state system is removed from the control circuit thus connecting the drive motor across the battery supply.

The drive motor POWER circuit (fig. 15-33) consists of the drive motor with its series fields, the contacts of the speed changing relays (1A, 2A, 3A, 4A), and contacts of the forward and reversing relays (F, R).

In the drive motor CONTROL circuit, the accelerator pedal switches provide the four accelerating speeds by controlling the series fields of the drive motor. The control circuit also includes the speed changing power relay coils (1A, 2A, 3A, 4A); the directional relay coils (F, R) and the necessary interlocks which are mechanically operated by the respective contactors. For instance, when the "2A" contactor coil is energized, its normally-opened contacts close, and its normally-closed contacts open. Another component, the static timer, serves to provide an adjustable time delay between first and second speed and one between second and third speed, as well as a fixed time delay between third and fourth speed. The brake switch, operated by the brake pedal, interrupts the drive control circuit whenever the brake pedal is depressed and also provides power for starting up on a grade by means of the anti-rollback (ARB) connection of the static timer. The static timer also provides for controlled plugging. Control fuses (not shown) protect the drive motor and the static timer against electrical faults. Thermal switches (not shown) serve to open the drive and steer motor circuits in case motor frame temperatures reach 225°F.

The master accelerating switch used for controlling truck speed is a manually operated pilot

ELECTRICIAN'S MATE 3 & 2

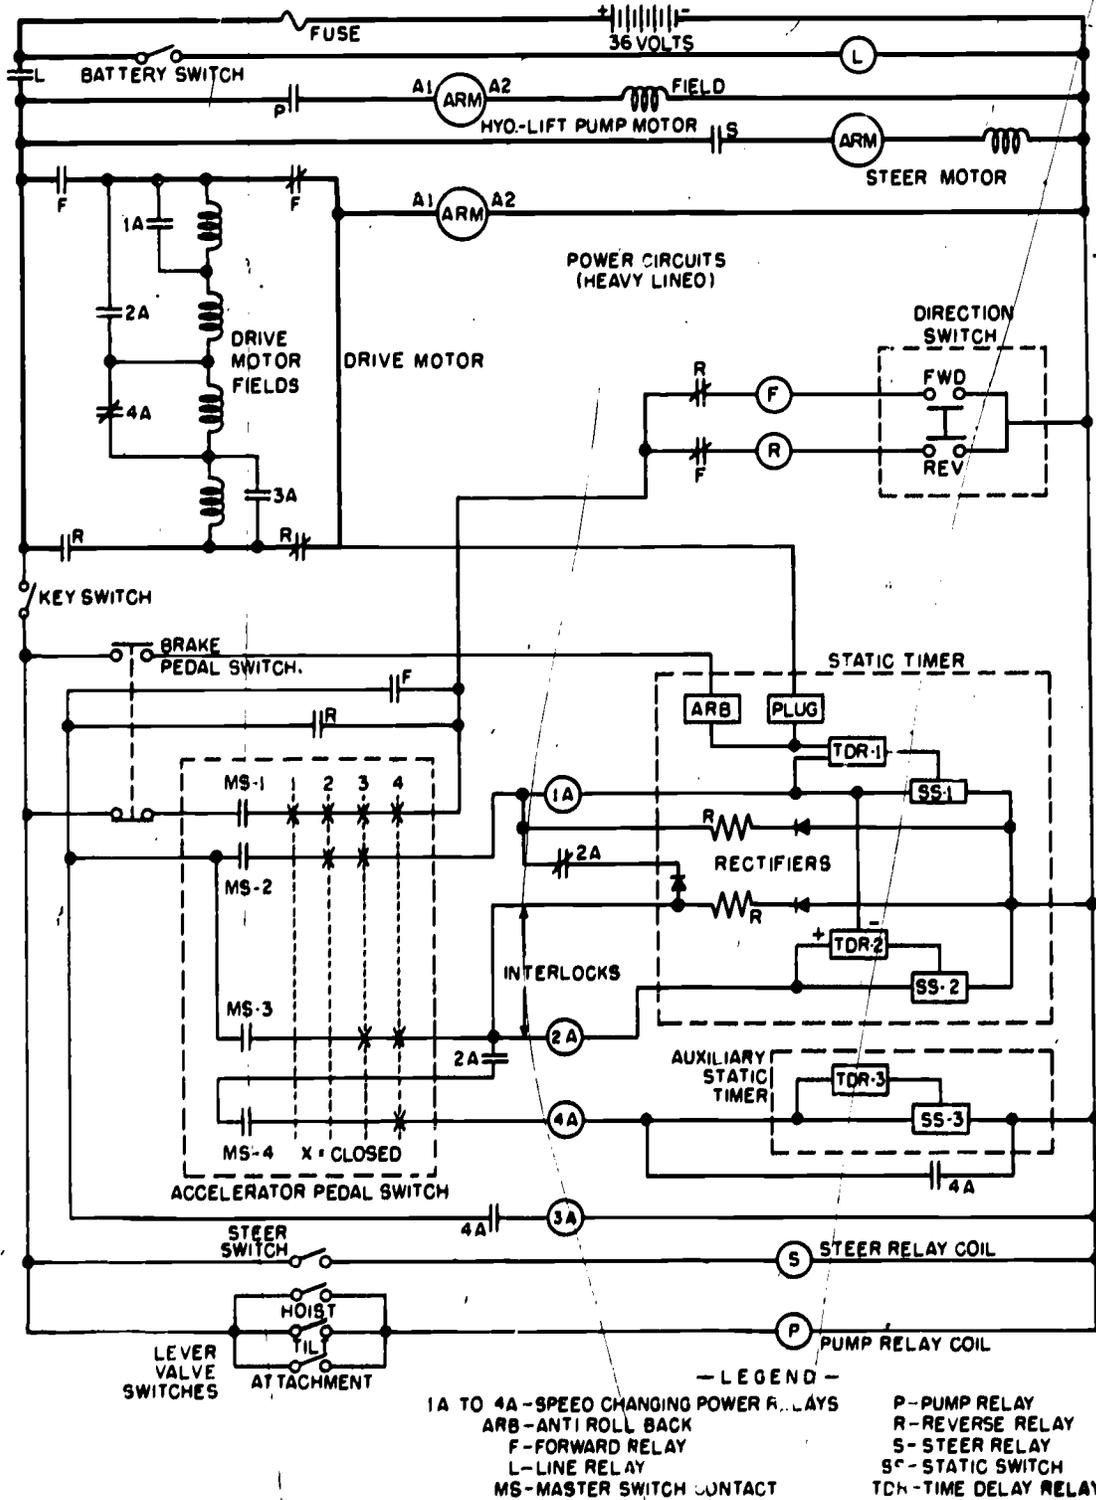


Figure 15-33.—Wiring diagram of an electric fork lift.

6.88(77C)B

15-48 453

device to control magnetic contactors, which in turn, control the drive motor of the vehicle. An off position and four speeds are provided. The switch is operated by an accelerator pedal.

The directional master switch is the mechanism by which the operator can determine direction in operation of the vehicle. The switch is a three position, manually operated, two-circuit pilot device, designed for handling coil circuits of directional magnetic contactors, which must be energized to initiate movement of the truck.

The heart of a solid state speed control system is the silicon controlled rectifier. Essentially, the SCR is nothing but a rectifier except that a control element commonly referred to as a gate has been introduced. As applied in stepless truck control systems, the silicon controlled rectifier is nothing but a switch.

Static Speed Control

Refer to elementary wiring diagram figure 15-33 and to the motor field connections table 15-1. In normal operation, when the directional control handle is moved to forward or reverse and the accelerator pedal is slowly depressed the following sequence takes place.

FIRST SPEED.—As the accelerator pedal is depressed to the first speed, master switch 1 (MS-1) is closed. If the direction handle is placed in forward position, the (F) contactor picks up and the drive motor is in first speed.

SECOND SPEED.—The pedal is depressed to the second speed point to close (MS-2) and a positive voltage appears at Time Delay # 1, SS #1 anode, and Time Delay # 2, on the static timer.

Table 15-1.— Drive Motor Field Connections

Speeds	Power Tips	Motor Fields
Speed 1	All Open	All Fields Energized
Speed 2	1A Closed	Three Fields Energized
Speed 3	1A, 2A Closed	Two Fields Energized
Speed 4	1A, 2A, 3A Closed	One Field Energized

77.335

The positive voltage appears at these points because of the low resistance path through the 1A coil. The very small currents needed to operate the time delay circuitry is about 1/100 of that needed to operate the coil and hence only a small voltage is dropped across the coil. Now Time Delay #1 cannot operate until a positive voltage also appears from either ARB (anti-rollback) or the plug. A positive voltage could only come from ARB when the brake pedal is depressed which is not likely when trying to go forward. However, a small positive voltage comes through the plugging section due to the voltage developed across the armature of the drive motor. Now Time Delay #1 does operate, fires SS #1 and picks up 1A coil, which provides the second speed.

THIRD SPEED.—The pedal is depressed to third speed point to close (MS-3) and a positive voltage appears at Time Delay # 2 and SS # 2. Since 1A has already picked up, a negative voltage is at the top input to Time Delay # 2 and after a time delay, SS # 2 operates and 2A coil picks up, which provides the third speed. Now 2A interlock leading to (MS-4) closes providing a positive voltage to the left of (MS-4) to ready the control of the fourth speed.

FOURTH SPEED.—The pedal is depressed to the fourth speed point to close (MS-4) and to open MS2 which deenergizes relay 1A. In a manner similar to the previous steps, the Auxiliary Static Timer gives a time delay to the pickup of (4A). After (4A) closes, both normally open (4A) interlocks close. One shorts out the Auxiliary Static Timer and turns it off. The other interlock lets (3A) coil pick-up to shunt the field. However, relay 1A has opened therefore a field is still present. The 4A coil picks up before the (3A) coil so that any arc that might be present when the normally closed (4A) contacts break will be extinguished before (3A) picks up. Otherwise, a direct short may occur. This provides the fourth speed.

ELECTRIC GALLEY EQUIPMENT

Electric galley equipment comprises the heavy duty cooking and baking equipment installed aboard naval vessels and consists essentially of ranges, griddles, deep fat fryers, roasting ovens, and baking ovens (fig. 15-34). This equipment is supplemented by electric pantry equipment, which includes coffee urns, coffee makers, griddles, hot-plates and toasters. The number and capacity of the units comprising a galley installation depends

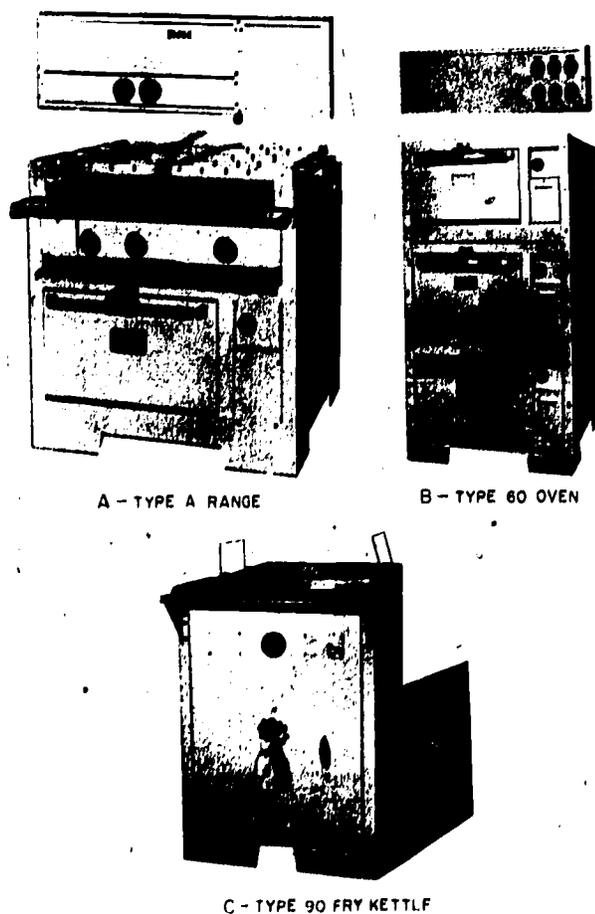


Figure 15-34.— Electric galley equipment.

48.8:11

on the size and type of ship. Galley equipment is normally designed for operation on 115-volt or 230-volt, d-c power or 440-volt, 3 phase, 60 hertz, a-c power.

RANGES

Electric galley ranges are provided in type A (36-inch), type B (20-inch), and type C (30-inch). The ranges consist of a range-top section and an oven section assembled as a single unit, and a separate switchbox designed for overhead or bulkhead mounting. A type A range is illustrated in figure 15-34A. This range is provided with three 6 kw surface units and an oven section

having two 3 kw enclosed heating units. A simplified wiring diagram of a type A range is illustrated in figure 15-35.

OVENS

A type 60 roasting oven is pictured in figure 15-34B. Type 60 and type 125 ovens are sectional type ovens with each section constituting a separate oven that is thermally insulated and operated independently of the other sections. The roasting ovens are provided in either 2 or 3 sections mounted one above the other. These ovens are provided with a separately mounted switchbox which contains the fuses, contactors, and 3-heat switches for each section. The type number of these ovens denotes the capacity in pounds of raw meat per section.

The type 4 and type 6 baking ovens are the older type having baking decks (the type number denotes the number of decks) that are not thermally insulated from each other. The heating units are located at the top and bottom of the oven and between each deck. Each heating unit is controlled by individual 3-heat switches located in a switch box enclosure mounted on the right-hand side of the oven.

The type 12 and 18 baking ovens are sectional type ovens with each section constituting a separate oven that is thermally insulated and operated independently of the other sections. Each section of the type 12 or type 18 ovens has a capacity of six standard five-loaf bread pans. The type 12 oven consists of two sections mounted one above the other. The type numbers denote the total bread pan capacity of the oven.

DEEP FAT FRYERS

Electric deep fat fryers are normally provided in the type 23, type 45, and type 90 sizes rated at 5 kw, 10 kw, and 18 kw, respectively. A type 90 deep fat fryer is shown in figure 15-34C.

The heating units, which are of the enclosed type, are immersed directly in the fat to ensure maximum efficiency. The fryer is equipped with an adjustable automatic temperature control to maintain the fat at the desired temperature. The thermostat control, located on a panel at the front of the fryer, is provided with an OFF position and the adjustable temperature range of 250°F to 400°F is graduated on the control knob.

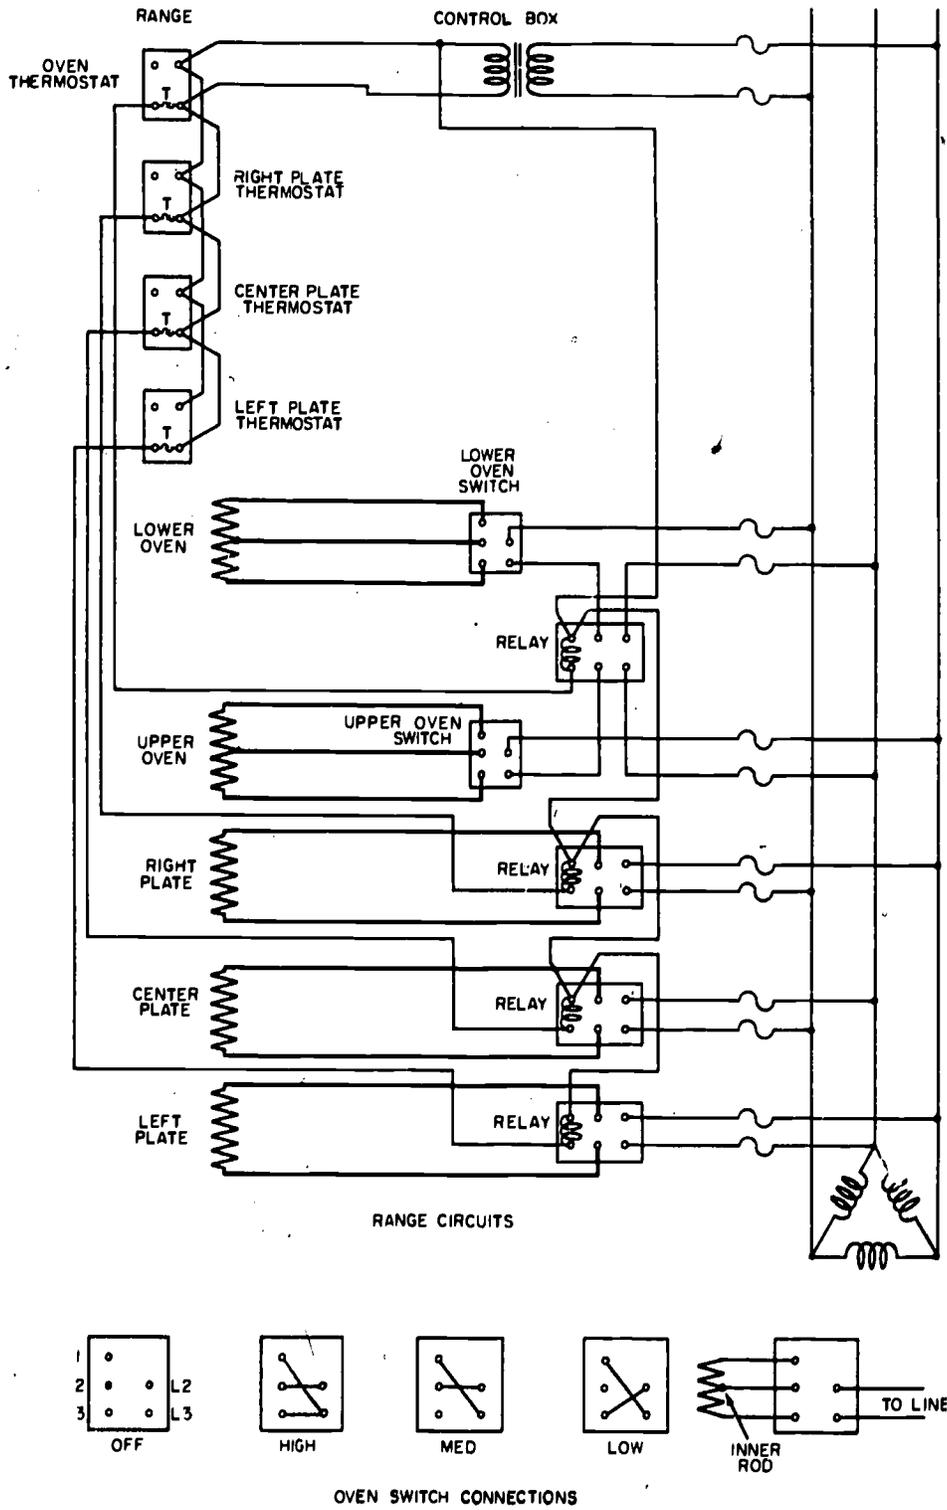


Figure 15-35.—Schematic diagram of type A range.

77.191

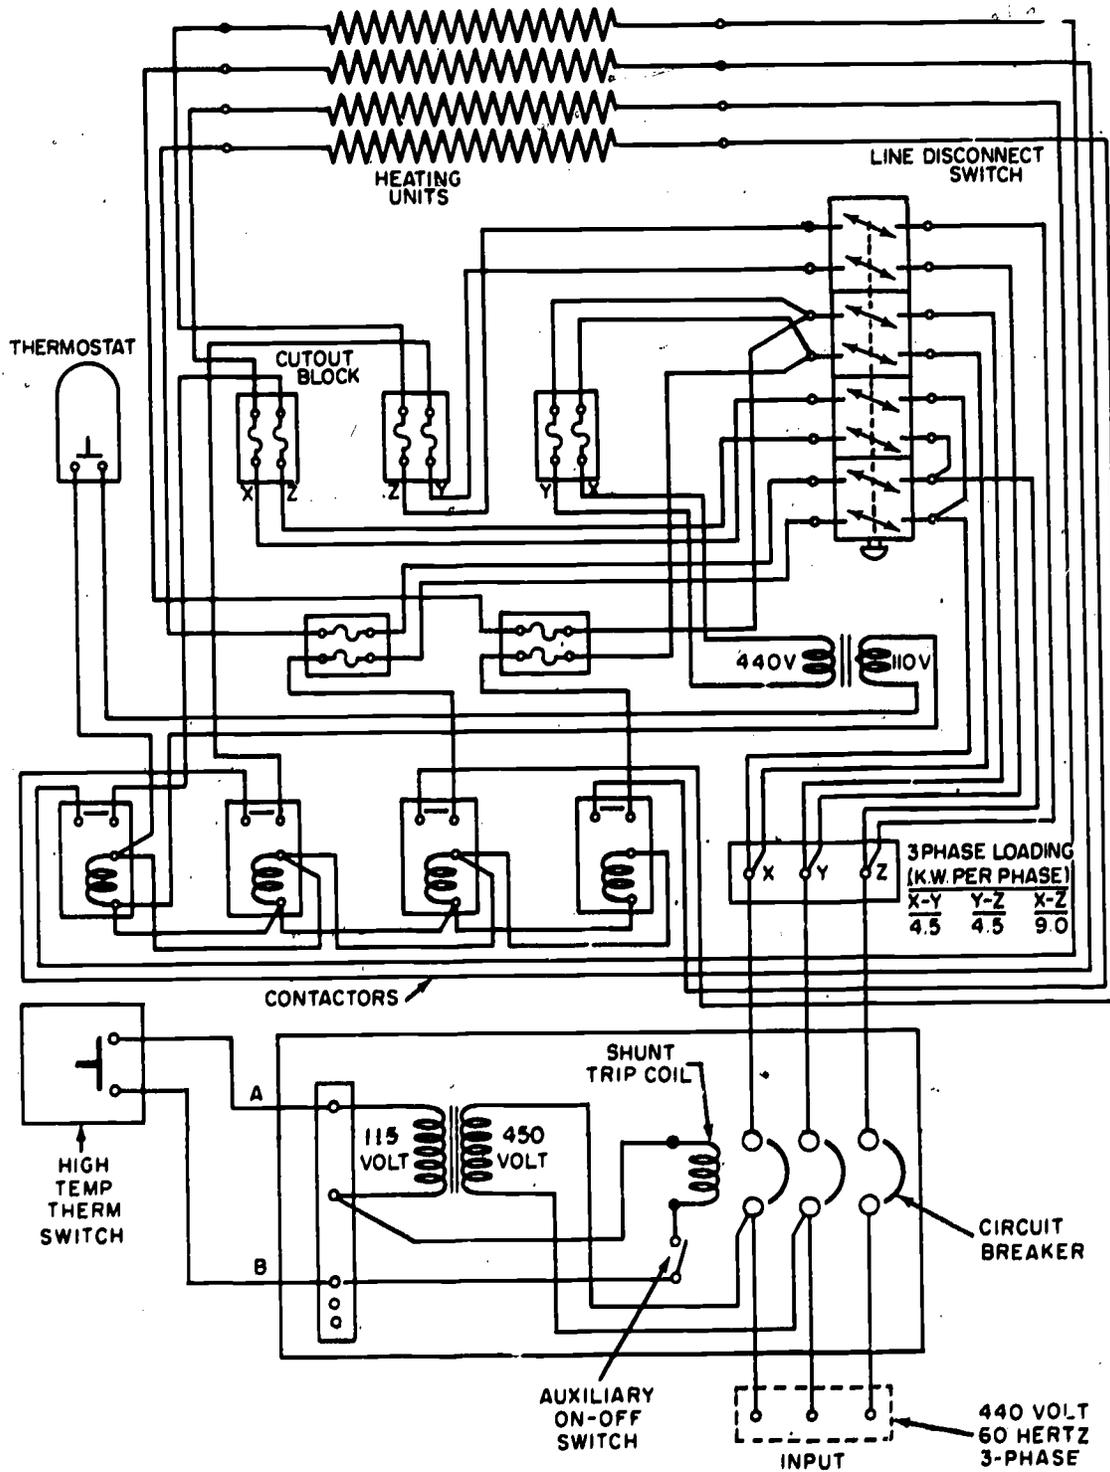


Figure 15-36.— Wiring diagram of type 90 deep fat fryer.

15-50 457

The thermostat operates contactors, which, in turn, control the circuits to the heating units. The later models of fryers are equipped with an upper temperature limit thermostat which operates in the event of failure of the main thermostat. The contacts of the upper limit thermostat are connected to the shunt trip coil of an external disconnect breaker when the fryer is installed. In the event the fat temperature reaches 460 degrees F., the thermostat contacts will close, thus tripping the breaker and deenergizing the fryer.

A rotary switch also located on the front panel is provided for disconnecting the fryer from the line. As a safety measure, the switch should be turned to the OFF position when the fryer is not in use.

A compartment located inside the fryer contains the contactors, thermostat, heating unit terminals, line terminal block, fuses, and line switch. The compartment is equipped with a removable panel for access to the control devices. Figure 15-36 is a simplified wiring diagram of the type 90 fryer.

MAINTENANCE

Before starting any service work on electric galley equipment be certain that the equipment power supply is secured and tagged out.

Refer to the manufacturers' manuals for instructions concerning the servicing of the electric galley equipment installed aboard your ship. These manuals also include the methods of removing and replacing the various heating units, thermostats, switches, contactors, and other components of electric cooking equipment.

Galley equipments are normally trouble-free. The largest single trouble with electric ranges, ovens, and deep fat fryers is burning contacts. As the operating temperature is met on the thermostat, the contactor will open under heavy load causing its contact(s) to arc and burn. This problem is lessened to a certain extent by the use of high voltage capacitors connected in parallel with the contacts. Another common problem concerns corroded connections due to prolonged exposure to heat and grease. A concentrated effort must be made to follow prescribed preventive maintenance, and when necessary, corrective maintenance procedures.

LAUNDRY EQUIPMENT

Laundry equipment aboard ship is comprised of washers, extractors, and dryers separately or in combinations. This equipment is designed to operate primarily on 3-phase, 440 VAC, 60-hertz power. The fully automatic washer-extractor with a card-o-matic programmer for controls is a representative piece of equipment. It has an automatic supply hopper, which is the main difference between it and a semiautomatic unit. There is little electrical difference between the card and drum type programmers.

WASHER-EXTRACTOR

The cylinder of the washer-extractor (fig. 15-37 and 15-38) has a 100-pound dry weight capacity. A three-motor system drives the cylinder through its cycles by means of V-belts, speed reducers, and an air-operated clutch. Electric solenoids control the supply of air for operating the clutch, brake, drain and steam valves, and detergent dispenser. Water level is controlled by three pressure-operated level switches; the water temperature by three adjustable thermostats. The machine may or may not have an automatic steam feature to help maintain water temperature throughout the wash cycle.


Though designed to operate automatically (formula mode), the washer-extractor can operate in the manual mode or in a combination of the two modes. The sequence and duration of the operations in the formula mode are controlled by the card-o-matic programmer (fig. 15-39). In the manual mode, the machine operator controls the duration and sequence of the wash/extract cycle by positioning switches as desired. He also adds detergent supplies as desired.

Card-O-Matic Programmer

The programmed card that the operator selects should be determined by the type of washing to be done. He uses a different card when washing greasy dungarees than when washing T-shirts. The dungarees require a longer wash time, hotter water, and stronger detergent.

The formula card (fig. 15-40) has eleven tracks on each side. The tracks on the front side are numbered 1 through 11, and the tracks on the back side are numbered 12 through 22. These

ELECTRICIAN'S MATE 3 & 2

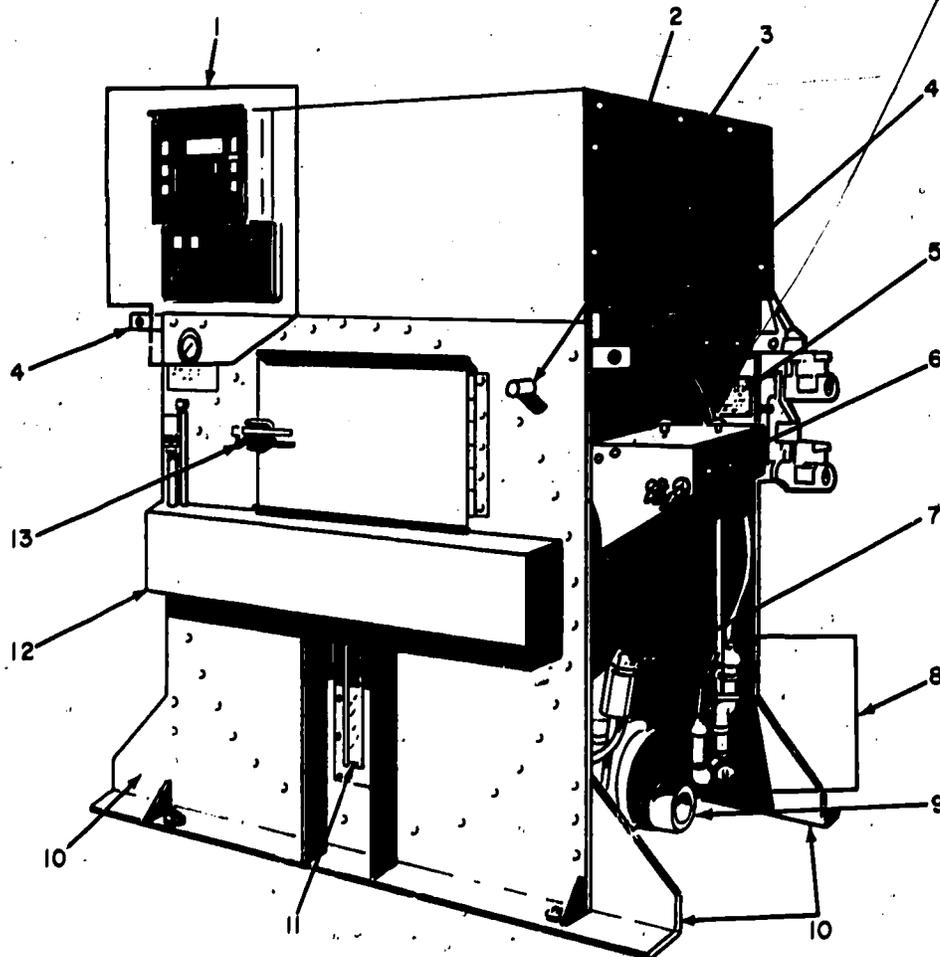


1. OPERATING CONTROLS
2. REMOVABLE SIDE PANEL
3. DOOR BUMPER
4. LIFTING BAR
5. DATA PLATE
6. SUPPLY HOPPER
7. DRAIN VALVE AIR CYLINDER
8. WATER LEVEL BELLS
9. DRAIN VALVE
10. BASE PLATE
11. SIGHT GLASS
12. FRONT PANEL
13. TUB DOOR LATCH

Figure 15-37.— Front right view, Class 2258 Cascadex Washer Extractor.

77.328

15-52 459

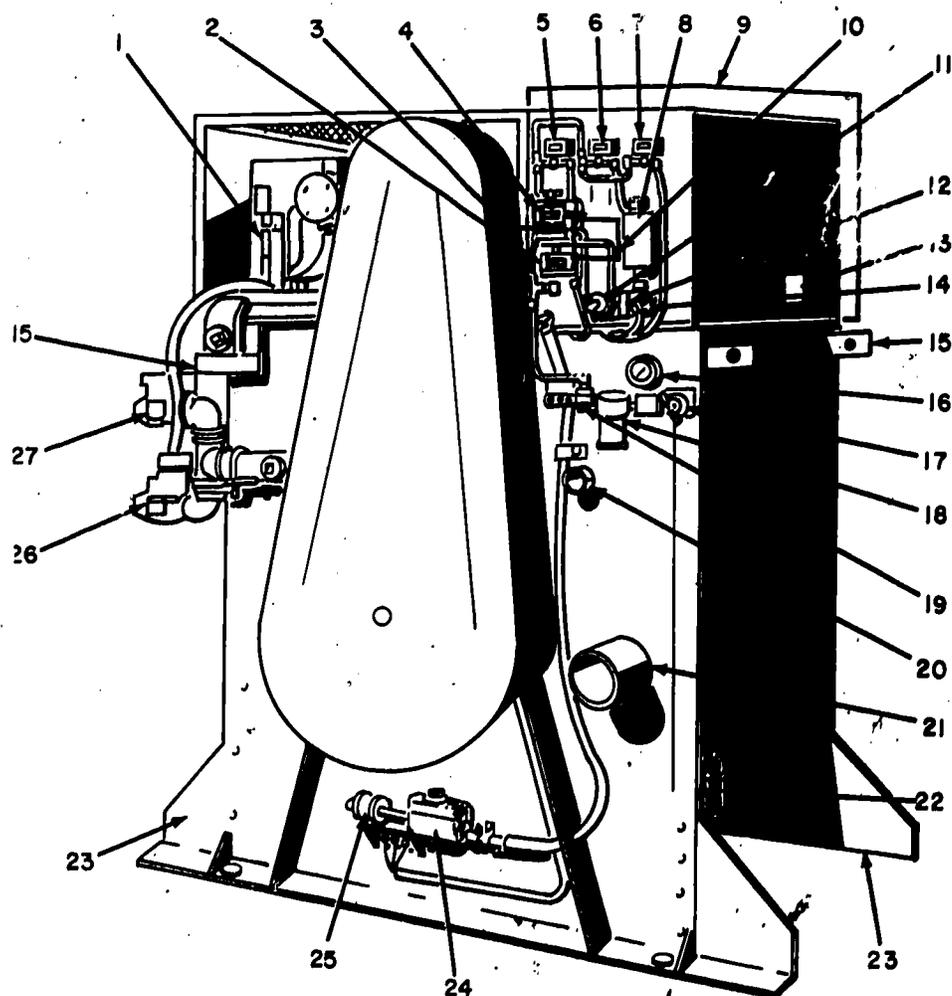


- | | |
|----------------------------------|-----------------------------------|
| 1. VIBRATION SWITCH | 15. LIFTING BAR |
| 2. HIGH BRAKE SOLENOID VALVE | 16. SYSTEM AIR PRESSURE GAGE |
| 3. SUPPLY TRIP SOLENOID VALVE | 17. SYSTEM AIR PRESSURE REGULATOR |
| 4. CLUTCH SOLENOID VALVE | 18. AIR FILTER |
| 5. DOOR INTERLOCK SOLENOID VALVE | 19. MANUAL BRAKE RELEASE |
| 6. DRAIN VALVE SOLENOID VALVE | 20. SALT WATER INLET |
| 7. STEAM VALVE SOLENOID VALVE | 21. VENT AND OVERFLOW |
| 8. LOW BRAKE PRESSURE SWITCH | 22. STEAM VALVE |
| 9. ELECTRICAL ENCLOSURE | 23. BASE PLATE |
| 10. SUPPLY FLOW CONTROL VALVE | 24. MASTER CYLINDER |
| 11. LOW BRAKE PRESSURE REGULATOR | 25. BRAKE ACTUATING CYLINDER |
| 12. LOW BRAKE SOLENOID VALVE | 26. HOT WATER VALVE |
| 13. ELECTRICAL DATA PLATE | 27. COLD WATER VALVE |
| 14. LOW BRAKE PRESSURE GAGE | |

Figure 15-38.— Rear left view, Class 2258 Cascadex Washer Extractor.

77.329

ELECTRICIAN'S MATE 3 & 2

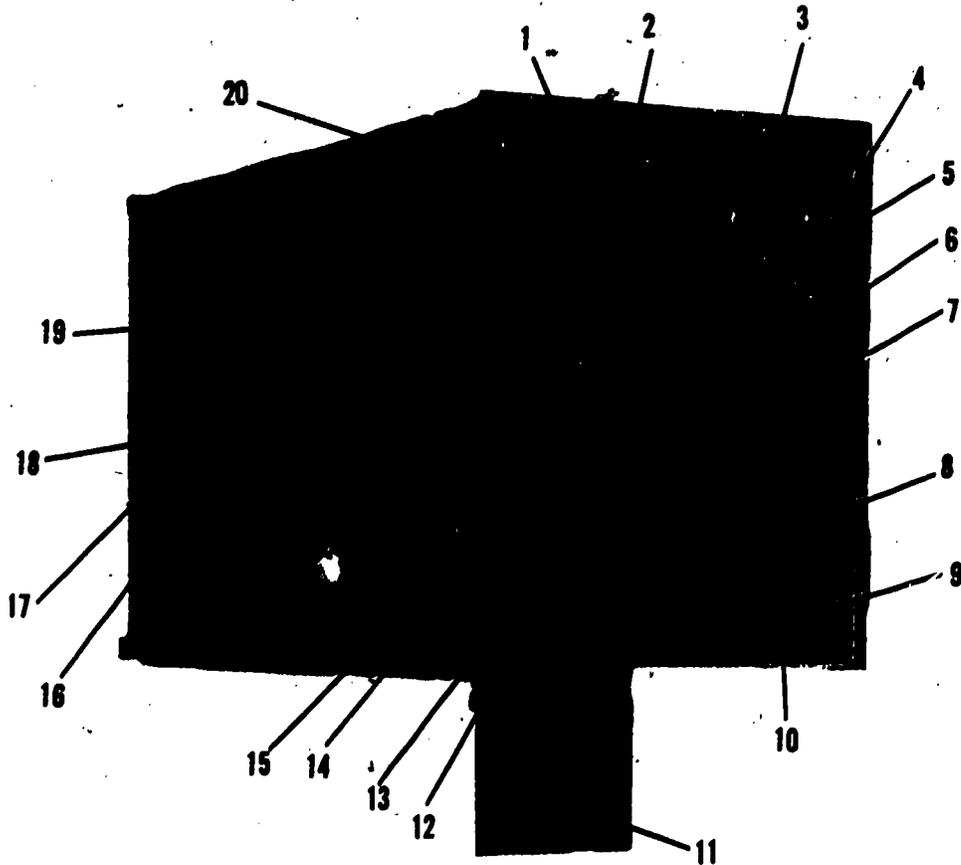

- | | |
|-------------------------------|---------------------------|
| 1. RUN INDICATOR | 11. THERMOMETER |
| 2. STOP INDICATOR | 12. INCH START SWITCH |
| 3. FORMULA CARD WINDOW | 13. STEAM SWITCH |
| 4. SIGNAL INDICATOR | 14. EXTRACT SWITCH |
| 5. SIGNAL SWITCH | 15. CARD ADVANCE WHEEL |
| 6. LEVEL SWITCH | 16. DISCONNECT SWITCH |
| 7. MASTER SWITCH | 17. OVERLOAD RESET BUTTON |
| 8. SAFE ON SWITCH | 18. COLD WATER SWITCH |
| 9. STOP INCH PUSHBUTTON | 19. HOT WATER SWITCH |
| 10. INTERIOR LAMP (NOT SHOWN) | 20. DRAIN VALVE SWITCH |

Figure 15-39.— Location of operating controls and indicators.

77.330

15-54 401

tracks identify the operation. The numbers and index marks on the program time columns (C in fig. 15-40) are graduated in one minute intervals and determine the duration of the operation, forming the wash/extract cycle.

Cards are programmed by removing a section from the track which cause a spring-loaded actuator to move as the formula card is advanced by the programmer drive motor. This

movement energizes and deenergizes the electrical circuit for the components (drain valve, water valve, level switch, supply dispenser, etc) related to the track.

Sequence of Operation

A sequence of operation is given here to aid the Electrician's Mate in maintenance of the machine. With the master switch in the off-position, other applicable switches are placed in their formula positions (fig. 15-39 and 15-41). The correct formula card is inserted in the programmer and the cycle is started by placing the master switch in the formula position and momentarily pressing the start pushbutton.


After the machine starts the water temperature, water level, and addition of detergents are controlled by the programmed card. Incorrect programming of the formula card may cause the motor to stop.

The run indicator lamp lights and remains lit throughout the wash/extract cycle except when steam or water is being added or when the signal indicator is lit and the buzzer is sounding.

The SIGNAL indicator lights and the buzzer sounds at programmed times to signal the operator to return to the unit to add detergents or check the progress of the wash/extract cycle. The cylinder stops when the signal indicator is on. Momentarily pressing the signal switch to the OFF position puts out the signal indicator, stops the buzzer, and restarts the wash/extract cycle.

During the wash cycle, the cylinder is rotated at 35 rpm and reversed 4 times per minute. During the distribution operation the cylinder turns at 45 rpm in one direction only. After the last programmed wash operation, the drain valve opens and remains open. The extract operation then starts.

During the extract operation the clutch is disengaged and the cylinder is rotated at 650 rpm in the same direction as the distribution cycle. At the end of the extract operation, the cylinder decelerates to the wash speed (35 rpm) and re-establishes the wash cycle unless the formula card is programmed to stop or the operator presses the stop pushbutton. At this point, the operator places the master switch in the OFF position, opens the tub door, and removes the

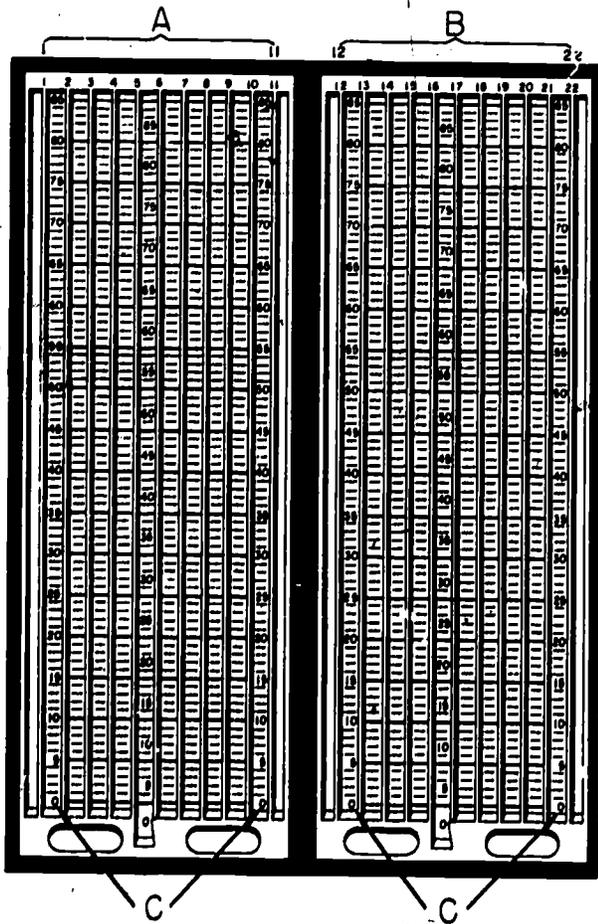

- A. TRACK NUMBERS ON FORMULA CARD FRONT SIDE (Tracks No. 1 thru No. 11)
- B. TRACK NUMBERS ON FORMULA CARD BACK SIDE (Tracks No. 12 thru 22)
- C. PROGRAM TIME COLUMN

77,293

Figure 15-40.—Front and back sides of a formula card.

ELECTRICIAN'S MATE 3 & 2

Table 15-2.— Formula Card Track Number, Track Designation, and Related Function

TRACK NO.	DESIGNATION	RELATED FUNCTION
1*	No. 1 thermostat	Regulates the tub water temperature to no. 1 thermostat control point
2*	No. 2 thermostat	Regulates the tub water temperature to no. 2 thermostat control point
3*	No. 3 thermostat	Regulates the tub water temperature to no. 3 thermostat control point
4	Hot water	Controls hot water valve operation
5	Cold water	Controls cold water valve operation
6	Drain valve and no. 2 water level	Controls drain valve operation and no. 2 water level
7	No. 3 water level	Controls no. 3 water level
8	No. 1 water level	Controls no. 1 water level
9*	Steam	Controls the steam valve in conjunction with track no. 1, no. 2 or no. 3, or controls the steam valve if steam is to be injected for a programmed time period
10	Signal	Controls the SIGNAL indicator and buzzer
11	Stop	Controls the STOP indicator and stops the unit and control when all operations are finished
12	Extract	Controls extract operation
13*	Supply track	Dispenses supplies from the automatic supply dispenser
14 thru 22	Not used	

The maximum length a wash extract cycle can be programmed for is 85 minutes.

*Used only if unit has steam option

77.333

15-56

400


load and formula card. The formula card track numbers with designations and functions are given in table 15-2.

Safety

The dry weight cylinder capacity (100 pounds) should never be exceeded, but it is recommended that the cylinder be loaded to capacity. Lighter loads may fail to distribute clothes properly, causing the machine to vibrate excessively.

Safety features of the washer-extractor include a mercury vibration switch to stop the machine in case of excessive vibration and a tub-door interlock system to prevent the tub door from being opened while the machine is running. The tub-door interlock system also prevents the machine from starting when the door is open.


Be certain that the machine is deenergized and tagged out before performing maintenance. Refer to the manufacturers' manual and NAVSHIPS' Technical Manual for instructions concerning the troubleshooting and replacement of defective parts in the laundry equipment installed aboard your ship.

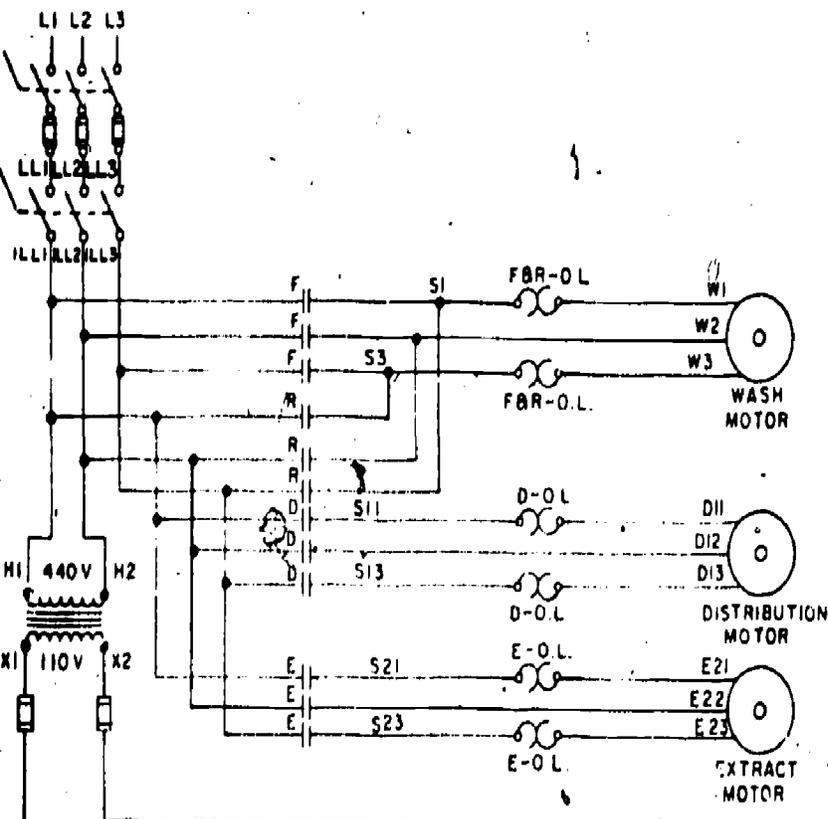

EXTRACT TIMER TIME CHART


SWITCH NO	TIME IN SECONDS												
	DRAIN	DISTRIBUTION	EXTRACT		BRAKE								
ET1		18											
ET2													116
ET3								58					
ET4												63	118
ET6												64	117

SOLID AREAS INDICATE THAT N.O. CONTACT HELD CLOSED

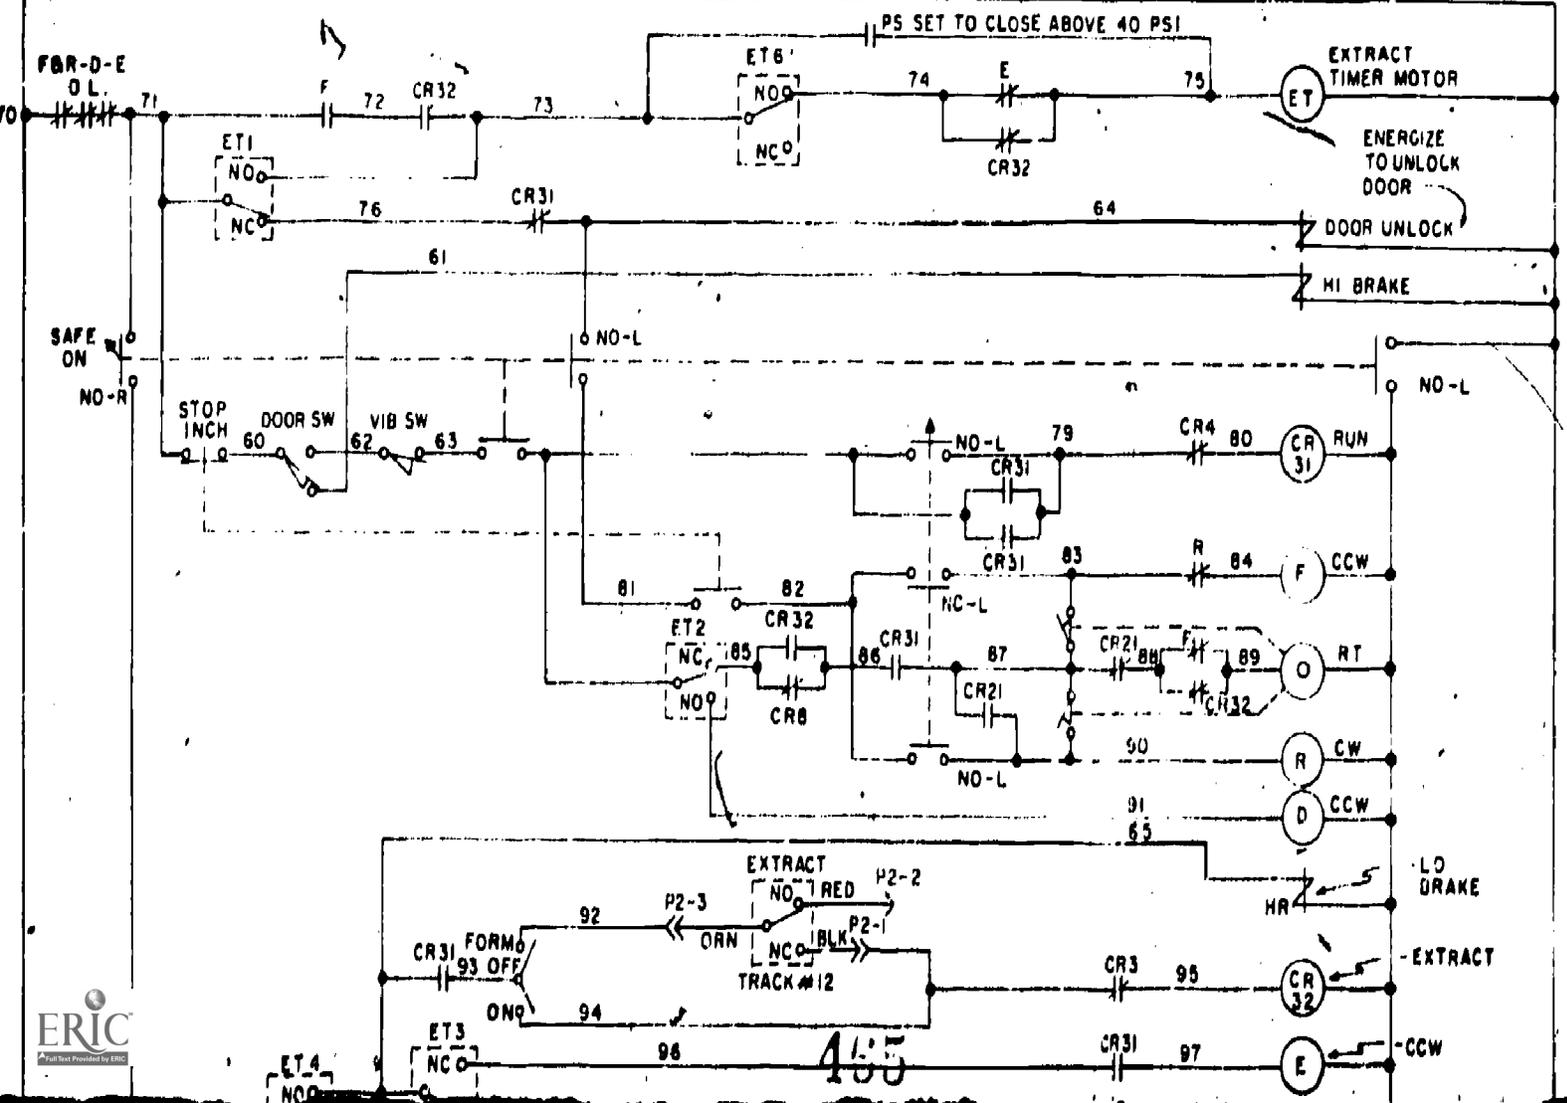

455

Figure 15-41. — Schematic diagram of washer-extractor.

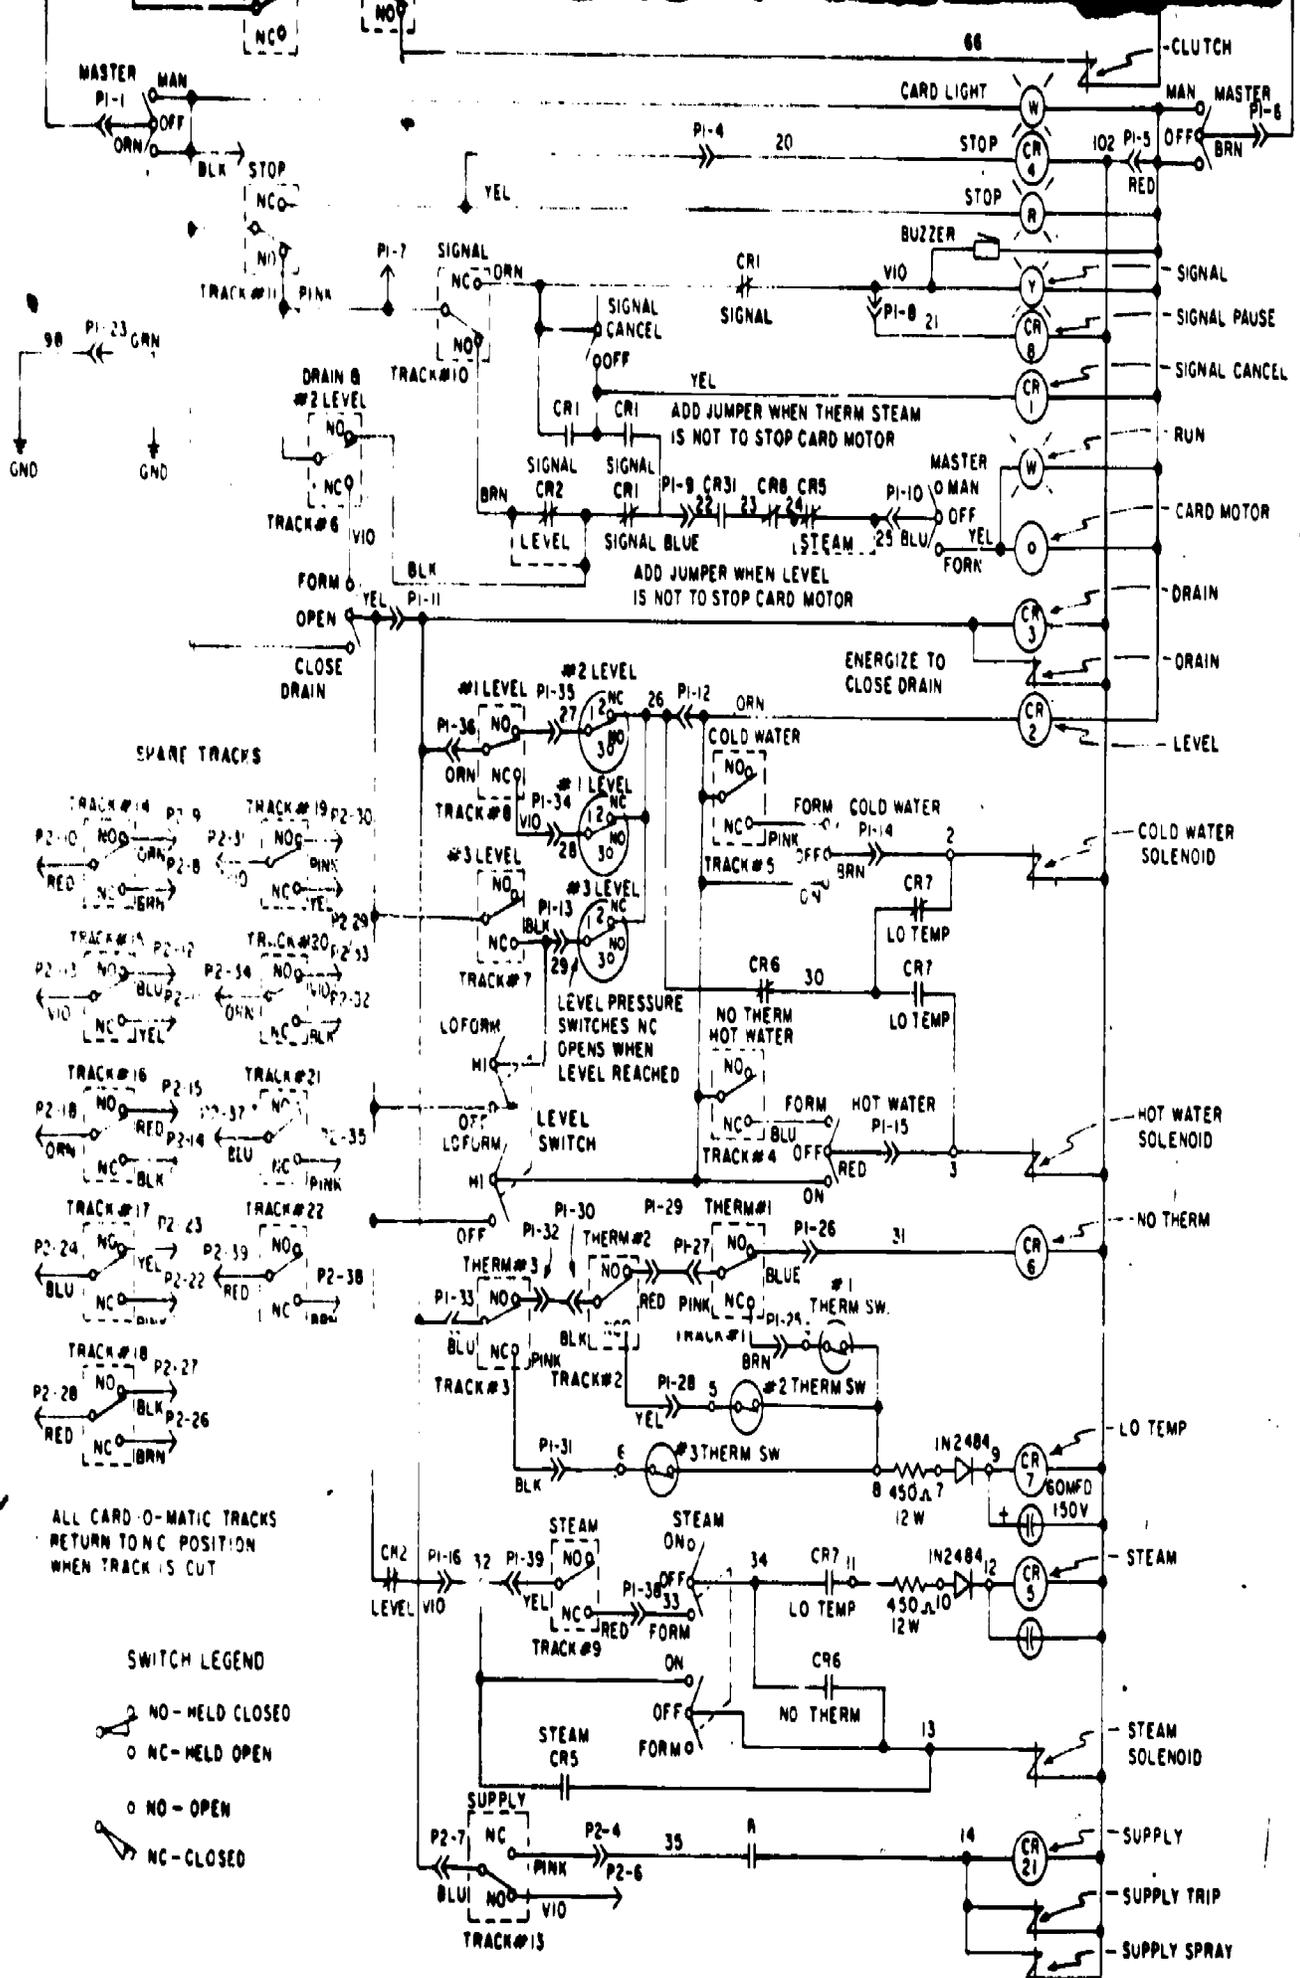

ALL CARD-O-MATIC TRACKS RETURN TO NC POSITION WHEN TRACK IS CUT

SWITCH LEGEND

- NO-HELD CLOSED
- NC-HELD OPEN
- NO-OPEN
- NC-CLOSED

77.391

CHAPTER 16

SOUND MOTION PICTURE SYSTEMS

The sound motion picture system is used as an aid in training, briefing, and entertaining naval personnel. The system is comprised of a motion picture projector, amplifier(s), and one or more loudspeakers. Navy equipment is readily portable and can be operated in any average size space, or topside, where 115-volt a-c power is available.

This chapter will not qualify you to operate a Navy projector. It will, however, give you the principles of motion picture projection; tell how films are prepared, inspected, and handled; and describe the paper work required for reports and records.

DEFINITION OF TERMS

Definitions of terms are included in this chapter so you can find the meanings of technical terms that are used in explaining the principles of motion picture projection and in telling you how to operate a projector, prepare film, and perform other tasks related to the showing of sound motion pictures.

- **Acoustics**—A science that deals with the production, control, transmission, reception, and effects of sound.

- **Aperture**—An opening in a film guiding plate that limits illumination to one frame at a time.

- **Aperture Plate**—A guide plate containing aperture, used also to prevent lateral film movement.

- **Cement**—A solution used to join two pieces of film together.

- **Condensing Lens**—A lens that concentrates the light of the projector lamp upon the aperture.

- **Damping System**—A system used to smooth the flow of film movement through the sound optic system.

- **Emulsion**—The film material composed of gelatin and silver-nitrate, that contains the image.

- **Exciter Lamp**—The lamp that furnishes light for the sound optical system.

- **Film Base**—The cellulose acetate material that supports the emulsion. It also contains the sprocket holes.

- **Focusing**—The act of adjusting the projector lens to obtain a sharp image on the screen.

- **Framing**—An adjustment that centers the frame to be projected over the aperture.

- **Image**—The likeness obtained by photographic means.

- **Lens**—A glass optical device used to transmit and control the light passing through a film.

- **Motion Pictures**—A series of still pictures projected at a rate sufficient to produce the "illusion of motion."

- **Pressure Plate**—A device that provides a constant and proper pressure on the film as it passes the aperture.

- **Projector**—An electromechanical device that reflects an image on a screen by the use of a light transmission path.

- **Reel**—A metal or plastic spool upon which film is wound prior to and following projection. Standard sizes are 400, 800, 1200, 1600, and 2000 feet.

- **Shuttle**—The electromechanical device which advances the film to the aperture.

- **Sound Optic System**—The system which converts light variations, representing sound, into corresponding electrical variations.

- **Sound Optical Lens**—The portion of the sound optic system which focuses the exciter output on the sound track.

- **Sound Track**—The portion of film upon which sound is photographically recorded.

- **Splicing**—The act of joining two pieces of film together as one continuous film strip.

- **Sprocket Holes**—The holes along one edge of film which are engaged by the sprockets.

- **Sprockets**—Toothed gears which advance the film through the projector at a constant rate of speed.

- **Threading**—Proper placement of the film for projection.

SOUND MOTION PICTURE PROJECTION

Motion picture projection is the presentation on a screen, of a series of images taken in very rapid succession by a motion picture camera. Such a presentation produces an illusion of moving images. As you look at the screen, what you are actually observing is a series of still pictures projected in rapid succession. The

illusion of motion is created by taking advantage of certain peculiarities of the eye.


At one time or another, as you have closed your eyes after having looked at a bright light, you may have noted that the light impression was retained for a brief period of time after you had shut it out. This is known as "persistence of vision" and makes motion pictures possible.

Persistence of vision is the ability of the eye to retain upon its retina the impression of light after the light is removed from view. If a series of picture images, each one of which differs but slightly from the preceding one, is viewed in rapid succession, the brain retains an impression of the preceding image and blends it with the succeeding image to create the illusion of motion.

The projection of pictures is based upon the principle of formation of images by a convex lens. The image forming properties of a microscope or telescope are similar. A simple projection with no motion would contain a lamp, a lens, and a screen (fig. 16-1). Note in the illustration that the image would be inverted after the light rays pass through the convex lens.

A basic motion picture system could be developed from this simple system by the addition of a reflector, an intermittent unit, and a shutter unit. The purpose of these parts is as follows:

- The reflector is a circular mirror incorporated in the lamp. It reflects the light

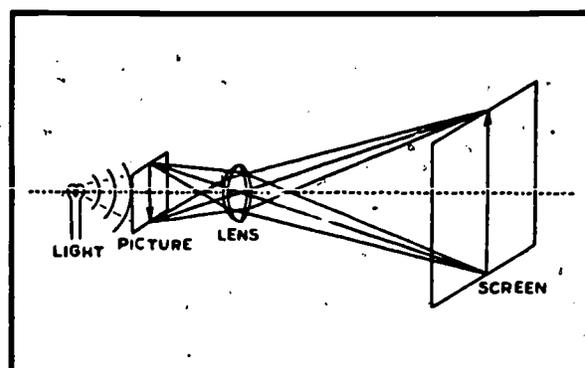

7.65(77C)

Figure 16-1.—Simple projection system.

back from the lamp toward the film and aperture.

- The intermittent unit pulls each picture frame of film into position in order that it might be struck by the light rays. It is the only unit which physically comes in contact with the film.

- The shutter (a rotary device capable of interrupting the projection lamp light) is operated in synchronism with the intermittent unit. As the shutter operates, it interrupts the light path twice for each frame of film. In 16-mm projection, the speed of the film is 24 frames per second. The shutter is motor-driven and interrupts the projection lamp beam 48 times per second. This aids in the prevention of flicker and streaking.


FILM CONSTRUCTION

As an Electrician's Mate, you may be responsible for the handling, inspection, repair, projection, and stowage of sound motion picture film on board ship. A general knowledge of the construction, splicing and handling of film is necessary in order to do the job.

Figure 16-2 is a view of motion picture film. Its composition is a cellulose acetate base upon which has been bonded a gelatin and silver nitrate emulsion. The base is a transporter, while the emulsion is the component used for recording the image photographically. The film in figure 16-2 is inverted as is the case in projection. The reinversion occurs in the projection lens.

One edge of the film is perforated with sprocket holes used for transporting film through the projector, the other edge contains the sound recording (track).

Methods of recording are discussed in this chapter, however, figure 16-3 gives the basic components required in a sound recording-producing situation. Sound tracks for motion pictures can be of the variable area or variable density type. Figure 16-4 shows examples of both area and density recordings.

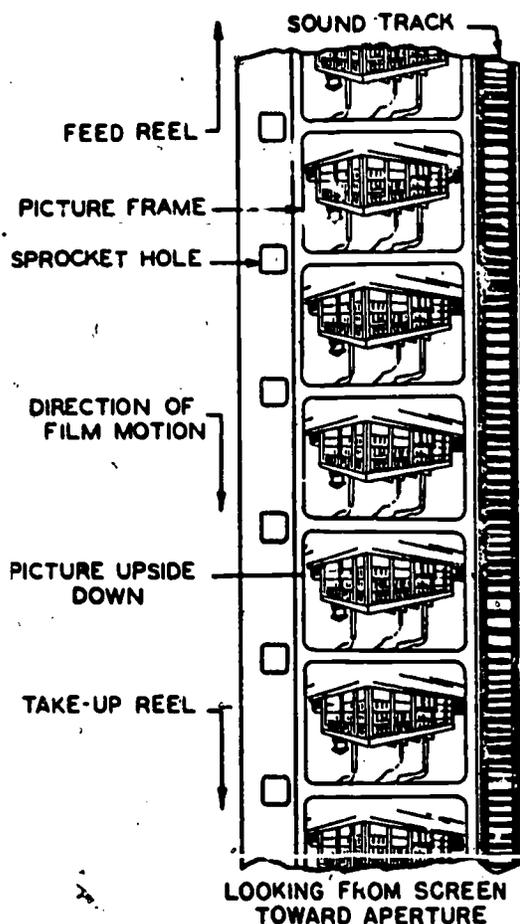

7.66.(77C)

Figure 16-2.—Section of 16mm film.

PHOTOGRAPHIC SOUND RECORDING

In the photo sound recording technique, the sound is recorded by exposing a moving photosensitive film to a beam of light that is varied or modulated by the sound that is recorded. When the film is developed, the sound can be reproduced by passing the sound track through a steady beam of light that is focused on a photocell. The light is varied by the density of the emulsion of the film. The output of the cell is fed to an audio amplifier, and then to a loudspeaker, which produces the electrical signals as sound waves. Two methods of recording sound photographically are (1) variable area (fig. 16-4A) and (2) variable density recording (fig. 16-4B).

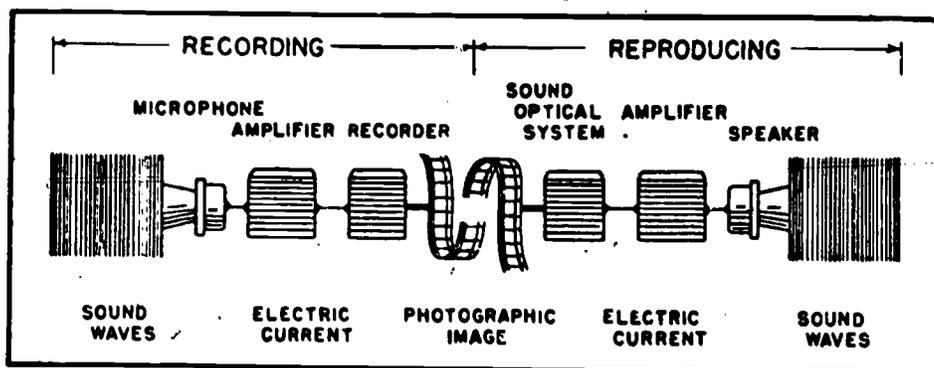


Figure 16-3.—Sound recording and sound reproducing system.

Variable Area Recording of Film

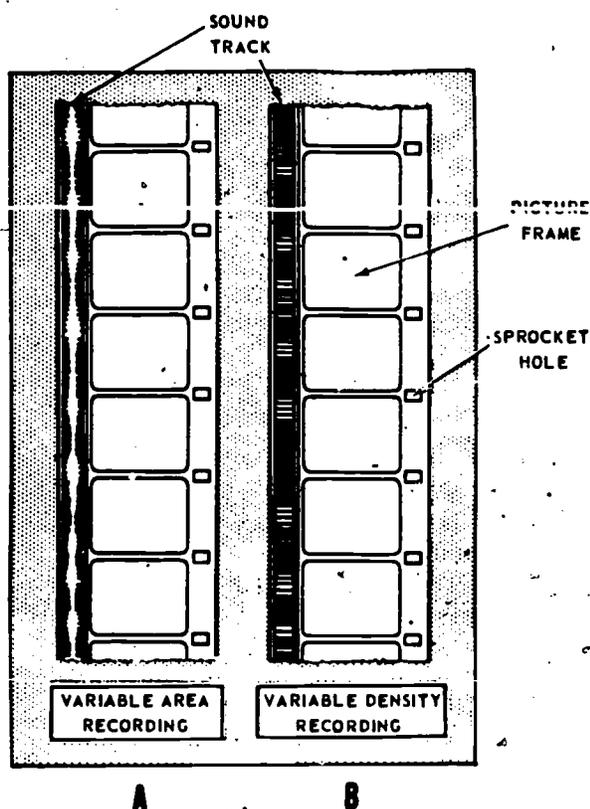


Figure 16-4.—Film sound track.

In interpreting the sound track in figure 16-4, the black areas are opaque, the white transparent. The width of the transparent area may vary from nothing up to the limits of the opaque band, depending on the instantaneous strength of the sound recorded. It is the variation in the width of the transparent area from point to point along the track that is of importance. When this variation does not exist, no sound has been recorded on the film and none can be produced from it.

When a sound track of variable width passes the scanning point, light from the exciter lamp goes through the film only where it is transparent. Since the width of the scanning line is constant, the amount of light going through the sound track at any point is directly proportional to the width of the transparent area at that point (that is, to the utilized portion of the scanning line). This width varies continuously as the film moves past the scanning point. Therefore, the amount of light that goes through and ultimately reaches the photocell varies in the same manner.

7.67

The variations in the light that enters the photocell are converted into equivalent variations in the current in the associated circuit.

16-4 471

Variable Density Recording On Film

There are two different methods of variable density recording. One method utilizes a variable intensity light. This light varies in intensity with the amplified sound currents and shines through a narrow slit onto the moving film, which is kept running at a constant speed of 36 feet per minute for 16-mm.

The width of the slit is about 0.0008 of an inch. When the film is developed after being exposed to the variable intensity light, the sound track will be made up of lines of varying intensity across the sound track. If the frequency of the recorded sound is low, the width of the bands will be comparatively large; but if the frequency is high, the bands of light and dark will be very close together and may be hardly distinguishable to the eye. The variation of density between successive dark and light bands determines the amplitude of the recorded sound.

The other method of making variable density film recordings is by use of a light valve. The light valve, in this case, varies the amount of light by the opening and closing of a slit. This slit is the space between two taut sides of a loop of wire suspended in a magnetic field. As the sound current passes through the loop, the loop opens and closes passing varying amounts of light through it. This light is then focused by means of lenses on the moving film so as to form lines of varying density when the film is developed.

FILM MAKEUP

A representative film makeup is described so you may understand all of the parts and thereby enable yourself to conduct smooth uninterrupted showings.

PROTECTIVE LEADER—raw stock or transparent film used to protect the program on rewinding. It is normally five feet in length, and breakage is anticipated. This should be replaced when its length is reduced to less than three feet.

IDENTIFICATION LEADER—consists of parts "A" and "B." Part "A" is 15 frames long and contains the type and class of print, the title


of the reel, and the word "HEAD" in capital letters. Part "B" contains 24 frames in which are printed in block letters the type print, reel number, and picture title. It is used to determine reel number without requiring reference to the film itself.

SYNCHRONIZING LEADER—contains 212 frames and has imprinted the start mark and indicator numerals. The start mark is located on the 21st frame and contains the word "START." The frames between the start mark and the beginning of the picture section contain the indicator numerals. The first numeral is 11 and is 16 frames from the start mark. The numerals are 16 frames apart and descend to 3, some 48 frames from the picture. The purpose of the numbers is to guide the operator when the synchronization of two projectors is desired during a continuous showing of one program.

PICTURE SECTION—the program body containing 40 frames per foot of entertainment, information, or training material to be projected on the screen. Specifications call for no more than 1600 feet of film per reel. The later portion of the picture section contains the "cue marks."

CUE MARKS—rarely apparent to the viewer, are designed to aid the operator when running a multiprojection continuous program. The motor cues are located in the later 198th through 195th frames of the picture section. They appear on the screen for 1/6th of a second, at which time there is only five feet of film left on the reel. Upon seeing his cue mark, the operator should start his oncoming projector. The changeover cues appear in the later 22nd through 19th frames of the picture section. At this time there is but 1/2 foot of picture remaining to be shown. Upon sighting this second set of cues, the operator of a multiprojector continuous program should press his changeover switch and begin display on his next machine. Cue marks are also a benefit when using one projector because they aid in preventing the trailer from being projected.

Figure 16-5 shows a film equipped with proper cue marks. Both sets of cue marks are located in the same portion of their respective frames. As one looks at the film, he finds these

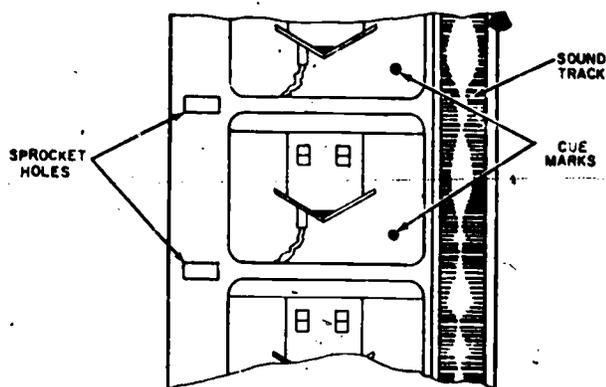

77.267

Figure 16-5.—Cue mark location.

“marks” inside the picture portion on the sound track side.

RUNOUT TRAILER—consists of 48 frames of opaque film which permits no light to pass through it onto the screen. It is designed to blacken the screen on negligent changeovers.

IDENTIFICATION TRAILER—containing 24 frames upon which is printed “End of Reel,” the reel number, and picture title. The trailer is used for identification when the film is “tails up.”

PROTECTIVE TRAILER—identical to the protective leader.

FILM SPLICING

Splicing is an important part of the projectionist's responsibility when a break occurs. It is not a complicated procedure, but considerable damage can be done to the film and projection equipment by poorly made or improper splices.

A good splice can be made by any of the three methods described in the following paragraphs.

Tape Splicing

Tape splicing is the simplest way to splice motion picture film. Used in conjunction with a

universal splicer, no scraping is required. The ends to be spliced are trimmed and butted against each other, and a tape splice is applied over the area to be spliced. Using a universal type splicer insures that the sprocket holes are aligned when the splice is made. Types of splices recommended for the different types of film bases are:

1. Acetate to acetate, either tape or cement
2. Polyester to polyester, ultrasonic or tape
3. Polyester to acetate, tape only

Cement Splicing

Cement splicing (fig. 16-6) is used when a strong, long-lasting, splice is required. The film to be spliced is aligned on a splicer designed for cement splicing, and the emulsion is scraped from the section to be spliced. Cement is applied to the two sections which are then fitted together and held tight while the cement fuses the two sections of the film base together.


WARNING

Film cements and their fumes are irritants. Keep them away from your eyes. Solvents are volatile and will burn rapidly. Film cements will damage enamel, other finishes, and clothing made of synthetic fibers. Always splice or repair film in a clean, well-ventilated area.

NOTE: Film that has been printed on KODAK ESTAR BASE Positive Film Stock Type 7381 cannot be spliced with conventional film cement. It can be spliced using a tape splice and splicer (Kodak Presstape Universal Splicer NSN 6740-00-288-1177 and Kodak 16mm Presstape NSN 6750-00-124-8699).

Ultrasonic Splicing

Ultrasonic splicing is used for polyester films. This type splicing is done by producers of motion pictures and at a Navy Motion Picture Exchange. These splices are strong and durable.

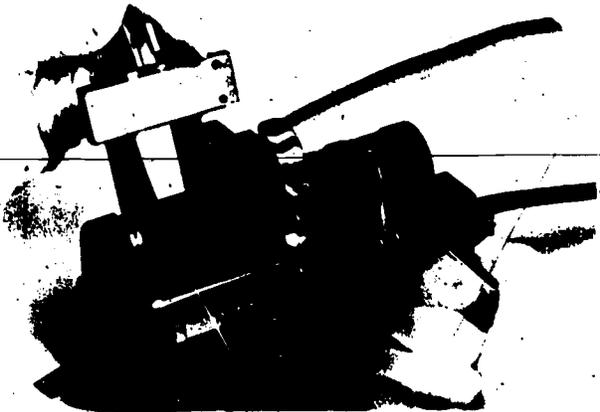

165.47

Figure 16-6.—Film splicer.

The film to be spliced is inserted into the splicer, trimmed, and thermally fused together.

FILM HANDLING

To ensure maximum use of motion pictures, the Navy requires that several records and reports be maintained. The records are as much a part of the motion picture as the film itself, and should be maintained in an orderly and timely fashion.

Upon receipt of a new program, you should immediately check the contents of the container against the Inspection and Exhibition (I&E) Booklet that accompanies it. The program is next inspected, preferably at the Motion Picture Exchange (MPX), and all necessary repairs should then be made. Worn sprocket holes, scratched film, torn film, oil and grease spots, acid from fingers, and other defects are carefully noted at this time in the I&E booklet. Serious damage of such a nature as to prevent an adequate display of the film should immediately be brought to the attention of the MPX and appropriate corrective action taken.

After a film is displayed by an operator, he has the responsibility to note in the I&E booklet any damage that occurred during his projection of the film. The booklet should be maintained with the program to prevent loss.

Inspection and Exhibition Booklet

The I&E booklet is designed to keep a record of the damage that occurs to a film during exhibition and to aid the MPX in determining when a given print should be removed from circulation.

Entries in the I&E book should be brief, legible, and specific. They should be made in ink and should include the damage noted prior to exhibit, as well as any damage that occurs during the display. After the entries have been made, the booklet should be signed by the inspector.

Cards are now included in the rear of each I&E booklet to ensure an accurate accounting of all film prints at the end of each month. These cards are self-explanatory.

Notification of Motion Picture Transfer, NAVPERS 1710/1 (5-75)

When ships are underway for extended periods or they are in ports not serviced by MPXs, motion pictures should be exchanged as often as is practicable. When such exchanges are made, the notification of motion picture transfer form (fig. 16-7) is filled out in triplicate and the original and one copy are sent with the film. The original is signed by the recipient and is then sent back to the originating ship. This record is then maintained on file by the sending and receiving activities.

In other transactions, one copy will be mailed to Navy Motion Picture Service, 311 Flushing Avenue, Brooklyn, New York, one copy will be sent with each bundle and one copy to the receiving activity. Each movie will be listed by program and print number. The method of shipment should be indicated as air parcel post, military aircraft, commercial rail, etc. The addressee shall acknowledge receipt by entering the date and signing the bottom of the form and promptly returning a copy to the originator. The form may be typed or printed.

During the transfer of film, care should be exercised to ensure the transfer of complete programs and the I&E book as well. Any discrepancy should be corrected as soon as possible. Failure to correct any loss should be reported to the nearest Motion Picture Exchange (MPX). Except where exception is made by

ELECTRICIAN'S MATE 3 & 2

NOTIFICATION OF MOTION PICTURE TRANSFER
 NAVPERS 1710/1 (Rev.)
 S/N 0106-LF-017-1005

FROM						DATE SHIPPED	
TO						METHOD OF SHIPMENT	
SIGNATURE (Rank, Rate, Grade)							
NO.	PROGRAM & PRINT NO.	NO.	PROGRAM & PRINT NO.	NO.	PROGRAM & PRINT NO.	NO.	PROGRAM & PRINT NO.
1		11		21		31	
2		12		22		32	
3		13		23		33	
4		14		24		34	
5		15		25		35	
6		16		26		36	
7		17		27		37	
8		18		28		38	
9		19		29		39	
10		20		30		40	
TOTAL NUMBER OF BUNDLES			TOTAL NUMBER OF CASES			DATE RECEIVED	
SIGNATURE (Rank, Rate, Grade)							

INSTRUCTIONS

Forward original and a copy to the receiving activity via first class mail. One copy will accompany each bundle and one copy will be mailed to Navy Motion Picture Service only for transactions with Coast Guard activities and Coast Guard, MSC and NOAA ships. Originator will enter all information required at the top of this form. Each movie will be listed by program and print number. Method of shipment should be indicated as First Class Mail, Military Aircraft, Commercial Rail etc. Addressee shall acknowledge receipt by entering date and signature at the bottom of this form and promptly returning a copy to the originator. Addressee will also indicate any program not received. All entries may be typed or legibly printed. List programs in numerical sequence.

77.268

Figure 16-7.—Notification of motion picture transfer.

higher authority, exchanges should be on a print for print basis.

**Motion Picture Plan Film Inspection
 Record, NAVPERS 1710/7 (Rev 5-75)**

Motion Picture Exchanges generally require the activity drawing a film to complete a record of inspection (fig. 16-8) prior to receipt of a

print. The form contains a checkoff for each reel of film in a program, as well as space for additional comments by the inspector.

**NMPX Damage or Loss Report,
 NAVPERS 1710/9 (Rev 5-75)**

Upon the discovery of loss, damage, or destruction of a print, your ship will be required

Chapter 16—SOUND MOTION PICTURE SYSTEMS

16MM MOTION PICTURE PLAN FILM INSPECTION RECORD NAVPER5 1710/7 (Rev. 4-72)

INSTRUCTIONS

1. This record will be filled in ink, marking the appropriate code where such condition applies and adding legible remarks as necessary to accurately describe condition of film. If more space is needed, use other side.
2. Films shall be thoroughly inspected prior to exhibition. Condition of film shall be accurately described herein.
3. Location of damage is very important. Under "Remarks", state if reported damage appears throughout the reel, first half, last half, or appears intermittently. Example: "Medium teeth marks on last half of reel #3, inside picture frame, opposite sound track side."
4. A separate record shall be prepared for each program inspected. This record will be retained on board. Should damage be found rendering the film unfit for further exhibition, immediately notify the Regional Circuit Manager by telephone or message. If the damage is noted upon arrival of the film, the preceding activity on the circuit is to be immediately notified.
5. Should damage occur during exhibition, a separate report will be prepared after exhibition.

EXHIBITION ACTIVITY							PROGRAM NUMBER		
<input type="checkbox"/> GENERAL PRINT CONDITION BEFORE EXHIBITION							<input type="checkbox"/> GENERAL PRINT CONDITION AFTER EXHIBITION		
FEATURE							NUMBER OF REELS		
SHORT SUBJECTS									
INSPECTION FACTORS	REELS OF FEATURE						SHORT SUBJECTS		
	1	2	3	4	5	6	1	2	3
PROTECTIVE LEADER									
SYNCHRONIZING LEADER									
TITLE AND CAST									
PICTURE									
SOUND TRACK									
A LONGSIDE SOUND TRACK									
SPROCKET HOLES									
SPLICES									
ENDING									
PROGRAM CONDITION CODE									
GENERAL PRINT CONDITION		SPECIFIC DEFECTS NOTED							
E - EXCELLENT		B - BRITTLE	HS - HEAVY SCRATCH	SPL - LIGHT SPROCKET DAMAGE					
G - GOOD		C - CRIMPS	M - MISSING	SPH - HEAVY SPROCKET DAMAGE					
U - USABLE		LS - LIGHT SCRATCH	N - NICKS	W - WATERMARKS					
NU - NON-USABLE									
REMARKS									
SIGNATURE (Inspector)							DATE		

Figure 16-8.—16mm Motion Picture Plan Film Inspection Record.

77.269

16-9

476

ELECTRICIAN'S MATE 3 & 2

NMPX DAMAGE OR LOSS REPORT

REPORT SUPERS 1710-1

NAVPERS 1710/9 (Rev. 5-75)
S/N Q106-LF-017-1045

DATE _____

FROM: Navy Motion Picture Exchange Office _____

TO: Officer in Charge
Navy Motion Picture Service
311 Flushing Avenue
Brooklyn, New York 11205

SUBJ: Program and Print Number _____
Feature Title _____
Short Subjects _____

ENCL: 1. Motion Picture Film Inspection Record, NAVPERS 1710/7 for subject print

1. Information concerning the damage/loss of subject Motion Picture Program is indicated in enclosure (1). This Program was received on _____ from _____ (SHIP OR STATION) (DATE)

2. Listed below are the last five exhibiting activities. (Fill in for damaged or missing short subjects only.)

SHIP OR STATION	DATE RECEIVED	CONDITION ON RECEIPT	CONDITION AFTER LAST EXHIBITION

3. A copy of this report, with enclosure (1) will be included with the damaged program when returned to NMPS.

SIGNATURE

Attach this report to the I & E Report Book for damaged programs being returned to NMPS and mail advance copy to NMPS. Mail original for motion picture loss or short subject damaged.

77.270A

Figure 18-9.—NMPX Damage or Loss Report.

10-10
4

to complete a report (fig. 16-9). This report consists of the original and five copies. The ship retains one copy, sending the original and all others to the requesting authority. Assignment of responsibility and cost of repairs will be based in part on the completed report.

Exhibition, Transfer, and Inventory Record, NAVPERS 1710/12 (Rev 5-75)

This form, commonly called the movie log (fig. 16-10), is a running record of each film received by a ship. All films are entered regardless of whether they are exhibited or not. Film transfers are also recorded on this log.

The commanding officer signs this log at the beginning and end of each month. The man drawing film must present this log at the MPX prior to drawing film.

PROJECTOR SYSTEMS

Since the early 1950's, the Navy has purchased a series of standardized motion picture projectors for shipboard use. These machines were manufactured by several different firms and, therefore, have minor part deviations. The basic components and operational sequence, however, are similar. The Bell and Howell projector will be used for explanation; however, for a specific machine the applicable manufacturer's technical manual should be used.

The projector consists of a sound motion picture projector, an internal amplifier, and an internal loudspeaker, contained in a durable case. The control switches and operating devices are located on the right side of the projector.

Projectors are divided into three subsystems: transport system, light system, and sound system.

FILM TRANSPORT SYSTEM

The transport system of the representative projector (fig. 16-11A&B) begins with the forward, or feed, reel (1) mounted on a latch

type spindle supported by the feed reel arm. The film begins its travel after being fed into the film path. (2) The film passes under guide rollers and then passes between the top of the upper drive sprocket (4) and the upper drive sprocket shoe (3). Shoes (8) and (11) engage the film in the lower sprocket (9). The feed drive sprocket shoe presses the film against the feed drive sprocket teeth and the film is then driven to the upper loop forming assembly (5). This loop of film makes possible the intermittent movement of the film past the aperture (6). The film is moved past the aperture by the shuttle at a rate of 24 frames per second. The aperture plate prevents film movement from side to side, and a pressure plate maintains proper tension on the film against the aperture plate. The film continues down to the lower loop forming assembly (7). The loop serves two purposes. First, it allows the jerky movement of the film to be absorbed by the loop, and secondly, it allows proper spacing of 26 frames between the aperture and the sound sensing beam at the sound drum (10). The distance of 26 frames is necessary to synchronize the audio with the projected image. The film is moved (pulled) from the lower loop forming assembly (7) by the lower drive sprocket (9). The principal function of the lower drive sprocket is to smooth the flow of film as it passes around the sound drum (10). After the film completes its turn around the sound drum, it is again moved by contacting the lower half of the lower drive sprocket where it is guided down and to the rear of the projector to the takeup reel.

The automatic loop restorer will restore the lower loop when torn perforations on bad splices interrupt the normal loop. Press down the system restorer (14) for at least 1 second when film tension is lost around the sound drum; this will normally restore the film to its proper threading path when the film is running forward.

If a large portion of film is damaged, it should be removed from the projector and repaired.

Manual Threading

Normally, the automatic load feature is used when film is set up on the projector. However,

MOTION PICTURE EXHIBITION, TRANSFER & INVENTORY RECORD
 NAVPERS 1710/12 (Rev. 5-75) S/N 0106-LF-017-1060

BUPERS REPORT 1710-5
 Prepare in accordance with instructions on reverse

MONTH	PAGE NO.	NAME, DESIGNATOR & HULL NUMBER OF SHIP				ONBOARD COUNT	DATE	SIGNATURE	RANK/RATE	COMMANDING OFFICER/by direction			
No.	Program & Print No.	Received From		No. of Shows	Transferred to		No.	Program & Print No.	Received From		No. of Shows	Transferred to	
		Command	Date		Command	Date			Command	Date		Command	Date
1							27						
2							28						
3							29						
4							30						
5							31						
6							32						
7							33						
8							34						
9							35						
10							36						
11							37						
12							38						
13							39						
14							40						
15							41						
16							42						
17							43						
18							44						
19							45						
20							46						
21							47						
22							48						
23							49						
24							50						
25													
26													

Signature, Rank and Title _____ Date _____
 (To be signed at close of month)

16-12

ELECTRICIAN'S MATE 3 & 2

479

77.271

480

Figure 16-10.—U.S. Navy motion picture exhibition, transfer and inventory record.



the film may be manually threaded, or it may be removed from the projector at anytime. To manually thread the projector, take the following steps:

Swing the lamp housing open by pulling it out from the front. Loosen the exciter lamp cover screw and remove the cover, open the hinged lens at a right angle toward you. Push the threading mechanism release roller (12 in fig. 16-11A&B) to the rear until you hear a mechanical click. Now open the sprocket guards (3, 8, 11) by pushing up on (3) and (8) and down on (11).

Place the film at the beginning of the film path under roller (2) and engage the film sprocket holes on the sprocket teeth. Close the sprocket guard (3) by pushing it down. Pass the film between the film guides (5) and seat the film against the aperture plate between the edge guide rails. The film is now threaded behind and under roller (7). Engage the film sprocket holes on the sprocket teeth (9) and place the film under the roller. Close sprocket guard (8) and the lens housing. Place the film between the next two film guides and under the tension roller (13). Thread the film around the sound drum (10) and over the roller, now place the film between the sprocket (9) and the sprocket guard (11) and over the roller.

Pull on the loose end of the film to separate the rollers. Then, push the film in over the sprocket flange and engage the sprocket holes. Close the sprocket guard (11) by pushing upward. Place the film in front of roller (15), and under the threading mechanism release roller (16), under the film guide and in the threading channel as shown. Attach the film to the takeup reel. Check the film loop size above and below the aperture for proper size. If the loops are not properly formed, turn the motor/lamp switch to the forward position and immediately press the system restorer (14) down; hold it down for 1 second to reestablish proper loop size.

LIGHT SYSTEM

The light system (fig. 16-12) consists of the projection lamp, condensing lens, shutter,

aperture, projection lens, and screen. The light passes through the condensing lens which condenses and concentrates the light down to the size required for projection.

The light path is interrupted by the rotating blades of the shutter. This allows the full use of persistence of vision as the light is interrupted when the film is advanced past the film gate.


The aperture is the precise size to frame the film. The pressure plate provides tension against the film and holds the film in the correct position for exact focus. These highly polished surfaces should be kept absolutely clean.

The projection lens forms on the screen the enlarged image of the illuminated film frame at the aperture. Generally, two lenses come with each projector: the standard (with a 2-inch focal length) which is used with regular motion picture film, and the anamorphic (fig. 16-13), which is used with wide screen film. Lenses of other focal lengths are available through normal supply channels.

The Navy uses many different types of screens with motion picture projection. These vary from readily available retired mattress covers to expensive glass beaded screens. An assortment of screens are available through the stock system; beaded screens, however, tend to lose their beads when subjected to a salt atmosphere and are not recommended for shipboard use.

LIGHT SOUND SYSTEM

The light sound system (fig. 16-14) begins with the exciter lamp (1), which supplies a constant light source. The light passes through the sound optic lens (2) which forms and focuses the scanning beam. The constant light of the scanning beam passes through the sound track of the film. The light intensity varies as it passes through the sound track. It is this variation of light which excites the photo cell (fig. 16-15). The photo cell transforms the varying light signal into an electrical signal of varying intensity which is fed into the audio amplifier and then to loud speakers.

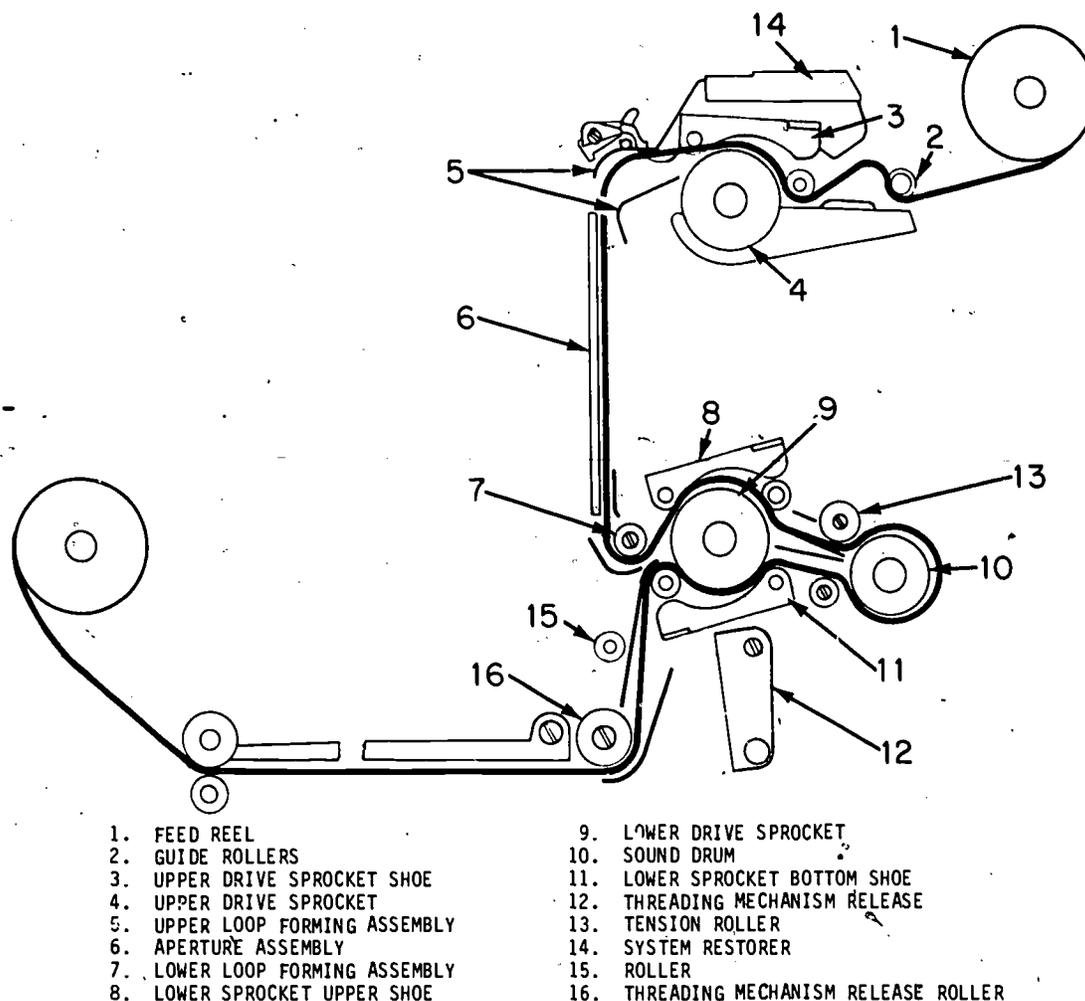

77.274

Figure 16-11A.—Film transport system.

OPERATION

Only qualified personnel are authorized to maintain and operate motion picture projection equipment. Before operating a movie projector, give the equipment a visual inspection to see that everything is in order. When necessary, clean the lens with lens tissue. NEVER touch the lens with your bare fingers. Inspect the projector cord and extension cord, if one is used, for breaks in insulation, proper size and properly grounded plugs.

When you have placed the projector in position for use, make sure the air intake and

exhaust passages are not blocked. Be sure the speaker cables and extension cords are arranged so that they will not interfere with personnel movement.

Plug the a.c. power cable from the projector into the ship's 115 volt 60-Hz power supply. Swing the takeup and supply reel arms into the operating position. Place the first reel of film to be shown on the supply reel arm. Be sure that it locks into place. Be sure the film is heading out, that is, the film has been properly rewound and the leader has been properly trimmed. Install an empty reel on the takeup reel arm and lock it into place. Turn the motor/lamp switch to the

16-14 482

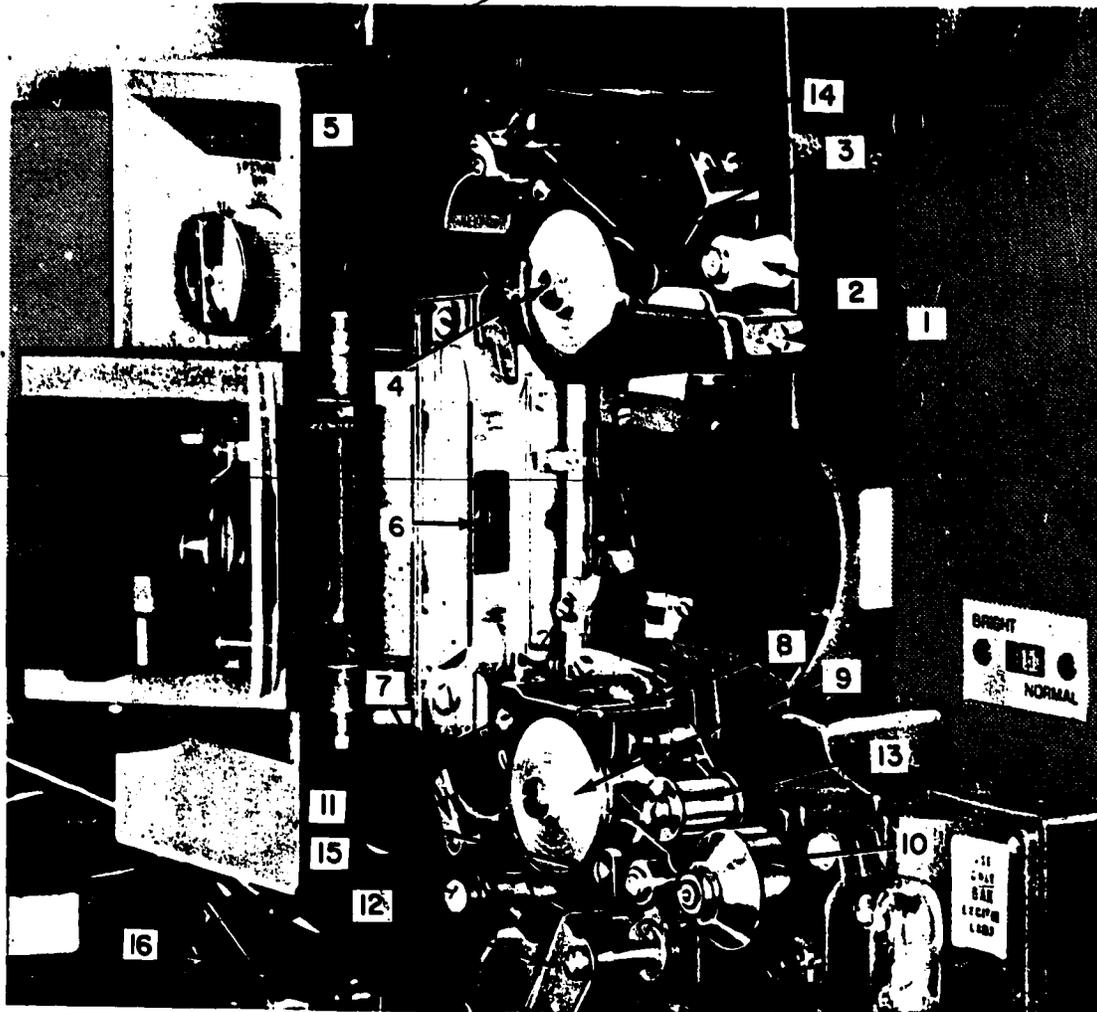


Figure 16-11B.—Film transport system—Continued.

77.274A

PROJECT position, and adjust the tilt knob of the projector so that the projected light is in the proper position on the screen. Once you have the projector properly aligned, turn the switch off. Push the load lever forward until it locks into the forward position. Turn the motor/lamp switch to the FORWARD position and insert the film leader into the film channel until it engages the sprocket and begins to feed by itself. After sufficient film has passed through the projector, pull lightly on the leader until you hear a click. You have just released the threading mechanism. Turn the projector off, and attach the leader end to the takeup reel. Rotate the reel clockwise to

remove any slack in the film. Turn the motor/lamp switch to the PROJECT position. Use the focus knob as necessary to sharpen the image and turn the tilt control knob to center the image on the screen.

Keep the volume at a low setting until the title appears on the screen; then, adjust the volume control to a comfortable level. Adjust the tone control from the midpoint "0" to bass or treble until a setting is reached which suits the room acoustics. Use the framer knob if a frame separation line appears on the screen; adjust in either direction until the image is properly framed.

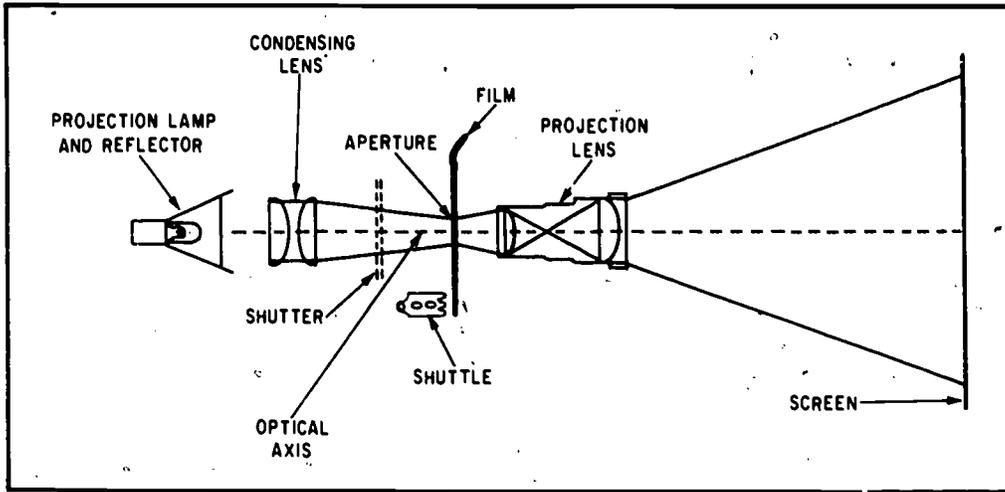


Figure 16-12.—The light system.

77.265


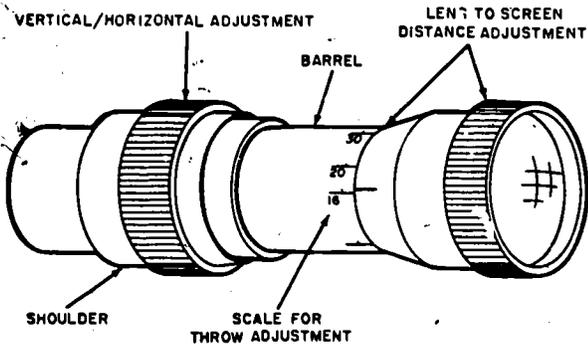


Figure 16-13.—Anamorphic lens.

77.280

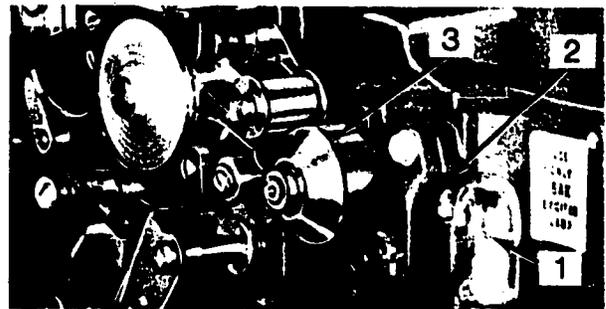

1. EXCITER LAMP
2. SOUND OPTIC LENS
3. SOUND DRUM

77.274B

Figure 16-14.—Light sound system.


PROJECTOR STORAGE

Turn the motor/lamp switch to OFF. Remove the film supply and takeup reels from their support arms, and swing the arms into the storage position. Unlock the arms with the unlocking release buttons.

Lower the projector completely on its tilting legs, using the tilt control knob. Unplug the power cord and wind it around the cord retainer. Fit the cover into the base and fasten the two top latches of the cover.

OPERATOR CARE

To prevent film damage, clean all surfaces that contact the film with an approved cleaning solvent and a soft cloth. Frequently clean the film path surfaces. To clean the aperture and pressure plate, swing the lens housing out and wipe all surfaces clean of any dirt or emulsion that may have accumulated. Press the side

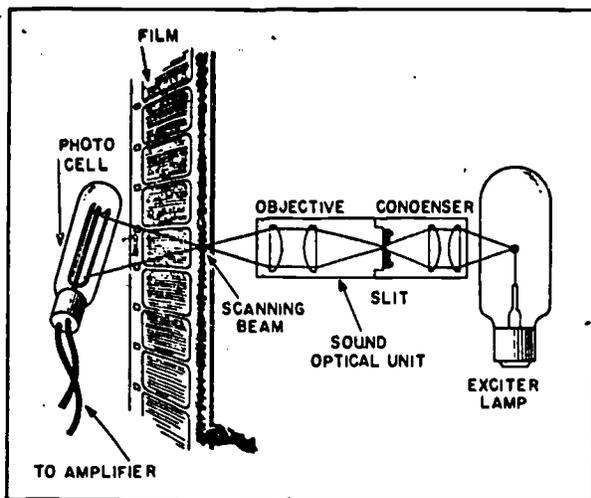

77.281

Figure 16-15.—Sound optical system.

tension rail when cleaning the aperture plate and aperture opening. When you have completed cleaning, be sure the pressure plate is seated properly as you close the lens housing.

To replace the projector lamp, first disconnect the power cord, and then remove the projector lamp housing cover. Open the small snap type clamp that holds the projector lamp in place. Be very careful if the lamp is still hot; use gloves or a heavy cloth. To remove the lamp, grasp it at the back, or base portion and pull it straight out. Never touch a projector lamp with your bare fingers. The trace of oil left by your skin will cause a bubble to form when the bulb is hot, and the bulb will fail. Insert the new lamp, close the lamp clamp, and replace the cover.

Replacing the Exciter Lamp

Ensure that the power cord is disconnected and remove the exciter lamp cover by loosening the retaining screw. After removing the cover, release the lamp locking lever by moving it to the right. Twist the lamp counterclockwise and lift it off the guide pins. Replace the new lamp using the reverse procedure, noting that the notch in the lamp base is pointing forward, or toward the front of the projector.

PROJECTIONIST'S TROUBLESHOOTING GUIDE

The questions which follow are check points to correct the indicated trouble. If the answer is NO to any question, make the correction required.

- Projector will not thread automatically.
 1. Has the film been properly trimmed?
 2. Is the lens housing closed, and is the exciter lamp cover properly placed?
 3. Is the autoload lever in the forward threading position?
 4. Is the motor/lamp switch turned to Forward?

- No sound, but the exciter lamp lights.
 1. Is the film properly threaded?
 2. Is the volume control turned up?
 3. Is the film's sound track adequate?

- Inadequate volume.
 1. Is the volume control turned up?
 2. Is line voltage sufficient (110-129 vac, 60 Hz)?
 3. Is the film clean?
 4. Is the exciter lamp filament damaged?

- Garbled sound.
 1. Is the film tight around the sound drum?
 2. Is the tone control set properly?

- Inadequate picture brilliance:
 1. Is line voltage correct?
 2. Is the room properly darkened?
 3. Is the distance too far between the projector and the screen?

ELECTRICIAN'S MATE 3 & 2

4. Is the projection lens clean?
5. Is the projection lamp seated properly?
6. Is the projection lamp nearing the end of its effective life?

This troubleshooting guide is by no means complete. However, if you do not have the proper tools and the manufacturer's technical manual for a specific model, refer any problems other than those discussed above to a qualified repairman.

486

16-18

APPENDIX I

GLOSSARY

AIR-CORE TRANSFORMER.—A transformer composed of two or more coils, which are wound around a nonmetallic core.

AMMETER.—An instrument for measuring the amount of electron flow in amperes.

AMPERE.—The basic unit of electrical current.

ANODE.—A positive electrode of an electrochemical device (such as a primary or secondary electric cell) toward which the negative ions are drawn.

APPARENT POWER.—That power apparently available for use in an a.c. circuit containing a reactive element. It is the product of effective voltage times effective current expressed in voltamperes. It must be multiplied by the power factor to obtain true power available.

ARMATURE.—In a relay, the movable portion of the relay.

AVERAGE VALUE OF A.C.—The average of all the instantaneous values of one-half cycle of alternating current.

BATTERY.—A device for converting chemical energy into electrical energy.

BATTERY CAPACITY.—The amount of energy available from a battery. Battery capacity is expressed in ampere-hours.

BURNISHING TOOL.—A tool used to clean and polish contacts on a relay.

CATHODE.—The general name for any negative electrode.

CHARGE.—Represents electrical energy. A material having an excess of electrons is said to have a negative charge. A material having an absence of electrons is said to have a positive charge.

CIRCUIT.—The complete path of an electric current.

CIRCULAR MIL.—An area equal to that of a circle with a diameter of 0.001 inch. It is used for measuring the cross-sectional area of wires.

CONDUCTANCE.—The ability of a material to conduct or carry an electric current. It is the reciprocal of the resistance of the material, and is expressed in mhos or siemens.

CONDUCTIVITY.—Ease with which a substance transmits electricity.

CONDUCTOR.—(1) A material with a large number of free electrons. (2) A material which easily permits electric current to flow.

COULOMB.—A measure of the quantity of electricity. One coulomb is equal to 6.28×10^{18} electrons.

COULOMB'S LAW.—Also called the law of electric charges or the law of electrostatic attraction. Coulomb's Law states that charged bodies attract or repel each other with a force that is directly proportional to the product of their individual charges and inversely

proportional to the square of the distance between them.

CPR.—Cardio-Pulmonary Resuscitation.

CROSS-SECTIONAL AREA.—The area of a "slice" of an object. When applied to electrical conductors it is usually expressed in circular mils.

CURRENT.—The drift of electrons past a reference point. The passage of electrons through a conductor. Measured in amperes.

DAMPING.—The process of smoothing out oscillations. In a meter, damping is used to keep the pointer of the meter from overshooting the correct reading.

D'ARSONVAL METER MOVEMENT.—A name used for the permanent-magnet moving-coil movement used in most meters.

DIELECTRIC FIELD.—The space between and around charged bodies in which their influence is felt. Also called Electric Field of Force or an Electrostatic Field.

DIRECT CURRENT.—An electric current that flows in one direction only.

DOMAIN THEORY.—A theory of magnetism based upon the electron-spin principle. Spinning electrons have a magnetic field. If more electrons spin in one direction than another, the atom is magnetized.

DRY CELL.—An electrical cell in which the electrolyte is not a liquid. In most dry cells the electrolyte is in the form of a paste.

EDDY CURRENT.—Induced circulating currents in a conducting material that are caused by a varying magnetic field.

EDDY CURRENT LOSS.—Losses caused by random current flowing in the core of a transformer. Power is lost in the form of heat.

EFFICIENCY.—The ratio of output power to input power, generally expressed as a percentage.

ELECTRIC CURRENT.—The flow of electrons.

ELECTRICAL CHARGE.—Symbol: Q , q . Electric energy stored on or in an object. The negative charge is caused by an excess of electrons; the positive charge is caused by a deficiency of electrons.

ELECTROCHEMICAL.—The action of converting chemical energy into electrical energy.

ELECTRODE.—The terminal at which electricity passes from one medium into another, such as in an electrical cell where the current leaves or returns to the electrolyte.

ELECTRODYNAMIC METER MOVEMENT.—A meter movement using fixed field coils and a moving coil; usually used in wattmeters.

ELECTROLYTE.—A solution of a substance which is capable of conducting electricity. An electrolyte may be in the form of either a liquid or a paste.

ELECTROMAGNET.—An electrically excited magnet capable of exerting mechanical force, or of performing mechanical work.

ELECTROMAGNETIC.—The term describing the relationship between electricity and magnetism. Having both magnetic and electric properties.

ELECTROMAGNETIC INDUCTION.—The production of a voltage in a coil due to a change in the number of magnetic lines of force (flux linkages) passing through the coil.

ELECTRON.—The elementary negative charge that revolves around the nucleus of an atom.

Appendix I—GLOSSARY

ELECTRON SHELL.—A group of electrons which have a common energy level that forms part of the outer structure (shell) of an atom.

ELECTROSTATIC.—Pertaining to electricity at rest, such as charges on an object (static electricity).

ELECTROSTATIC METER MOVEMENT.—A meter movement that uses the electrostatic repulsion of two sets of charged plates (one fixed and the other movable). This meter movement reacts to voltage rather than to current and is used to measure high voltage.

ELEMENT.—A substance, in chemistry, that cannot be divided into simpler substances by any means ordinarily available.

EMF.—(Electromotive Force) The force which causes electricity to flow between two points with different electrical charges or when there is a difference of potential between the two points. The unit of measurement in volts.

FERROMAGNETIC MATERIAL.—A highly magnetic material, such as iron, cobalt, nickel, or alloys, make up these materials.

FIELD OF FORCE.—A term used to describe the total force exerted by an action-at-a-distance phenomenon such as gravity upon matter, electric charges acting upon electric charges, magnetic forces acting upon other magnets or magnetic materials.

FIXED RESISTOR.—A resistor having a definite resistance value that cannot be adjusted.

FLUX.—In electrical or electromagnetic devices, a general term used to designate collectively all the electric or magnetic lines of force in a region.

FLUX DENSITY.—The number of magnetic lines of force passing through a given area.

FREQUENCY METER.—A meter used to measure the frequency of an a.c. signal.

GALVONOMETER.—A meter used to measure small values of current by electromagnetic or electrodynamic means.

GROUND POTENTIAL.—Zero potential with respect to the ground or earth.

HENRY (H).—The electromagnetic unit of inductance or mutual inductance. The inductance of a circuit is 1 henry when a current variation of 1 ampere per second induces 1-volt. It is the basic unit of inductance. In radio, smaller units are used such as the millihenry (mH), which is one-thousandth of a henry (H), and the microhenry (μ H) which is one-millionth of a henry.

HERTZ (Hz).—A unit of frequency equal to one cycle per second.

HORSEPOWER (hp).—The English unit of power, equal to work done at the rate of 550 foot-pounds per second. Equal to 746 watts of electrical power.

HOT WIRE METER MOVEMENT.—A meter movement that uses the expansion of a heated wire to move the pointer of a meter; measures d.c. or a.c.

HYDROMETER.—An instrument used to measure specific gravity. In batteries hydrometers are used to indicate the state of charge by the specific gravity of the electrolyte.

HYSTERESIS.—The time lag of the magnetic flux in a magnetic material behind the magnetizing force producing it, caused by the molecular friction of the molecules trying to align themselves with the magnetic force applied to the material.

HYSTERESIS LOSS.—The power loss in an iron-core transformer or other alternating-current device as a result of magnetic hysteresis.

INDUCED CURRENT.—Current due to the relative motion between a conductor and a magnetic field.

INDUCED ELECTROMOTIVE FORCE.—The electromotive force induced in a conductor due to the relative motion between a conductor and a magnetic field. Also called **INDUCED VOLTAGE**.

INDUCTIVE REACTANCE.—The opposition to the flow of an alternating current caused by the inductance of a circuit, expressed in ohms. Identified by the letter X_L .

INSULATION.—(1) A material used to prevent the leakage of electricity from a conductor and to provide mechanical spacing or support to protect against accidental contact. (2) Use of material in which current flow is negligible to surround or separate a conductor to prevent loss of current.

KILO.—A prefix meaning one thousand.

KINETIC ENERGY.—Energy which a body possesses by virtue of its motion.

KIRCHHOFF'S LAWS.—(1) The algebraic sum of the currents flowing toward any point in an electric network is zero. (2) The algebraic sum of the products of the current and resistance in each of the conductors in any closed path in a network is equal to the algebraic sum of the electromotive forces in the path.

LEAD-ACID CELL.—A cell in an ordinary storage battery, in which electrodes are grids of lead containing an active material consisting of certain lead oxides that change in composition during charging and discharging. The electrodes or plates are immersed in an electrolyte of diluted sulfuric acid.

LINE OF FORCE.—A line in an electric or magnetic field that shows the direction of the force.

LOAD.—(1) A device through which an electric current flows and which changes electrical energy into another form. (2) Power consumed by a device or circuit in performing its function.

MAGNETIC FIELD.—The space in which a magnetic force exists.

MAGNETIC POLES.—The section of a magnet where the flux lines are concentrated; also where they enter and leave the magnet.

MAGNETISM.—The property possessed by certain materials by which these materials can exert mechanical force on neighboring masses of magnetic materials; and can cause currents to be induced in conducting bodies moving relative to the magnetized bodies.

MEGA.—A prefix meaning one million, also Meg.

MHO.—Unit of conductance; the reciprocal of the ohm.

MICRO.—A prefix meaning one-millionth.

MILLI.—A prefix meaning one-thousandth.

MOVING-VANE METER MOVEMENT.—A meter movement that uses the magnetic repulsion of the like poles created in two iron vanes by current through a coil of wire; most commonly used movement for a.c. meters.

MULTIMETER.—A single meter combining the functions of an ammeter, a voltmeter, and an ohmmeter.

NEGATIVE TEMPERATURE COEFFICIENT.—The temperature coefficient expressing the amount of reduction in the value of a quantity, such as resistance for each degree of increase in temperature.

NEUTRAL.—In a normal condition, hence neither positive nor negative. A neutral object has a normal number of electrons.

NONTRIP-FREE CIRCUIT BREAKER.—A circuit breaker that can be held ON during an overcurrent condition.

OHM.—The unit of electrical resistance. It is that value of electrical resistance through which a constant potential difference of 1 volt across

Appendix I—GLOSSARY

the resistance will maintain a current flow of 1 ampere through the resistance.

OHMIC VALUE.—Resistance in ohms.

OHM'S LAW.—The current in an electric circuit is directly proportional to the electromotive force in the circuit. The most common form of the law is $E = IR$, where E is the electromotive force or voltage across the circuit, I is the current flowing in the circuit, and R is the resistance of the circuit.

PARALLAX ERROR.—The error in meter readings that results when you look at a meter from some position other than directly in line with the pointer and meter face. A mirror mounted on the meter face aids in eliminating parallax error.

PARALLEL CIRCUIT.—Two or more electrical devices connected to the same pair of terminals so separate currents flow through each; electrons have more than one path to travel from the negative to the positive terminal.

PERMEABILITY.—The measure of the ability of a material to act as a path for magnetic lines of force.

PHASE.—The angular relationship between two alternating currents or voltages when the voltage or current is plotted as a function of time. When the two are in phase, the angle is zero, and both reach their peak simultaneously. When out of phase, one will lead or lag the other; at the instant when one is at its peak, the other will not be at peak value and (depending on the phase angle) may differ in polarity as well as magnitude.

PHASE ANGLE.—The number of electrical degrees of lead or lag between the voltage and current waveforms in an a.c. circuit.

PHASE DIFFERENCE.—The time in electrical degrees by which one wave leads or lags another.

PHOTOELECTRIC VOLTAGE.—A voltage produced by light.

PICO.—A prefix adopted by the National Bureau of Standards meaning 10^{-12} .

PIEZOELECTRIC EFFECT.—The effect of producing a voltage by placing a stress, either by compression, expansion, or twisting, on a crystal and, conversely, producing a stress in a crystal by applying a voltage to it.

POLARITY.—(1) The condition in an electrical circuit by which the direction of the flow of current can be determined. Usually applied to batteries and other direct voltage sources. (2) Two opposite charges, one positive and one negative. (3) A quality of having two opposite magnetic poles, one north and the other south.

POLARIZATION.—The effect of hydrogen surrounding the anode of a cell which increases the internal resistance of the cell.

POTENTIAL ENERGY.—Energy due to the position of one body with respect to another body or to the relative parts of the same body.

POTENTIOMETER.—A 3-terminal resistor with one or more sliding contacts, which functions as an adjustable voltage divider.

POWER.—The rate of doing work or the rate of expending energy. The unit of electrical power is the watt.

PRIMARY WINDING.—The winding of a transformer connected to the electrical source.

RECIPROCAL.—The value obtained by dividing the number 1 by any quantity.

RECTIFIER.—A device used to convert a.c. to pulsating d.c.

REFERENCE POINT.—A point in a circuit to which all other points in the circuit are compared.

RELAY.—An electromagnetic device with one or more sets of contacts which changes contact position by the magnetic attraction of a coil to an armature.

RELUCTANCE.—A measure of the opposition that a material offers to magnetic lines of force.

REPULSION.—The mechanical force tending to separate bodies having like electrical charges or like magnetic polarity.

RESIDUAL MAGNETISM.—Magnetism remaining in a substance after removal of the magnetizing force.

RETENTIVITY.—The ability of a material to retain its magnetism.

RHEOSTAT.—(1) A resistor whose value can be varied. (2) A variable resistor which is used for the purpose of adjusting the current in a circuit.

RLC CIRCUIT.—An electrical circuit which has the properties of resistance, inductance, and capacitance.

RMS.—Abbreviation of root mean square.

ROOT MEAN SQUARE (RMS).—The equivalent heating value of an alternating current or voltage, as compared to a direct current or voltage. It is 0.707 times the peak value of a sine wave.

ROTARY SWITCH.—A multicontact switch with contacts arranged in a circular or semicircular manner.

SCHEMATIC CIRCUIT DIAGRAM.—A circuit diagram in which component parts are represented by simple, easily drawn symbols. May be called schematic.

SCHEMATIC SYMBOLS.—A letter, abbreviation, or design used to represent specific characteristics or components on a schematic diagram.

SECONDARY.—The output coil of a transformer.

SELF-INDUCTION.—The production of a counter-electromotive force in a conductor

when its own magnetic field collapses or expands with a change in current in the conductor.

SENSITIVITY.—(1) For an ammeter: the amount of current that will cause full-scale deflection of the meter. (2) For a voltmeter: the ratio of the voltmeter resistance divided by the full-scale reading of the meter, expressed in ohms-per-volt.

SERIES CIRCUIT.—An arrangement where electrical devices are connected so that the total current must flow through all the devices; electrons have one path to travel from the negative terminal to the positive terminal.

SERIES-PARALLEL CIRCUIT.—A circuit that consists of both series and parallel networks.

SINE WAVE.—The curve traced by the projection on a uniform time scale of the end of a rotating arm, or vector. Also known as a sinusoidal wave.

SOLENOID.—An electromagnetic device that changes electrical energy into mechanical motion; based upon the attraction of a movable iron plunger to the core of an electromagnet.

THERMAL-MAGNETIC TRIP ELEMENT.—A single circuit breaker trip element that combines the action of a thermal and a magnetic trip element.

THERMOCOUPLE.—A junction of two dissimilar metals that produces a voltage when heated.

THERMOCOUPLE METER MOVEMENT.—A meter movement that uses the current induced in a thermocouple by the heating of a resistive element to measure the current in a circuit; used to measure a.c. or d.c.

THETA.—The greek letter (θ) used to represent phase angle.

Appendix I—GLOSSARY

TIME CONSTANT.—The time required to charge a capacitor to 63.2 percent of maximum voltage or discharge to 36.8 percent of its final voltage.

The time required for the current in an inductor to increase to 63.2 percent of maximum current or decay to 36.8 percent of its final current.

TOLERANCE.—(1) The maximum error or variation from the standard permissible in a measuring instrument. (2) A maximum electrical or mechanical variation from specifications which can be tolerated without impairing the operation of a device.

TRANSFORMER.—A device composed of two or more coils, linked by magnetic lines of force, used to transfer energy from one circuit to another.

TRANSFORMER EFFICIENCY.—The ratio of output power to input power, generally expressed as a percentage.

$$\text{Efficiency} = \frac{P_{\text{out}}}{P_{\text{in}}} \times 100$$

TRANSFORMER, STEP-DOWN.—A transformer so constructed that the number of turns in the secondary winding is less than the number of turns in the primary winding. This construction will provide less voltage in the secondary circuit than in the primary circuit.

TRANSFORMER, STEP-UP.—A transformer so constructed that the number of turns in the secondary winding is more than the number of turns in the primary winding. This construction will provide more voltage in the secondary circuit than in the primary circuit.

TRIP-ELEMENT.—The part of a circuit breaker that senses any overload condition and causes the circuit breaker to open the circuit.

TRIP-FREE CIRCUIT BREAKER.—A circuit breaker that will open a circuit even if the operating mechanism is held in the ON position.

TRUE POWER.—The power dissipated in the resistance of the circuit, or the power actually used in the circuit.

TURN.—One complete loop of a conductor about a core.

TURNS RATIO.—The ratio of number of turns in the primary winding to the number of turns in the secondary winding of a transformer.

VOLT.—The unit of electromotive force or electrical pressure. One volt is the pressure required to send 1 ampere of current through a resistance of 1 ohm.

VOLTAGE.—(1) The term used to signify electrical pressure. Voltage is a force which causes current to flow through an electrical conductor. (2) The voltage of a circuit is the greatest effective difference of potential between any two conductors of the circuit.

VOLTAGE DIVIDER.—A series circuit in which desired portions of the source voltage may be tapped off for use in equipment.

VOLTAGE DROP.—The difference in voltage between two points. It is the result of the loss of electrical pressure as a current flows through a resistance.

WATT.—The practical unit of electrical power. It is the amount of power used when 1 ampere of d.c. flows through a resistance of 1 ohm.

WATTAGE RATING.—A rating expressing the maximum power that a device can safely handle.

WATT-HOUR.—A practical unit of electrical energy equal to 1 watt of power for 1 hour.

WEBER'S THEORY.—A theory of magnetism which assumes that all magnetic material is composed of many tiny magnets. A piece of magnetic material that is magnetized has all of the tiny magnets aligned so that the north pole of each magnet points in one direction.

APPENDIX II

WORKBENCHES, GROUND REQUIREMENTS AND SAFETY MATTING

The following information on workbenches, ground requirements, and safety matting is extracted from: MIL-STD 1310D, drawing No. NAVORD 63-A-114, and General Specifications for Ships of U. S. Navy. For more detailed information, obtain these publications, and study them.

ELECTRICAL AND ELECTRONIC WORKBENCHES

1. Construction. Electrical and electronic workbenches for use aboard U.S. Navy ships shall be of a modular type construction in accordance with drawing No. NAVORD 63-A-114. (See figure 1.)

When longer workbenches are required, modules may be joined together to construct a workbench of the desired length. However, no more than one Auxillary Table Assembly, unit 63A114D5 should be used between cabinet assemblies.

Unit 63A114D3, Cabinet Base Assembly, is optional for use with the new cabinet assembly. Its use aboard ship is recommended to minimize damage to the cabinet assemblies from buffers, etc.

2. Insulation. Insulation shall be in accordance with the following (refer to figure 1).

Top working surface. Insulate the top working surface with 3/8-inch Benelex 401. For

long workbench assemblies, it is recommended that the insulation be cut and installed as a single piece over the top surface. Secure the insulation to the working surface with counter-sunk 1/4-20 nylon screws.

Top edge, front edges and door and drawer fronts. Insulate those front surfaces of the cabinet and table assemblies which a person might contact while standing or leaning against the front of the workbench with 1/8-inch Benelex 401. Secure the insulation to the fronts and edges with counter-sunk 1/4-20 nylon screws or cement to the surface with a cement conforming to Fed. Spec. MMM-A-121.


Exposed sides, kneeholes, etc. Exposed sides, and kneeholes and other surfaces which a person might contact while performing normal maintenance at the workbench should be insulated with a high-pressure laminate (nominal 1/32-inch thickness) conforming to Type I of MIL-P-17171C(SHIPS) or Type 1 of Fed. Spec. L-P-508H. Secure the insulation to the surfaces with a cement conforming to Fed. Spec. MMM-A-121.

Preferred stock numbers. The national stock numbers shown in table 1 for materials to be utilized for insulation of electrical and electronic workbenches is not all-inclusive. Other high-pressure laminates may be substituted, however, substitute materials should conform to the listed military or federal specifications.

AII-1

494

ELECTRICIAN'S MATE 3 & 2

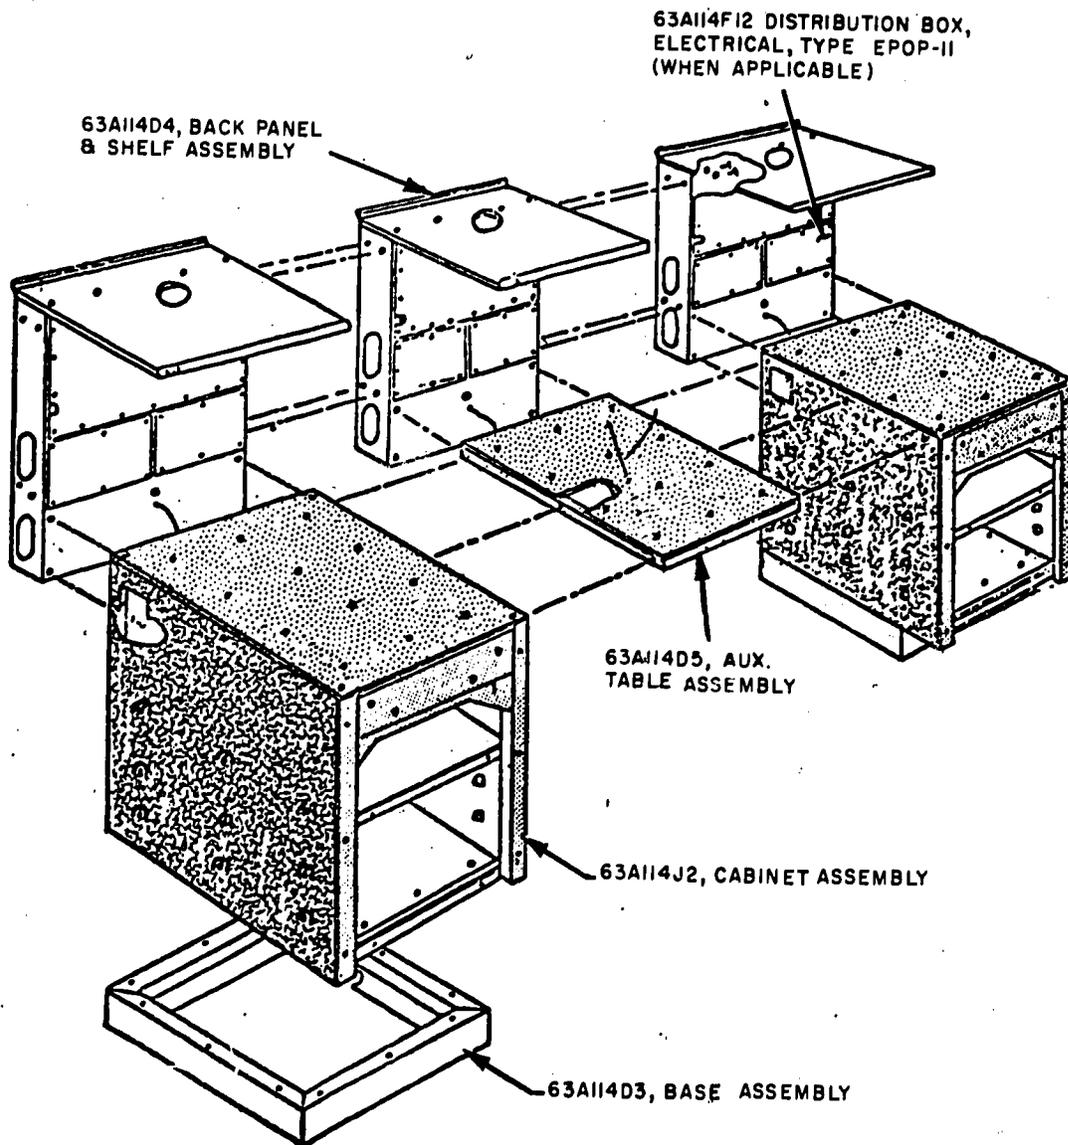

	3/8 - INCH. BENELEX	CABINET ASSEMBLY	NSN IN6625-00-851-2156
	1/8 - INCH BENELEX	CABINET BASE ASSEMBLY*	NSN IN6625-00-851-2157
	HIGH-PRESSURE LAMINATE	BACK PANEL ASSEMBLY	NSN IN6625-00-851-2158
		AUXILIARY TABLE ASSEMBLY	NSN IN6625-00-851-2159
		ELECTRICAL DISTRIBUTION BOX ASSEMBLY**	NSN IN6610-00-839-8026

*NOT PART OF OLD DESIGN AND OPTIONAL FOR USE WITH THE NEW CABINET ASSEMBLY. PROVIDES 4" ELEVATION AND TOE SPACE. REQUIRED FOR SHORE BASE INSTALLATIONS ONLY.

**OPTIONAL WITH SHIPBOARD INSTALLATIONS.

Figure 1.—Electrical and Electronic Workbench.

Appendix II—WORKBENCHES, GROUND REQUIREMENTS AND SAFETY MATTING

Material	Size/Quan	NSN
Insulation, Benelex 401	1/8-inch	9Q-5640-00-256-5195
	3/8-inch	9Q-5640-00-256-5194
Laminate, High pressure, Fed. Spec. L-P-508H	0.062" x 4' x 8' Linen Green	9330-00-784-0311
	0.062" x 4' x 3' Charcoal	9330-00-990-3432
Laminate, High pressure, MIL-T-17171	0.062" x 2' x 4' Light Gray	9330-00-531-0811
	0.062" x 2' x 6' White	9330-00-257-3683
Cement, MMM-A-121	pint	9Q-8040-00-273-8717
	quart	9Q-8040-00-165-8614
	gallon	9Q-8040-00-843-3461
Screw, Nylon, 1/4-20 x 3/4"	HD	9Z-5305-00-543-5733

TABLE 1

3. Isolated power circuits.

Transformers. In order to minimize the electric shock hazard and possible damage to equipments and the ship's power distribution system, General Specifications for Ships of the U.S. Navy, paragraph 331b, requires that all 120-volt, 60-hertz, single-phase receptacles (such as workbench receptacles) be connected to single-phase circuits through isolating transformers on the basis of the following principles:

Circuits supplying receptacle connectors shall not supply other types of load. Each circuit [workbench] shall have its own isolating transformer. The transformer shall be either 450/120-volt supplied from a 450-volt load center or 120/120-volt supplied from a 120-volt distribution point.

Disconnect switches. General Specifications for Ships of the U.S. Navy, paragraph 320c, requires that each item of electronic equipment connected directly to the ship's electrical power distribution system be provided with a means for disconnecting the equipment from the electrical power distribution system. This disconnecting means shall be located within the compartment or space in which the equipment is located. Wherever practicable, the disconnecting means shall be the electronic equipment distribution panel or distribution box with switches [circuit breakers], if located within the compartment or space. If the distribution panel or box is located outside the space, a single switch or circuit breaker should be used [for each workbench].

Power receptacles. Only approved power receptacles should be mounted on electrical and electronic workbenches. Power receptacles should conform to Table 2.

ELECTRICIAN'S MATE 3 & 2

Description	Symbol No.	NSN
Receptacle, double, 15-ampere, 125-volt, 60-hertz, single- phase, bladed type, GND	730.1	9G-5975-00-284-5827
Receptacle panel, six- outlet, 125-volt, 60-hertz	754.2	1H-6110-00-889-0990
Receptacle panel, eight- outlet, 125-volt, 60-hertz	755.3	9N-5935-00-091-9436
Receptacle, double, 15-ampere, 125-volt, 400-hertz, single- phase, bladed type, TE, GND	1100	9N-5935-00-577-0283
Electrical Distribution Box Assembly	63A114F12	1N-6610-00-839-8026

TABLE 2

Warning Signs. A warning plate shall be installed above each workbench and shall read:

-DANGER-
Electrical Shock
Do Not Touch Energized Circuits

Resuscitation instructions and instructions which give an approved method of rescuing personnel in contact with energized circuits shall also be posted adjacent to switchboards supplying electrical and electronic workbenches.

4. Bonding and grounding. Bonding and grounding of electrical and electronic workbenches shall be in accordance with Military Standards MIL-STD-1310(series). (See figures 2 and 3.)

SAFETY MATTING

The following was extracted from General Specifications for Ships of the U.S. Navy.

Electrical grade sheet deck covering conforming to Mil. Spec. MIL-M-15562, type I, shall be installed on decks located in compartments designated as electrical or electronic spaces. Prior to installing the deck covering, the deck shall be primed in accordance with Sect. 631.

No seams shall be within 3 feet of electrical/electronic equipment, panels, and workbenches. If this is unavoidable, seams shall be heat welded or chemically sealed to provide a continuous surface free of seams, craters, or porosities.

Appendix II—WORKBENCHES, GROUND REQUIREMENTS AND SAFETY MATTING




If the compartment that contains electrical equipment, such as electrical workbenches, switchboards, or panels, but is not an electrical area as designated herein (see table, para. 634d), a portable mat conforming to type II or III of Mil. Spec. MIL-M-15562 may be installed for personal safety over the deck covering specified in lieu of Mil. Spec. MIL-M-15562, type I sheet covering. The electrical grade mat shall be installed in way of insulated work benches and operating and servicing areas of electrical panel and switchboards over a minimum area necessary to prevent the hazards of electrical

shock, but not less than 3 feet wide. Exposed corners shall be rounded off.

Cementing of the mat is optional. Cementing of the sheet material shall be in accordance with the Manufacturer's instructions. In way of removable deck plates, the sheet shall be installed without cement.

Joints of portable deck plates which have vinyl sheet in way of electrical and electronic equipment shall be covered with epoxy fiberglass strips, Mil. Spec. MIL-P-18177, type GEE, secured with nylon screws in accordance with drawing, NAVSHIPS No. 805-2104467.

AI-6

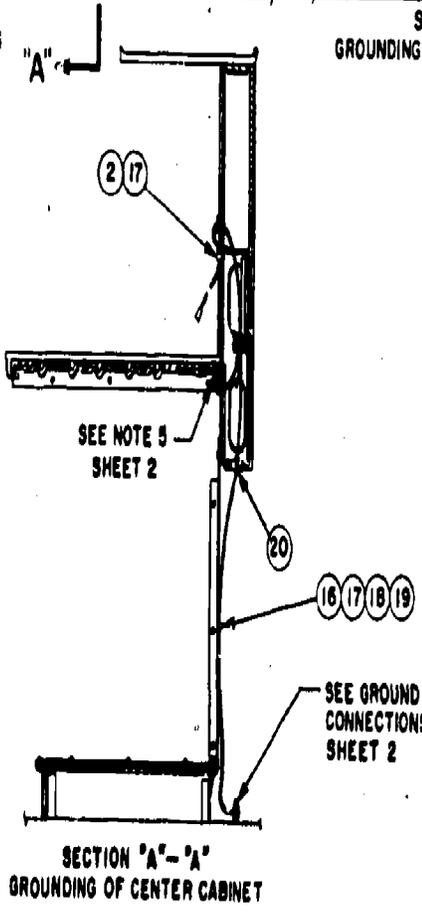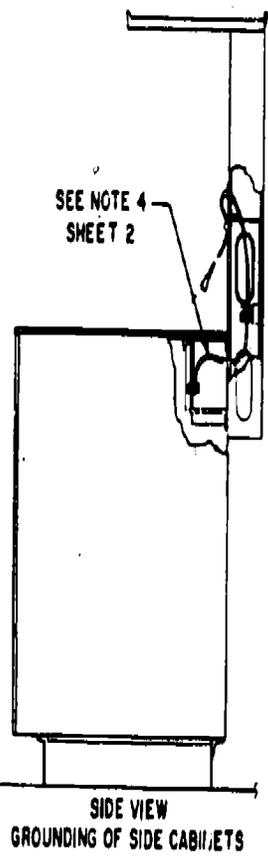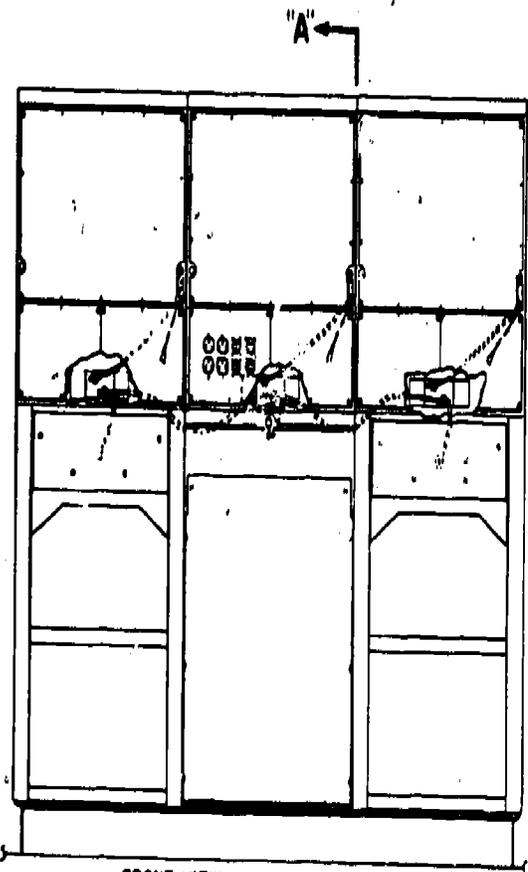

LIST OF MATERIAL			
ITEM NO.	PART	SPECIFICATION	NOTE
1	WIRE, INSULATED, TYPE D2	MIL-W-16878/3	1,2
2	CLAMP, CABLE, ALUMINUM	MS21104D-3	9
3	WASHER, LOCK, 7/8 DIA, STEEL	MS35336-46	2,3,6
4	NUT, HEX, 3/8-16 UNC-2B, STEEL	MS51967-8	2,3,6
5	STUD, 3/8 x 2 CPL	SIM OR EQ TO NELSON STUD 101-017-191	2,3,6
6	NUT, JAM, 3/8-16 UNC-2B, STEEL	MS35691-17	2,3,6
7	LUG, SOLDER TYPE, COPPER	MS35436-25	2,3,6
8	WIRE, BARE, COPPER, 1050 STRANDED	MSH KZ(1)6145191-8462	5,6
9	LUG, TERMINAL, COPPER	MS20659-109	5,6
10	SCREW, CAP, HEXAGON HEAD, 1/4-20X1, STEEL	MS90725-8	5,6
11	WASHER, LOCK	MS35333-40	5,6
12	NUT, HEX, 1/4-20, STEEL	MS51967-2	5,6
13	WIRE, INSULATED, TYPE D10	MIL-W-16878/3	3,6
14	CLIP, POWER, 50 AMP, TYPE PC	W-C-440	3
15	SLEEVE, INSULATING, BLACK	W-C-440	3
16	CLAMP, CABLE, NYLON	SIM OR EQ TO HEYMAN H. SMITH 774	7
17	SCREW, PAN HD, 10-32 UNF-2A x 5/8, STEEL	MS35207-264	7,9
18	WASHER, EXT. TOOTH, NO. 10, STEEL	MS35335-32	7
19	NUT, HEX 10-32 UNF -2B, STEEL	MS35650-302	7
20	BUSHING, SHAP, 3/8 ID, NYLON	SIM OR EQ TO HEYMAN MFG. CO. 58-500-6	8


SEE FIGURE 3 FOR NOTES

ELECTRICIAN'S MATE 3 & 2

499

500

Figure 2.—Workbenches grounding.

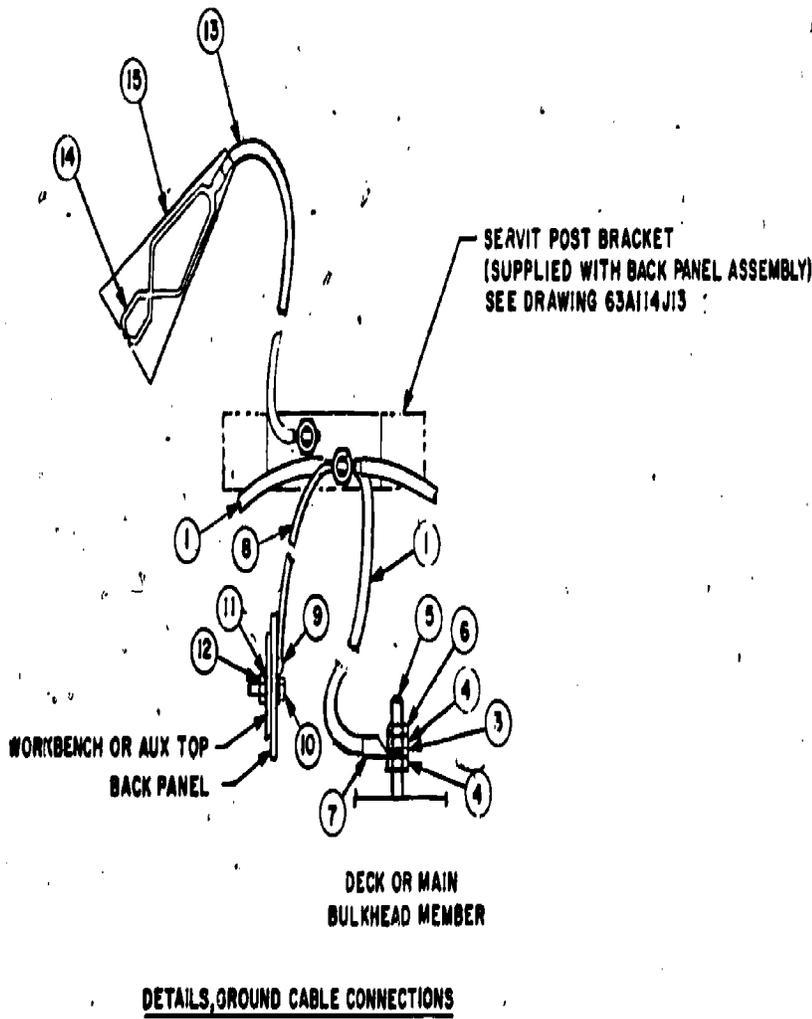

NOTES:

1. THE GROUND BUS SERVING A ROW OF BENCHES SHALL BE A CONTINUOUS (UNSPliced) CABLE NOT TO EXCEED 50 FEET IN LENGTH. THE CABLE SHALL BE ROUTED THROUGH THE LOWER SERVIT POST OF EACH CABINET.
2. THE WORKBENCH NEAREST THE CENTER OF A ROW OF BENCHES SHALL BE GROUNDED BY A BUS WIRE FROM THE LOWER SERVIT POST OF THE BENCH CENTER CABINET TO A GROUNDING STUD. THE GROUNDING STUD SHALL BE WELDED TO THE DECK OF A MAIN BULKHEAD MEMBER.
3. EQUIPMENT GROUNDING LEADS SHALL BE CONNECTED TO THE UPPER SERVIT POST OF EACH SEPARATE CABINET. EACH GROUNDING LEAD SHALL BE 54 INCHES LONG AND SHALL TERMINATE IN A 50 AMP BATTERY CLIP AS SHOWN.
4. AT ASSEMBLY OF BACK PANEL AND TOP SHELF WITH BENCH CABINET (SEE DRAWINGS 63A114J2) THE GROUND WIRE (ITEM 8) SHALL BE ROUTED THROUGH THE 1/2" DIA. HOLE IN THE REAR OF CABINET AND SECURED TO THE 1/4"-20 BOLT ON THE INSIDE OF WINGWAY.
5. AT ASSEMBLY WITH AUXILIARY TABLE (SEE DRAWING 63A114D5-1) THE GROUND WIRE SHALL BE SECURED TO THE 1/4"-20 BOLT AT REAR OF AUXILIARY TABLE.
6. ALL GROUND CONNECTIONS SHALL BE CLEANED BRIGHT METAL-TO-METAL TO INSURE ELECTRICAL CONTINUITY. AFTER ALL SERVIT POST CONNECTIONS ARE MADE THE POSTS AND CONNECTIONS SHALL BE SEALED WITH TWO COATS OF FORMULA 80 VARNISH (TT-V-119) TO PREVENT MOISTURE PENETRATION. AFTER BENCH-TO-GROUND STUD CABLE IS INSTALLED THE WELDING STUD CONNECTION SHALL BE PAINTED SAME AS SURROUNDING STRUCTURE TO PREVENT MOISTURE PENETRATION.
7. POSITION AND INSTALL CABLE CLAMP AT AN APPROPRIATE LOCATION TO REDUCE THE EFFECTS OF VIBRATION ON CABINET-TO-DECK GROUNDING CABLE.
8. DETERMINE APPROPRIATE LOCATION AND DRILL .500 DIA. HOLE FOR INSTALLATION OF SNAP BUSHING.
9. REPLACE EXISTING PANEL SCREW WITH PAN HEAD SCREW (ITEM 12) TO ACCOMMODATE CABLE CLAMP.
10. FOR WORKBENCH CONSTRUCTION DETAILS SEE THE FOLLOWING DRAWINGS:
 - 65E20063 AVIONIC WORKBENCH DECK SUPPORT AND GROUND INSTALLATION DRAWING
 - 63A114J2 CABINET ASSEMBLY
 - 63A114D5 AUXILIARY TABLE ASSEMBLY
 - 68L114J7 CABINET STRUCTURE ASSEMBLY
 - 63A114F12 ELECTRICAL DISTRIBUTION BOX & TERMINAL BOARD ASSEMBLY
 - 63A114J13 BACK PANEL ASSEMBLY
 - 63A114D4 BACK PANEL & TOP SHELF ASSEMBLY



Figure 3.—Workbenches grounding.

A11-7

501

502

  APPENDIX III ELECTRONICS SYMBOLS

<p style="text-align: center;">AMPLIFIER (2) *</p> <p>GENERAL</p>  <p>WITH TWO INPUTS</p>  <p>WITH TWO OUTPUTS</p>  <p>WITH ADJUSTABLE GAIN</p>  <p>WITH ASSOCIATED POWER SUPPLY</p>  <p>WITH ASSOCIATED ATTENUATOR</p>  <p>WITH EXTERNAL FEEDBACK PATH</p>  <p>AMPLIFIER LETTER COMBINATIONS (amplifier-use identification in symbol if required)</p> <p>BDG BRIDGING BST BOOSTER CMP COMPRESSION DC DIRECT CURRENT EXP EXPANSION LIM LIMITING MON MONITORING PGM PROGRAM PRE PRELIMINARY PWR POWER TRQ TORQUE</p>	<p style="text-align: center;">ANTENNA (3)</p> <p>GENERAL</p>  <p>DIPOLE</p>  <p>LOOP</p>  <p>COUNTERPOISE</p>  <p>ARRESTER, LIGHTNING (4)</p> <p>GENERAL</p>  <p>CARBON BLOCK</p>  <p>ELECTROLYTIC OR-ALUMINUM CELL</p>  <p>HORN GAP</p>  <p>PROTECTIVE GAP</p>  <p>SPHERE GAP</p>  <p>VALVE OR FILM ELEMENT</p>  <p>MULTIGAP</p>  <p>ATTENUATOR, FIXED (see PAD) (57) (some symbol as variable attenuator, without variability)</p> 	<p style="text-align: center;">ATTENUATOR, VARIABLE (5)</p> <p>BALANCED</p>  <p>UNBALANCED</p>  <p>AUDIBLE SIGNALING DEVICE (6)</p> <p>BELL, ELECTRICAL; RINGER, TELEPHONE</p>  <p>BUZZER</p>  <p>HORN, ELECTRICAL; LOUD-SPEAKER; SIREN; UNDER-WATER SOUND HYDROPHONE, PROJECTOR OR TRANSDUCER</p>  <p>HORN, LETTER COMBINATIONS (if required)</p> <p>*HN HORN, ELECTRICAL *HW HOWLER *LS LOUDSPEAKER *SN SIREN †EM ELECTROMAGNETIC WITH MOVING COIL †EMN ELECTROMAGNETIC WITH MOVING COIL AND NEUTRALIZING WINDING †MG MAGNETIC ARMATURE †PM PERMANENT MAGNET WITH MOVING COIL</p> <p>(identification replaces (*) asterisk and (†) dagger)</p> <p>SOUNDER, TELEGRAPH</p>  <p>BATTERY (7)</p> <p>GENERALIZED DIRECT CURRENT SOURCE; ONE CELL</p> 	<p style="text-align: center;">MULTICELL</p> <p>CAPACITOR (8)</p> <p>GENERAL</p>  <p>POLARIZED</p>  <p>A DJUSTABLE OR VARIABLE</p>  <p>CONTINUOUSLY ADJUSTABLE OR VARIABLE DIFFERENTIAL</p>  <p>PHASE-SHIFTER</p>  <p>SPLIT-STATOR</p>  <p>FEED-THROUGH</p>  <p>CELL, PHOTSENSITIVE (Semiconductor) (9)</p>  <p>ASYMMETRICAL PHOTOCONDUCTIVE TRANSDUCER</p>  <p>SYMMETRICAL PHOTOCONDUCTIVE TRANSDUCER</p> 
--	---	---	---

* NUMBER IN PARENTHESES INDICATES LOCATION OF SYMBOL IN MIL-STD PUBLICATION

Figure AIII-1.—Electronics symbols.

13.5(170)A.

ELECTRICIAN'S MATE 3 & 2

 
 
 
 
 
 
 
 
 
 
 
 
 
 
<p>PHOTOVOLTAIC TRANSDUCER; SOLAR CELL</p>  <p>CIRCUIT BREAKER (11) GENERAL</p>  <p>WITH MAGNETIC OVERLOAD</p>  <p>DRAWOUT TYPE</p>  <p>CIRCUIT ELEMENT (12) GENERAL</p>  <p>CIRCUIT ELEMENT LETTER COMBINATIONS (replaces "*" asterisk)</p> <table style="font-size: small; width: 100%;"> <tr><td>EQ</td><td>EQUALIZER</td></tr> <tr><td>FAX</td><td>FACSIMILE SET</td></tr> <tr><td>FL</td><td>FILTER</td></tr> <tr><td>FL-BE</td><td>FILTER, BAND ELIMINATION</td></tr> <tr><td>FL-BP</td><td>FILTER, BAND PASS</td></tr> <tr><td>FL-HP</td><td>FILTER, HIGH PASS</td></tr> <tr><td>FL-LP</td><td>FILTER, LOW PASS</td></tr> <tr><td>PS</td><td>POWER SUPPLY</td></tr> <tr><td>RU</td><td>RECORDING UNIT</td></tr> <tr><td>RO</td><td>REPRODUCING UNIT</td></tr> <tr><td>DIAL</td><td>TELEPHONE DIAL</td></tr> <tr><td>TEL</td><td>TELEPHONE STATION</td></tr> <tr><td>TPR</td><td>TELEPRINTER</td></tr> <tr><td>TTY</td><td>TELETYPEWRITER</td></tr> </table> <p>ADDITIONAL LETTER COMBINATIONS (symbols preferred)</p> <table style="font-size: small; width: 100%;"> <tr><td>AR</td><td>AMPLIFIER</td></tr> <tr><td>AT</td><td>ATTENUATOR</td></tr> <tr><td>C</td><td>CAPACITOR</td></tr> <tr><td>CB</td><td>CIRCUIT BREAKER</td></tr> <tr><td>HS</td><td>HANDSET</td></tr> <tr><td>I</td><td>INDICATING OR SWITCH BOARD LAMP</td></tr> <tr><td>L</td><td>INDUCTOR</td></tr> <tr><td>J</td><td>JACK</td></tr> <tr><td>LS</td><td>LOUDSPEAKER</td></tr> <tr><td>MIC</td><td>MICROPHONE</td></tr> <tr><td>OSC</td><td>OSCILLATOR</td></tr> <tr><td>PAD</td><td>PAD</td></tr> <tr><td>P</td><td>PLUG</td></tr> <tr><td>HT</td><td>RECEIVER, HEADSET</td></tr> <tr><td>K</td><td>RELAY</td></tr> <tr><td>R</td><td>RESISTOR</td></tr> <tr><td>S</td><td>SWITCH OR KEY SWITCH</td></tr> <tr><td>T</td><td>TRANSFORMER</td></tr> <tr><td>WR</td><td>WALL RECEPTACLE</td></tr> </table>	EQ	EQUALIZER	FAX	FACSIMILE SET	FL	FILTER	FL-BE	FILTER, BAND ELIMINATION	FL-BP	FILTER, BAND PASS	FL-HP	FILTER, HIGH PASS	FL-LP	FILTER, LOW PASS	PS	POWER SUPPLY	RU	RECORDING UNIT	RO	REPRODUCING UNIT	DIAL	TELEPHONE DIAL	TEL	TELEPHONE STATION	TPR	TELEPRINTER	TTY	TELETYPEWRITER	AR	AMPLIFIER	AT	ATTENUATOR	C	CAPACITOR	CB	CIRCUIT BREAKER	HS	HANDSET	I	INDICATING OR SWITCH BOARD LAMP	L	INDUCTOR	J	JACK	LS	LOUDSPEAKER	MIC	MICROPHONE	OSC	OSCILLATOR	PAD	PAD	P	PLUG	HT	RECEIVER, HEADSET	K	RELAY	R	RESISTOR	S	SWITCH OR KEY SWITCH	T	TRANSFORMER	WR	WALL RECEPTACLE	<p>CLUTCH; BRAKE (14) DISENGAGED WHEN OPERATING MEANS IS DE-ENERGIZED</p>  <p>ENGAGED WHEN OPERATING MEANS IS DE-ENERGIZED</p>  <p>CDIL, REPLAY and OPERATING (15)</p>  <p>SEMICIRCULAR DOT INDICATES INNER END OF WIRING</p>  <p>CONNECTOR (18) ASSEMBLY, MOVABLE OR STATIONARY PORTION; JACK, PLUG, OR RECEPTACLE</p> <p>→ OR ←</p> <p>JACK OR RECEPTACLE</p> <p>← OR →</p> <p>PLUG</p> <p>→ OR ←</p> <p>SEPARABLE CONNECTORS</p> <p>→ OR ←</p> <p>TWO-CONDUCTOR SWITCHBOARD JACK</p>  <p>TWO-CONDUCTOR SWITCHBOARD PLUG</p>  <p>JACKS NORMALLED THROUGH ONE WAY</p>  <p>JACKS NORMALLED THROUGH BOTH WAYS</p>  <p>2-CONDUCTOR NONPOLARIZED, FEMALE CONTACTS</p>  <p>2-CONDUCTOR POLARIZED, MALE CONTACTS</p> 	<p>WAVEGUIDE PLANE*</p> <p>PLAIN, RECTANGULAR</p>  <p>CHDK, RECTANGULAR</p>  <p>ENGAGED 4-CONDUCTOR, THE PLUG HAS 1 MALE AND 3 FEMALE CONTACTS, INDIVIDUAL CONTACT DESIGNATIONS SHOWN</p>  <p>COAXIAL, OUTSIDE CONDUCTOR SHOWN CARRIED THROUGH</p>  <p>COAXIAL, CENTER CONDUCTOR SHOWN CARRIED THROUGH; OUTSIDE CONDUCTOR NOT CARRIED THROUGH</p>  <p>MATED CHECK PLUGS IN RECTANGULAR WAVEGUIDE</p>  <p>COUNTER, ELECTROMAGNETIC; MESSAGE REGISTER (26)</p> <p>GENERAL</p>  <p>WITH A MAKE CONTACT</p>  <p>COUPLER, DIRECTIONAL (27) (common coaxial/waveguide usage)</p>  <p>(common coaxial/waveguide usage)</p>  <p>E-PLANE APERTURE-COUPLING, 30-DECIBEL TRANSMISSION LOSS</p> 	<p>COUPLING (28) BY LOOP FROM COAXIAL TO CIRCULAR WAVEGUIDE, DIRECT-CURRENT GROUNDS CONNECTED</p>  <p>CRYSTAL, PIEZO-ELECTRIC (32)</p>  <p>DELAY LINE (31) GENERAL</p>  <p>TAPPED DELAY</p>  <p>BIFURCATED SLOW-WAVE STRUCTURE (commonly used in traveling-wave tubes)</p>  <p>(length of delay indication replaces "*" asterisk)</p> <p>DETECTOR, PRIMARY; MEASURING TRANSDUCER (30) (see HALL GENERATOR and THERMAL CONVERTER)</p>  <p>DISCONTINUITY (33) (common coaxial/waveguide usage)</p> <p>EQUIVALENT SERIES ELEMENT, GENERAL</p>  <p>CAPACITIVE REACTANCE</p>  <p>INDUCTIVE REACTANCE</p>  <p>INDUCTANCE-CAPACITANCE CIRCUIT, INFINITE REACTANCE AT RESONANCE</p> 
EQ	EQUALIZER																																																																				
FAX	FACSIMILE SET																																																																				
FL	FILTER																																																																				
FL-BE	FILTER, BAND ELIMINATION																																																																				
FL-BP	FILTER, BAND PASS																																																																				
FL-HP	FILTER, HIGH PASS																																																																				
FL-LP	FILTER, LOW PASS																																																																				
PS	POWER SUPPLY																																																																				
RU	RECORDING UNIT																																																																				
RO	REPRODUCING UNIT																																																																				
DIAL	TELEPHONE DIAL																																																																				
TEL	TELEPHONE STATION																																																																				
TPR	TELEPRINTER																																																																				
TTY	TELETYPEWRITER																																																																				
AR	AMPLIFIER																																																																				
AT	ATTENUATOR																																																																				
C	CAPACITOR																																																																				
CB	CIRCUIT BREAKER																																																																				
HS	HANDSET																																																																				
I	INDICATING OR SWITCH BOARD LAMP																																																																				
L	INDUCTOR																																																																				
J	JACK																																																																				
LS	LOUDSPEAKER																																																																				
MIC	MICROPHONE																																																																				
OSC	OSCILLATOR																																																																				
PAD	PAD																																																																				
P	PLUG																																																																				
HT	RECEIVER, HEADSET																																																																				
K	RELAY																																																																				
R	RESISTOR																																																																				
S	SWITCH OR KEY SWITCH																																																																				
T	TRANSFORMER																																																																				
WR	WALL RECEPTACLE																																																																				

Figure AIII-1.—Electronics symbols—Continued.

13.5(179)B

Appendix III—ELECTRONICS SYMBOLS

 
 
 
 
 
 
 
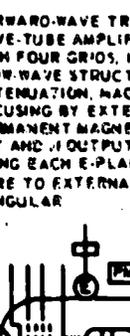
 
 
<p>INDUCTANCE-CAPACITANCE CIRCUIT, ZERO REACTANCE AT RESONANCE</p>  <p>RESISTANCE</p>  <p>EQUIVALENT SHUNT ELEMENT, GENERAL</p>  <p>CAPACITIVE SUSCEPTANCE</p>  <p>CONDUCTANCE</p>  <p>INDUCTIVE SUSCEPTANCE</p>  <p>INDUCTANCE-CAPACITANCE CIRCUIT, INFINITE SUSCEPTANCE AT RESONANCE</p>  <p>INDUCTANCE-CAPACITANCE CIRCUIT, ZERO SUSCEPTANCE AT RESONANCE</p>  <p>ELECTRON TUBE (34)</p> <p>DIODE</p>  <p>PENTODE ENVELOPE CONNECTED TO BASE TERMINAL</p>  	<p>TWIN TRIODE, EQUIPOTENTIAL CATHODE</p>  <p>TYPICAL WIRING FIGURE TO SHOW TUBE SYMBOLS PLACED IN ANY CONVENIENT POSITION</p>  <p>RECTIFIER, VOLTAGE REGULATOR (1000 LAMP, GLOW)</p>  <p>PHOTOTUBE, SINGLE AND MULTIPLIER</p>   <p>CATHODE RAY TUBE, ELECTROSTATIC AND MAGNETIC DEFLECTION</p>   <p>MERCURY POOL TUBE, IGNITOR AND CONTROL GRID (1000 RECTIFIER)</p>  <p>RESONANT MAGNETRON, COAXIAL OUTPUT AND PERMANENT MAGNET</p>  	<p>REFLECTORLYSTON, INTEGRAL CAVITY, APERTURE COUPLED</p>  <p>TRANSMIT-RECEIVE (TR) TUBE GAS FILLED, TUNABLE INTEGRAL CAVITY, APERTURE COUPLED, WITH STARTER</p>  <p>TRAVELING-WAVE TUBE (typical)</p>  <p>FORWARD-WAVE TRAVELING-WAVE-TUBE AMPLIFIER SHOWN WITH FOUR GRIDS, HAVING SLOW-WAVE STRUCTURE WITH ATTENUATION, MAGNETIC FOCUSING BY EXTERNAL PERMANENT MAGNET, INPUT AND OUTPUT COUPLING EACH E-PLANE APERTURE TO EXTERNAL RECTANGULAR</p>  <p>FERRITE DEVICES (100)</p>  <p>FIELD POLARIZATION ROTATOR</p>  <p>FIELD POLARIZATION AMPLITUDE MODULATOR</p>  <p>FUSE (36)</p>  <p>HIGH VOLTAGE PRIMARY CUT. OUT. ORY</p>  	<p>HIGH-VOLTAGE PRIMARY CUT OUT, OIL</p>  <p>GOVERNOR (contact-making) (37)</p>  <p>CONTACTS SHOWN HERE AS CLOSED</p>  <p>HALL GENERATOR (39)</p>  <p>HANDSET (40)</p>  <p>GENERAL</p>  <p>OPERATOR'S SET WITH PUSH-TO TALK SWITCH</p>  <p>HYBRID (41)</p>  <p>GENERAL</p>  <p>JUNCTION (common coaxial/waveguide usage)</p>  <p>CIRCULAR</p>  <p>(E, H or HE transverse field indicators replace (*) asterisk)</p>  <p>RECTANGULAR WAVEGUIDE AND COAXIAL COUPLING</p>  <p>INDUCTOR (42)</p>  <p>GENERAL</p>
---	---	--	--

Figure AIII-1. Electronics symbols—Continued.

13.5(179)C

AIII-3

505*

ELECTRICIAN'S MATE 3 & 2

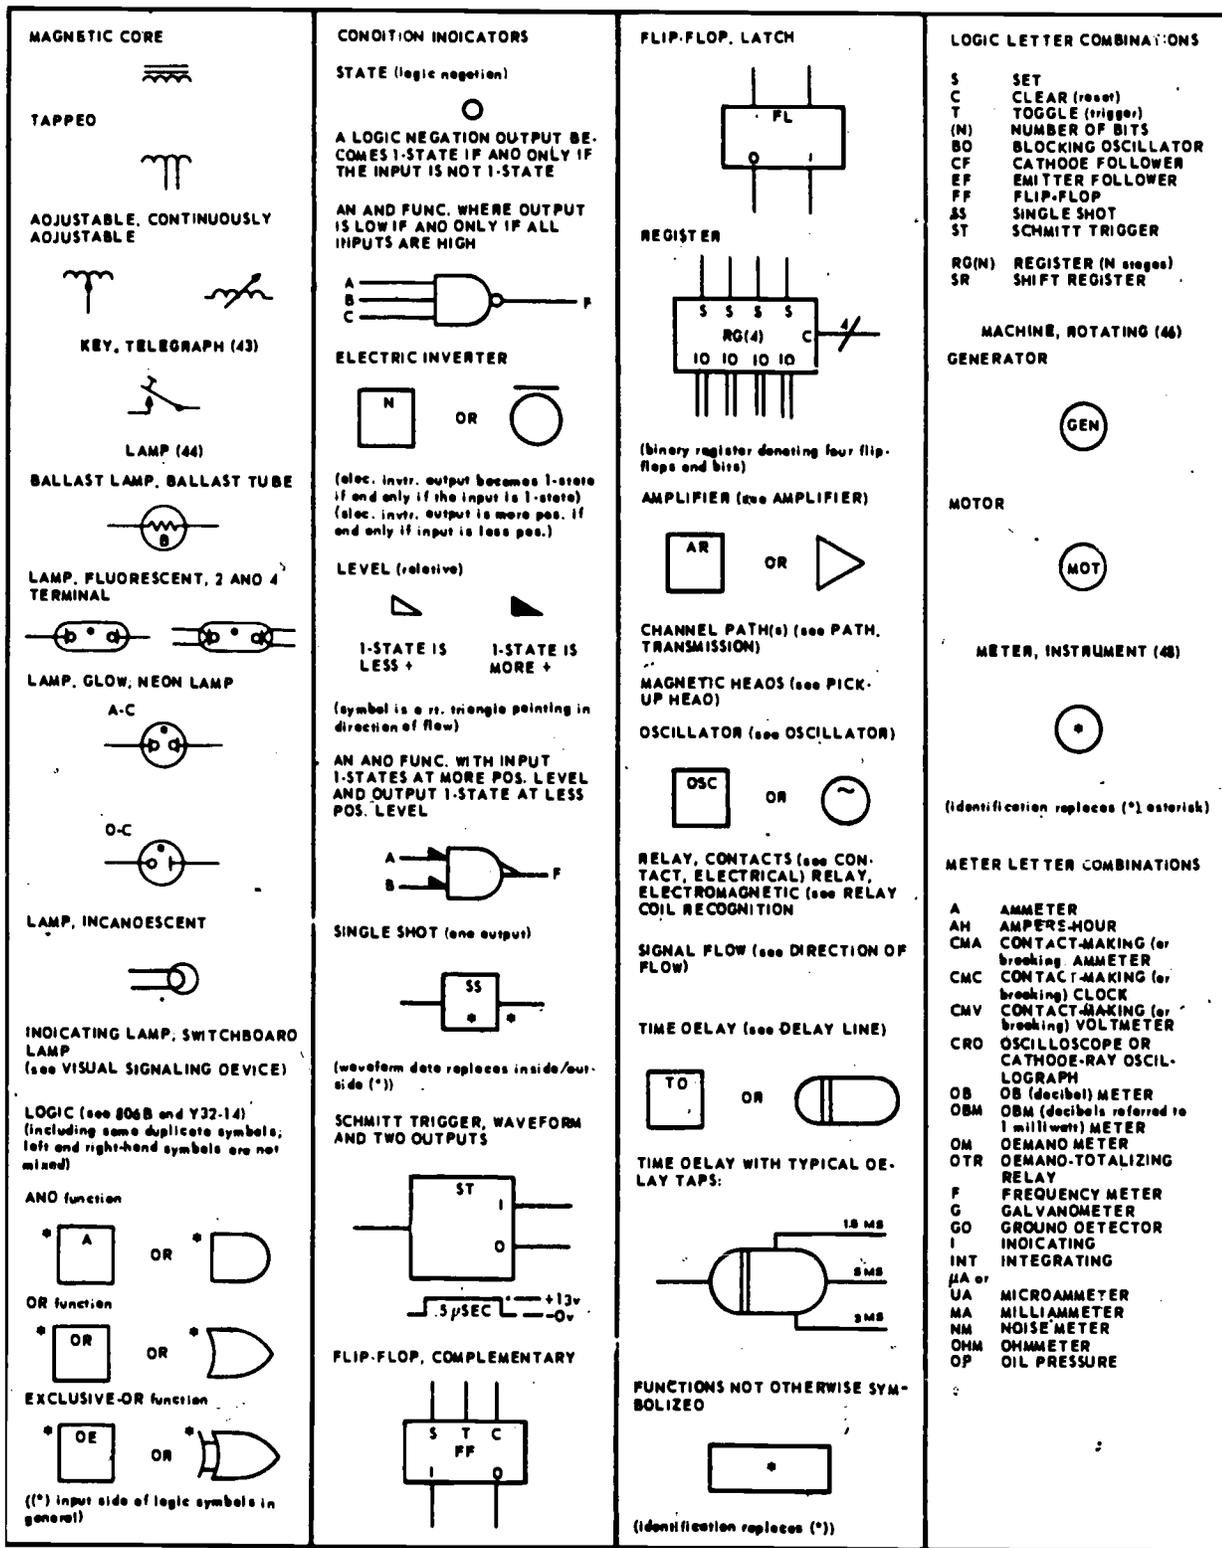


Figure AIII-1.—Electronics symbols—Continued.

13.5(179)D

AIII-4

506

Appendix III—ELECTRONICS SYMBOLS

 
 
 
 
 
 
 
 
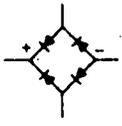
 
 
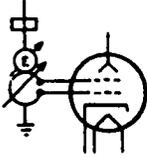
 
 
 
 
 
 
 
<p>MODE TRANSDUCER (53) (common coaxial/waveguide usage)</p> <p>TRANSDUCER FROM RECTANGULAR WAVEGUIDE TO COAXIAL WITH MODE SUPPRESSION, DIRECT-CURRENT GROUNDS CONNECTED</p>  <p>MOTION, MECHANICAL (54)</p> <p>ROTATION APPLIED TO A RESISTOR</p>  <p>(identification replaces (*) asterisk)</p> <p>NUCLEAR-RADIATION DETECTOR, GAS FILLED; IONIZATION CHAMBER; PROPORTIONAL COUNTER TUBE; GEIGER-MULLER COUNTER TUBE (50) (see RADIATION-SENSITIVITY INDICATOR)</p>  <p>PATH, TRANSMISSION (58)</p> <p>CABLE; 2-CONDUCTOR, SHIELD GROUNDING AND 3-CONDUCTOR SHIELDED</p>  <p>PICKUP HEAD (61)</p> <p>GENERAL</p>  <p>WRITING; RECORDING</p>  <p>READING; PLAYBACK</p>  <p>ERASING</p>  <p>WRITING, READING, AND ERASING</p> 	<p>STEREO</p>  <p>RECTIFIER (65)</p> <p>SEMICONDUCTOR DIODE; METALLIC RECTIFIER; ELECTROLYTIC RECTIFIER; ASYMMETRICAL VARISTOR</p>  <p>MERCURY-POL TUBE POWER RECTIFIER</p>  <p>FULLWAVE BRIDGE-TYPE</p>  <p>RESISTOR (68)</p> <p>GENERAL</p>  <p>OR</p>  <p>TAPPED</p>  <p>OR</p>  <p>HEATING</p>  <p>OR</p>  <p>SYMMETRICAL VARISTOR RESISTOR, VOLTAGE SENSITIVE (silicon carbide, etc.)</p>  <p>OR</p>  <p>OR</p>  <p>(identification marks replace (*) asterisk)</p> <p>WITH ADJUSTABLE CONTACT</p>  <p>OR</p>  <p>ADJUSTABLE OR CONTINUOUSLY ADJUSTABLE (variable)</p>  <p>OR</p>  <p>(identification replaces (*) asterisk)</p>	<p>RESONATOR, TUNED CAVITY (71) (common coaxial/waveguide usage)</p> <p>RESONATOR WITH MODE SUPPRESSION COUPLED BY AN E-PLANE APERTURE TO A GUIDED TRANSMISSION PATH AND BY A LOOP TO A COAXIAL PATH</p>  <p>TUNABLE RESONATOR WITH DIRECT-CURRENT GROUND CONNECTED TO AN ELECTRON DEVICE AND ADJUSTABLY COUPLED BY AN E-PLANE APERTURE TO A RECTANGULAR WAVEGUIDE</p>  <p>ROTARY JOINT, RF (COUPLER) (72)</p> <p>GENERAL; WITH RECTANGULAR WAVEGUIDE</p>  <p>(transmission path recognition symbol replaces (*) asterisk)</p> <p>COAXIAL TYPE IN RECTANGULAR WAVEGUIDE</p>  <p>CIRCULAR WAVEGUIDE TYPE IN RECTANGULAR WAVEGUIDE</p>  <p>SEMICONDUCTOR DEVICE (73) (Two Terminal, diode)</p>  <p>SEMICONDUCTOR DIODE; RECTIFIER</p>  <p>OR</p>  <p>CAPACITIVE DIODE (also Varicap, Varactor, resonance diode, parametric diode)</p>  <p>OR</p> 	<p>BREAKDOWN DIODE, UNIDIRECTIONAL (also backward diode, avalanche diode, voltage regulator diode, Zener diode, voltage reference diode)</p>  <p>OR</p>  <p>BREAKDOWN DIODE, BIDIRECTIONAL AND BACKWARD DIODE (also bipolar voltage limiter)</p>  <p>OR</p>  <p>TUNNEL DIODE (also Esaki diode)</p>  <p>OR</p>  <p>TEMPERATURE-DEPENDENT DIODE</p>  <p>OR</p>  <p>PHOTO DIODE (also solar cell)</p>  <p>OR</p>  <p>SEMICONDUCTOR DIODE, PNPN SWITCH (also Shockley diode, four-layer diode and SCR)</p>  <p>OR</p>  <p>(MultiTerminal, transistor, etc.)</p>  <p>OR</p>  <p>PNP TRANSISTOR</p>  <p>NPN TRANSISTOR</p>  <p>UNIUNION TRANSISTOR, N-TYPE BASE</p> 
--	--	--	--

Figure AIII-1.—Electronics symbols—Continued.

13.5(179)E

ELECTRICIAN'S MATE 3 & 2


 
 
 
 
 
 
 

 
 
 
 
 
 
 
<p>UNIUNCTION TRANSISTOR, P-TYPE BASE</p>  <p>FIELD-EFFECT TRANSISTOR, N-TYPE BASE</p>  <p>FIELD-EFFECT TRANSISTOR, P-TYPE BASE</p>  <p>SEMICONDUCTOR TRIODE, PNP-TYPE SWITCH</p>  <p>SEMICONDUCTOR TRIDDE, NPN-TYPE SWITCH</p>  <p>NPN TRANSISTOR, TRANSVERSE-BIASED BASE</p>  <p>PNIP TRANSISTOR, OHMIC CONNECTION TO THE INTRINSIC REGION</p>  <p>NPN TRANSISTOR, OHMIC CONNECTION TO THE INTRINSIC REGION</p>  <p>PNIN TRANSISTOR, OHMIC CONNECTION TO THE INTRINSIC REGION</p>  <p>NPIP TRANSISTOR, OHMIC CONNECTION TO THE INTRINSIC REGION</p> 	<p>SQUIB (75)</p> <p>EXPLOSIVE</p>  <p>IGNITER</p>  <p>SENSING LINK; FUSIBLE LINK OPERATED</p>  <p>SWITCH (76)</p> <p>PUSH BUTTON, CIRCUIT CLOSING (make)</p>  <p>PUSH BUTTON, CIRCUIT OPENING (break)</p>  <p>NONLOCKING, MOMENTARY CIRCUIT CLOSING (make)</p>  <p>NONLOCKING; MOMENTARY CIRCUIT OPENING (break)</p>  <p>TRANSFER</p>  <p>LOCKING, CIRCUIT CLOSING (make)</p>  <p>LOCKING, CIRCUIT OPENING (break)</p>  <p>TRANSFER, 3-POSITION</p>  <p>WAFER</p> <p>(example shown: 3-pole 3-circuit with 2 nonshorting and 1 shorting moving contacts)</p> 	<p>SAFETY INTERLOCK, CIRCUIT OPENING AND CLOSING</p>  <p>2-POLE FIELD-DISCHARGE KNIFE, WITH TERMINALS AND DISCHARGE RESISTOR</p>  <p>(identification replaces (*) asterisk)</p> <p>SYNCHRO (78)</p>  <p>SYNCHRO LETTER COMBINATIONS</p> <p>CDX CONTROL-DIFFERENTIAL TRANSMITTER CT CONTROL TRANSFORMER CX CONTROL TRANSMITTER TOR TORQUE-DIFFERENTIAL RECEIVER TDX TORQUE-DIFFERENTIAL TRANSMITTER TR TORQUE RECEIVER TX TORQUE TRANSMITTER RS RESOLVER B OUTER WINDING ROTATABLE IN BEARINGS</p> <p>THERMAL ELEMENT (83) ACTUATING DEVICE</p>  <p>THERMAL CUTOUT; FLASHER</p>  <p>THERMAL RELAY</p>  <p>THERMOSTAT (operates on rising temperature), CONTACT</p>  <p>THERMOSTAT, MAKE CONTACT</p>  <p>THERMOSTAT, INTEGRAL HEATER AND TRANSFER CONTACTS</p> 	<p>THERMISTOR; THERMAL RESISTOR (84)</p>  <p>WITH INTEGRAL HEATER</p>  <p>THERMOCOUPLE (85) TEMPERATURE-MEASURING</p>  <p>CURRENT-MEASURING, INTEGRAL HEATER CONNECTED</p>  <p>HEATER</p> <p>CURRENT-MEASURING, INTEGRAL HEATER INSULATED</p>  <p>HEATER</p> <p>TEMPERATURE-MEASURING, SEMICONDUCTOR</p>  <p>CURRENT-MEASURING, SEMICONDUCTOR</p>  <p>TRANSFORMER (86)</p> <p>GENERAL</p>  <p>MAGNETIC-CORE</p>  <p>ONE WINDING WITH ADJUSTABLE INDUCTANCE</p>  <p>SEPARATELY ADJUSTABLE INDUCTANCE</p>  <p>ADJUSTABLE MUTUAL INDUCTOR, CONSTANT-CURRENT</p> 
--	---	---	--

Figure AIII-1.—Electronics symbols—Continued.

13.5(179)F

Appendix III—ELECTRONICS SYMBOLS

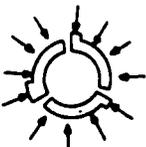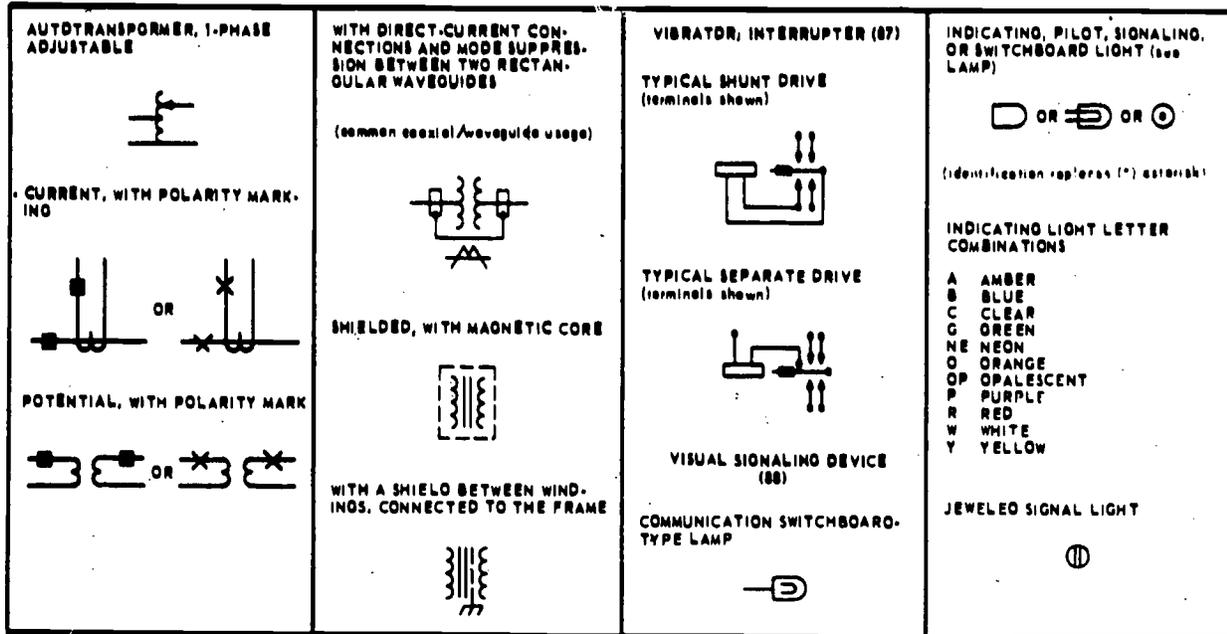

13.5(179)G

Figure AIII-1.—Electronics symbols—Continued.

INDEX

A

- A-c generator, 15-17, 15-18
- Acid burns, treatment of, 15-3
- A-c power distribution systems, 5-1 to 5-67
 - a-c generators, 5-1 to 5-16
 - casualty power distribution system, 5-57 to 5-60
 - closely regulated power supplies, 5-46 to 5-52
 - emergency power distribution, 5-35 to 5-40
 - no-break power supply system, 5-52
 - on a DLG, 5-40 to 5-46
 - operation of electric plants, 5-53 to 5-57
 - preventive maintenance, 5-60 to 5-67
 - ship service power distribution, 5-1
 - transformers, 5-17 to 5-35
- Across-line controllers, magnetic, 7-6 to 7-8
- Aerosol dispensors, safety precautions, 2-6
- Air coolers, motor and generator, 8-44, 8-45
- Amplifiers, 14-9
- Anchor windlass, destroyer, 15-24 to 15-27
- AND circuits, 14-3
- Antifriction bearings, 8-2 to 8-4
- Application of logic circuitry, 14-9 to 14-11
 - introduction to logic diagrams, 14-10
 - signal tracing, 14-10, 14-11
- Arcing contacts, 7-13, 7-14
- Armature testing and repairing, 8-19 to 8-32
 - armature rewinding, 8-25, 8-26
 - handtools, 8-26 to 8-32
 - test procedures, 8-24, 8-25
 - types of armature windings, 8-21 to 8-24
- Artificial respiration, 2-22
- Audio signal generator, 3-24, 3-25
- Automatic Bus Transfer Switches, 9-2 to 9-4
- Automatic degaussing systems, 10-14 to 10-19

- Autotransformer controllers, 7-8
- Auxiliaries, electrical, 15-1 to 15-57

B

- Base lead current, 13-26, 13-27
- Basic electronic components and circuits, 13-1 to 13-37
 - base lead current, 13-26, 13-27
 - capacitor testing, 13-3 to 13-6
 - circuit testing, 13-6, 13-7
 - coupling methods, 13-23 to 13-26
 - diodes, 13-9, 13-10
 - electron tube triodes, 13-19 to 13-21
 - gas-filled tubes, 13-11 to 13-16
 - heating the cathode, 13-10
 - identification of chassis wiring, 13-8, 13-9
 - methods of biasing, 13-22, 13-23
 - multielement electron tubes, 13-21, 13-22
 - physical characteristics of electron-tube materials, 13-10
 - resistor testing, 13-1 to 13-3
 - single source biasing, 13-27 to 13-29
 - testing, 13-33 to 13-37
 - testing electron tubes, 13-29 to 13-33
 - transformer testing, 13-7, 13-8
 - transistors, 13-16 to 13-19
 - types of cathodes, 13-10
 - types of emission, 13-11
- Balanced potentiometer circuit, 3-25 to 3-31
 - digital voltmeter, 3-26
 - feedback voltage linearity test, 3-30
 - front panel controls and indicators, 3-26 to 3-28
 - gain setting, 3-28
 - hum control adjustment, 3-28 to 3-30
 - power requirements, 3-26
 - range unit adjustment, 3-30, 3-31
 - standardization adjustment, 3-30

ELECTRICIAN'S MATE 3 & 2

- Battery charging systems, 15-15 to 15-18
 - a-c generator, 15-17, 15-18
 - current and voltage regulator (heavy duty), 15-15 to 15-17
 - d-c generator, 15-15
 - Battery, storage, 15-1 to 15-6
 - Bearings, 8-2 to 8-7
 - antifriction, 8-2 to 8-4
 - friction, 8-6, 8-7
 - grease-lubricated ball bearings, 8-5, 8-6
 - oil-lubricated ball bearings, 8-4, 8-5
 - Biasing, methods of, 13-22, 13-23
 - cathode bias, 13-22
 - grid leak bias, 13-23
 - Bibliography for Advancement Study, NAVEDTRA 10052 (current series), 1-3
 - Blinker lights, 9-20
 - Blowout coils, 7-13
 - Blueprints, cable, 4-10
 - Brakes, electric, 7-14 to 7-17
 - Bridge console, 12-10 to 12-12
 - Brushes, 8-7 to 8-11
 - care, 8-9, 8-10
 - correct brush type, 8-9
 - seating, 8-10, 8-11
 - Brushless generators, 8-36
 - Burns, 2-22 to 2-25
 - classification of, 2-24
 - emergency treatment, 2-24, 2-25
- C
- Cables, electrical, 4-1 to 4-29
 - Capacitor testing, 13-3 to 13-6
 - color coding, 13-5, 13-6
 - fixed capacitors, 13-3 to 13-5
 - Casualty power distribution system, 5-57 to 5-60
 - damage control charts, 5-60
 - inspection and maintenance, 5-60
 - rigging casualty power, 5-58, 5-59
 - unrigging casualty power, 5-59, 5-60
 - Cardiac arrest, 2-22
 - Cardiac massage, closed chest, 2-22
 - Casualty power, 5-44
 - Casualty power cable, 4-18 to 4-21
 - Cathode bias, 13-22
 - Cathode-ray oscilloscope, 3-13 to 3-23
 - Cathode-ray tubes, 2-7
 - Cathodes, types of, 13-10
 - CAUTION tag, 2-9
 - Cement splicing, 16-6
 - Central operations systems, 12-1 to 12-21
 - general description, 12-1 to 12-21
 - bridge console, 12-10 to 12-12
 - data scanners, 12-14 to 12-19
 - engineroom console, 12-2 to 12-10
 - power supplies, 12-21
 - sensors, 12-12 to 12-14
 - throttle control, 12-19 to 12-21
 - Charging systems, battery, 15-15 to 15-18
 - Chassis wiring, identification of, 13-8, 13-9
 - Checking motor and generator speeds after rewinding, 8-34
 - Circuit breakers, 4-38 to 4-49
 - ALB, 4-43
 - AQB, 4-39, 4-40
 - AQB-A250, 4-40 to 4-42
 - AQB-LF250, 4-42, 4-43
 - maintenance, 4-47 to 4-49
 - NLB, 4-43
 - NQB-A250, 4-43
 - selective tripping, 4-43 to 4-47
 - Circuit testing, 13-6, 13-7
 - Classification codes, Navy enlisted, 1-2
 - Cleaning motors and generators, 8-1, 8-2
 - Cleaning solvents, safety precautions, 2-6, 2-7
 - Closed chest cardiac massage, 2-22
 - Closely regulated power supplies, 5-46 to 5-52
 - static converter, 5-50 to 5-52
 - 30-kW motor generator set, 5-46 to 5-50
 - Coils, degaussing, 10-5 to 10-7
 - F and Q coils, 10-6
 - L coil, 10-6, 10-7
 - M coil, 10-6
 - Color codes, resistor, 13-2
 - Color coding, capacitor, 13-5, 13-6
 - Commutators and collector rings, 8-11 to 8-15
 - restoring the commutator film, 8-14
 - truing the commutator, 8-12 to 8-14
 - undercutting mica, 8-15
 - Concepts of logic, 14-1
 - Conductor ends, 4-13
 - Conductor identification, 4-11
 - Connection and through boxes, 10-7, 10-8
 - Construction, film, 16-3
 - Contactors, d-c, 7-12, 7-13
 - Control devices, 4-29 to 4-35
 - Control equipment, propulsion, 11-3 to 11-5
 - Controllers, motor, 7-1 to 7-21

INDEX

Cords and plugs, 4-17, 4-18
Corrective maintenance, 5-63 to 5-67
Coupling methods, 13-23 to 13-26
 direct coupling, 13-25, 13-26
 impedance coupling, 13-24
 RC coupling, 13-23, 13-24
 transformer coupling, 13-24, 13-25
Cross-plant operation, 5-53
Current and voltage regulator (heavy duty),
 15-15 to 15-17

D

Damage control charts, 5-60
DANGER tag, 2-9 to 2-15
 leakage currents, 2-14, 2-15
 live circuits, 2-13
 rubber gloves, 2-13, 2-14
Darken ship equipment, 9-27, 9-28
Data scanner, 12-14 to 12-19
D-c controllers, 7-8 to 7-14
 arcing contacts, 7-13, 7-14
 blowout coils, 7-13
 d-c contactor, 7-12, 7-13
 one-stage acceleration, 7-10 to 7-12
 reversing, 7-11, 7-12
 speed control, 7-11
D-c generator, 15-15
D-c power distribution systems, 6-1 to 6-7
 operation of d-c generators, 6-5 to 6-7
 parallel operational difficulties,
 6-5 to 6-7
 ship service distribution system, 6-1 to
 6-5
 120-volt, 2-wire system, 6-4
 120/240-volt, 3-wire system, 6-4, 6-5
 types of drive, 6-5
D-c propulsion, 11-1 to 11-10
 control equipment, 11-3 to 11-5
 exciters, 11-2
 generators, 11-2
 motor, 11-2, 11-3
 operation, 11-5 to 11-10
Deck risers, 4-8
Deep fat fryers, 15-48 to 15-51

Degaussing, 10-1 to 10-20
 automatic degaussing systems, 10-14 to
 10-19
 earths' magnetic field, 10-1, 10-2
 magnetic ranging, 10-4, 10-5
 maintenance, 10-19, 10-20
 manual degaussing systems, 10-8 to 10-14
 shipboard degaussing installation, 10-5
 to 10-8
 ship's magnetic field, 10-2 to 10-4
Delivery ship, 15-36 to 15-38
Delta connection, the, 5-9 to 5-11
Department of the Navy Information Program
 Regulation, 1-3
Destroyer anchor windlass, 15-24 to 15-27
Diagrams, introduction to logic, 14-10
Digital voltmeter, 3-26
Digital voltmeter, model 481, 3-25
Diodes, 13-9, 13-10
Diode tubes, 13-13, 13-14
Direct coupling, 13-25, 13-26
Disassembly and reassembly of motors and
 generators, 8-18, 8-19
Distribution systems, lighting, 9-1 to 9-4
 Automatic Bus Transfer Switches, 9-2
 to 9-4
Diversified lighting equipment, 9-27 to 9-31
 darken ship equipment, 9-27, 9-28
 special lights, 9-28 to 9-30
 three-way switch circuits, 9-30, 9-31
Drive, types of, 6-5
Drum and gypsy winches, 15-23, 15-24
Dynamic brake, d-c, 7-16, 7-17

E

Earth's magnetic field, 10-1, 10-2
Electrical auxiliaries, 15-1 to 15-57
 battery charging systems, 15-15 to 15-18
 electric fork lift truck, 15-43 to 15-47
 electric galley equipment, 15-47 to 15-51
 electrohydraulic steering gear, 15-18 to
 15-23
 elevators, 15-27 to 15-35
 engine starting system, 15-1 to 15-15
 laundry equipment, 15-51 to 15-57
 small craft circuitry and components, 15-1
 underway replenishment system, 15-35 to
 15-43
 winches, 15-23 to 15-27

ELECTRICIAN'S MATE 3 & 2

- Electrical installations, 4-1 to 4-53
 - control devices, 4-29 to 4-35
 - electrically operated contacts, 4-30
 - float switches, 4-31
 - limit switches, 4-30, 4-31
 - manually operated contacts, 4-29, 4-30
 - pilot control device, 4-34, 4-35
 - pressure and temperature switches, 4-31 to 4-34
 - electrical cables, 4-1 to 4-29
 - casualty power cable, 4-18 to 4-21
 - grounded receptacles, 4-16, 4-17
 - maintenance, 4-24 to 4-29
 - nonflexing service, 4-3
 - plugs and cords, 4-17, 4-18
 - repair and installation, 4-4 to 4-16
 - repeated flexing service, 4-3, 4-4
 - RF coaxial cables, 4-23, 4-24
 - shore power cable, 4-21 to 4-23
 - type and size designations, 4-1 to 4-3
 - protective devices, 4-35 to 4-53
 - circuit breakers, 4-38 to 4-49
 - magnetic overload relay, 4-35, 4-36
 - phase-failure relay, 4-50 to 4-53
 - reverse-current relay, 4-53
 - reverse-power relay, 4-49, 4-50
 - thermal overload relay, 4-37, 4-38
- Electrically operated contacts, 4-30
- Electrical propulsion and controls, 11-1 to 11-14
 - d-c propulsion, 11-1 to 11-10
 - operation, 11-5 to 11-10
 - propulsion control equipment, 11-3 to 11-5
 - propulsion exciters, 11-2
 - propulsion generators, 11-2
 - propulsion motor, 11-2, 11-3
 - legal records, 11-10 to 11-14
 - Engineering Log, 11-14
 - Engineer's Bell Book, 11-10 to 11-14
 - operating records, 11-10
- Electric brakes, 7-14 to 7-17
 - a-c solenoid brake, 7-14, 7-15
 - a-c torque motor brake, 7-15, 7-16
 - d-c dynamic brake, 7-16, 7-17
 - d-c magnetic brake, 7-17
- Electric plants, 5-40 to 5-42
 - emergency, 5-40 to 5-42
 - ship service, 5-40
- Electric plants, operation of, 5-53 to 5-57
 - cross plant operation, 5-53
 - operating records, 5-56
 - operation of a-c generators, 5-53 to 5-56
 - parallel operational difficulties with a-c generators, 5-56, 5-57
 - split plant operation, 5-53
- Electric shock, 2-21, 2-22
 - rescue, 2-21, 2-22
 - resuscitation, 2-22
- Electrohydraulic steering gear, 15-18 to 15-23
 - construction, 15-18 to 15-22
 - operation, 15-22, 15-23
- Electrolyte, mixing, 15-3
- Electronic symbols, AIII-1 to AIII-7
- Electron tubes, testing, 13-29 to 13-33
 - cathode leakage test, 13-31, 13-32
 - filament activity test, 13-32, 13-33
 - gas test, 13-31
 - line voltage adjustment and test, 13-30
 - quality test, 13-33
 - rectifier test, 13-33
 - short circuit and noise test, 13-30, 13-31
- Electron tube triodes, 13-19 to 13-21
- Elevators, 15-27 to 15-35
 - electric (electromechanical), 15-27 to 15-30
 - electrohydraulic, 15-30, 15-31
 - electronic controlled, 15-31 to 15-35
- Emergency power distribution, 5-35 to 5-40
 - automatic operation, 5-38, 5-39
 - emergency switchboards, 5-35 to 5-37
 - feedback operation, 5-40
 - interconnections, 5-37, 5-38
 - retransfer to ship's service from emergency, 5-40
 - test operation, 5-40
- Emergency cloth/paper and steel wool, 2-5
- Emission, types of, 13-11
 - secondary, 13-11
 - thermionic, 13-11
- Isolating cables, 4-11 to 4-13
- Engineering Log, 11-14
- Engineer's Bell Book, 11-10 to 11-14

INDEX

Engineroom console, 12-2 to 12-10
 auxiliaries section, 12-5
 boiler section, 12-4, 12-5
 data logger section, 12-5 to 12-10
 generator section, 12-3
 propulsion section, 12-3, 12-4
Engine starting system, 15-1 to 15-15
 ignition systems, 15-8 to 15-15
 starting motors, 15-6 to 15-8
 storage battery, 15-1 to 15-6
Exciters, propulsion, 11-2
Exclusive OR circuit, 14-6, 14-7
Exhibition, Transfer, and Inventory Record,
 NAVPERS 1710/12 (Rev 5-75), 16-11

F

Feedback operation, 5-40
Feedback voltage linearity test, 3-30
Film, sound motion picture, 16-3, 16-5 to
 16-11
 construction, 16-3
 handling, 16-7 to 16-11
 makeup, 16-5, 16-6
 splicing, 16-6, 16-7
Film transport system, 16-11 to 16-13
Fires, electrical, 2-8, 2-9
First aid and rescue, 2-21
Fixed capacitors, 13-3 to 13-5
Fixtures, light, 9-11 to 9-13
Flip-flops, 14-7
Float switches, 4-31
Fluorescent lamps, 9-8 to 9-11
Fork lift truck, electric, 15-43 to 15-47
 drive motor and controller, 15-45 to 15-47
 pump motor, 15-45
 steer motor, 15-45
Frequency measurements, 3-11
Friction bearings, 8-6, 8-7
Front panel controls and indicators, 3-26
 to 3-28
Full field protection, 7-5

G

Gain setting, 3-28
Galley equipment, electric, 15-47 to 15-51
 deep fat fryers, 15-48 to 15-51
 maintenance, 15-51
 ovens, 15-48
 ranges, 15-48

Gas diodes, 13-12, 13-13
Gas-filled tubes, 13-11 to 13-16
 conduction in gas tubes, 13-11
 diode tubes, 13-13, 13-14
 gas diodes, 13-12, 13-13
 solid state diodes, 13-14 to 13-16
Gassing, 15-6
Generators, a-c, 5-1 to 5-16
 characteristics, 5-12, 5-13
 frequency, 5-11, 5-12
 generated voltage, 5-12
 measurement of power, 5-11
 parallel operation of a-c generators,
 5-14 to 5-16
 principles of a-c voltage control, 5-14
 rating of, 5-4 to 5-6
 three-phase generators, 5-6 to 5-11
 types of, 5-3, 5-4
 voltage regulation, 5-13
Generators and motors, air coolers, 8-44,
 8-45
Generators, operation of d-c, 6-5 to 6-7
Generators, propulsion, 11-2
Glossary, AI-1 to AI-7
Gloves, rubber, 2-13, 2-14
Glow lamps, 9-11
Grease-lubricated ball bearings, 8-5, 8-6
Grid leak bias, 13-23
Ground detector lamps, 5-32
Grounded receptacles, 4-16, 4-17
Grounding of shock-mounted equipment, 2-4,
 2-5
Ground requirements, safety matting, and
 workbenches, AII-1 to AII-7
Gypsy and drum winches, 15-23, 15-24

H

Handling, film, 16-7 to 16-11
 Exhibition Transfer, and Inventory Record,
 NAVPERS 1710/12 (Rev 5-75), 16-11
 Inspection and Exhibition Booklet, 16-7
 Motion Picture Plan Film Inspection Record,
 NAVPERS 1710/7 (Rev 5-75), 16-8
 NMPX Damage or Loss Report, NAVPERS
 1710/9 (Rev 5-75), 16-8 to 16-11
 Notification of Motion Picture Transfer,
 NAVPERS 1710/1 (5-75), 16-7, 16-8
Handtools, safety precautions, 2-1

ELECTRICIAN'S MATE 3 & 2

Hazards and precautions, electrical, 2-1
Heart massage, 2-22
Heating the cathode, 13-10
High-potential test, 8-32, 8-33
Hum control adjustment, 3-28 to 3-30
Hydrometer, 15-2

I

I_{CO} test, 13-35, 13-36
Identification of chassis wiring, 13-8, 13-9
Ignition systems, 15-8 to 15-15
 air heaters, 15-13 to 15-15
 battery, 15-8
 coil, 15-8 to 15-10
 distributor, 15-10, 15-11
 spark plugs, 15-11, 15-12
 transistor, 15-12, 15-13
Impedance coupling, 13-24
Incandescent lamps, 9-4 to 9-8
Induced magnetization, 10-3, 10-4
Information, sources of, 1-2 to 1-4
 Bibliography for Advancement Study,
 NAVEDTRA 10052 (current series), 1-3
 Department of the Navy Information
 Program Regulation, 1-3
 Naval Education and Training publications,
 1-2, 1-3
 periodicals, 1-4
 rate training manuals, 1-3
 technical manuals, 1-3
INHIBIT, 14-5, 14-6
Inspecting armatures, rotors, and windings,
8-15 to 8-18
 a-c rotors, 8-17
 a-c stator coils, 8-18
 armatures, 8-15 to 8-17
 field coils, 8-17, 8-18
Inspection and Exhibition Booklet, 16-7
Installation and repair, cable, 4-4 to 4-16
Isolated receptacle circuits, 2-16

L

Lacing conductors, 4-13 to 4-16
Lamps, maintenance of, 9-13

Laundry equipment, 15-51 to 15-57
 washer-extractor, 15-51 to 15-57
Leakage currents, 2-14, 2-15
Legal records, 11-10 to 11-14
 Engineering Log, 11-14
 Engineer's Bell Book, 11-10 to 11-14
Level sensors, 12-12
Light fixtures, 9-11 to 9-13
Lighting, shipboard, 2-19, 2-20
Light sound system, 16-13
Light sources, 9-4 to 9-11
 fluorescent lamps, 9-8 to 9-11
 glow lamps, 9-11
 incandescent lamps, 9-4 to 9-8
Light system, 16-13
Limit switches, 4-30, 4-31
Linearity test, feedback voltage, 3-30
Live circuits, 2-13
Logic systems, 14-1 to 14-12
Low voltage protection (LVP), 7-6
Low voltage release (LVR), 7-5

M

Magnetic across-line controllers, 7-6 to 7-8
 reversing, 7-6, 7-7
 speed control, 7-7, 7-8
Magnetic brake, d-c, 7-17
Magnetic field, 10-1 to 10-4
 earth's, 10-1, 10-2
 ship's, 10-2 to 10-4
Magnetic overload relays, 4-35, 4-36, 7-3
Magnetic ranging, 10-4, 10-5
 degaussing folder, 10-5
 ranging procedures, 10-4, 10-5
Maintenance and repair of motors and
generators, 8-1 to 8-45
 armature testing and repairing, 8-19
 to 8-32
 bearings, 8-2 to 8-7
 brushes, 8-7 to 8-11
 brushless generators, 8-36
 checking motor and generator speeds after
 rewinding, 8-34
 cleaning motors and generators, 8-1, 8-2
 commutators and collector rings, 8-11 to
 8-15
 disassembly and reassembly of motors and
 generators, 8-18, 8-19

1-6
515

INDEX

- Maintenance and repair of motors and generators—Continued
 high-potential test, 8-32, 8-33
 inspecting armatures, rotors, and windings, 8-15 to 8-18
 mandatory turn-in repairables, 8-45
 motor and generator air coolers, 8-44, 8-45
 reversing direction of rotation of d-c motors, 8-34
 rewinding field coils, 8-33, 8-34
 setting on neutral, 8-34, 8-35
 single phase motor repair, 8-41 to 8-44
 testing field coil, 8-34
 three phase stator testing and repair, 8-36 to 8-41
- Maintenance of lamps, 9-13
Makeup, film, 18-5, 16-6
Mandatory turn-in repairables, 8-45
Manual degaussing systems, 10-8 to 10-14
 changing coil currents, 10-11 to 10-14
 motor-generator control, 10-8
 polarity, 10-9 to 10-11
 rheostat control, 10-8
 securing, 10-14
- Manually operated contacts, 4-29, 4-30
Markings, cable, 4-10
Master switchers, types of, 7-2
Matting, safety, AII-4, AII-5
MEMORY, 14-8
Mica, undercutting, 8-15
Motion Picture Film Inspection Record, NAVPERS 1710/7 (Rev 5-75), 16-8
Motor and generator air coolers, 8-44, 8-45
Motor controllers, 7-1 to 7-21
 autotransformer, 7-8
 d-c controllers, 7-8 to 7-14
 electric brakes, 7-14 to 7-17
 magnetic across-line controllers, 7-6 to 7-8
 master switches, types of, 7-2
 overload relays, 7-2 to 7-6
 troubleshooting, 7-17 to 7-21
 types of, 7-1, 7-2
- Motor-generator control, 10-8
Motor, propulsion, 11-2, 11-3
Motor repair, single phase, 8-41 to 8-44
Multielement electron tubes, 13-21, 13-22
 pentodes, 13-21, 13-22
 tetrodes, 13-21
- Multimeters, 3-4 to 3-11
 Multimeter AN/PSM-4 (series), 3-5 to 3-9
 Multimeter AN/USM-116, 3-9 to 3-11
Multivibrator, 14-7
- N
- NAND circuits, 14-4
Naval Education and Training publications, 1-2, 1-3
Navigation and signal lights, 9-13 to 9-27
Neutral, setting on, 8-34, 8-35
NMPX Damage or Loss Report, NAVPERS 1710/9 (Rev 5-75), 16-8 to 16-11
No-break power supply system, 5-52
Nonflexing service cable, 4-3
NOR circuit, 14-5
NOT circuit, 14-3
Notification of Motion Picture Transfer, NAVPERS 1710/1 (5-75), 16-7, 16-8
- O
- Oil-lubricated ball bearings, 8-4, 8-5
One-stage acceleration, 7-10 to 7-12
Operating records, 11-10
Operations systems, central, 12-1 to 12-21
OR circuits, 14-3
Ovens, 15-48
Overload relays, 7-2 to 7-6
 full field protection, 7-5
 low voltage protection (LVP), 7-6
 low voltage release (LVR), 7-5
 magnetic, 7-3
 overload relays-emergency run, 7-4
 resets, 7-3, 7-4
 short circuit protection, 7-4, 7-5
 thermal, 7-2, 7-3
- P
- Paints and varnishes, safety precautions, 2-7, 2-8
Parallel operational difficulties, 6-5 to 6-7

ELECTRICIAN'S MATE 3 & 2

Parallel operation of a-c generators, 5-14 to 5-16
Pentodes, 13-21, 13-22
Periodicals, 1-4
Permanent magnetization, 10-2, 10-3
Phase-failure relay, 4-50 to 4-53
Phase sequence, transformers, 5-34
Photographic sound recording, 16-3 to 16-5
Physical characteristics of electron-tube materials, 13-10
Pilot control device, 4-34, 4-35
Planned Maintenance System, purposes, benefits, and limitations of, 1-4, 1-5
Plugs and cords, 4-17, 4-18
Polarity, 10-9 to 10-11
Polarity marking of power transformers, 5-28, 5-29
Polarity of logic, 14-1
Polyphase stator troubles, 8-40, 8-41
Portable electric power tools, safety precautions, 2-1 to 2-9
 aerosol dispensers, 2-6
 cathode-ray tubes, 2-7
 cleaning solvents, 2-6, 2-7
 electrical fires, 2-8, 2-9
 electric soldering irons, 2-5, 2-6
 grounding of shock-mounted equipment, 2-4, 2-5
 paints and varnishes, 2-7, 2-8
 radioactive electron tubes, 2-7
 safety shorting probe, 2-5
 steel wool and emery cloth/paper, 2-5
Power distribution on a DLG, 5-40 to 5-46
 casualty power, 5-44
 emergency electric plants, 5-40 to 5-42
 400-hertz power distribution, 5-44 to 5-46
 ship service electric plants, 5-40
 shore power connections, 5-44
 system operation, 5-42 to 5-44
Power distribution systems, d-c, 6-1 to 6-7
 operation of d-c generators, 6-5 to 6-7
 ship service distribution systems, 6-1 to 6-7
Power supplies, 12-21
Pressure and temperature switches, 4-31 to 4-34
Pressure sensors, 12-12
Preventive maintenance, 5-60 to 5-67
 corrective maintenance, 5-63 to 5-67
 generators, 5-61
 switchboards, 5-61 to 5-63

Projection, sound motion picture, 16-2 to 16-11
 film construction, 16-3
 film handling, 16-7 to 16-11
 film makeup, 16-5, 16-6
 film splicing, 16-6, 16-7
 photographic sound recording, 16-3 to 16-5
Protective devices, 4-35 to 4-53
Publications and posters, safety, 2-25, 2-26
PULSER, 14-8
Purposes, benefits, and limitations of the Planned Maintenance System, 1-4, 1-5

Q

Qualifications for advancement, 1-2

R

Radioactive electron tubes, 2-7
Ranges, 15-48
Range unit adjustment, 3-30, 3-31
Ranging, magnetic, 10-4, 10-5
Rate training manuals, 1-3
Ratings, resistor, 13-1
RC coupling, 13-23, 13-24
Reassembly and disassembly of motors and generators, 8-18, 8-19
Receiving ship, 15-38 to 15-43
Recording, photographic sound, 16-3 to 16-5
Records, 11-10 to 11-14
 legal, 11-10 to 11-14
 operating, 11-10
Relays, overload, 7-2 to 7-8
Repair and installation, cable, 4-4 to 4-16
 cable blueprints, 4-10
 cable ends, 4-11 to 4-13
 cable markings, 4-10
 cable supports, 4-8 to 4-10
 conductor ends, 4-13
 conductor identification, 4-11
 deck risers, 4-8
 equipment marking, 4-10, 4-11
 lacing conductors, 4-13 to 4-16
 selecting cable, 4-5
 stuffing tubes, 4-5 to 4-8
 wireways, 4-5
Repair party electrician, 2-20

INDEX

Repeated flexing service cable, 4-3, 4-4
Rescue and first aid, 2-21
Resets, overload relay, 7-3, 7-4
Resistor testing, 13-1 to 13-3
 color codes, 13-2
 ratings, 13-1
 special characteristics, 13-2, 13-3
 tolerances, 13-1, 13-2
Resuscitation, 2-22
 artificial-respiration, 2-22
 closed chest cardiac massage, 2-22
Reverse-current relay, 4-53
Reverse-power relay, 4-49, 4-50
Reversing direction of rotation of d-c motors, 8-34
Rewinding field coils, 8-33, 8-34
 series and commutating coils, 8-33, 8-34
 shunt coils, 8-33
RF coaxial cables, 4-23, 4-24
Rheostat control, 10-8
Rigging casualty power, 5-58, 5-59
Rubber floor matting, 2-17, 2-18
Rubber gloves, 2-13, 2-14

S

Safety matting, AII-4, AII-5
Safety precautions, 2-1 to 2-26
 burns, 2-22 to 2-25
 CAUTION tag, 2-9
 confined areas, 2-20
 DANGER tag, 2-9 to 2-15
 electrical hazards and precautions, 2-1
 electric shock, 2-21, 2-22
 handtools, 2-1
 isolated receptacle circuits, 2-16
 portable electric power tools, 2-1 to 2-9
 repair party electrician, 2-20
 rescue and first aid, 2-21
 safety publications and posters, 2-25, 2-26
 shipboard lighting, 2-19, 2-20
 switchboard meters and instrument transformers, 2-16
 test equipment, 2-16 to 2-18
 workbenches, 2-18, 2-19
Schmitt trigger, 14-8
Searchlights, 9-20 to 9-27
Secondary emission, 13-11
Securing degaussing coils, 10-14
Semiconductor testing, 13-33 to 13-35

Sensors, 12-12 to 12-14
 level sensors, 12-12
 pressure sensors, 12-12
 temperature sensors, 12-12 to 12-14
Series and commutating coils, 8-33, 8-34
Setting on neutral, 8-34, 8-35
Shipboard degaussing installation, 10-5 to 10-8
 connection and through boxes, 10-7, 10-8
 degaussing coils, 10-5 to 10-7
 marking system, 10-7
Shipboard lighting, 9-1 to 9-31
 distribution systems, 9-1 to 9-4
 diversified lighting equipment, 9-27 to 9-31
 light fixtures, 9-11 to 9-13
 light sources, 9-4 to 9-11
 maintenance of lamps, 9-13
 navigation and signal lights, 9-13 to 9-27
Ship's magnetic field, 10-2 to 10-4
 induced magnetization, 10-3, 10-4
 permanent magnetization, 10-2, 10-3
Ship service distribution system, 6-1 to 6-5
Ship service power distribution, 5-1
Shock, electric, 2-21, 2-22
Shock-mounted equipment, grounding of, 2-4, 2-5
Shore power cable, 4-21 to 4-23
Short circuit protection, 7-4, 7-5
Shorting probe, safety, 2-5
Shunt coils, 8-33
Signal lights, 9-18 to 9-27
 station or operational, 9-18 to 9-20
 visual communication, 9-20 to 9-27
Signal tracing, 14-10, 14-11
Single-phase connections, transformers, 5-23
Single phase motor repair, 8-41 to 8-44
Single source biasing, 13-27 to 13-29
Small craft circuitry and components, 15-1
Soldering irons, electric, safety precautions, 2-5, 2-6
Solenoid brake, a-c, 7-14, 7-15
Solid state diodes, 13-14 to 13-16
Sound motion picture systems, 16-1 to 16-18
 definition of terms, 16-1, 16-2
 projection, 16-2 to 16-11
 film construction, 16-3
 film handling, 16-7 to 16-11
 film makeup, 16-5, 16-6
 film splicing, 16-6, 16-7
 photographic sound recording, 16-3 to 16-5

ELECTRICIAN'S MATE 3 & 2

Sound motion picture systems—Continued

- projection systems, 16-11 to 16-17
 - film transport system, 16-11 to 16-13
 - light sound system, 16-13
 - light system, 16-13
 - operation, 16-14, 16-15
 - operator care, 16-16, 16-17
 - projector storage, 16-16
- projectionist's troubleshooting guide, 16-17, 16-18
- Specific gravity, 15-1, 15-2
- Splicing, film, 16-6, 16-7
- Split plant operation, 5-53
- Standardization adjustment, 3-30
- Starting motors, 15-6 to 15-8
- Starting system, engine, 15-1 to 15-15
- Station or operational signal lights, 9-18 to 9-20
- Steel wool and emery cloth/paper, 2-5
- Steering gear, electrohydraulic, 15-18 to 15-23
- STAPPER, 14-8, 14-9
- Storage battery, 15-1 to 15-6
 - adjusting specific gravity, 15-3
 - capacity, 15-3
 - charging rate, 15-6
 - charging time, 15-6
 - corrections, 15-2, 15-3
 - gassing, 15-6
 - hydrometer, 15-2
 - mixing electrolyte, 15-3
 - rating, 15-3, 15-4
 - specific gravity, 15-1, 15-2
 - state of charge, 15-4, 15-5
 - test discharge, 15-4
 - treatment of acid burns, 15-3
 - types of charges, 15-5, 15-6
- Storage, projector, 16-16
- Stroboscopic tachometer, 3-3, 3-4
- Study, how to, 1-5, 1-6
- Stuffing tubes, 4-5 to 4-8
- Supports, cable, 4-8 to 4-10
- Switchboard meters and instrument transformers, 2-16
- Switchboards, 5-29, 5-30, 5-35 to 5-37
 - emergency, 5-35 to 5-37
- Switches, 4-30 to 4-34
 - float, 4-31
 - limit, 4-30, 4-31
 - pressure and temperature, 4-31 to 4-34
- Switchgears and switchboards, safety precautions, 2-16

Symbols, electronic, AIII-1 to AIII-7

Symbols, logic, 14-1, 14-2

T

- Tachometers, 3-2 to 3-4
 - stroboscopic, 3-3, 3-4
- Tape splicing, 16-6
- Technical manuals, 1-3
- Temperature and pressure switches, 4-31 to 4-34
- Temperature sensors, 12-12 to 12-14
- Test equipment, 3-1 to 3-31
 - audio signal generators, 3-24, 3-25
 - balanced potentiometer circuit, 3-25 to 3-31
 - cathode-ray oscilloscope, 3-13 to 3-23
 - Digital Voltmeter, Model 481, 3-25
 - frequency measurements, 3-11
 - multimeters, 3-4 to 3-11
 - tachometers, 3-2 to 3-4
 - troubleshooting, 3-1, 3-2
 - Wheatstone Bridge, 3-11 to 3-13
- Test equipment, safety precautions, 2-16 to 2-18
- Testing, 13-1 to 13-8, 13-29 to 13-37
 - capacitor, 13-3 to 13-6
 - circuit, 13-6, 13-7
 - electron tubes, 13-29 to 13-33
 - I_{CO} test, 13-35, 13-36
 - resistor, 13-1 to 13-3
 - semiconductor, 13-33 to 13-35
 - transformer, 13-7, 13-8
- Testing field coil, 8-34
- Tetrodes, 13-21
- Thermal overload relays, 4-37, 4-38, 7-2, 7-3
- Thermionic emission, 13-11
- Three-phase connections, transformers, 5-23 to 5-28
- Three-phase generators, 5-6 to 5-11
 - delta connection, 5-9 to 5-11
 - weye connection, 5-6 to 5-9
- Three phase stator testing and repair, 8-36 to 8-41
 - polyphase stator troubles, 8-40, 8-41
 - reversing direction of rotation of a three phase motor, 8-41
 - rewinding, 8-37 to 8-39
- Three-way switch circuits, 9-30, 9-31

INDEX

- Throttle control, 12-19 to 12-21
Through and connection boxes, 10-7, 10-8
Tolerance, resistor, 13-1, 13-2
Torque motor brake, a-c, 7-15, 7-16
Transformer coupling, 13-24, 13-24
Transformers, 5-17 to 5-35
 construction, 5-17 to 5-19
 control equipment, 5-31, 5-32
 efficiency, 5-22, 5-23
 ground detector lamps, 5-32
 phase sequence, 5-34
 polarity marking of power transformers, 5-28, 5-29
 shore power connection, 5-34, 5-35
 single-phase connections, 5-23
 switchboards, 5-29, 5-30
 three-phase connections, 5-23 to 5-28
 voltage and current relations, 5-19 to 5-22
 voltage regulators, 5-32 to 5-34
Transformer testing, 13-7, 13-8
Transistors, 13-16 to 13-19
 circuitry, 13-18, 13-19
 transistor lead identification, 13-18
Transport system, film, 16-11 to 16-13
Troubleshooting, 3-1, 3-2
Troubleshooting, controller, 7-17 to 7-21
Troubleshooting guide, projectionist's, 16-17, 16-18
Troubleshooting (identifying faulty printed circuit cards, 14-11, 14-12
 application of logic circuitry, 14-9 to 14-11
 concepts of logic, 14-1
 maintenance, 14-11
 polarity of logic, 14-1
 symbols, 14-1, 14-2
 troubleshooting (identifying faulty printed circuit cards, 14-11, 14-12
 truth tables, 14-2 to 14-9
Truth tables, 14-2 to 14-9
 amplifiers, 14-9
 AND circuits, 14-3
 Exclusive OR circuit, 14-6, 14-7
 flip-flops, 14-7
 INHIBIT, 14-5, 14-6
 MEMORY, 14-8
 multivibrator, 14-7
 NAND circuits, 14-4
 Truth tables--Continued
 NOR circuit, 14-5
 NOT circuit, 14-3
 OR circuits, 14-3
 PULSER, 14-8
 Schmitt trigger, 14-8
 STEPPER, 14-8, 14-9
Turn-in repairables, mandatory, 8-45
- U
- Ultrasonic splicing, 16-6, 16-7
Undercutting mica, 8-15
Underway replenishment system, 15-35 to 15-43
 delivery ship, 15-36 to 15-38
 receiving ship, 15-38 to 15-43
Unrigging casualty power, 5-59, 5-60
- V
- Visual communications signal lights, 9-20 to 9-27
 blinker lights, 9-20
 multipurpose signal light, 9-20
 searchlights, 9-20 to 9-27
Voltage regulation, a-c generators, 5-13
Voltmeter, digital, 3-25, 3-26
 Model 481, 3-25
- W
- Wheatstone Bridge, 3-11 to 3-13
Winches, 15-23 to 15-27
 destroyer anchor windlass, 15-24 to 15-27
 drum and gypsy, 15-23, 15-24
Wireways, 4-5
Workbenches, 2-18, 2-19
Workbenches, ground requirements and safety matting, AII-1 to AII-7
 electrical and electronic workbenches, AII-1 to AII-4
 safety matting, AII-4, AII-5
Wye connection, the, 5-6 to 5-9

ELECTRICIAN'S MATE 3&2

NAVEDTRA 10546-E

Prepared by the Naval Education and Training Program Development Center, Pensacola, Florida

Your NRCC contains a set of assignments and perforated answer sheets. The Rate Training Manual, Electrician's Mate 3&2, NAVEDTRA 10546-E, is your textbook for the NRCC. If an errata sheet comes with the NRCC, make all indicated changes or corrections. Do not change or correct the textbook or assignments in any other way.

HOW TO COMPLETE THIS COURSE SUCCESSFULLY

Study the textbook pages given at the beginning of each assignment before trying to answer the items. Pay attention to tables and illustrations as they contain a lot of information. Making your own drawings can help you understand the subject matter. Also, read the learning objectives that precede the sets of items. The learning objectives and items are based on the subject matter or study material in the textbook. The objectives tell you what you should be able to do by studying assigned textual material and answering the items.

At this point you should be ready to answer the items in the assignment. Read each item carefully. Select the BEST ANSWER for each item, consulting your textbook when necessary. Be sure to select the BEST ANSWER from the subject matter in the textbook. You may discuss difficult points in the course with others. However, the answer you select must be your own. Remove a perforated answer sheet from the back of this text, write in the proper assignment number, and enter your answer for each item.

Your NRCC will be administered by your command or, in the case of small commands, by the Naval Education and Training Program Development Center. No matter who administers your course you can complete it successfully by earning a 3.2 for each assignment. The unit breakdown of the course, if any, is shown later under Naval Reserve Retirement Credit.

WHEN YOUR COURSE IS ADMINISTERED BY LOCAL COMMAND

As soon as you have finished an assignment, submit the completed answer sheet to the officer

designated to grade it. The graded answer sheet will not be returned to you.

If you are completing this NRCC to become eligible to take the fleetwide advancement examination, follow a schedule that will enable you to complete all assignments in time. Your schedule should call for the completion of at least one assignment per month.

Although you complete the course successfully, the Naval Education and Training Program Development Center will not issue you a letter of satisfactory completion. Your command will make an entry in your service record, giving you credit for your work.

WHEN YOUR COURSE IS ADMINISTERED BY THE NAVAL EDUCATION AND TRAINING PROGRAM DEVELOPMENT CENTER

After finishing an assignment, go on to the next. Retain each completed answer sheet until you finish all the assignments in a unit (or in the course if it is not divided into units). Using the envelopes provided, mail your completed answer sheets to the Naval Education and Training Program Development Center where they will be graded and the score recorded. Make sure all blanks at the top of each answer sheet are filled in. Unless you furnish all the information required, it will be impossible to give you credit for your work. The graded answer sheets will not be returned.

The Naval Education and Training Program Development Center will issue a letter of satisfactory completion to certify successful completion of the course (or a creditable unit of the course). To receive a course-completion letter, follow the directions given on the course-completion form in the back of this NRCC.

You may keep the textbook and assignments for this course. Return them only in the event you disenroll from the course or otherwise fail to complete the course. Directions for returning the textbook and assignments are given on the book-return form in the back of this NRCC.

PREPARING FOR YOUR ADVANCEMENT EXAMINATION

Your examination for advancement is based on the Occupational Standards for your rating as found in the MANUAL OF NAVY ENLISTED MANPOWER AND PERSONNEL CLASSIFICATIONS AND OCCUPATIONAL STANDARDS (NAVPERS 18068). These Occupational Standards define the minimum tasks required of your rating. The sources of questions in your advancement examination are listed in the BIBLIOGRAPHY FOR ADVANCEMENT STUDY (NAVEDTRA 10052). For your convenience, the Occupational Standards and the sources of questions for your rating are combined in a single pamphlet for the series of examinations for each year. These OCCUPATIONAL STANDARDS AND BIBLIOGRAPHY SHEETS (called Bib Sheets), are available from your ESO. Since your textbook and NRCC are among the sources listed in the bibliography, be sure to study both as you take the course. The qualifications for your rating may have changed since your course and textbook were printed, so refer to the latest edition of the Bib Sheets.

NAVAL RESERVE RETIREMENT CREDIT

This course is evaluated at 17 Naval Reserve retirement points. These points are creditable to personnel eligible to receive them under current directives governing retirement of Naval Reserve personnel. Points will be credited in units as follows:

- Unit 1: 12 points upon satisfactory completion of Assignments 1 through 6.
- Unit 2: 5 points upon satisfactory completion of Assignments 7 through 11.

COURSE OBJECTIVE

The text describes the following: purpose, scope, and structure of the Electrician's Mate rating; safety practices particular to electrical safety; use of electrical/electronic test equipment in locating malfunctions in electrical equipment; inspecting, testing, adjusting, removing, replacing, and repairing switches and protective devices; operating maintaining, and troubleshooting the ship's service and emergency power distribution systems; rigging and operating casualty power systems; basic operation of the transistorized control circuitry found in solid state (logic) control systems; function, operation, and repair of motor controllers; lubricating, inspecting, testing, adjusting and repairing motors and generators; inspecting and maintaining the various lighting equipment and systems; maintaining manual degaussing systems and the GM-1A and EMS-4 automatic degaussing systems; function, operation, and maintenance of the major units of the d.c. electric propulsion and control systems; operation and maintenance of auxiliary equipment such as steering systems, anchor windlasses, elevator equipment, underway replenishment equipment, electric fork-lifts, and galley equipment; and basic principles of sound motion picture systems.

While working on this correspondence course, you may refer freely to the text. You may seek advice and instruction from others on problems arising in the course, but the solutions submitted must be the result of your own work and decisions. You are prohibited from referring to or copying the solutions of others, or giving completed solutions to anyone else taking the same course.

Naval courses may include a variety of questions -- multiple-choice, true-false, matching, etc. The questions are not grouped by type; regardless of type, they are presented in the same general sequence as the textbook material upon which they are based. This presentation is designed to preserve continuity of thought, permitting step-by-step development of ideas. Some courses use many types of questions, others only a few. The student can readily identify the type of each question (and the action required) through inspection of the samples given below.

MULTIPLE-CHOICE QUESTIONS

Each question contains several alternatives, one of which provides the best answer to the question. Select the best alternative, and blacken the appropriate box on the answer sheet.

SAMPLE

- s-1. The first person to be appointed Secretary of Defense under the National Security Act of 1947 was
1. George Marshall
 2. James Forrestal
 3. Chester Nimitz
 4. William Halsey

Indicate in this way on the answer sheet:

	1	2	3	4	
	T	F			
s-1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---

TRUE-FALSE QUESTIONS

Mark each statement true or false as indicated below. If any part of the statement is false the statement is to be considered false. Make the decision, and blacken the appropriate box on the answer sheet.

SAMPLE

- s-2. Any naval officer is authorized to correspond officially with any systems command of the Department of the Navy without his commanding officer's endorsement.

Indicate in this way on the answer sheet:

	1	2	3	4	
	T	F			
s-2	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---

MATCHING QUESTIONS

Each set of questions consists of two columns, each listing words, phrases or sentences. The task is to select the item in column B which is the best match for the item in column A that is being considered. Items in column B may be used once, more than once, or not at all. Specific instructions are given with each set of questions. Select the numbers identifying the answers and blacken the appropriate boxes on the answer sheet.

SAMPLE

In questions s-3 through s-6, match the name of the shipboard officer in column A by selecting from column B the name of the department in which the officer functions.

- | | | |
|-------------------------------|---------------------------|--|
| A | B | |
| s-3. Damage Control Assistant | 1. Operations Department | |
| s-4. CIC Officer | 2. Engineering Department | |
| s-5. Disbursing Officer | 3. Supply Department | |
| s-6. Communications Officer | | |

Indicate in this way on the answer sheet:

	1	2	3	4	
	T	F			
s-3	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
s-4	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
s-5	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	---
s-6	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---

11523

Assignment 1

The Electrician's Mate and Safety Precautions

Textbook Assignment: Pages 1-1 through 1-6 and 2-1 through 2-25

In this course you will demonstrate that learning has taken place by correctly answering training items. The mere physical act of indicating a choice on an answer sheet is not in itself important; it is the mental achievement, in whatever form it may take, prior to the physical act that is important and toward which course learning objectives are directed. The selection of the correct choice for a course training item indicates that you have fulfilled, at least in part, the stated objective(s).

The accomplishment of certain objectives, for example, a physical act such as drafting a memo, cannot readily be determined by means of objective type course items; however, you can demonstrate by means of answers to training items that you have acquired the requisite knowledge to perform the physical act. The accomplishment of certain other learning objectives, for example, the mental acts of comparing, recognizing, evaluating, choosing, selecting, etc., may be readily demonstrated in a course by indicating the correct answers to training items.

The comprehensive objective for this course has already been given. It states the purpose of the course in terms of what you will be able to do as you complete the course.

The detailed objectives in each assignment state what you should accomplish as you progress through the course. They may appear singly or in clusters of closely related objectives, as appropriate; they are followed by items which will enable you to indicate your accomplishment.

All objectives in this course are learning objectives and items are teaching items. They point out important things, they assist in learning, and they should enable you to do a better job for the Navy.

This self-study course is only one part of the total Navy training program; by its very nature it can take you only part of the way to a training goal. Practical experience schools, selected reading, and the desire to accomplish are also necessary to round out a fully meaningful training program.

Learning Objective: Recognize fundamentals of the enlisted rating structure and general requirements for advancement of active duty and inactive duty Electrician's Mates. Textbook pages 1-1 through 1-3.

- 1-1. To which rating category do Electrician's Mates belong?
1. Apprenticeship
 2. Emergency
 3. General
 4. Service
- 1-2. When assigned to shore duty, an Electrician's Mate may work outside the rate or rating.

- 1-3. What is the purpose of assigning an NEC to Electrician's Mates?
1. To identify their specialized skills
 2. To show whether or not they are eligible to draw proficiency pay
 3. To identify the types of training they are qualified for
 4. To indicate the highest paygrade they have qualified for
-

Learning Objective: Indicate uses of training publications, technical manuals, and other printed source materials. Textbook pages 1-2 through 1-6.

- 1-4. Source materials for servicewide written examinations at the appropriate rate level may include any reference listed for that rate in the Bibliography for Advancement Study.

- 1-5. Which of the following courses or tests may be prepared from rate training manuals?
1. Servicewide advancement examinations
 2. Nonresident career courses,
 3. Locally prepared advancement tests
 4. All of the above

- 1-13. Preventive maintenance reduces the need for major corrective maintenance.
- 1-14. The Electrician's Mate 3&2 rate training manual lists the military requirements information.

In items 1-6 through 1-8, select from column B the publication that contains the item of information in column A.

<u>A. Information</u>	<u>B. Publications</u>
1-6. Military knowledge factors needed to perform duties of a rating	1. Electronics information bulletin 2. DODISPR
1-7. Required and recommended study references for advancement exams	3. Bibliography for Advancement Study
1-8. Advance information on field changes	4. Military Requirements for Petty Officers 3&2

Learning Objective: Point out the types of safety posters. Textbook pages 2-1 and 2-2.

- 1-15. What color(s) is/are used to warn personnel of possible hazards?
1. Green
 2. Yellow
 3. Red
 4. Both 2 and 3 above
- 1-16. In the lower-left poster of figure 2-2 of the text, what type of hazard would be found in the area?
1. High voltage
 2. Portable electric tools
 3. Metal shavings on deck
 4. Rotating machinery

Learning Objective: Identify safe or unsafe practices in using and repairing tools and equipment. Textbook page 2-1.

In items 1-9 through 1-11, select from column B the periodical in which the subject matter in column A is published.

<u>A. Subject Matter</u>	<u>B. Periodicals</u>
1-9. New developments in shipboard engineering	1. Fathom 2. EIMB
1-10. Prevention of shipboard accidents	3. All Hands 4. Naval Sea Systems Command Periodicals
1-11. Techniques for installing electronics equipment	

- 1-17. What should be done with a ball-peen hammer with a split handle?
1. Use it cautiously
 2. Replace the handle
 3. Tape the handle
 4. Replace the head
- 1-18. You should apply friction tape to a pair of long-nose pliers to provide electrical insulation.
- 1-19. In an emergency condition only, which, if any, of the following actions is an approved method for improvising an insulating barrier between a metal tool and the hand of its user?
1. Apply several layers of friction tape
 2. Apply masking tape covered by several layers of friction type
 3. Apply several layers of rubber tape covered by a layer or two of friction tape
 4. None of the above

- 1-12. Which of the following study hints should help you get the most from a Rate Training Manual?
1. Devote your time exclusively to important military topics
 2. Make notes as you study, particularly of the main ideas, then review your notes
 3. Omit easy material; study only the most difficult and the unfamiliar
 4. Try not to cover a complete unit in any one study period

Learning Objective: Point out the requirements for ground connections and precautions regarding the repair of circuits and use of rubber matting, ground straps, and shorting tools. Textbook pages 2-4 through 2-6.

- 1-20. What is an acceptable resistance reading for the ground connection between the ship's hull and metal frame of a portable electric drill?
1. Less than 1 ohm
 2. 1 ohm
 3. 1,000 ohms
 4. 1 megohm
- 1-21. When testing the ground lead of a portable electric drill that has exposed conductors, what action should you take?
1. Replace the plug
 2. Patch the cord with tape
 3. Cut the damaged section out and replace it
 4. Replace the cord
- 1-22. Of the following actions, which is NOT a safe practice for using a portable electric drill?
1. Lay out cord so no one will trip
 2. Wear safety goggles
 3. Use 3-conductor extension cord
 4. Remove the third prong when a 3-hole receptacle is not available
- 1-23. When equipment grounding is provided, how can you make sure that the bonding surfaces will have a positive metal-to-metal contact?
1. By checking mechanical connection to ensure proper contact
 2. By securely fastening the connection with the proper mounting hardware
 3. By cleaning the shock mount
 4. By doing all the above
- 1-24. To discharge capacitors in deenergized equipment after the power has been secured, which of the following devices is used?
1. Screwdriver
 2. Ground strap
 3. Shorting probe
 4. Each of the above
- 1-25. It is permissible to use steel wool on electrical contacts.

- 1-26. Where an aerosol dispenser is being used in a poorly ventilated space, which of the following procedures is considered safe?
1. Keeping the equipment energized
 2. Heating the dispenser to keep it warm
 3. Supplying the space with fresh outside air
 4. Spraying warm equipment
- 1-27. In discarding a used aerosol dispenser, you should NOT puncture the can or place it in a wastebasket that will be emptied into an incinerator.
- 1-28. When a water-based solvent is not practical, what cleaner is recommended?
1. Inhibited methyl chloroform
 2. Carbon tetrachloride
 3. Benzine
 4. Ether

Learning Objective: Point out the safety precautions for handling, stowing, and disposing of radioactive and cathode-ray tubes. Textbook page 2-7.

- 1-29. As long as an electron tube containing radioactive material remains intact, NO great radiation hazard exists.
- 1-30. You should be extremely cautious when handling a cathode-ray tube (CRT) because its glass envelope encloses a
1. radioactive gas
 2. compressed gas which may escape rapidly through the glass seal
 3. high vacuum and may implode with the application of slight external pressure
 4. high pressure and may explode in direct sunlight
- 1-31. One way of breaking the vacuum seal on a defective CRT is to place the tube face down in an empty carton and break off the locating pin.

Learning Objective: Identify precautions to be observed when removing paint from, or repainting, electrical equipment. Textbook pages 2-7 and 2-8.

- 1-32. Electrical equipment should be painted only when the lack of paint will
1. cause overheating
 2. make the equipment look unimpressive
 3. cause corrosion
 4. cause electric shorts

- 1-33. Why is it a poor practice to use chippers or scrapers for removing paint from electrical equipment?
1. Paint dust is a conductor and may ground the equipment
 2. There is a good chance of damaging insulation and delicate parts
 3. Paint dust is abrasive and may get into contacts
 4. Chippers and scrapers are not to be used on metal

- 1-34. Identification plates should always be painted.

Learning Objective: Point out procedures for fighting electrical fires. Textbook pages 2-8 and 2-9.

- 1-35. When should a Navy person become acquainted with the types and locations of fire fighting equipment?
1. Now
 2. When you go aboard ship
 3. Both of the above
 4. When needed
- 1-36. What type of fire extinguishing agent should be used on an electrical fire?
1. Potassium bicarbonate (PKP)
 2. Soda acid
 3. Carbon dioxide (CO₂)
 4. Foam

Learning Objective: Identify use of caution and danger tags. Textbook page 2-9.

- 1-37. Caution tags are used when
1. red tags are not available
 2. when equipment is secured for repair
 3. a precautionary or unusual caution must be exercised to operate equipment
 4. operation of equipment could present a small danger to personnel

- 1-38. Red tags are used when which of the following conditions exist?
1. Operation of equipment would be unsafe to personnel
 2. Operation of equipment might damage some component
 3. Any dangerous situation of operation of a system or component
 4. Each of the above

Learning Objective: Identify safety precautions related to working on switchboards. Textbook pages 2-13 through 2-17.

- 1-39. Permission to work on energized switchboards originates with whom?
1. Operations officer
 2. Officer of the Deck
 3. Engineer officer
 4. Commanding officer
- 1-40. Prior to working on an energized switchboard, what should be insulated?
1. Live metal parts adjacent to the work area
 2. Grounded metal adjacent to the work area
 3. All metallic handtools
 4. Each of the above
- 1-41. The person who works on the energized switchboard should be qualified in administering artificial respiration.
- 1-42. What class of rubber gloves should be selected if a person is to work around a piece of equipment rated at 5,000 volts?
1. Class 0
 2. Class I
 3. Class II
 4. Class III
- 1-43. Which, if any, of the systems shown in figure 2-7 of the text is a perfect ungrounded system?
1. A
 2. B
 3. C
 4. None
- 1-44. Shipboard electrical systems can NOT be considered as perfect ungrounded systems because of which of the following reasons?
1. Generator insulation resistance and capacitance
 2. RFI filter capacitance
 3. Cable resistance and capacitance
 4. All of the above

- 1-45. Insulation resistance tests on circuits are designed to ensure that the system will operate properly, NOT to make the system safe to touch.
- 1-46. The secondary of a current transformer should NEVER be short circuited when its primary is energized.
- 1-47. The current coil of a wattmeter or an ammeter must be connected
1. in parallel with the load
 2. across the power source terminals
 3. in series with the load
 4. in series with a shunt
- 1-48. Prior to working on a high potential circuit, which of the following steps should you take?
1. Remove the power
 2. Discharge all capacitors
 3. Ground the circuit
 4. All the above steps in the order listed
- 1-49. Which of the following individuals or groups is permitted to gain access to the interior of the enclosure of energized equipment?
1. The operator
 2. The operator when accompanied by authorized maintenance personnel
 3. Authorized maintenance personnel
 4. Authorized maintenance personnel when accompanied by a trained safety observer
- 1-50. To ensure maximum protection from floor matting, which of the following actions should the electrician take?
1. Use only approved rubber floor matting
 2. Clean the matting whenever it becomes contaminated
 3. Make sure matting is always in place
 4. All of the above

Learning Objective: Safety importance of electrical workbenches. Textbook pages 2-18 and 2-19.

- 1-51. Once an electrical workbench has been properly insulated, you may attach a vise or other hardware safely.

- 1-52. Which of the following items would be considered necessary on an electrical workbench?
1. Ground leads secured to the ship's structure
 2. 50 amp clip on the ends of ground leads
 3. A minimum of one ground lead for each 4 feet of workbench
 4. All of the above
- 1-53. Electrical workbench receptacle connections must be supplied by an isolation transformer.

Learning Objective: Point out the effects of electric shock on the human body, procedures for rescuing a person in contact with an energized circuit, and procedures for the resuscitation of an unconscious person. Textbook pages 2-21 through 2-23.

- 1-54. What is the minimum amount of electrical current that can cause a fatal shock?
1. 1 milliamperere
 2. 10 milliamperere
 3. 100 milliamperere
 4. 1 ampere
- 1-55. The victim of electric shock by a portable drill should be freed of contact with the drill as quickly as is safely possible for the rescuer. A quick and safe way to free the victim is to
1. turn the drill switch off
 2. cut the portable cable
 3. pull the fuses at the distribution box
 4. pull on the drill's flexible cable until the drill clears the victim
- 1-56. Which of the following symptoms may indicate that a person sustaining an electric shock has suffered a cardiac arrest?
1. Absence of pulse at wrist or neck
 2. Dilated pupils in eyes
 3. Weak or no respiration
 4. Each of the above

- 1-57. In regard to the mouth-to-mouth method of administering artificial respiration to a victim of electric shock, which of the following steps should you take to prepare the victim quickly and to make the method effective?
1. Place him face down on a level place, slide a folded blanket under his stomach, and drain saliva from his mouth
 2. Place him face up on a level place, slide a folded blanket under the small of his back, lift his lower jaw forward, and depress his tongue
 3. Move him to more comfortable surroundings, loosen his shirt collar and other tight-fitting clothes, turn his head to one side, and drain saliva from his mouth
 4. Place him face up, clear his mouth and throat, tilt his head back, lift his lower jaw, and pinch his nose shut
- 1-58. In administering closed-chest cardiac massage, you should make it a practice to take which of the following actions?
1. Apply pressure to the breastbone at the rate of 60 to 80 times a minute
 2. Apply the least pressure that will secure an effective pulse beat
 3. Pause from time to time to see if a spontaneous heartbeat has returned
 4. All of the above
- 1-59. The effectiveness of cardiac massage as a method of reviving a shock casualty improves when massaging is combined with mouth-to-mouth artificial respiration.

Learning Objective: Point out the proper sequence for caring for injuries due to burns and electrical shock. Textbook pages 2-24 and 2-25.

- 1-60. Burns may be classified by cause as well as degree of burn.
- 1-61. What percentage of a person is burned, if the burn area is confined to the left arm?
1. 1%
 2. 9%
 3. 18%
 4. 30%
- 1-62. What class and percentage of burn does a person have, if blisters caused by steam over half of the chest are present?
1. Thermal burn of 18% of the body
 2. 2nd degree burn of 9% of the body
 3. Chemical burn of 9% of the body
 4. 3rd degree burn of 18% of the body
- 1-63. In what sequence should a burn victim be treated?
1. Burn, pain, and shock
 2. Burn, shock, and pain
 3. Shock, burn, and pain
 4. Shock, pain, and burn

520

Assignment 2

TEST EQUIPMENT

Textbook Assignment: Pages 3-1 through 3-31.

Learning Objective: Identify procedures for logical approach to troubleshooting electrical and electronic equipment. Textbook pages 3-1 and 3-2.

- 2-1. The first requirement for logical troubleshooting is the ability to
1. identify the probable cause of a symptom
 2. isolate the faulty component
 3. collect all available data on a casualty
 4. recognize normal operation
- 2-2. Which of the following senses is NOT used in troubleshooting?
1. Smelling
 2. Hearing
 3. Tasting
 4. Feeling
-

Learning Objective: Identify uses and procedures for using portable tachometers, both mechanical and electrical. Textbook pages 3-2 through 3-4.

- 2-3. Portable tachometers must be mounted on a motor for continuous readings while the motor is being tested.
- 2-4. What restricts the action produced by centrifugal force in the centrifugal tachometer?
1. The pointer
 2. The spring
 3. The upper collar
 4. The lower collar
-

2-5. What is the speed range of a chronometric tachometer?

1. 5000-50,000 rpm
2. 500-5000 rpm
3. 50-500 rpm
4. 0-10,000 rpm

2-6. The resonant reed tachometer is particularly suited for measuring the speed of a

1. gyrocompass
2. turbine
3. rotating magnetic field
4. synchronous motor

2-7. The resonant reed tachometer has a dial on its face to indicate RPM's.

2-8. If the speed of flash on a stroboscopic tachometer is slightly less than the speed of the object being measured, what will be the noticeable effect concerning the object's rotation?

1. It will be fast in the wrong direction
2. It will be slow in the wrong direction
3. It will be fast in its normal direction
4. It will be slow in its normal direction

2-9. The flashing rate of the stroboscopic tachometer shown in figure 3-3 of the text is controlled by the

1. electronic pulse generator
2. swivel mount
3. oscillator
4. frequency of the power supply

2-10. The life of the stroboson tube can be increased if the tube is

1. used at a high flashing rate
2. used at a low flashing rate
3. stored under refrigeration
4. stored in a dry case

Learning Objective: Identify proper procedures in the use of the AN/PSM-4 multimeter. - Textbook pages 3-5 through 3-9.

- 2-11. A typical multimeter can be used to measure direct current, resistance, and voltage.
- 2-12. What warning device is included in the high voltage probe of multimeter AN/PSM-4A to indicate the presence of high voltage?
1. Buzzer
 2. Light
 3. Circuit breaker
 4. Fuse
- 2-13. The d-c voltage range on AN/PSM-4 can be extended up to 1,000 volts by the use of the
1. 1,000 VDC jack
 2. dial selector switch
 3. voltage divider
 4. external shunt
- 2-14. The meter movement of the AN/PSM-4 is designed to carry both d-c and a-c to increase the flexibility of the instrument.
- 2-15. The ohmmeter circuit of the AN/PSM-4 multimeter receives its power supply from
1. ship's service 60-hertz power
 2. ship's service 400-hertz power
 3. the resistor being measured
 4. an internal battery
- 2-16. What is the function of the range switch on the AN/PSM-4?
1. To select the type of voltage to be measured
 2. To permit measuring either voltage or current at different values
 3. To select power supply required to operate the instrument
 4. To set the desired ohmic value to be measured
- 2-17. What should be performed each time switch S-101 is set to read resistance?
1. Rotate the zero ohm control knob
 2. Short the test leads
 3. Zero the meter
 4. All of the above

2-18. Which of the following items is used for the 5,000 VDC function on the AN/PSM-4?

1. W101
2. W102
3. W103
4. J102

2-19. The alligator clips provided in the AN/PSM-4 multimeter are primarily used for

1. the convenience of the operator
 2. high voltage tests
 3. working on energized equipment
 4. measuring current flow
-

Learning Objective: Identify proper procedures in the use of the AN/USM-116 multimeter. Textbook pages 3-9 and 3-10.

2-20. The AN/USM-116 multimeter can be used to measure

1. capacitance, inductance and resistance
2. inductance, resistance and current
3. resistance, current and voltage
4. current, voltage and wattage

2-21. The AN/USM-116 is capable of measuring direct current in the range of

1. 2 microamps to 10 milliamps
2. 5 microamps to 100 milliamps
3. 5 microamps to 10 milliamps
4. 20 microamps to 1000 milliamps

2-22. The 36 megohm resistor is used in the red probe of the AN/USM-116 primarily to

1. extend the voltage range of the meter
2. extend the current range of the meter
3. eliminate capacitance in the probe
4. eliminate rapid battery drainage in the meter

2-23. Under which, if any, of the following conditions is the adjustment screw on the meter face of the AN/USM-116 used to zero the meter?

1. Prior to warmup
2. After a warmup period
3. With the probes shorted
4. None of the above

Learning Objective: Identify uses of the vibrating reed frequency meter. Textbook page 3-11.

- 2-24. Which of the following electrical meters can be used to measure the frequency of an a-c power generator?
1. Vibrating reed meter
 2. Tuned circuit meter
 3. Crossed-coil iron-vane meter
 4. All of the above
- 2-25. The vibrating reed frequency meter is the simplest in construction and can be used on d-c circuits.

Learning Objective: Identify uses and procedures for using a Wheatstone bridge. Textbook pages 3-11 through 3-13.

- 2-26. The Wheatstone bridge is a precision instrument used to measure
1. inductance
 2. capacitance
 3. resistance
 4. amperage
- 2-27. What would a zero deflection on the galvanometer indicate after adjustments of R1 and R3 of the Wheatstone bridge (figure 3-11B in the text)?
1. A balanced circuit
 2. Insufficient warmup time
 3. An open resistor
 4. A shorted resistor

Learning Objective: Identify basic construction and operating procedures of a cathode-ray oscilloscope. Textbook pages 3-13 through 3-23.

- 2-28. The cathode-ray oscilloscope can be used to measure the
1. speed of alternators
 2. phase relationship of voltage and current
 3. phase relationship of two voltages
 4. current flow

- 2-29. In a basic oscilloscope, the sweep generator provides a sawtooth signal to the
1. circuit under test
 2. vertical deflection amplifier
 3. horizontal deflection amplifier
 4. filament of the CRT
- 2-30. The purpose of the deflection plates in a basic oscilloscope system is to
1. position the point of beam on the screen
 2. deflect harmonic frequencies
 3. filter harmonic frequencies
 4. deflect synchronous side effects
- 2-31. When a positive potential is applied to the right horizontal deflection plate and the lower vertical deflection plate, the beam will move to the
1. upper left
 2. lower right
 3. upper right
 4. lower left
- 2-32. How is an oscilloscope calibrated to measure voltage?
1. In inches per second
 2. With an electronic slide rule
 3. With a known voltage
 4. In meters per minute
- 2-33. In a basic synchroscope the horizontal axis represents amplitude in volts and the vertical axis represents time in seconds.
- 2-34. When will a sinusoidal waveform appear on the screen of an oscilloscope?
1. When a sawtooth waveform is applied to the vertical deflection plates and a sine wave is applied to the horizontal plates
 2. When a sawtooth waveform is applied to both vertical and horizontal deflection plates
 3. When the flyback time is correctly adjusted
 4. When a sawtooth waveform is applied to the horizontal deflection plates and a sine wave is applied to the vertical plates
- 2-35. The frequency of the input waveform can be calculated by knowing
1. the frequency of the sweep generator
 2. the frequency of the power supply
 3. the resonant frequency formula
 4. which graticule to use
- 2-36. A graticule is the etching on the face of the oscilloscope to aid the technician in reading signals.

- 2-37. The focus control knob on the front of an oscilloscope serves to adjust the
1. beam brilliance
 2. spot (beam) location
 3. spot (beam) size
 4. trace position
- 2-38. The attenuator control is installed on the oscilloscope to
1. adjust beam brilliance
 2. limit amplifier amplitude
 3. adjust trace position
 4. limit spot (beam) size
- 2-39. If the position on the attenuator were set at 0.06 volt/cm and the sine wave on the oscilloscope occupied a 6 cm peak-to-peak, its amplitude would be
1. 0.2 volts
 2. 0.36 volts
 3. 0.42 volts
 4. 0.6 volts
- 2-40. The purpose of the potentiometer that is mounted on the attenuator switch of the oscilloscope is to provide
1. complete control of output signal
 2. fine control of input signal
 3. complete control of the input signal
 4. definite step control of the input signal
- 2-41. The variable control knob on an oscilloscope is in the extreme counter-clockwise position, it is at
1. maximum gain, minimum attenuation
 2. minimum gain, maximum attenuation
 3. maximum gain, maximum attenuation
 4. minimum gain, minimum attenuation
- 2-42. What would be the result if the time base is set at a frequency that is higher than the input frequency?
1. The protective fuse would blow
 2. It would overdrive the signal generator and would result in damage
 3. A portion of the input signal would be cut off
 4. A smaller graticule would have to be used
- 2-43. When is an oscilloscope called a "Triggered Oscilloscope"?
1. When it operates by an electron gun
 2. When the probe has a microswitch on it
 3. When it requires a long warmup period
 4. When it requires a source signal to start it
- 2-44. The triggering and level controls are used to synchronize the sweep generator with the
1. vertical deflection plate
 2. horizontal deflection plate
 3. input signal
 4. graticule being used.
- 2-45. What will be the result when the TIME/CM control knob is rotated in the extreme clockwise position?
1. The trace signal will move up on the screen.
 2. The trace signal will move down on the screen.
 3. The sweep signal will be at maximum intensity.
 4. The sweep generator will be disconnected.
- 2-46. A prolonged display of a continuous dot on the screen of an oscilloscope will cause damage to the
1. chemical coating
 2. electron gun
 3. signal generator
 4. deflection plates
- 2-47. What can the oscilloscope operator determine with lissajous patterns?
1. Frequency response
 2. Ratio of input to output signals
 3. Unknown frequencies
 4. Frequency modulation
- 2-48. When should the DC BAL control on an oscilloscope be adjusted?
1. Each time it is used
 2. At periodic intervals
 3. When setting the scope for lissajous figures
 4. With the scope turned off
- 2-49. What control works with the stability control on an oscilloscope?
1. The magnifier
 2. The DC BAL control
 3. The triggering control
 4. The level control
- 2-50. What should the operator do before operating an oscilloscope for the first time?
1. Consult NAVSHIPS 9650
 2. Consult the manufacturer's technical manual
 3. Set all control knobs to their minimum position
 4. Check it with a known standard

19
500

2-51. When preparing to use an oscilloscope, what will happen when you turn the level control knob from the AUTO position?

1. The trace signal will disappear
2. The signal generator will resume control
3. The trace intensity will increase
4. The trace intensity will decrease

Learning Objective: Identify correct procedures for setting signal generator output voltage level and check the calibration of the frequency oscillator. Textbook pages 3-24 and 3-25.

2-52. What is the range of frequencies produced by an audio signal generator?

1. 5 to 50,000 hertz
2. 50 to 500,000 hertz
3. 2 to 20,000 hertz
4. 20 to 200,000 hertz

5-53. What is the purpose of the attenuator switch on the audio signal generator?

1. To set the desired output frequency
2. To adjust the internal voltage regulator
3. To select desired input voltage
4. To set the desired output voltage

2-54. What is the purpose of the frequency meter on the audio signal generator?

1. To check the frequency of the first band
2. To check the frequency of the second band
3. To check the output signal level
4. To check the calibration of the frequency oscillator at 60 and 400 Hz

Learning Objective: Recognize basic construction and uses of the model 481 digital voltmeter. Textbook pages 3-25 and 3-26.

2-55. The digital voltmeter, model 481, is essentially a

1. galvanometer
2. multimeter
3. self-balanced potentiometer
4. sliding bridge

2-56. The digital voltmeter operates automatically through an error detection circuit which controls the operation of a series of stepping relays.

Learning Objective: Identify calibration and adjustment procedures used on the model 481 digital voltmeter. Textbook pages 3-26 through 3-31.

2-57. A lockout device is incorporated into the switching logic of the digital voltmeter, model 481, to eliminate

1. line voltage surges
2. unnecessary switching
3. sensitive range selection
4. the leftmost readout from selecting nine

2-58. The STD BY (standby) switch on the front panel of the digital voltmeter, model 481, will not prevent automatic operation of the meter.

2-59. In calibrating the model 481 digital voltmeter, if the meter reading changes by more than one digit at a time, it is necessary to

1. adjust the internal gain
2. turn the calibrate adjust control in the clockwise direction
3. turn the calibrate adjust control in the counterclockwise direction
4. adjust the sensitivity control

2-60. The model 481 digital voltmeter is standardized when the meter reads

1. 19713
2. 0000
3. 1019
4. 1190

2-61. In setting the gain of the model 481 digital voltmeter and the readout display becomes unstable, it is necessary to

1. turn gain control in clockwise direction
2. turn gain control in counterclockwise direction
3. start calibration procedures over
4. make no further adjustments to gain

2-62. After replacing the input tube, when should you adjust the hum control setting?

1. After the input tube has become aged
2. After calibration
3. After gain has been adjusted
4. After disconnecting from power source

- 2-63. When a standardization adjustment is made to the model 481 digital voltmeter, how many standard cells are required?
1. Seven
 2. Two
 3. Nine
 4. Four
- 2-64. The linearity of the reference voltage divider is one of several factors which may affect the accuracy of
1. digital voltmeters
 2. oscilloscopes
 3. any given power supply
 4. AN/PSM-4 multimeters
- 2-65. The range unit will require readjustment when the
1. hum control has been adjusted
 2. unit resistors change value
 3. digital voltmeter is considered
 4. gain has been set
- 2-66. When the 100-volt range scale factor of the model 481 digital voltmeter is adjusted, what d-c voltages should be used?
1. 95-99
 2. 78-86
 3. 24-32
 4. 12-14
- 2-67. When the 1,000-volt range scale of the model 481 digital voltmeter is being adjusted, accuracy will be impaired when less than 999 volts are used. What is the lowest voltage that it is possible to use?
1. 200
 2. 400
 3. 600
 4. 800

Assignment 3

ELECTRICAL INSTALLATIONS

Textbook Assignment: Pages 4-1 through 4-53

Learning Objective: Identify types, sizes, and uses of shipboard electrical cables by their designations, markings, or other means. Textbook pages 4-1 through 4-4; 4-10, 4-11, and 4-18.

- 3-1. Shipboard electrical cable that is filled with material which prevents the passage of water under pressure is designated
1. watertight
 2. waterproof
 3. water resistant
 4. waterproof or water resistant
- 3-2. The designation for certain nonflexing service cables is DHFA-400. What do the letter D and the number 400 indicate?
1. D--degaussing; 400--approximate cross-sectional area of a single conductor expressed in circular mils
 2. D--two conductors; 400--approximate cross-sectional area of a single conductor expressed in thousands of circular mils
 3. D--degaussing service; 400--number of strands per conductor
 4. D--discontinued; 400--number of strands per conductor
- 3-3. The symbol HOF used in cable designation stands for
1. repeated flexing service, experimental
 2. heat and oil resistant, flexible
 3. heat resistant, synthetic rubber, extra flexible
 4. heat and oil resistant, extra flexible
- 3-4. What is indicated by the number that follows the type symbol of a cable designator?
1. The size of the conductors in the cable
 2. The number of conductors
 3. The size and number of strands per conductor
 4. Each of the above and/or other information
- 3-5. What is the main difference between SGA and HOF cables?
1. SGA cables are used in telephone circuits while HOF cables are used in fire control circuits
 2. SGA cables are used for permanent installations while HOF cables are used where frequent bending of the cable occurs
 3. SGA cables are flexible while HOF cables are not
 4. HOF cables are heat resistant while SGA cables are not
- 3-6. Metal tags embossed with the cable designation are used to identify which of the following cables?
1. Temporary
 2. Portable power
 3. Permanent
 4. All of the above
- 3-7. Where are circuit information plates located?
1. On the bulkhead near the fuse boxes
 2. On all equipment controllers
 3. On cables
 4. On distribution panels
- 3-8. Assume that you want to know the maximum allowed current of a circuit you are trouble-shooting. This information is marked on which, if any, of the following plates?
1. Cable identification
 2. Distribution panel circuit information
 3. Distribution panel cabinet information
 4. None of the above
- 3-9. Which of the following information can be found on the metal tag on a portable casualty power cable?
1. Length of cable
 2. Number of ferrules
 3. Polarity
 4. Phase sequence

Learning Objective: Point out the installation and repair procedures of shipboard cables. Textbook pages 4-5 through 4-22 and 4-27 through 4-29.


- 3-10. The factors to consider in installing cable aboard ship include locating the cable in areas where which of the following conditions exist?
1. Other equipment and cables will cause no interference
 2. Maximum dissipation of heat will be provided
 3. Damage from battle will be minimized
 4. All the above conditions will be satisfied
- 3-11. The total connected load of a three-phase a.c. circuit is 32 amperes. If you are unable to determine the feeder demand factor for the connected loads, what is assumed to be the resultant load current?
1. 16 amp
 2. 28.8 amp
 3. 32 amp
 4. 44.8 amp
- 3-12. What type of stuffing tube uses a neoprene "O" ring to ensure a watertight seal?
1. Steel
 2. Brass
 3. Nylon
 4. Aluminum
- 3-13. When installing a nylon stuffing tube, you should apply neoprene cement to the
1. inner and outer surfaces of the grommet only
 2. inner surface of the grommet and the cable sheath where it contacts the grommet only
 3. inner surface of the grommet, the cable sheath, and the tube body
 4. inner and outer surface of the grommet and the tube body, and the cable sheath
- 3-14. What is the purpose of kickpipes and what should be their height?
1. To protect a cable or cables against mechanical damage; between 6 and 8 inches including the stuffing tube
 2. To provide airtight penetration through a deck; at least 12 inches high
 3. To protect a cable or cables against mechanical damage; 9 to 18 inches including the stuffing tube
 4. To provide airtight penetration through a deck; height varies with size of the cable, but they should be at least 18 inches high

- 3-15. Under what condition should you install a riser box?
1. When passing cable through a watertight deck or bulkhead
 2. When passing more than two cables through a deck in a single group
 3. When passing cable through a non-watertight deck
 4. When passing cable into an electronic space that requires additional grounding
- 3-16. Assume that you are to install an aluminum-armored cable that is 5/8 inch in diameter to service a weatherdeck lighting installation. You must run a new cable up through the deck from a distribution panel on the first platform. How many turns of what kind of banding material should you use to hang the cable?
1. One turn of aluminum banding
 2. One turn of zinc-coated steel banding
 3. Two turns of aluminum banding
 4. Two turns of zinc-coated steel banding
- 3-17. What is the purpose of the sealer that is applied to an armored cable installed in a modular cable support?
1. It lubricates the cable
 2. It prevents water passage under the armor
 3. It prevents air passage under the braid
 4. It makes the modular support watertight

To answer items 3-18 through 3-20, assume that you are installing a cable for a permanent lighting fixture on the mess deck of your ship. You have to run the cable to the fixture from a distribution lighting panel located in the same compartment.

- 3-18. The distance from the last cable support to the entrance fitting of the lighting fixture is 10 inches. A bend is required. The cable leads inside the fixture will have to be 8 inches long. How far from the last cable support should you cut the cable?
1. 20 inches
 2. 25 inches
 3. 38 inches
 4. 60 inches

- 3-19. How should you protect the cable end inside the fixture?
1. Install a cable end seal only.
 2. Wrap each conductor with tape and serve with glass cord only.
 3. Varnish cable crotch, install resin tubing on conductors, and serve with glass cord.
 4. Tape cable crotch, varnish, and install resin tubing.
- 3-20. Before clamping a solder type terminal to a conductor, you should
1. untwist and tin the strands
 2. twist the strands tightly only
 3. twist the strands tightly and solder them only
 4. twist the strands tightly, solder them, and tin the terminal barrel
- 3-21. After terminals are installed on the ends of conductors within a certain piece of equipment, the overall length of the conductors is 26 inches from the entrance fitting. How much cord is required to single lace the conductors?
1. 26 inches
 2. 52 inches
 3. 65 inches
 4. 78 inches
- 3-22. You are about to single lace four conductors for a distance of 24 inches. If you use maximum spacing between hitches, approximately how many turns around the conductors are required to complete the lacing?
1. 24
 2. 38
 3. 44
 4. 48
- 3-23. You have just made all cable conductor connections in an installation. Your next step is to
1. turn on the power and see if it works
 2. secure your tools and report the job completed
 3. get the chief to approve the job
 4. check the circuit for grounds and shorts
- 3-24. The minimum resistance between the grounding conductor and the case of a drill should be
1. less than 1 ohm
 2. between 10 and 100 ohms
 3. between 1 and 10 megohms
 4. greater than 10 megohms
- 3-25. Which of the following pieces of portable equipment requires the installation of a three-conductor cable and grounded plug?
1. Juice extractor
 2. Adding machine
 3. Valve grinder
 4. Each of the above
- 3-26. When should the ground connection of new portable electric equipment be tested?
1. Before being used the first time
 2. Before every use
 3. Every six months
 4. Annually
- 3-27. While testing for ground in portable electric equipment, you notice a change in the resistance reading. What does the change indicate?
1. A short
 2. A ground
 3. A faulty cable
 4. Each of the above
- 3-28. What is the LEAST acceptable resistance reading between ground and the brass shell of a SNR plug?
1. Less than 1 ohm
 2. 100,000 ohms
 3. 1 megohm
 4. 10 megohms
- 3-29. Refer to figure 4-22 of your textbook. What is the minimum length of the outer sheath that you should remove when preparing a new end for the casualty power cable?
1. 16 1/4 in.
 2. 15 1/4 in.
 3. 14 1/4 in.
 4. 12 in.
- 3-30. To permit full insertion of the conductor tips into casualty power terminals, how far must the conductor insulation be from the uncrimped end of the attached copper ferrule?
1. 1 1/16 in.
 2. 1 1/8 in.
 3. 1 1/4 in.
 4. 1 3/8 in.
- 3-31. When you are connecting casualty power cables in a dark compartment, three separate servings of twine on a conductor identifies
1. phase A
 2. phase B
 3. phase C
 4. its polarity

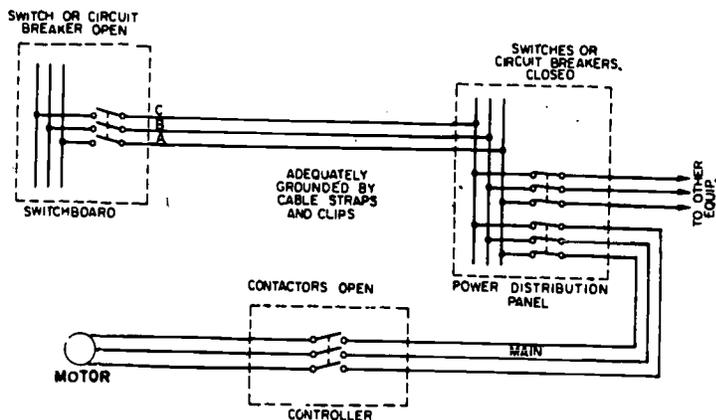

1,385

Figure 3A. Typical power feeder.

Refer to figure 3A for items 3-32 through 3-36. During operation of the circuit in figure 3A, a ground reading reveals a below minimum acceptable value. The cable from the controller to the motor is 140 feet of TSGA. Assume that all circuits are nonvital and the ship is moored alongside.

- 3-32. What should you do to isolate the legs or phase leads of the power circuit?
1. Open the switches or circuit breakers at the power distribution panel
 2. Leave the motor controller contactors open
 3. Do both 1 and 2 above
 4. Remove the ground straps and clips
- 3-33. In measuring the circuit insulation resistance, your first reading is taken between the cable armor and the metal bulkhead. It reads 0.8 megohm. What is your next step?
1. Ground the cable armor
 2. Remove the ground from the cable armor
 3. Check the accuracy of your test equipment
 4. Connect all leads and measure the resistance to ground

Assume that now you have isolated the ground to the motor circuit indicated. Your next step is to determine whether the motor or the power leads are grounded. To do so, you must disconnect the power leads from the motor. With a megger, the following values are obtained from the load side of the controller.

Phase A - 2.1 megohms
 Phase B - 1.4 megohms
 Phase C - 0.78 megohm

3-34. Which phase, if any, must you investigate further?

1. Phase A
2. Phase B
3. Phase C
4. None

3-35. What is the resistance per foot of the grounded phase?

1. 0.1 megohm
2. 1 megohm
3. 10 megohm
4. 100 megohm

3-36. What should be your conclusion concerning the condition of the cable?

1. Unsatisfactory because the insulation resistance is below the minimum
2. Satisfactory because the insulation resistance is above minimum
3. Satisfactory because the insulation resistance is below minimum
4. Unsatisfactory because the insulation resistance is above minimum

3-37. What is the best way of determining whether the insulation of a casualty power cable is deteriorated?

1. With the aid of a magnifying glass, look for already-developed cracks in the insulation at the cable ends.
2. With the aid of a magnifying glass, look for already-developed cracks in the insulation at 2-foot intervals along the entire length of cable.
3. Bend each individual conductor sharply by hand at exposed ends, checking for cracks to develop in the insulation.
4. Bend the entire cable sharply at its midpoint, checking for cracks to develop in and around the bending point.

- 3-38. A portable shore power cable can be used to transmit power between the service generators of a ship and the distribution system of another ship alongside if the capacity of the cable is NOT exceeded.
- 3-39. Which of the following steps should you take when connecting a shore power cable?
1. Test the ship's shore terminal box for proper marking
 2. Test the phase sequence by testing with a phase-sequence indicator
 3. Connect the shore power cable to the ship's shore power terminal box before connecting the shore power cable to the shore connection
 4. All of the above
- 3-40. When testing the phase sequence of a shore connection, you should make sure the leads of the phase rotation indicator are NOT transposed.
- 3-41. Cables are kept as short as practicable on installation to reduce
1. coupling effects
 2. interference
 3. changes of battle damage
 4. power loss
- 3-42. What temperature limit is established by the class of insulation for a 400-Hz transformer?
1. 95°C
 2. 105°C
 3. 130°C
 4. 200°C
- 3-43. Why are limit switches used in a motor circuit?
1. To ensure safety of equipment and personnel
 2. To prevent overloading of the circuit
 3. Both 1 and 2 above
 4. To prevent underloading of the circuit
- 3-44. How are float switches actuated?
1. By hand
 2. By changes in fluid level
 3. By changes in temperature
 4. By changes in pressure
- 3-45. What type of switch depends upon both pressure changes and temperature changes for its operation?
1. Float
 2. Pressure
 3. Temperature
 4. Knife
- 3-46. Assume that a pressure switch closes at 300 psi and opens at 50 psi. After you make certain adjustments, the switch closes at 350 psi and opens at 50 psi. What kind or kinds of adjustments did you make?
1. Range only
 2. Differential only
 3. Temperature
 4. Range and differential
- 3-47. What is a pilot device?
1. A small device that controls a large device
 2. A large device that controls other large devices
 3. A large device that controls a small device
 4. A small device that controls other small devices

Learning Objective: Recognize the fundamentals of operation of electrical safety devices. Textbook pages 4-30 through 4-53.


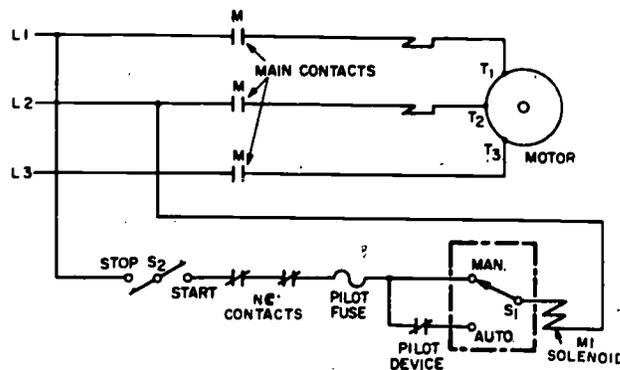


Figure 3B. Representative pilot device control circuit.

1,386

- 3-48. Assume that switch S_2 of figure 3B is closed and that switch S_1 is in the automatic position. Under normal load conditions, which component controls starting and stopping of the motor?
1. Either overload relay
 2. Fuse
 3. Pilot device
 4. Main contact for L_2
- 3-49. Assume that a magnetic-type overload relay tends to trip before the overload current becomes excessive. The relay should be adjusted to trip at a greater overload by
1. lowering the indicating plate
 2. raising the dashpot plunger
 3. lowering the dashpot plunger
 4. raising the indicating plate
- 3-50. A thermal-type overload relay will open a circuit when the
1. control shorts out
 2. heater coil reaches a specific temperature
 3. magnetic flux becomes low enough
 4. magnetic flux becomes great enough
- 3-51. A thermal overload relay is adjusted to trip at a predetermined value of overload current by
1. changing the relative position of the contacts
 2. raising and lowering the dashpot plunger
 3. rotating the splitter arm
 4. moving the relay heater coil

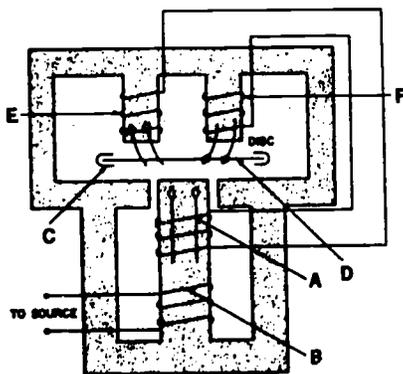

1,387

Figure 3C. Coil and disc arrangement of an a-c reverse power relay.

- 3-52. Oscillations in the induction disc of the timer element of the relay shown in figure 3C are damped by
1. A
 2. B
 3. C
 4. D
- 3-53. What must take place to cause reverse rotation of the disc in figure 3C?
1. The polarity of coil A must reverse with respect to the polarity of coil B.
 2. The polarity of coil E must reverse with respect to the polarity of coil F.
 3. The current through coils A and B must reverse with respect to the polarity of coils E and F.
 4. The current through coils E and F must reverse with respect to the polarity of coil B.
- 3-54. What actuates a phase-failure relay?
1. A flux cancellation between the flux produced in the relay coils and the flux produced in the coils in the Rectox unit
 2. An imbalance of the flux produced by the relay coils
 3. A flux cancellation between the flux produced by one relay coil and one coil in the Rectox unit, and the flux produced by the other relay coil and the other coil in the Rectox unit
 4. An imbalance between the flux produced in the relays in the Rectox unit
- 3-55. Refer to figure 4-57 of the textbook and assume an open circuit in winding 1-3. What is likely to happen?
1. The phase-failure relay would operate and a Rectox unit would fail.
 2. The phase-failure relay would operate and a reactor unit would fail.
 3. The phase-failure relay would not operate and a Rectox unit would fail.
 4. The phase-failure relay would not operate and a reactor unit would fail.
- 3-56. When two or more d-c generators are connected in parallel, what device is used to disconnect a generator from the line if the generator starts drawing power from the line?
1. Thermal-type relay
 2. Reverse-current relay
 3. Magnetic-type relay
 4. Reverse-power relay

3-57. The polarity of the voltage applied to the potential coil on a reverse-current relay will remain the same when the generator terminal current is reversed.

Learning Objective: Point out principles and practices in the repair of circuit breakers. Text-book pages 4-38 through 4-49.

3-58. What is the closing sequence of the contacts in an ACB type of circuit breaker?

1. Main contacts (arcing contacts remain open)
2. Arcing contacts and the main contacts together
3. Arcing contacts then the main contacts
4. Main contacts then the arcing contacts

3-59. Which trip element should NOT be used on the AQB-A250 type circuit breaker?

1. 275 amp
2. 175 amp
3. 150 amp
4. 125 amp

3-60. The instantaneous trip setting of the AQB-A250 circuit breaker is adjusted by use of

1. terminal studs
2. shunt trips
3. adjusting wheels
4. trip coils

3-61. The AQB-LF250 circuit breaker should be closed before a blown fuse is replaced.

3-62. Which of the following circuit breakers must be manually operated to interrupt current flow?

1. Type ALB
2. Type NQB
3. Type AQB
4. Type ACB

3-53. Why is selective tripping useful aboard ship?

1. It allows overcurrents to flow in the circuits
2. It systematically opens all circuits when damage occurs
3. It maintains overcurrents where fuses will not
4. It isolates faulty circuits without interrupting other associated circuits

3-64. When the load current exceeds the short circuit current of a generator, the generator circuit breaker will

1. remain closed until a much greater current appears
2. open only if the current increases rapidly
3. open only if the excessive current remains constant
4. open instantaneously

3-65. What switches should be opened to isolate a fixed-mounted circuit breaker that requires repair?

1. All bus tie switches
2. All switches ahead of the breaker
3. All generator circuit breakers
4. All switches in the entire switchboard circuit

3-66. Assume that inspection of copper circuit breaker contacts reveals a blackened surface. What is the correct maintenance procedure for these contacts?

1. Wipe the black copper oxide off the contacts with a clean cloth
2. Sand the contact surfaces with fine sandpaper
3. Wipe the contact surfaces with inhibited methyl chloroform
4. Each of the above, if necessary

3-67. Which of the following conditions is most likely to cause a relay magnet to chatter?

1. Shorted coils
2. Rusty magnet sealing surfaces
3. Open coils
4. Burned contacts

Assignment 4

A-C POWER DISTRIBUTION SYSTEM:

Textbook Assignment: Pages 5-1 through 5-60.

Learning Objective: Identify the fundamentals of a ship service power distribution system. Textbook page 5-1.

- 4-1. The distribution system connects the generators that supply the power to the equipment that uses the power.
- 4-2. The function of the bus ties on a switchboard is to
1. allow power distribution direct from generator to load
 2. feed power to the d-c generator
 3. permit the switchboard to feed power to all other switchboards
 4. allow generators to operate in series
- 4-3. On small ships, what is an advantage to locating distribution panels centrally in respect to load and feeding them directly from the generator?
1. To simplify the installation
 2. To reduce weight and space requirements
 3. To reduce equipment requirements
 4. Each of the above
- 4-4. What is the minimum number of feeders used to provide power for vital load centers?
1. One
 2. Two
 3. Three
 4. Four

Learning Objective: Recognize the operating principles of a-c generator, including, related construction features and devices used to drive them. Textbook pages: 5-2 through 5-5.

- 4-5. An a-c generator output is generated in the
1. field windings
 2. stator windings
 3. rotor windings
 4. armature windings

4-6. Why are revolving type generators seldom used?

1. Output power is conducted through fixed terminals
2. Output power is conducted through sliding contacts
3. They have limited power and voltage applications
4. Both 2 and 3 above

4-7. The load rating of an a-c generator is determined by the internal heat it can withstand,

- 4-8. The exciter in an a-c generator provides
1. a-c to the stationary armature
 2. a-c to the stationary field windings
 3. d-c to the load
 4. d-c to the field windings

4-9. The rotary force of the prime mover is transmitted to the a-c generator through the

1. stator
2. exciter field
3. rotor drive shaft
4. a-c generator's armature

Learning Objective: Identify the operating principles of one, two, and three phase a-c generators, including the wye and delta-connected types. Textbook pages 5-7 through 5-10.

- 4-10. In figure 5-7B in your textbook, each load is connected across two phases in series which makes the magnitude of the voltage across each load to be
1. larger than the voltage across a single phase
 2. equal to the sum of the voltage across all three phases
 3. equal to the voltage across a single phase
 4. smaller than the voltage across a single phase

- 4-11. When the load on the wye-connected system in figure 5-8A has a unity power factor, circuit conditions are such that which of the following results occur(s)?
1. All phase currents are equal
 2. Phase current is equal to line current
 3. Phase currents are in phase with their respective phase voltage
 4. All of the above
- 4-12. What is the line voltage (E_L) across each load of a wye-connected 3-phase generator that operates under balanced conditions if each phase generates 400 volts? (NOTE: $\sqrt{3} = 1.73$)
1. 800 volts
 2. 692 volts
 3. 563 volts
 4. 400 volts
- 4-13. When the phase voltage is 100 volts in a delta-connected a-c generator, what is the line or load voltage?
1. 200 volts
 2. 173 volts
 3. 100 volts
 4. 70.7 volts
- 4-14. What is the line current in a balanced delta-connected generator when the phase current is 20 amperes?
1. 34.6 amperes
 2. 20 amperes
 3. 10 amperes
 4. 6.6 amperes
- 4-17. When will a generator's output voltage increase?
1. When the I_R drop increases
 2. When the load increases
 3. When both 1 and 2 above occur
 4. When the load decreases
- 4-18. A decrease in generator terminal voltage caused by an inductive load is partly the result of
1. reduced current through the armature conductors
 2. reduced d-c field flux caused by the opposing action of armature mmf
 3. increased d-c field flux caused by the aiding action of armature mmf
 4. increased armature mmf produced by increased d-c field flux
- 4-19. What is the percentage of voltage regulation of a generator if the no-load voltage is 300 volts and the full-load voltage is 200 volts?
1. 50%
 2. 33.3%
 3. 25%
 4. 20%
- 4-20. The most practical way of controlling voltage of an a-c generator is by regulating the generator's speed.
- 4-21. In addition to equal frequency, what other condition(s) must exist before two generators are considered synchronized?
1. Equal terminal voltages
 2. Corresponding phase voltages in phase
 3. The same phase sequence
 4. All of the above conditions must be met

Learning Objective: Recognize factors which determine the output frequency and voltage of a-c generators, and the principles of generator synchronization and voltage regulation. Textbook pages 5-11 through 5-14.

- 4-15. The output frequency of an a-c generator varies directly with which of the following generator characteristics?
1. Number of poles on the rotor
 2. Speed of rotation of the rotor
 3. Both 1 and 2. above
 4. Frequency of the field current
- 4-16. What is the frequency of a 4-pole generator that has a rotor speed of 2400 rpm?
1. 160 Hz
 2. 120 Hz
 3. 80 Hz
 4. 40 Hz
- 4-22. Transformers are used to transfer electrical energy from one circuit to another by
1. resistive-capacitive coupling
 2. electrostatic radiation
 3. electromagnetic induction
 4. hysteresis coupling
- 4-23. When transferring electrical energy, a transformer may increase or decrease its
1. frequency and current
 2. current and voltage
 3. voltage and frequency
 4. frequency, voltage and current

- 4-24. The primary of a transformer is defined as the winding which
1. has the highest voltage
 2. has the lowest voltage
 3. delivers energy to the load
 4. receives energy from the a-c source
- 4-25. Losses due to eddy currents in the core of a transformer are minimized by using
1. thin, insulated lamination
 2. heat-treated core material
 3. grain-oriented material
 4. subdivided windings
- 4-26. Why is the low-voltage winding placed next to the core instead of the high-voltage winding?
1. To reduce hysteresis loss
 2. To reduce leakage flux
 3. To reduce insulation requirements
 4. To reduce I_r drop
- 4-27. The total induced voltage in each winding of a transformer is proportional to the number of turns in that winding.
- 4-28. A transformer rated at 400 Hz may NOT be operated at which of the following frequencies without causing damage due to heat?
1. 450 Hz
 2. 420 Hz
 3. 370 Hz
 4. 340 Hz
- 4-29. A transformer's efficiency is stated as a ratio of its input and output
1. currents
 2. losses
 3. powers
 4. voltages
- 4-30. Which of the following losses does NOT affect the efficiency of a transformer?
1. Leakage reactance
 2. Copper
 3. Eddy current
 4. Hysteresis

Learning Objective: Recognize the different operational features of various transformer connections. Textbook pages 5-23 through 5-27.

- 4-31. To obtain maximum current output from a single-phase transformer, it is necessary to connect the sections of the secondary windings in
1. series-opposing
 2. parallel-opposing
 3. series-adding
 4. parallel-adding

- 4-32. In a properly delta-connected transformer secondary, supplied by a balanced 3-phase load with a phase voltage of 120 volts, what is the line voltage and current?
1. 120 volts, current one-half phase current
 2. 120 volts, current 1.73 times phase current
 3. 240 volts, current one-half phase current
 4. 240 volts, current 1.73 times phase current
- 4-33. When a large number of single-phase loads are supplied from a 3-phase transformer bank, the desirable connection of the transformers secondary is a wye configuration.
- 4-34. Three single-phase transformers with wye-connected primaries and delta-connected secondaries are used to step up voltage.

Learning Objective: Identify the fundamentals of ship's service distribution system including switchboards, bus transfer equipment and shore power. Textbook pages 5-30 through 5-34.

- 4-35. Centralized control of the electrical plant on ships having four ship service switchgear groups are provided with a
1. control benchboard
 2. mimic bus
 3. designated switchboard
 4. forward switchgear group
- 4-36. When a generator is running in parallel with other generators, what component prevents it from being operated as a motor?
1. Governor
 2. Overspeed trip
 3. Reverse power relay
 4. Voltage regulator
- 4-37. The automatic voltage regulator maintains constant voltage during load change by varying
1. armature resistance
 2. field excitation
 3. generator speed
 4. governor speed
- 4-38. In which order of phase sequence are maximum positive voltages reversed?
1. A, B, and C
 2. A, C, and B
 3. B, A, and C
 4. B, C, and A

Learning Objective: Point out the operating principles of an emergency power distribution system and how its switchboards are interconnected. Textbook pages 5-35 through 5-40.

- 4-39. Why is the horizontal separation of normal, alternate, and emergency feeders important aboard ship?
1. To reduce the possibility of damage to all three feeders simultaneously
 2. To eliminate the possibility of damage to all three feeders simultaneously
 3. To evenly distribute power throughout the ship
 4. To evenly distribute the weight of the electrical system throughout the ship
- 4-40. When will a ship's emergency diesel start up in the event of a failure of all ship service generators?
1. As soon as the forward ship service switchboard has shifted the load to the forward emergency switchboard
 2. As soon as the most accessible emergency diesel is manned
 3. Within 10 seconds after failure
 4. When the forward emergency switchgear is energized from the forward ship service switchgear
- 4-41. The after emergency switchgear group controls which of the following components?
1. The after emergency generating unit
 2. The after ship service and emergency
 3. The emergency lighting feeder
 4. All of the above
- 4-42. In figure 5-2 of the textbook, when 1SA and 2SA are operating in parallel with each other, the ship is said to be operating split plant.
- 4-43. What is the source of power for an emergency switchboard at general quarters, under normal conditions?
1. Normal source
 2. Alternate source
 3. Emergency source
 4. Battle feeder
- 4-44. What voltages will cause relays V1 and V2 of figure 5-33 of the textbook to open and close?
1. 282 volts; 450 volts
 2. 315 volts; 282 volts
 3. 315 volts; 382 volts
 4. 415 volts; 450 volts

- 4-45. In figure 5-33 of the textbook, what device determines the precedence of the voltage relays?
1. 83E
 2. 83N
 3. Switch 10
 4. Ship service test switch
- 4-46. What device(s) is/are used to retransfer the emergency switchboard to ship service supply?
1. Timing relay TR1
 2. Timing relay TR2
 3. Both 1 and 2 above
 4. 83E
- 4-47. In figure 5-33 of the textbook, what switch(es) is/are operated to test for transfer of power from normal to alternate source?
1. Ship service test switch (preferred source transfer)
 2. Emergency transfer test switch
 3. Circuit breaker 52E
 4. All of the above
- 4-48. In figure 5-33 of the textbook, what device is operated to the open position to prevent feeding power to the emergency distribution bus during a feedback operation?
1. 83E
 2. 83N
 3. 52E
 4. 89

Learning Objective: Identify the principles of operation of a DLG power distribution system. Textbook pages 5-40 through 5-44.

To answer items 5-48 through 5-55, refer to figure 5-34 in your textbook.

- 4-49. To which switchgear group is generator 2A connected?
1. 1S
 2. 1E
 3. 2S
 4. 2E
- 4-50. Why are the ship service generators and the emergency generators separated from each other?
1. To keep the weight of the two generators distributed evenly aboard ship
 2. To keep all generators from being damaged at the same time
 3. To distribute the electrical power throughout the ship
 4. To distribute the generators due to the lack of space

- 6-51. When emergency generator IE is set up for automatic operation, what device prevents closing of the three circuit breakers simultaneously?
1. A mechanical interlock
 2. An electrical interlock
 3. An electromechanical interlock
 4. Circuit breaker 52B1
- 6-52. If the ship is operating on emergency power, retransfer to ship service power can be accomplished automatically.
- 6-53. Of the following, which is the only proper use of the feedback circuits?
1. To parallel the ship service generators with the emergency generators
 2. To parallel the emergency generators with each other
 3. To parallel the emergency generators with shore power
 4. To supply power to the ship service bus for starting the ship service plant
- 6-54. Damaged sections of the switchboard may be isolated from undamaged sections by:
1. manual bus transfer switches
 2. disconnect switches
 3. control switches
 4. feedback circuit breakers

- 6-55. When operating a disconnect switch, you must position it so as to compress the locking spring completely to prevent the switch from vibrating open or closed.

Learning Objective: Identify the fundamental of operation of a closely regulated power supply. Textbook pages 5-47 through 5-52.

- 6-56. The primary winding of a saturable current-potential transformer (SCPT) in a 30-kW motor generator voltage regulator contains which of the following types of windings?
1. A 4-1 control winding
 2. Both voltage and current windings
 3. Secondary windings
 4. All of the above
- 6-57. Which components of a 30 kW motor generator function as a fine control for the output voltage?
1. Primary of the SCPT
 2. Secondary of the SCPT
 3. 3-phase bridge rectifier
 4. Voltage regulator

In items 5-54 through 5-60, select from column B the primary purpose of the circuit found in the static converter circuit in column A.

A. Circuit	B. Purpose
4-58. Oscillator	1. Maintain the proper phase relationship between the outputs of the main and teaser inverters
4-59. Phase control	2. Control the output voltage of the converter
4-60. Voltage regulator	3. Provide pulses to fire the SCRs in the main inverter
	4. Limit voltage across the inverter SCRs

Learning Objective: Point out the basic principles and procedures of electric plant operation. Textbook pages 5-53 through 5-57.

- 6-61. When a ship is under battle conditions, the generating plant should be set up in:
1. cross-plant operation with bus ties between service switchboards CLOSED
 2. cross-plant operation with feeder circuit breakers CLOSED for both normal and alternate supplies
 3. split-plant operation with bus ties between service switchboards OPEN
 4. split-plant operation with feeder circuit breakers OPEN for both normal and alternate supplies
- 6-62. Which of the following is an advantage of having two generators operating in parallel?
1. More current available
 2. Load transfer without interruption
 3. More efficient under varying load
 4. Each of the above
- 6-63. Which of the following conditions will prevent a 60-Hz ship service generator from being paralleled if the system is equipped with synchronizing monitors?
1. Phase angle between -30° and $+40^\circ$
 2. Frequency difference more than 0.2 Hz
 3. Voltage difference less than 5%
 4. All of the above



4-64. When a synchroscope is used to parallel a-c generators, the incoming generator should be put on the line just before the synchroscope needle passes slowly through zero while traveling clockwise.

4-65. Generator A has a rating of 100 kW and is operating in parallel with generator B whose rating is 200 kW. How should a 30-kW load be divided between the two generators?

1. Generator A should carry 15 kW and generator B should carry 15 kW
2. Generator A should carry 20 kW and generator B should carry 10 kW
3. Generator A should carry 10 kW and generator B should carry 20 kW
4. Generator A should carry 7.5 kW and generator B should carry 22.5 kW

4-66. A circuit breaker supplying power to vital equipment trips automatically with NO excessive interrupting disturbance. How many times may you reset it before investigating the cause?

1. One
2. Two
3. Three
4. Four

4-67. When, if ever, is the hold-in device on circuit breakers utilized?

1. When switching the load from one switchboard to another
2. When there is a suspected casualty in the voltage regulation equipment
3. In an emergency situation where the maintenance of power to vital equipment is essential
4. Never

4-68. The phase sequence on shore power must be A, B, C before shifting from ship's power.

4-69. The division of the kilowatt load between a-c generators operating in parallel is determined by the

1. field current
2. operation of the voltage regulator
3. speed of the prime mover
4. polarity of the exciter

4-70. Casualty power bulkhead terminals are permanently installed on opposite sides of the bulkhead to permit

1. selected equipment to receive casualty power
2. transmission of power through compartments without loss of watertight integrity
3. transmission of power through decks without loss of watertight integrity
4. phase checking for proper polarity

4-71. Exclusive use of a generator for casualty power purposes may be accomplished by

1. opening the generator circuit breaker
2. opening the generator disconnect links
3. stripping the switchboard the generator is feeding
4. transferring all bus transfer switches to emergency power

4-72. When you are connecting the leads in an a-c casualty power system, the safest procedure is to always connect

1. the leads to a power panel while normal power is being supplied to it
2. a black lead to a C terminal first
3. the leads by working from the load to the power supply
4. a two-serving lead to an A terminal first

4-73. A portable cable used to rig a-c casualty power systems in the Navy will carry a maximum current of

1. 92 amperes for 4 hours
2. 93 amperes for 40 hours
3. 200 amperes for 4 hours
4. 200 amperes for 40 hours

4-74. What procedure should be followed in unrigging casualty power?

1. Remove both ends of the first cable at the power source, then proceed step-by-step to the load
2. Remove both ends of the last cable at the load, then proceed step-by-step to the power source
3. Unrig the cable between the power source and the load, then proceed to the power source and then to the load
4. Remove both ends of the first cable at the power source, then remove both ends of the last cable at the load, then unrig the remaining cable

Learning Objectives: Recognize principles and procedures in rigging or unrigging casualty power. Textbook pages 5-58 through 5-60.

Assignment 5

A. C. Power Distribution Systems (continued); D.C. Power Distribution Systems; Motor Controllers; and Maintenance and Repair of Motors and Generators

Textbook Assignment: Pages 5-61 through 5-66, 6-1, through 6-6, 7-1 through 7-21, and 8-1

Learning Objective: Point out the fundamental maintenance and test procedures used in keeping an electric plant on the line. Textbook pages 5-61 through 5-66.

- 5-1. When measuring the resistance of a.c. revolving fields of generators, you make the megger ground connection to
1. a metallic part of the rotor
 2. a metallic part of the generator frame
 3. a convenient metallic surface
 4. the ship's structure

5-2. Testing automatic bus transfer equipment for proper operation should include opening a feeder circuit breaker.

5-3. Schematically, the element that protects main feeders and branch circuits on ships is designated by which symbol?

1. 
2. 
3. 
4. 

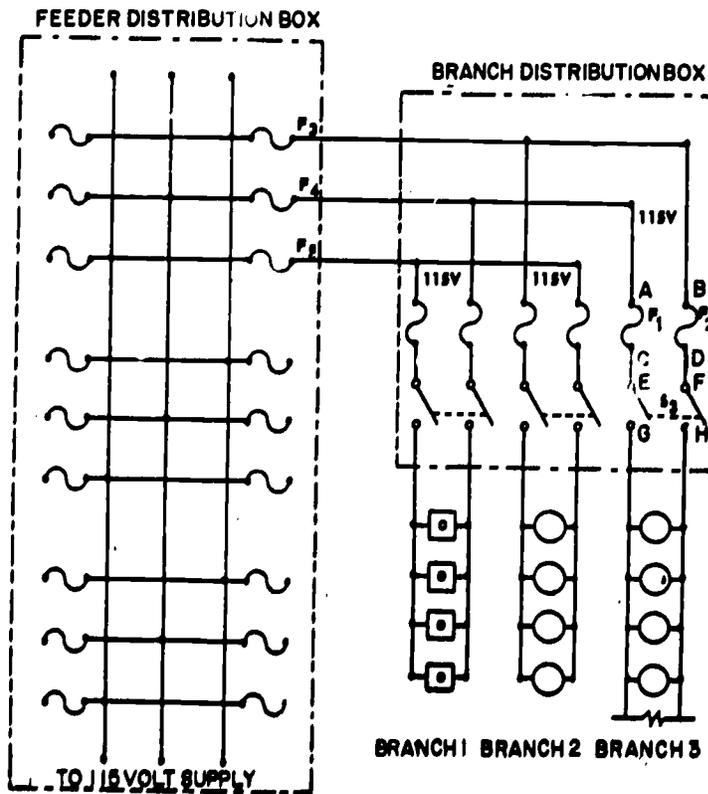


Figure 5A.

- To answer items 5-4 through 5-11, refer to figure 5A.
- 5-4. To make certain that the trouble actually is in branch 3 and NOT in the feeder distribution box, you should first check for normal voltage in the circuit. Across what two points should this initial check be made?
1. A and B
 2. A and D
 3. B and D
 4. B and C
- 5-5. What is the only definite voltage indication that fuse F_1 is blown?
1. 115 volts between points A and D
 2. 115 volts between points A and C
 3. No voltage between points A and C
 4. No voltage between points B and C
- Assume that you find that fuse F_1 is blown. You replace the fuse and it blows again. This leads you to think that there is a ground in branch 3. You then attempt to locate the ground with the use of a megger.
- 5-6. What must you do before you can conduct ground tests in branch 3?
1. Remove fuses F_1 and F_2 and open switch S_3
 2. Install fuses F_1 and F_2 and open switch S_3
 3. Remove fuses F_1 and F_2 and close switch S_3
 4. Install fuses F_1 and F_2 and close switch S_3
- 5-7. To check the side of branch 3 protected by fuse F_1 you will have to connect one megger test lead to a good ground. To what point should you connect the other lead to make this test?
1. A
 2. B
 3. C
 4. D
- You are unable to detect a ground in branch 3 by testing the circuit with a megger. Since this branch is a lighting circuit, it is doubtful that the trouble could be caused by an overload. For this reason, you conclude that the fuse blows due to a short circuit somewhere in branch 3. Your next job is to try to locate a short in the circuit with the aid of an ohmmeter.
- 5-8. When checking branch 3 for a short circuit, you must be careful NOT to damage the ohmmeter you are using. What should you do before starting to check the circuit in order to protect the ohmmeter?
1. Open switch S_3
 2. Close switch S_3
 3. Remove fuses F_1 and F_2
 4. Install fuses F_1 and F_2
- 5-9. Across what two points should you take your initial resistance reading with the ohmmeter?
1. A and B
 2. C and D
 3. E and F
 4. G and H
- 5-10. You open up the tenth lighting fixture away from switch S_3 to expose the leads running from the ninth fixture to the tenth and the leads running from the tenth fixture to the eleventh. After the wires running to the eleventh fixture are isolated, what meter reading will indicate to you the possibility of a short in the eleventh or twelfth lighting fixture?
1. Approximately 6.6 ohms across the leads running from the ninth fixture
 2. Approximately 30 ohms across the leads running to the eleventh fixture
 3. Zero resistance across the leads running from the ninth fixture
 4. Zero resistance across the leads running to the eleventh fixture
- 5-11. Assume that a short circuit in branch 1 caused a fuse to blow. Since branch 1 is a receptacle circuit, you will want to know if the short is in the circuit or in one of the portable devices plugged into the branch. If the short is in one of the portable devices you will want to know which one. What procedure will give you all this information with a minimum of time and effort?
1. Unplug all portable devices and test them one at a time for shorts
 2. Unplug all portable devices and test the branch for shorts
 3. Unplug the portable devices one at a time and test the circuit at each step for shorts
 4. Unplug all portable devices, test the branch for shorts, then plug the portable devices back in, one at a time, testing for shorts at each step

Learning Objective: Describe the operating principles of a d.c. electric plant. Textbook pages 6-1 through 6-6.

- 5-12. On a d.c. switchboard, what feature prevents the generators from motorizing when they are operated in parallel?
1. Generator field rheostats
 2. Reverse power trip
 3. Reverse current trip
 4. Disconnecting switches
- 5-13. On a d.c. generator, a rheostat is connected in series with the shunt field to adjust the
1. bus voltage
 2. line current
 3. generator voltage
 4. field current
- 5-14. If the backup and feeder circuit breakers open due to a circuit fault, what should you do before closing the backup circuit breaker?
1. Ensure feeder circuit breaker is shut
 2. Inspect the backup circuit breaker for visual damage
 3. Check the feeder circuit breaker for satisfactory operation
 4. Check the feeder and backup circuit breakers for satisfactory operation
- 5-15. Which components allow the generator circuit breaker and associated devices to be isolated for maintenance and repair?
1. Feedback circuit breakers
 2. Feeder breakers
 3. Disconnect links
 4. Segregated switchboards
- 5-16. On a 240-volt, 2-wire, d.c. generator converted to a 240-volt, d.c., 3-wire system, how is neutral established?
1. By a grounded center tap on the transformer balancer
 2. By a transformer balancer connected through slip rings to a tapping point on the generator armature
 3. By a center-tapped ground connection on the generator armature
 4. By a center-tapped connection in the generator shunt field
- 5-17. What is the maximum unbalanced load allowed on most d.c. ship service 3-wire systems?
1. 40%
 2. 25%
 3. 10%
 4. 5%
- 5-18. On an operating d.c. generator, what will happen to the voltage when the field resistance is increased?
1. Voltage will oscillate, then increase
 2. Voltage will decrease
 3. Voltage will increase
 4. Voltage will remain the same
- 5-19. On a d.c. ship service generator, if the voltage fluctuations at no-load and full-load are in excess of the required limits, what should you do?
1. Check for misalignment of bearings or shaft
 2. Check for an unbalanced generator rotor
 3. Check for unequal air gaps in the generator
 4. Check for maladjustment of the prime mover governor
-

Learning Objective: Discuss the principles of operation of a ground detector system. Textbook page 6-4.

- 5-20. Under normal operating conditions, what happens to the ground contactor when a ground occurs on the positive or negative side of the system?
1. It remains closed
 2. It opens and inserts a resistor in the positive side of the system
 3. It opens and inserts a resistor in the neutral ground circuit
 4. It opens and inserts a resistor in the negative side of the system

- 5-29. Which of the following is a coarse adjustment to the thermal overload relay?
1. Changing the heater element
 2. Changing the magnetic air gap
 3. Increasing the distance between the heater and the sensitive unit
 4. Decreasing the distance a bimetallic strip has to move to open the circuit

5-30. Induction thermal overload relays are used only on a.c. circuits.

- 5-31. In the instantaneous and time-delay magnetic overload relays, the current settings are usually adjusted by
1. changing the magnetic air gap between the armature and coil
 2. changing the distance between the induction coil and the tube
 3. changing the distance between the heater and heat sensitive unit
 4. replacing the heating unit

- 5-32. Which of the following overload relays requires a time delay before resetting?
1. Dashpot type relay
 2. Magnetic relay
 3. Solder-pot type relay
 4. Each of the above

- 5-33. In figure 7-1 of the textbook, what does the emergency run switch bypass or shunt?
1. Stop switch
 2. Interlock of main contactor
 3. Overload contacts
 4. Control circuit fuse

- 5-34. Which of the following devices provides short circuit protection to the motor and controller?
1. Controller circuit fuse
 2. Circuit breakers at power distribution panels
 3. Fuses at power distribution panels
 4. Overload relays

Learning Objective: Point out the fundamentals of operation of an a.c. motor controller. Textbook pages 7-5 through 7-8.

- 5-35. Suppose that a controller protecting a motor is able to disconnect it from the power supply, keep it disconnected, and then restart it automatically when conditions return to normal. Which form of protection is the controller providing?
1. Overload
 2. Low voltage
 3. Low voltage release
 4. Any of the above

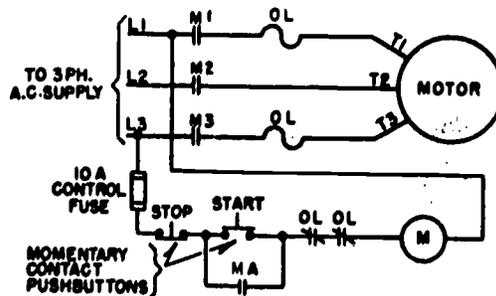


Figure 5C. A.C. controller.

- 5-36. The magnetic controller in figure 5C provides what forms of protection?
1. Low voltage protection and low voltage release
 2. Low voltage protection and overload protection
 3. Low voltage release and overload protection
 4. Low voltage release, low voltage protection, and overload protection
- 5-37. Suppose you push the button that starts the motor of figure 5C. Which contact closes to complete a holding circuit for energizing the contactor coil after you release the start button?
1. M1
 2. M2
 3. M3
 4. MA
- 5-38. Rotation of the motor rotor in figure 5C can be reversed by a controller that is capable of
1. disconnecting L2 from T2
 2. disconnecting L1 from T1 or L3 from T3
 3. connecting L1 to T3 and L3 to T1
 4. closing MA at the same time that M1, M2, and M3 are closed

5-39. Suppose a reversing type of controller which protects a three-phase induction motor against low voltage and overload causes the motor to stop running due to line voltage failure. After line voltage is restored, how is the motor restarted?

1. By automatic means
2. By pressing the forward or reverse pushbutton
3. By interchanging two of the three leads to the motor
4. By each of the above means

5-40. One type of a.c. motor speed controller regulates the speed of an a.c. motor by

1. increasing and decreasing stator current
2. switching from one set of stator windings to another
3. increasing and decreasing the voltage of the power source
4. shunting different values of resistance across the stator windings

5-41. A three-phase autotransformer is used in starting three-phase induction motors and synchronous motors because of its ability to

1. furnish variable voltage
2. reverse direction of rotation of the motor rotor
3. switch motor stator connections from wye to delta
4. switch motor stator connections from delta to wye

Learning Objective: Identify the fundamentals of operation of a d.c. motor controller. Textbook pages 7-10 through 7-13.

5-42. Magnetic blowouts are used to quench the arc across contacts by

1. increasing the contact separation
2. providing a magnetic flux which blows out the arc
3. opposing the current flow
4. pulling the arc toward the contacts

Continue course on page 32.

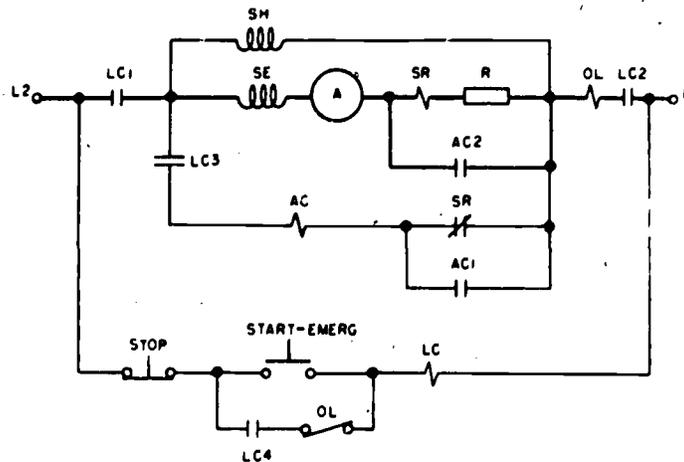


Figure 5D. D.C. controller with one stage of acceleration.

- When answering items 5-43 through 5-46, refer to figure 5D.
- 5-43. Assume that the start button is pressed. What causes the line contacts LC1 and LC2 to close?
1. Closing of line contacts LC4
 2. Operation of contactor LC
 3. Operation of the overload relay OL
 4. Current flowing through armature A and LC3
- 5-44. After closing LC1, LC2, and LC3, the controller accelerates the motor. How does the controller connect the motor across the line?
1. By the SR contact completing the circuit to coil AC
 2. By contact AC2 shorting out the starting resistor
 3. By allowing coil AC to restore, closing the SR contact
 4. Each of the above is correct
- 5-45. After the motor is connected directly across the line, what should you do to interrupt the circuit?
1. Press the stop button
 2. Press the start-emergency button
 3. Short out the series relay coil
 4. Short out the starting resistor
- 5-46. In figure 5D, how can you change the controller circuit to vary the speed of the motor?
1. By connecting contacts SR
 2. By disconnecting the shunt field winding
 3. By connecting a rheostat in series with SH
 4. By connecting a rheostat in parallel with AC
-
- Learning Objective: Point out the basic operation of an electric brake. Textbook pages 7-15 through 7-17.
-
- 5-47. Why are shaded coils used in an a.c. solenoid brake?
1. To overcome eddy currents
 2. To reduce eddy currents
 3. To make magnetic pull even
 4. To reduce vibrations completely
- 5-48. In the operation of the torque motor brake, what action applies the brake shoes to the brake wheel?
1. The torque motor advances the jack screw upward
 2. The torque motor acts to increase the pressure in the torque spring
 3. The torque motor stalls, permitting the brake to act
 4. The torque motor circuit opens, releasing the spring

- 5-49. In a series d.c. motor, how is dynamic braking usually accomplished?
1. By disconnecting the motor from the line
 2. By connecting the armature and field in series with a resistor to form a loop
 3. Both 1 and 2 above
 4. By disconnecting the field from the line
- 5-50. A d.c. motor is slowed by dynamic braking when its turning armature generates a countervoltage that forces current through a properly connected braking resistor. Which connection for the braking resistor is used in (a) d.c., series-wound motors and (b) d.c., shunt-wound motors?
1. (a) The resistor is connected across the armature (b) in series with the field
 2. (a) The resistor is connected in series with the field (b) across the armature
 3. In both (a) and (b), the resistor is connected across the armature
 4. In both (a) and (b), the resistor is connected in series with the field

- 5-51. Assume that dynamic braking is used with a d.c. shunt-wound motor. When, if ever, does the generated countervoltage equal zero?
1. When the motor armature stops turning
 2. When the motor armature is turning and lifting a heavy load
 3. When the brake is energized
 4. Never

Learning Objective: Identify techniques for troubleshooting a motor controller. Textbook pages 7-18 through 7-21.

- 5-52. What action should maintenance personnel take if contact tips overheat?
1. Replace the blowout coil
 2. Clean and adjust
 3. Instruct operator in correct operation
 4. Replace shading coil

● In answering items 5-53 through 5-55, refer to figure 5E and assume that line voltage is 440 volts, 3-phase, 60 hertz.

- 5-53. If a voltage is read at position A, and NO voltage is present at position B, which of the following statements is true?
1. The voltmeter is defective
 2. All fuses are good
 3. L₁ fuse is defective
 4. L₂ fuse is defective

Continue course on page 34.

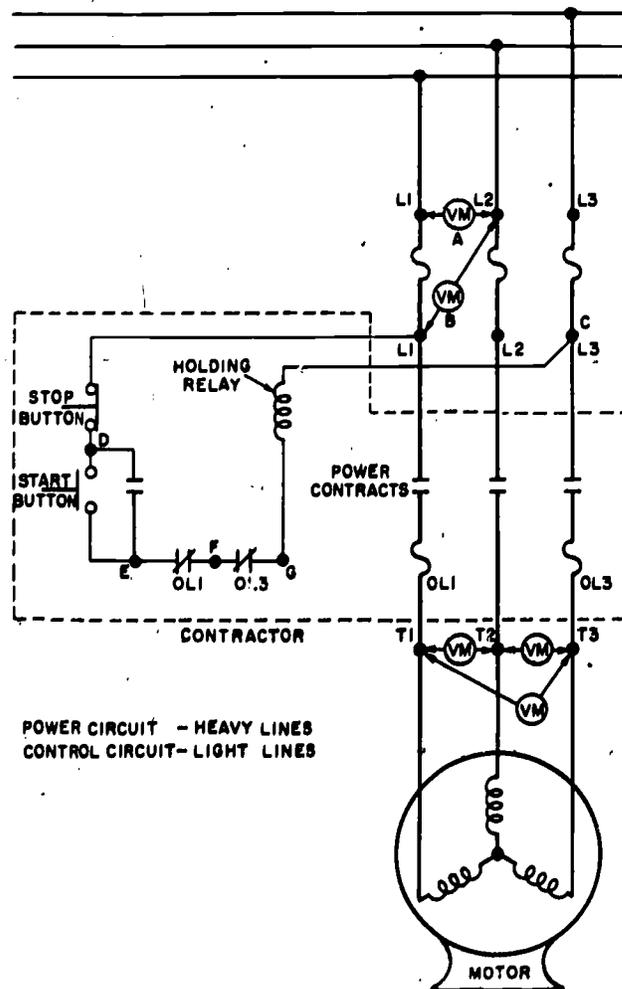


Figure 5E. Troubleshooting 3-phase magnetic line starter.

- 5-54. Which of the following events will cause the motor to stop after the start button is released?
1. Holding relay is open
 2. Power contacts on L₁ did not close
 3. Holding relay contacts did not close
 4. OL₁ is defective

- 5-55. What voltage will be present between points B and D with the stop button open and the start button depressed?
1. 440 V
 2. 220 V
 3. 110 V
 4. 0 V

Learning Objective: Identify the proper cleaning methods for motors and generators. Textbook pages 8-1 and 8-11.

- 5-56. Why does the accumulation of dirt, moisture, and oil in generator and motor ventilation ducts cause local or general overheating?
1. Resistance to the dissipation of heat is decreased
 2. Resistance to the dissipation of heat is increased
 3. Moisture and dirt form a nonconducting paste
 4. Oil and dirt from a nonconducting paste
- 5-57. Suction cleaning of motors and generators is preferred to other methods because it lessens the possibility of damage to the
1. insulation
 2. commutator
 3. brushes
 4. soldered parts
- 5-58. When blowing dust from a 75-kW generator with compressed air, you should use
1. a vacuum cleaner
 2. a suction blower at an opening opposite the air jet
 3. air pressure of less than 30 psi
 4. any of the above
- 5-59. Alcohol should be used as a cleaning solvent for electrical equipment.
- 5-60. The surface of a commutator can be cleaned with a
1. canvas wiper only
 2. canvas wiper or a toothbrush
 3. toothbrush or a strip of fine sandpaper
 4. strip of fine sandpaper or a canvas wiper
-

Learning Objective: Recognize the types, care, and installation methods of bearings in motors and generators. Textbook pages 8-2 through 8-6.

- 5-61. The angular contact bearing of textbook figure 8-1 is designed to support loads resulting from forces that are applied only perpendicular to the shaft.

- 5-62. The type of bearing used in motor construction is thrust or radial depending mainly on whether the
1. rotor rotates clockwise or counter-clockwise
 2. motor is mounted vertically or horizontally
 3. drain holes on the bearing housing are accessible
 4. bearing housing is or is not disassembled to renew bearing grease
- 5-63. Ball bearing malfunction in operating machinery may be indicated by
1. loss of speed
 2. arcing at the brushes
 3. high temperatures
 4. all of the above
- 5-64. In figure 8-2A of the text, excessive end-play movement in sleeve bearings is detectable by this motion.
- 5-65. Where should grease cups for a motor be kept when they are NOT being used to grease bearings?
1. In the workshop or toolroom in the custody of responsible maintenance personnel
 2. In a bag attached to the motor
 3. On a wire attached to a pipe plug
 4. On a wire attached to the motor
- 5-66. Arrange the following steps for greasing a motor in their correct order.
- A. Flush out the bearing housing with clean hot kerosene
 - B. Disassemble the bearing housing
 - C. Reassemble the bearing housing
 - D. Pack the housing half full of grease
 - E. While the machine is running, force grease into the housing with the grease cup until grease runs out of the drain hole
1. B A C D E
 2. B A D C E
 3. B D A E C
 4. B A D E C
- 5-67. Which of the following motors may be greased without disassembling the bearing housing?
1. A vertically mounted motor
 2. A fan motor whose drain plug is not accessible
 3. A motor driven winch that has no clutch
 4. A motor whose drain hole is accessible
- 5-68. Double-sealed ball bearings are greased by disassembling the bearing housing.

5-69. Where should the bearing puller be applied to prevent damage in pulling a bearing? To the shaft and the

1. Oiler ring
2. Outer race
3. Inner race
4. Shield

5-70. In the absence of other instructions, at what level should you maintain the oil in an oil-lubricated, ball-bearing motor housing?

1. Approximately level with the top of the bearing
2. Almost level with the bearing inner ring at the lowest point
3. Level with the center of the bearing
4. Approximately level with the highest point of the bearing inner ring

5-71. Which type of bearing is used in large propulsion generators and motors?

1. Right line
2. Journal
3. Tapered rolling
4. Rolling

5-72. Arrange the following steps for measuring sleeve bearing wear in their correct sequence.

- A. Turn the rotor until its cleaned spot is in alignment with each one of the cleaned spots on the stator
- B. Take a reading on the taper gage at each spot on the stator
- C. Clean the varnish from one spot on the stator, starting at 12 o'clock
- D. Compare readings with allowable tolerance

1. C B A D
2. C A B D
3. A C B D
4. A B D C

5-73. When the sleeve bearings of a motor overheat, what action should you take as a watchstander?

1. Stop the motor without securing the load
2. Stop the motor immediately after securing the load
3. Secure the load and let the motor run until the bearing cools
4. Continue to run the motor at the rated load until the bearing cools

5-74. When you are using the infrared method for mounting a motor bearing, the bearing temperature should NOT exceed

1. 100°F
2. 150°F
3. 175°F
4. 200°F

5-75. Because of grease deterioration or grease contamination, which of the following methods of mounting bearings is undesirable?

1. Oven method
2. Hot-oil method
3. Arbor press method
4. Infrared method

Assignment 6

MAINTENANCE AND REPAIR OF MOTORS AND GENERATORS (continued); AND SHIPBOARD LIGHTING

Textbook Assignment: Pages 8-7 through 9-19

Learning Objective: Point out or identify maintenance procedures for brushes, commutators and slip rings. Textbook pages 8-7 through 8-15.

- 6-1. What determines the grade of brush used in a motor or generator?
1. The time in service
 2. The size of motor or generator
 3. The load and speed of the motor or generator
 4. All of the above
- 6-2. Which of the following brushes should be replaced?
1. Brushes with enclosed shunts
 2. Brushes with a polished surface
 3. Brushes worn within 1/8 inch of metallic parts
 4. All of the above
- 6-3. You can calculate brush pressure by
1. subtracting the spring pressure from the brush contact area
 2. dividing the brush contact area by the spring pressure
 3. subtracting brush contact area from the spring pressure
 4. dividing the spring pressure by the brush contact area
- 6-4. When seating a brush, you should use a brush seater and
1. an oil stone
 2. emery paper
 3. a file
 4. sandpaper
- 6-5. When seating a brush, you should place the sandpaper between the brush and the commutator with the rough side toward the
1. brush and pull the sandpaper in the direction of normal commutator rotation
 2. commutator and pull the sandpaper in the opposite direction of normal commutator rotation
 3. commutator and pull the sandpaper in the direction of normal commutator rotation
 4. brush and pull the sandpaper in the opposite direction of normal commutator rotation
- 6-6. The finishing steps you take to complete the job of seating the motor brush include
1. pulling a finer strip of sandpaper between brush and commutator once or twice, vacuuming the dust that results, and cleaning the commutator turning the sandpaper over, sandpapering again, and touching the seater to the heel of the brush for a second or two
 2. touching the seater to the commutator for one or two seconds, vacuuming the dust that results, and cleaning the commutator
 3. lifting the brush, inserting the seater between brush and commutator for a second or two, and cleaning the commutator
- 6-7. Arrange in proper sequence the procedures for seating brushes.
- A. Use No. 0 sandpaper
 - B. Use the brush seater at the heel of the brush
 - C. Use No. 1 sandpaper
 - D. Vacuum the carbon dust from the commutator
 - E. Vacuum the white powder from the brush holders and windings
1. A, C, D, B, and E
 2. C, B, A, D, and E
 3. A, C, D, B, and E
 4. C, A, D, B, and E

- 6-8. Which method is used to true a commutator in place?
1. Turning on a lathe
 2. Sandpapering
 3. Hand or machine stoning
 4. Grinding on a lathe
- 6-9. What speed should an armature be rotating when the commutator is being handstoned?
1. At or slightly over rated speed
 2. At or slightly under rated speed
 3. 10% of rated speed
 4. 25% of rated speed
- 6-10. Which method is before used to correct for excess mica, high bars, or an out of round condition?
1. Machine stoning
 2. Grinding
 3. Lathe turning
 4. All of the above
- 6-11. Which of the following load percentages is preferred for seasoning commutators?
1. 25% of full load for 4 hours with an increase of 10% every 1 hour
 2. 75% of full load for 3 hours with an increase of 10% every hour
 3. 25% of full load for 4 hours with an increase of 10% every hour
 4. 25% of full load for 3 hours with an increase of 15% every hour
- 6-12. Which of the following descriptions of undercutting best fits the good undercutting shown in figure 8-16 of the text?
1. Mica cut low and square between the copper segments
 2. Mica cut low and square between the commutator risers
 3. Mica and copper segments cut high and square
 4. Mica cut at taper between segments

Learning Objective: Identify symptoms of trouble. Discuss test, maintenance and repair procedures for motors and generators. Textbook pages 8-16 through 8-42.

- 6-13. Blue sparks that pass around the armature of a running machine indicate an open armature coil. The sparking occurs because, as the segment to which the open coil is attached passes under a brush, the brush
1. closes and opens a circuit
 2. burns the coil insulation
 3. shorts out the coil
 4. grounds the coil
- 6-14. Assume that you are making emergency repairs to a d-c motor that has a short-circuited armature coil. To keep the motor in service until the coil can be replaced, you will have to disconnect
1. the coil at both ends
 2. and cut the coil at both ends
 3. the coil at both ends and install a jumper between the risers to which the coil was connected
 4. and cut the coil at both ends and install a jumper between the risers to which the coil was connected
- 6-15. In a wound a-c rotor, reduced torque, excessive vibration, sparking at the brushes, and an uneven collector ring are indications of a/an
1. open rotor coil
 2. shorted coil
 3. shorted rotor coil
 4. shorted field coil
- 6-16. What indication would you have if a field coil of a loaded d-c or a-c generator became open?
1. Increased motor speed
 2. Heavy sparking
 3. Loss of load and voltage
 4. All of the above
- 6-17. What is the sequence of testing for a damaged stator?
- A. Test for continuity with an ohmmeter
 - B. Test for mechanical difficulties; spin the motor and then the driven unit
 - C. Test for ground
 - D. Visually inspect the stator
1. C, A, B, and D
 2. C, D, B, and A
 3. B, A, C, and D
 4. C, B, A, and D
- 6-18. Which of the following components should be protected from the slings when a large rotor is lifted?
1. A-c rotor
 2. D-c armature
 3. Bearing journals
 4. Each of the above
- 6-19. Where is the pressure applied when bearings are replaced on a shaft?
1. Inner ring
 2. Outer ring
 3. Cage
 4. Race

- 6-20. Which device(s) is/are used in commutator bar-to-bar tests for armature opens?
1. Voltmeter
 2. Megohm meter
 3. 6-volt battery and milliammeter
 4. All of the above

- 6-21. What is pole pitch?
1. The width of a coil
 2. The span of a coil
 3. The distance between the centers of two adjacent poles
 4. The distance between the coil connections

- 6-22. What is meant by the term, "progressive lap winding"?
1. The winding is connected to segments two pole pitches apart and the connections progress in the counterclockwise direction
 2. The winding is connected to adjacent segments and the connections progress in the counterclockwise direction
 3. The winding is connected to segments two pole pitches apart and the connections progress in the clockwise direction
 4. The winding is connected to adjacent segments and the connections progress in the clockwise direction

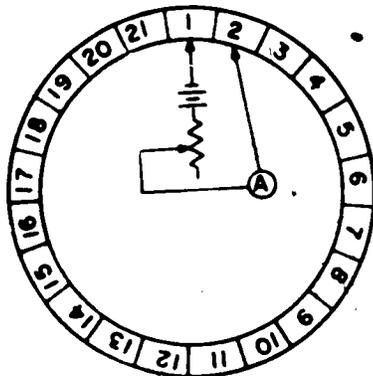


Figure 6A. Armature Winding Identification.

- 6-23. What class of winding is indicated, if in figure 6A the milliammeter reading decreases when the probe at segment 2 is moved successively from segment 2 through 11 and increases from 11 through 21?
1. Simplex wave
 2. Duplex wave
 3. Simplex lap
 4. Duplex lap

- 6-24. What class of winding is indicated, if in figure 6A the milliammeter decreases then increases two times when the probe at segment 2 is moved to each segment successively around the commutator?
1. Four-pole wave
 2. Four-pole lap
 3. Six-pole wave
 4. Six-pole lap

- 6-25. What is the function of tool number 5 in figure 8-35 of the text?
1. To shape coil end
 2. To lift coil leads
 3. To remove fiber wedges
 4. To undercut the commutator

- 6-26. What is the purpose of the bar-to-bar test in the stripping procedure?
1. To determine type of winding
 2. To identify coil pitch
 3. To determine coil throw
 4. To identify commutator pitch

- 6-27. What agent is used to thin the varnish for prevarnishing an armature that is to be wound with wire with class F varnish?
1. Mineral spirits
 2. Alcohol
 3. Turpentine
 4. Xylene

- 6-28. You can prevent pocketing of varnish by rotating the armature during
1. dipping
 2. drawing
 3. wiping
 4. baking

- 6-29. What type of insulation is placed in the coil slots before laying in the coils?
1. Polyamide paper
 2. Rigid laminate type GME-MIL-P-15037
 3. Class A
 4. Glass tape

- 6-30. When is it preferable to place banding wires on an armature?
1. Before baking
 2. While the coils are hot
 3. Before prebaking
 4. After prebaking

- 6-31. What is the upper temperature rating of Class A insulation that has been immersed in dielectric?
1. 105° C
 2. 130° C
 3. 155° F
 4. 180° F

6-32. What is the temperature rating of an oven used to bake class H insulated armatures?
 1. 130°C
 2. 155°C
 3. 350°F
 4. 500°F

6-33. After rewinding and baking, what is the lowest acceptable megohm reading for an armature rated at 500 volts? (Note: This reading is taken prior to a high-potential test.)
 1. 1
 2. 2
 3. 2.5
 4. 4

6-34. How much test voltage is applied to a shunt coil that has completed a varnish treatment?
 1. 1,000 volts
 2. 2,000 volts
 3. Rated excitation voltage plus 1,000 volts
 4. Twice rated excitation voltage plus 1,000 volts

6-35. When the winding of a coil is completed which of the following devices is used to make a polarity check?
 1. Voltmeter
 2. Ammeter
 3. Megohm meter
 4. Compass

6-36. Why are d-c motors usually reversed by changing the direction of current flow through the armature?
 1. The armature leads are longer
 2. Only one element is involved
 3. The series field is hard to reach
 4. All of the above are correct

6-37. Which is the correct procedure for the reversed rotation method of locating the best position for commutation?
 1. Position one coil of the armature so that it is centered on adjacent pole pieces. The ends of the coil indicate proper brush position
 2. Under full load, measure speed, reverse direction of motor, and adjust brush position for correct speed. Keep reversing until brushes do not require adjustment to obtain full speed
 3. Adjust field strength and terminal voltage at full load. Reverse direction of rotation and adjust brush position until terminal voltages and speed are the same
 4. Each of the above is correct

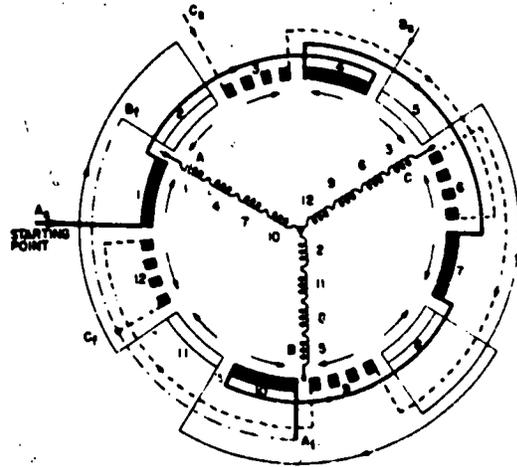


Figure 6B. 3-phase, 4-pole, series wye winding.

6-38. In what direction does current flow in group 10 of phase A in figure 6B?
 1. Opposite that in group 1
 2. Opposite that in group 4
 3. Same direction as in group 1
 4. Same direction as in groups 1, 4, and 7

Items 6-39 through 6-44 concern the compass test for shorted pole-phase groups.

6-39. What should you do in testing a 3-phase, wye-connected winding for shorted pole-phase groups?
 1. Connect the external leads of all phases to one test lead
 2. Apply low d-c voltage between each phase lead and the midpoint of the connected phases
 3. Open each connected phase and apply low d-c voltage to an open winding
 4. Open each connected phase and apply low a-c voltage to an open winding

6-40. In testing a 3-phase a-c delta-connected winding, you open each of the connected phases and pass low-voltage direct current through all phases in series.

6-41. What is the indication for a shorted pole-phase group?
 1. North-seeking compass needle
 2. South-seeking compass needle
 3. No deflection of compass needle
 4. Clockwise rotation of compass needle

- 6-42. The balance current test is performed on 3-phase a-c windings to locate
1. open coils
 2. shorted phases
 3. grounded coils
 4. reversed phases

- 6-43. What is the procedure for testing a 3-phase delta-connected winding for a shorted phase?

1. Open one delta connection and send low voltage a-c through all phases connected in series
2. Open one delta connection and send low voltage d-c through the other two phases connected in series
3. Open one delta connection and send low voltage a-c through the other two phases connected in parallel
4. Open each delta connection and send low voltage a-c through each phase separately


- 6-44. Assume you are testing a 3-phase wye-connected winding for an open circuit with an ohmmeter. You get a low reading when the ohmmeter leads are on terminals A and B, a high reading when the leads are on B and C, and another high reading when the leads are on A and C. These readings indicate an open circuit in
1. phase A only
 2. phase B only
 3. phase C only
 4. phases A, B, and C

- 6-45. You can discover and locate an open a-c stator winding by taking resistance readings of the
1. coil ends only
 2. phase terminals only
 3. interpoles
 4. phase terminals, then the coil ends

- 6-46. Which windings are placed in series in figure 8-58 of the text, when the motor is connected for 220 volts?
1. Both run windings
 2. The run winding and the start winding
 3. Both start windings
 4. Each of the above

Learning Objective: Point out the fundamentals of a shipboard lighting distribution system. Textbook pages 9-1 through 9-5.

- 6-47. From how many switchboards does a typical lighting load obtain its power?
1. One
 2. Two
 3. Three
 4. Four
- 6-48. Refer to textbook figure 9-4 and assume that the supply voltage for ABT2 decreases, causing relays 1V, 2V, and 3V to drop out. What sequence of events takes place to complete the transfer of the load to the emergency source of power?
1. Relay 4V drops out; after a short delay, relay SE is energized; the emergency source is connected to the transfer switch; coil TS is disconnected from the operating circuit
 2. Relay 4V is energized; relay SE drops out; after a short delay, 4V opens; the emergency source is connected to the transfer switch
 3. Relay SE is disconnected; after a short delay, relay 4V is energized; the emergency source is connected to the transfer switch; coil TS is disconnected from the operating circuit
 4. Relay SE is energized; relay 4V drops out; after a short delay, SE opens; the emergency source is connected to the transfer switch

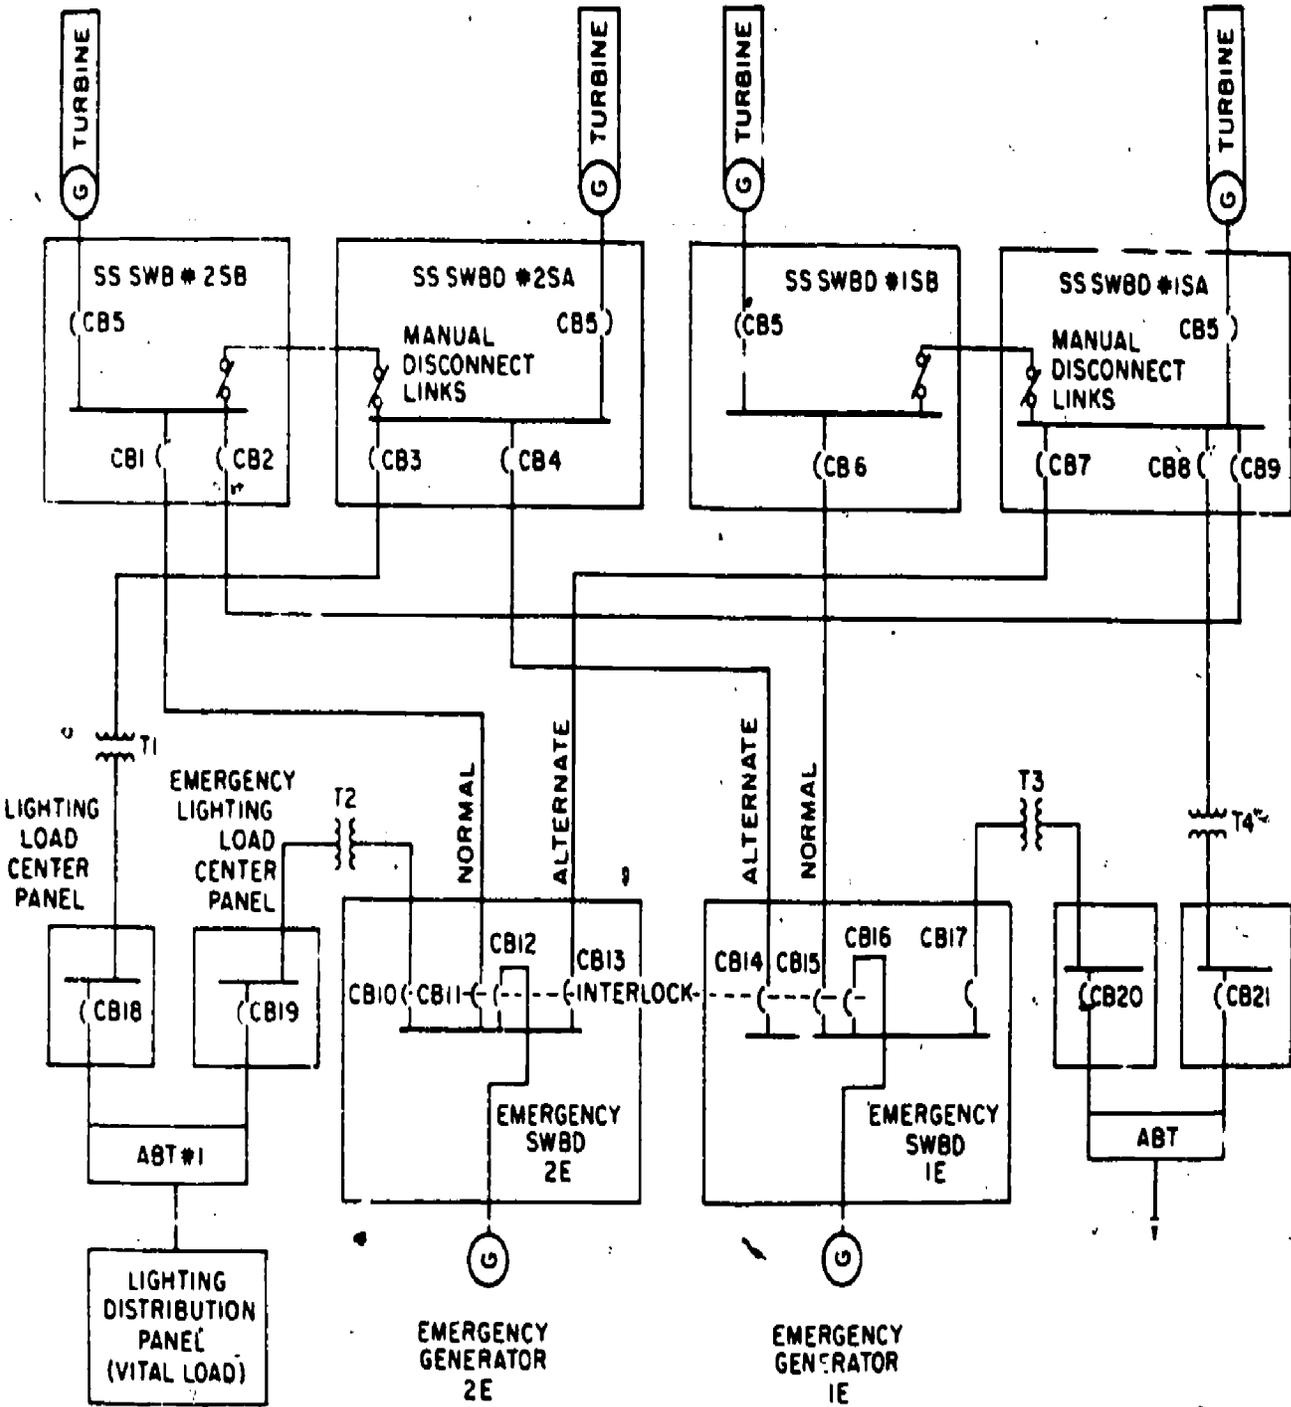

505

Figure 6C. Lighting distribution system.

Items 6-49 through 6-52, refer to figure 6C.

- 6-49. The emergency generator will start when the alternate supply voltage drops below
1. 300 V
 2. 320 V
 3. 330 V
 4. 350 V
- 6-50. During normal operation, what is the power source for emergency switchboard 2E?
1. Emergency generator 2E
 2. Emergency generator 1E
 3. Ship service switchboard 2SB
 4. Ship service switchboard 1SA
- 6-51. When an undervoltage condition develops in ship service switchboard 2SA and 2SB, which circuit breaker will open and which will close to supply alternate power to the emergency switchboard?
1. CB 11 open, CB 13 close
 2. CB 12 open, CB 11 close
 3. CB 14 open, CB 15 close
 4. CB 14 open, CB 16 close
- 6-52. Assume that all the lighting load is carried by the transformer bank T1. What approximate percentage of the lighting load will the bank be able to carry if one transformer fails and is disconnected?
1. 33.3%
 2. 42.5%
 3. 57.7%
 4. 66.8%
-
- Learning Objective: Identify ship-board lighting fixtures and the lamps they use. Textbook pages 9-6 through 9-13
-
- 6-53. Medium base lamps are commonly used for
1. floodlighting on 1,000-watt lamps
 2. indirect lighting on lamps rated between 300 and 500 watts
 3. detail lighting on 3-way lamps
 4. general lighting on lamps rated at 300 watts or less
- 6-54. You close the circuit switch to a fluorescent lamp. When does current start to flow between the lamp's electrodes?
1. Immediately
 2. When the glow lamp bimetal strip touches the fixed electrode
 3. After the starting circuit opens
 4. As soon as the bimetal strip is heated by the glow lamp
- 6-55. A fluorescent lamp ignites because of induced voltage across the tube electrodes.
- 6-56. Which of the following voltages will operate a fluorescent lamp that is rated at 120 volts without seriously affecting the operation or life of the lamp?
1. 95 V
 2. 105 V
 3. 130 V
 4. 150 V
- 6-57. How can you minimize the stroboscopic effect of fluorescent lamps that operate on a 3-phase a-c circuit?
1. By reducing the number of lamps in the circuit
 2. By combining two or three lamps in a fixture and operating them on different phases
 3. By increasing the number of lamps in the circuit
 4. By operating the lamps in different circuits on different phases
- 6-58. With which of the following lamps could you most easily determine whether a 120-volt lighting fixture is energized with alternating current or direct current?
1. TV lamp
 2. Glow lamp
 3. Fluorescent lamp
 4. Incandescent lamp
- 6-59. When a glow lamp is operated on alternating current, which of the following actions takes place?
1. A light is produced on only one-half cycle
 2. A light is produced on only a full cycle
 3. A light is produced only during a portion of each half cycle
 4. No light is produced
- 6-60. Lighting fixtures are designated according to
1. size
 2. type of enclosure
 3. color
 4. illumination
- 6-61. What factor determines the number and type of regular permanent lighting fixtures installed in a compartment for general illumination?
1. Current
 2. Voltage
 3. Light intensity required
 4. Either current or voltage

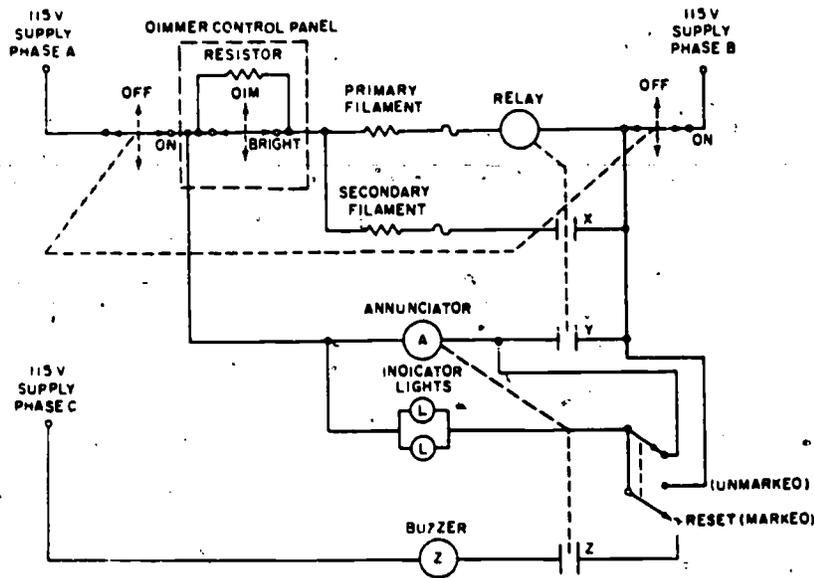


Figure 6D. Running light control schematic diagram.

- 6-62. What is the proper procedure for cleaning light fixtures?
1. Wash and rinse in clean water
 2. Wash with soap and clean water, and rinse in clear water
 3. Wash with detergent and rinse in clean water and ammonia
 4. Wash with soap and clean water, and rinse in clean water and ammonia

Learning Objective: Identify the principles of operation and maintenance of navigational lights.
Textbook pages 9-14 through 9-19

- 6-63. The cable size used for portable towing lights is
1. DCOP 2
 2. TTFA
 3. THOF 3
 4. FHA 4

In items 6-64 through 6-70, select from column B the size of lamp that must be replaced in the fixture of the navigational light or lights in column A.

A. Navigational Lights	B. Lamp Sizes
6-64. Mast head light	1. 50-watt, 2-filament
6-65. Side lights	2. 100-watt, 2-filament
6-66. White stern light	3. 15-watt, 1-filament
6-67. Man overboard light	4. 50-watt 1-filament
6-68. Anchor lights	
6-69. Wake lights	
6-70. Blue stern light	

- 6-71. When deenergized due to failure of the primary filament of a running light, the relay in figure 6D functions to do which of the following actions?
1. Transfer power to the secondary filament of the affected light
 2. Sound the buzzer
 3. Energize an indicator light
 4. All of the above and move an annunciator target to read OUT

6-72. How may the buzzer in figure 6D be silenced while the affected running light is being repaired?

1. Close contacts X and Y
2. Place the reset switch in the vertical position
3. Place the reset switch in the horizontal position
4. Close contacts Y and Z

6-73. By properly positioning the signal selector switch and the circuit control switch, you can make the speed light function as a/an

1. aircraft warning light
2. man-overboard light
3. blinker light
4. steering light

6-74. The Grimes light is used for

1. ASW operations signaling
2. identifying stores
3. indicating a disabled ship.
4. station marking

6-75. What is the purpose of station marking lights?

1. To help ships maintain their stations in a convoy
2. To identify the stores that are to be sent to a replenishment station
3. To identify lines of departure for amphibious operations
4. To identify ships at an ASW station

Assignment 7

SHIPEBOARD LIGHTING AND DEGAUSSING

Textbook Assignment: Pages 9-21 through 10-20

Learning Objective: Recognize construction features of searchlights and procedures for testing, inspecting, cleaning, lubricating, and repairing searchlights. Textbook pages 9-21 through 9-26.

- 7-1. What is the operating voltage of a transformer-equipped, 8-inch, sealed-beam searchlight?
1. 115 V
 2. 60 V
 3. 23 V
 4. 12 V
- 7-2. You can convert the 8-inch, sealed-beam searchlight into a portable searchlight by detaching the backshell and lamp assembly.
- 7-3. The shutter and backshell housings of an 8-inch, sealed-beam searchlight are held together by (a)
1. swivel-mounted yoke
 2. rail clamp
 3. quick-release clamp ring
 4. springs
- 7-4. The transformer of a transformer-equipped, 8-inch, sealed-beam searchlight is located inside the rear section of the searchlight.
- 7-5. Access to the incandescent lamp of a 12-inch searchlight is obtained by
1. opening the shutter
 2. removing a panel on the drum
 3. opening the rear door
 4. removing the reflector
- 7-6. The shutter vane hinges of the 12-inch searchlight should be lubricated with
1. type-R, grade-2 grease
 2. fibrous bearing grease
 3. diesel oil and graphite
 4. 2110 oil
- 7-7. In what unit is the main power switch located in a 24-inch carbon-arc searchlight?
1. Turntable
 2. Lamp housing
 3. Pedestal
 4. Drum
- 7-8. What is the normal voltage developed across the carbon-arc as the result of the series ballast resistor?
1. 75 to 80 V
 2. 65 to 70 V
 3. 50 to 55 V
 4. 20 to 25 V
- 7-9. The carbons of operating searchlights must be replaced when the
1. trailing end of negative carbon disappears into the negative head
 2. positive carbon will no longer feed forward
 3. negative carbon becomes shorter than 4 1/8 inches
 4. positive carbon extends less than 1 inch beyond the obturator
- 7-10. After you turn off the main power switch, your first step should be to
1. move the searchlight to the horizontal position and lock in elevation and train
 2. move the searchlight to maximum elevation and lock in elevation and train
 3. open the front door until the latch engages
 4. open the rear door until the latch engages
- Items 7-7 through 7-11 pertain to the 24-inch carbon-arc searchlight.
- In answering items 7-10 and 7-11, assume that you are replacing the carbons in a 24-inch carbon-arc searchlight.

- 7-11. After you have removed the old stubs, your next step is to release the carbon-feed rollers and
1. ream both carbon heads
 2. replace both carbons
 3. run the carbons through the heads
 4. move both heads to their extreme limits of travel

Learning Objective: Recognize the fundamentals of shipboard diversified lighting equipment. Textbook pages 9-27 through 9-30.

- 7-12. The use of light traps to prevent a light from being shown topside is preferred to the use of door switches when which of the following situations exists?
1. The possibility exists of exposing light from hatches on decks above the compartment
 2. The flow of traffic through the compartment is heavy.
 3. The activities in the compartment must be carried on uninterrupted by a lack of light.
 4. Each of the above

- 7-13. Where in the door switch circuit are lock-in devices installed when the door switches are connected in series and also when the switches are connected in parallel?

1. Anywhere in the circuit in both series and parallel door switch circuits
2. On the outer door only in both series and parallel door switch circuits
3. Any accessible location in a parallel door switch circuit and on the outer door in a series door switch circuit
4. Any accessible location in a series door switch circuit and on the outer door in a parallel door switch circuit

- 7-14. What type of lights can be installed in an area to supplement relay-operated lanterns?

1. Flood lanterns
2. Flashlights
3. Manually operated lanterns
4. Floodlights

- 7-15. Assume that a compartment aboard your ship is furnished electrical power from the 220-volt power circuit, the 117-volt ship's service lighting system, the 117-volt emergency lighting system, and the 117-volt power circuit. What circuit should furnish power for the relay-operated hand lanterns?

1. 220-volt power circuit
2. 117-volt power circuit
3. 117-volt ship's service lighting system
4. 117-volt emergency lighting system

- 7-16. How should the relay-operated lantern be installed?

1. With the relay uppermost
2. With the relay at either side
3. With the relay at the bottom
4. With the relay in any position

- 7-17. While checking the condition of the battery of a portable flood lantern, you discover that only the red and white balls are floating at the surface of the electrolyte. This indicates that the batteries are

1. fully charged
2. 95% charged
3. 50% to 90% charged
4. 10% charged

Learning Objective: Identify the fundamentals of degaussing a ship. Textbook pages 10-1 through 10-7.

- 7-18. Why are degaussing systems installed aboard ship?


1. To magnetize the ship's hull
2. To amplify the earth's magnetic field
3. To lessen the effect of the ship's magnetic field on the earth's magnetic field
4. To increase the effect of the ship's magnetic field on the earth's magnetic field

- 7-19. The magnitude of a ship's permanent magnetism depends on which of the following conditions?

1. The earth's magnetic field where the ship was built
2. The material of which the ship is constructed
3. The orientation of the ship at the time of building with respect to the earth's field
4. Each of the above

- 7-20. Why are Navy ships depermed?

1. To increase the effective number of degaussing coils of the ship
2. To decrease the permanent magnetization of the ship
3. To decrease the induced magnetization of the ship
4. All of the above

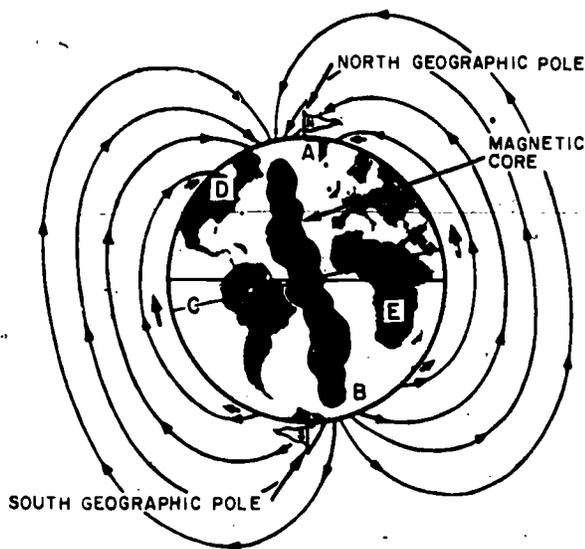

1,401

Figure 7A. The earth's magnetic field.

- Items 7-21 through 7-24 refer to figure 7A.

- 7-21. The lines of force in the earth's magnetic field enter the earth's surface at the
1. north magnetic pole
 2. south magnetic pole
 3. magnetic equator
 4. point midway between the magnetic equator and the south magnetic pole
- 7-22. At which point on its surface is the earth's magnetic field characterized by a strong flux that points away from the surface?
1. A
 2. B
 3. C
 4. D
- 7-23. At which point on the earth's surface can you expect to find a weak magnetic flux aiming in the direction of the center of the earth and a stronger magnetic flux running parallel to the surface?
1. B
 2. C
 3. D
 4. E
- 7-24. The horizontal component of the magnetic field is maximum at the
1. north pole of the magnetic core
 2. south pole of the magnetic core
 3. magnetic equator
 4. north and south geographic poles

- 7-25. On what does a ship's induced magnetism depend?
1. The strength of the earth's magnetic field
 2. The heading of the ship with respect to the inducing earth's field
 3. The vertical induced component of magnetism
 4. Both 2 and 3 above

- 7-26. The horizontal field component of a ship's induced magnetization is made up of longitudinal and athwartship field component.

- 7-27. The magnitude of the vertical field component of a ship's induced magnetization depends on the
1. magnetic latitude
 2. magnetic longitude
 3. ship's heading
 4. horizontal induced field component


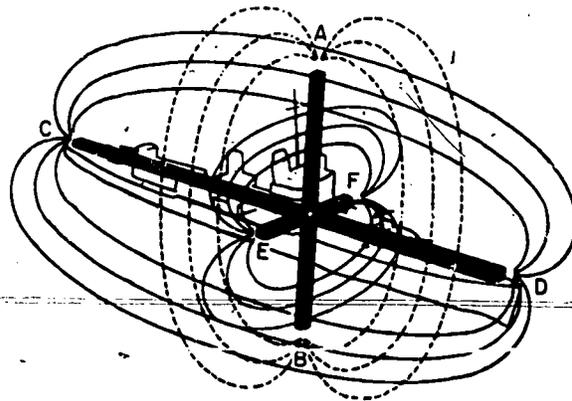


Figure 7B.

1,402

- For items 7-28 and 7-29 refer to figure 7B.


- 7-28. How does the induced magnetization of AB, CD, and EF compare when the ship in figure 7B is on a southerly heading at the magnetic equator?
1. AB and CD maximum; EF minimum
 2. AB maximum; CD and EF minimum
 3. EF and CD maximum; AB minimum
 4. CD maximum; AB and EF minimum
- 7-29. When a ship steaming on a north heading changes course to the east, what happens to the magnetic field?
1. CD changes from zero to maximum
 2. CD changes from maximum to zero and EF will be effected
 3. CD does not change
 4. EF does not change

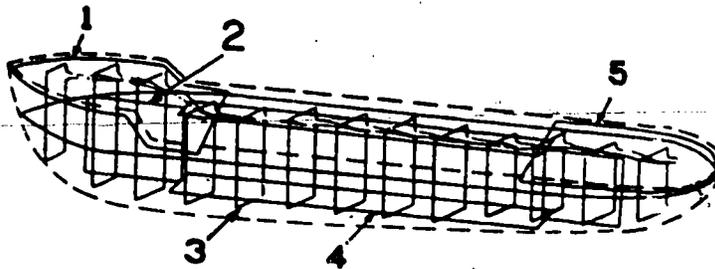

1,403

Figure 7C.

 - 7-30. What is the location of the equipment that measures the magnetic field of a ship as it passes over a degaussing range?
1. On the ship
 2. At or near the bottom of the channel at the degaussing station
 3. Ashore
 4. At any of the above locations
- 7-31. One purpose of check ranging a ship is to determine whether the
1. degaussing coil settings match those given in the degaussing folder
 2. ~~degaussing charts are accurate~~
 3. current settings are adequate
 4. ship's degaussing installation needs new coils
- 7-32. Which type of degaussing coil counteracts the magnetic fields produced by the permanent and induced vertical components of a ship's magnetization?
1. A
 2. L
 3. M
 4. Q
- 7-33. What coils in figure 7C are used to counteract the effects of the induced magnetism of the magnet CD in the figure 7B?
1. Coils 1 and 5 only
 2. Coils 3 and 4 only
 3. Coils 3, 4, and 5
 4. Coils 1, 3, and 5
- 7-34. Which magnetic field is counteracted by the FI-QI degaussing coils?
1. Athwartship induced
 2. Longitudinal induced
 3. Longitudinal permanent
 4. Vertical induced
- 7-35. Magnetic fields produced by the permanent and induced longitudinal components of a ship's magnetization are countered by means of which coils?
1. F coils only
 2. L coils only
 3. Q coils only
 4. F, L, and Q coils
- 7-36. A degaussing coil for correcting athwartships permanent and induced magnetization is designated by
1. A
 2. AX
 3. API
 4. AP - AT
- 7-37. The insulating sleeve for a degaussing conductor is marked by
1. notching
 2. branding
 3. stenciling
 4. painting



1,404

Figure 7D.

- 7-38. Which pair of dotted lines in figure 7D shows the direction of the marking on a properly marked and installed insulating sleeve for a degaussing conductor?
1. A
 2. B
 3. C
 4. D

49.
572

Learning Objective: Identify the components and the operation of a manual degaussing system. Textbook pages 10-8 through 10-14.

- 7-39. A rheostat degaussing installation is energized from a
1. variable voltage motor generator
 2. variable voltage a-c generator
 3. constant voltage d-c generator
 4. constant voltage a-c generator
- 7-40. In an installation where the power for the degaussing coils is supplied by a motor generator, how are the degaussing coil currents controlled?
1. By adjusting a rheostat connected in series with the armature circuit
 2. By adjusting a rheostat connected in parallel with the armature circuit
 3. By adjusting a rheostat connected in the generator field circuit
 4. By adjusting a rheostat connected in series with the degaussing coil and the power supply
- 7-41. Which instrument is used to check the direction of current in a degaussing coil?
1. Phase sequence meter
 2. Compass
 3. Multimeter
 4. Megohm meter
- 7-42. Assume that you are taking polarity readings of a degaussing coil with a small compass. How near to the coil should you move the compass to obtain an accurate reading?
1. Just close enough to touch
 2. Close enough to deflect the compass needle in one direction and then the other
 3. Close enough to get a good deflection but no closer
 4. Close enough to get a good deflection, then closer still by at least an inch
- 7-43. Z-zone degaussing coil settings are adjusted for steadily increasing values of current as a ship heads toward the
1. east
 2. west
 3. poles
 4. equator
- 7-44. Assume that a ship equipped with degaussing gear is steering a steady course in a particular Z and H zone. Under which of the following conditions would all degaussing coil currents remain the same?
1. Ship passes to another Z zone
 2. Ship passes to another H zone
 3. Ship changes course but remains in the same sector
 4. Ship changes course to another sector
- 7-45. What rheostats require resetting in a rheostat degaussing installation when the ship passes from one Z zone to another?
1. F and Q
 2. FI-QI, L, and A
 3. F and Q
 4. F, Q, FI-QI, and A
- 7-46. What must you do before operating the polarity changer of a motor-driven rheostat to prevent the contacts from burning out under a load?
1. Disconnect F, Q, FI-QI, L, and A coils.
 2. Disconnect FI-QI and L coils.
 3. Reduce the current to 5 amperes.
 4. Reduce the current to zero.
- 7-47. Aboard a ship that uses manually operated rheostats, a remote degaussing panel is located in the pilot house or chart house to permit adjustment of the FI-QI and A coil currents as the ship changes heading.
- 7-48. Assume that a ship's Degaussing Folder specifies the use of 80 amperes (maximum). How much current should be used to start the procedure for canceling residual magnetism in the degaussing coil?
1. 20 amp
 2. 40 amp
 3. 60 amp
 4. 80 amp
-
- Learning Objective: Identify the fundamentals of operation of an SM-9A automatic degaussing system. Textbook pages 10-14 through 10-19.
-
- 7-49. The one white light mounted on the remote control unit of the type SM-9A automatic degaussing system indicates when the three degaussing coils are on manual control.

- 7-50. Signals from the ship's gyrocompass system are converted to signals which are proportional to the magnetic heading by the
1. servoamplifier
 2. control transformer
 3. signal amplifier
 4. magnetic variation synchro
- 7-51. What three units are attached to the gear train of the servomotor?
1. Magnetic heading indicator dial, demodulator, and servoamplifier
 2. Magnetic heading indicator dial, synchro resolver, and control transformer rotor
 3. Magnetic heading indicator, demodulator, and resolver
 4. Resolver, control transformer rotor, and servoamplifier
- 7-52. What unit provides the impedance match between the control transformer secondary and the servomotor?
1. Resolver
 2. Control transformer
 3. Servomotor
 4. Servoamplifier
- 7-53. What action takes place in the automatic control circuit of the FI-QI channel causing the second-stage control signal to continue to drive in the same direction?
1. The output current from the second-stage amplifier changes polarity.
 2. The output current from the third-stage amplifier changes polarity.
 3. The polarity of the second-stage control signal is reversed by the pilot relay.
 4. The polarity of the third-stage amplifier reverses independently on a push-pull output.
- 7-54. An error of more than 5 percent in the required degaussing current causes a trouble light to light due to a fault signal produced by
1. the first-stage signal amplifier
 2. the feedback shunt
 3. the reversing contactor and pilot relay
 4. a difference in the first-stage amplifier signal and the feedback shunt signal
- 7-55. Assume that you desire to determine the setting of the magnetic variation dial on the control unit. You can obtain this information from the ship's
1. magnetic compass heading
 2. gyrocompass heading
 3. log
 4. navigational charts
- 7-56. In the signal amplifier circuit, what component is controlled by the pilot relay so that the same polarity is in effect as that of the input signal to the relay amplifier?
1. Magnetic amplifier
 2. Reversing contactor
 3. Synchro differential generator
 4. Current adjustment rheostat
- 7-57. The rate feedback signal functions to improve linearity and stability in the FI-QI channel by
1. increasing when the coil current decreases
 2. opposing the degaussing coil current
 3. opposing oscillatory tendencies in the system
 4. decreasing when the coil current increases
- 7-58. How does the fault signal amplifier cause the trouble light to light when the FI-QI degaussing current is in error with the required degaussing current?
1. By magnetizing the coils of the output windings
 2. By amplifying a signal through a saturable reactor
 3. By causing a decrease in the control current in the saturable reactor
 4. By causing the impedance of the output windings to decrease
- 7-59. What condition in the manual coil (M,FP-QP) channels determines the polarity of the degaussing coil?
1. Amplification of a variable magnitude directional d-c signal
 2. Position of the reversing switch contacts between the first-stage amplifier and the degaussing coil
 3. Position of the coil polarity reversing switch
 4. Application of a d-c voltage signal to the fault signal amplifier

7-60. After the constant voltage supply for the manual M coil channel has passed through a filtering and reducing circuit, what change does it undergo before being used as the control voltage in the M coil channel?

1. Conversion to a-c
2. A voltage decrease
3. A voltage increase
4. Conversion to d-c

7-61. What condition in first-stage and output-stage amplifiers of the FI-QI coil channel maintains a d-c signal of unchanged polarity?

1. An unidirectional d-c signal to the output of the first-stage magnetic amplifier
2. A double-ended, first-stage magnetic amplifier
3. A single-ended, first-stage magnetic amplifier
4. A directional d-c signal to the input of the first-stage magnetic amplifier

Learning Objective: Point out the proper procedures in preventive and corrective maintenance of an automatic degaussing system. Textbook pages 10-19 and 10-20.

7-62. What is the operating requirement for coils energized to the maximum current as specified in the Degaussing Folder?

1. Weekly for 4 hours
2. Weekly for 2 hours
3. Daily for 1 hour
4. Monthly for 4 hours

7-63. What is the method for energizing the coils after the system has been operated the required time, and the coil current is reduced to zero?

1. Energize for 2 hours with maximum current in the opposite direction
2. Energized momentarily with maximum current in the opposite direction
3. Energized momentarily with one-half maximum current in the opposite direction
4. Energize for 2 hours with one-half maximum current in the opposite direction

7-64. Assume that you are taking insulation resistance readings on an A coil of a degaussing system that is supplied by a rectifier. A reversing switch is installed on the coil side of the rectifier disconnect switch. In what position should you place the reversing switch and the disconnect switch before taking your measurements?

1. Open the reversing switch and close the disconnect switch
2. Close both switches
3. Open both switches
4. Close the reversing switch and open the disconnect switch

7-65. After being tested for grounds, feeder and control circuits should be reconnected to their terminals immediately to prevent a misconnection later.

Assignment 8

ELECTRICAL PROPULSION AND CONTROLS; CENTRAL OPERATIONS SYSTEM

Textbook Assignment: Pages 11-1 through 11-14

Learning Objective: Recognize operating principles and procedures for the major components of a d-c propulsion system. Textbook pages 11-1 through 11-10.

- 8-1. To reverse the direction of propeller rotation in a diesel-electric d-c propulsion system, what must occur?
1. The direction of rotation of the propulsion generator must be reversed
 2. The magnitude of the generator voltage must be changed
 3. The polarity of the generator terminal voltage must be changed
 4. The direction of rotation of the diesel engine must be reversed
- 8-2. The shunt fields of the propulsion motor get their power from
1. the propulsion generator being used for auxiliary power
 2. one of the propulsion exciters
 3. the auxiliary 240-volt supply
 4. one of the propulsion generators
- 8-3. What voltmeters located on the main propulsion control panel serve dual purposes?
1. M2, M4, and M9
 2. M1 and M4 only
 3. M2 and M9 only
 4. M1, M4, and M9
- 8-4. Excitation for the auxiliary generator on a fleet tug is provided by the action of a contactor controlled by which switch?
1. SW1
 2. SW2
 3. SW4
 4. SW6
- 8-5. The setting of which switches determines which two generators will be utilized for propulsion purposes?
1. SW7 and SW8
 2. SW8 and SW12
 3. SW9 and SW10
 4. All of the above
- 8-6. When there is a short circuit in the auxiliary power circuit, which relays and contactors operate?
1. Relay OL1 opens the circuit to K1
 2. Relay OL1 closes and contactor K2 opens
 3. Relay OL2 opens the circuit to K1
 4. Relay OL2 closes and contactor K2 opens
- 8-7. What is the function of the two resistors, R11, in series with RH2 and each of the motor fields?
1. Ground fault protection
 2. Discharge of stray field currents
 3. Armature load balancing
 4. Field load balancing
- 8-8. The propulsion controller shaft is attached to three transmitter rheostats. These rheostats are connected to synchro receivers that adjust the
1. engine speed governor
 2. exciter field current
 3. motor field current
 4. 240-volt d-c supply
- 8-9. When starting the propulsion system, you first make sure that all of the controls are in their normal shutdown positions. After that your first step is to
1. start the diesel engine for auxiliary power
 2. operate the generator control switches
 3. start the diesel engine for cooling
 4. close the excitation control switches
- 8-10. During the starting procedure, you check the exciter armature voltage immediately after
1. closing the engine speed control switch
 2. closing the generator control switches
 3. starting the diesel engine
 4. closing the excitation control switch

- 8-11. Moving the speed-controller handwheel through approximately the first half of its travel will affect the
1. generator field excitation
 2. motor field excitation
 3. prime mover speed
 4. diesel-governor position
- 8-12. During normal starting of the propulsion system, excitation is applied to the propulsion motor fields by the operation of the
1. excitation control switch
 2. engine speed control switch
 3. generator control switch
 4. controller
- 8-13. With the controller advanced beyond the eleventh position, what is the effect on the (a) speed of the exciter and the (b) excitation to the generator?
1. (a) increases; (b) decreases
 2. (a) decreases; (b) increases
 3. (a) increases; (b) remains constant
 4. (a) remains constant; (b) increases
- 8-14. When cutting out a generator operating at 500 rpm, you must wait several seconds between opening the control switch and operating the setup switch in order to prevent
1. overloading the control circuit
 2. overloading the diesel engine
 3. motoring the generator
 4. overexciting the motor
- 8-15. Before you move setup switch SW10 in connecting a generator from the auxiliary power position to the propulsion position, what must you do?
1. Idle the engines
 2. Move controller step-by-step in opposing direction beyond STOP position
 3. Turn setup switch, SW11, to OFF
 4. Close switch SW2
- 8-16. The auxiliary power field contactor in the control circuit of a fleet tug propulsion system is energized when you close switch
1. SW1
 2. SW2
 3. SW7
 4. SW8
- 8-17. Which record is turned in to the Ship's Engineer Officer each morning for signature?
1. Electrical Log
 2. Engineer's Bell Book
 3. Electrical Propulsion Operating Log
 4. Each of the above
- 8-18. One of the records that is considered officially legal for use by a civilian or military court is the
1. Engineering Log
 2. Station Workbook
 3. Material History
 4. Main Engine Operating Record
- 8-19. The Engineer's Bell Book of a ship provides a legal record concerning time of any change in movement of the ship's propellers.
- 8-20. Assume that repairs to a drydocked ship have been completed and the ship departs the drydock to head out to sea. During the time that the personnel are at their special sea detail stations, entries in the Engineer's Bell Book should be made by the
1. engineer officer
 2. engineering officer of the watch
 3. throttleman
 4. assistant throttleman
- 8-21. How do you correct an error you made in recording a signal on a Bell Book sheet?
1. Erase the wrong entry and insert the correction
 2. Draw a line through the wrong entry and enter the correction on the next line
 3. Circle the wrong entry and insert the correction at the bottom of the sheet
 4. Blank out the wrong entry and insert the correction in an adjacent column
- In answering items 8-22 through 8-24 assume you are at a throttle control station recording times, signals, and orders on a separate sheet of the Engineer's Bell Book. At the same time, you receive two signals from the bridge--ahead 1/3 on the engine order telegraph and 35 turns on the engine revolution telegraph.
- 8-22. What entry do you make in column 1 of your Bell Book sheet?
1. Engine counter reading
 2. Time you received the signals
 3. Number of propeller turns resulting from the number ordered
 4. Number of propeller turns corresponding to the engine order telegraph signal

Learning Objective: Point out uses and techniques of keeping the operating records, the Engineer's Bell Book, and the Engineering Log. Textbook pages 11-10 through 11-14.

- 8-23. What are the respective column 2 and column 3 entries on your sheet?
1. 1 and 35 or 35 and 1
 2. 35 and 1 or 1/3 and 35
 3. 1/3 and 35 or 35 and 1/3
 4. 3 and 1/3
- 8-24. The next signal transmitted by the engine revolution telegraph is for 40 turns. The engine order telegraph stays at 1/3. How should you handle the entries for column 2 and 3 on your sheet?
1. Leave column 2 blank; enter 40 turns in column 3
 2. Enter 40 in column 2; leave column 3 blank
 3. Enter 1/3 in column 2 and 40 in column 3
 4. Enter 40 in column 2 and 1/3 in column 3
- 8-25. Total engine miles steamed, as well as fuel expended during one day, are recorded in the
1. Engineer's Bell Book
 2. Engineering Log
 3. boiler room operating record
 4. steaming orders
- 8-26. Suppose you make an error when preparing the original entries in the Engineering Log. What action must you take?
1. Delete the error, get the OOD to initial it, then make the correct entry
 2. Overline the error, initial it yourself, and make the correct entry
 3. Identify and correct the error in the remarks you prepare before going off duty
 4. Identify the error in a written report to the engineer officer so he can correct it when he signs the log
- 8-27. The commanding officer signs the Engineering Log once each month on the
1. fifth calendar day
 2. tenth calendar day
 3. twentieth calendar day
 4. last calendar day
- 8-28. Usually the Engineering Log must be retained aboard ship for a minimum period of
1. 1 year
 2. 2 years
 3. 3 years
 4. 4 years

Learning Objective: Recognize capabilities and operating principles of a central operating system (COS). Textbook pages 12-1 through 12-24.

- 8-29. The COS used with an automated engineering plant is capable of controlling all
1. shaft speeds and direction from a bridge console and an engineroom console
 2. major functions of the propulsion plant from a bridge console and an engineroom console
 3. auxiliary equipment and selected primary equipment in the machinery spaces from an engineroom console
 4. auxiliary equipment and selected primary equipment in the machinery spaces from a bridge console
- 8-30. Which of the following is a major advantage of a COS?
1. Consolidation of control
 2. Fewer watchstanders
 3. Provides the OOD with more direct ship control
 4. Each of the above
- 8-31. All the vital circuits or systems connected with the COS that need continuous monitoring are provided with a display panel using digital demand meters.
- 8-32. If any critical temperature or pressure goes beyond operating limits, the system will
1. automatically shutdown
 2. sound an alarm to alert the bridge
 3. sound an alarm to alert the watchstander
 4. automatically adjust the critical unit
- In answering items 8-33 through 8-36, use the following as alternatives.
1. Generator section
 2. Propulsion section
 3. Boiler section
 4. Auxiliaries section
- 8-33. From which section of the engineroom console can an operator test each switchboard for grounds?
- 8-34. From which section of the engineroom console can the bridge be given control of the ship's speed?

- 8-35. From which section of the engineroom console can the ship's speed be read?
- 8-36. From which section of the engineroom console can the air conditioning and refrigeration be controlled?
- 8-37. Which of the following functions can the data logger section perform?
1. Abnormal printouts
 2. Time interval printouts
 3. Demand printouts
 4. Each of the above
- 8-38. Under normal operation, how much of a change in shaft speed will cause an automatic printout?
1. 5 rpm
 2. 8 rpm
 3. 10 rpm
 4. 12 rpm
- 8-39. When a printout is received in red and an alarm sounds, what is the first action to take?
1. Troubleshoot the alarm circuit
 2. Sound the trouble alarm for the bridge
 3. Push the alarm acknowledge button
 4. Secure the circuit in alarm condition
- 8-40. Which section of the ship has provisions for remote control of the throttle?
1. After engineroom
 2. Bridge
 3. Secondary conn
 4. All of the above
- 8-41. Which of the following devices are used to convert electrical signals to pounds per square inch?
1. Microammeters
 2. Temperature sensors
 3. Differential pressure-to-current transmitter
 4. Data logger
- 8-42. System temperatures can be monitored or measured by the use of temperature sensing elements. What is the operating principle of the sensing elements?
1. They contract or expand as the temperature changes
 2. They change in electrical resistance as the temperature changes
 3. Atmospheric pressure rises or drops as the temperature changes
 4. More or less air comes in contact with them as the temperature changes
- 8-43. What is the purpose of the thermowell which receives the detector?
1. To provide for system operation while the detector is being replaced
 2. To provide a backup protection
 3. To ensure ease of plant shutdown
 4. To provide ease of detector removal
- 8-44. In the event of a malfunction in the throttle control amplifier system, how may the throttle be operated?
1. Manual control only
 2. Electrical control only
 3. By either manual or electrical control
 4. Hydraulic control
- 8-45. Under normal operating conditions, the Synchronous Timing Generator provides what frequency?
1. 10 Hz
 2. 20 Hz
 3. 40 Hz
 4. 400 Hz
- 8-46. Which data logger component senses and delegates by priority the mode of operation the system will operate in?
1. Request control
 2. Program control
 3. Program contact
 4. Scanner
- 8-47. What is the purpose of the Isolation Amplifier?
1. To adjust analog inputs.
 2. To isolate the data scanner from ground
 3. To protect operating personnel
 4. Each of the above
- 8-48. Which component performs the arithmetic necessary for linear reproduction?
1. The Real Time Clock
 2. The Log Printout
 3. The Word Distributor
 4. The Scaling Factor
- 8-49. The ahead and astern position generator operates on signals of the same polarity.
- 8-50. What is the purpose of adjusting the signal within the amplifier of the function generator?
1. To zero the input signal
 2. To zero the drive synchro
 3. To adjust the output signal
 4. To provide for signal inversion

8-51. The silicon control rectifier (SCR) power package output drives the pilot motor to

1. position a pilot valve in the hydraulic actuator
2. control the electric contacts that operate the throttle valve
3. operate the limit switches when the throttle reaches its predetermined limit
4. disengage the clutch for manual control

8-52. When would the clutch in the throttle control normally be engaged?

1. When the bridge has control
2. During automatic operation
3. During manual operation
4. Each of the above

8-53. In an emergency (loss of normal power), how long will the batteries in the no-break power supply last with a normal load?

1. 30 minutes
2. 40 minutes
3. 50 minutes
4. 60 minutes

8-54. The 12-volt power supply has an adjustment to maintain a tolerance of ± 0.05 volts.

Assignment 9

ELECTRONIC COMPONENTS AND CIRCUITS

Textbook Assignment: Pages 13-1 through 13-37

Learning Objective: Identify the various components in an electronic circuit by their color codes. Textbook pages 13-1 through 13-9.

- 9-1. Which of the following devices has a measurable effect on an a.c. circuit?
1. Capacitor
 2. Inductor
 3. Resistor
 4. Each of the above
- 9-2. What power ratings do a.c. wire-wound resistors have?
1. 1 watt
 2. 2 watts
 3. More than 2 watts
 4. 1/2 watt
- 9-3. Wire-wound resistors generally have a larger tolerance than composition resistors.
- 9-4. A 5,000-ohm composition resistor with a tolerance of 5% will measure between
1. values which cannot be determined with information given
 2. 4,500 ohms to 5,500 ohms
 3. 4,750 ohms to 5,250 ohms
 4. 5,000 ohms to 5,500 ohms
- 9-5. The third color band on a composition resistor indicates the
1. reliability level per 1000 hr
 2. tolerance
 3. second significant number
 4. multiplier
- 9-6. The fifth color band on a composition resistor indicates the
1. reliability level per 1000 hr
 2. tolerance
 3. second significant number
 4. multiplier
- 9-7. A resistor with a negative temperature coefficient is generally composed of
1. copper
 2. carbon
 3. tungsten
 4. electrolyte
- 9-8. When the ambient temperature increases in an electrical circuit that has a thermistor, what happens to the resistance of the thermistor?
1. It will be independent of load current
 2. It will decrease
 3. It will increase
 4. It will be directly proportional to load current
- 9-9. What is the function of a varistor?
1. To provide a means of varying the input voltage
 2. To replace a voltage multiplier
 3. To replace a potentiometer
 4. To protect a circuit from high voltage surges
- 9-10. The unit of capacitance is the
1. farad
 2. henry
 3. ohm
 4. watt
- 9-11. In a paper capacitor, waxed paper is used as the
1. dielectric
 2. negative plate
 3. positive plate
 4. electrolyte
- 9-12. A ceramic capacitor is so-named because of its
1. flexibility
 2. dielectric property
 3. durability
 4. elasticity
- 9-13. If one section of a multisection capacitor shorts out, the entire capacitor must be discarded.
-

- 9-14. What determines the working voltage of an electrolytic capacitor?
1. Its low leakage resistance
 2. The type and thickness of the dielectric
 3. Both 1 and 2 above
 4. The polarity of the terminals

- 9-15. In a fixed mica capacitor, the color code on the top row is black, orange and gray from left to right, and the bottom row is red, black and orange from right to left. What is the value of capacitance?
1. 38 pf
 2. 138 pf
 3. 380 pf
 4. 3800 pf

- 9-16. A black and yellow lead on a transformer indicates
1. a tapped primary
 2. a tapped secondary
 3. the ground wire
 4. the high voltage side

- 9-17. When you suspect a transformer is bad, what should you do first?
1. Check for grounds
 2. Read winding resistance with an ohmmeter
 3. Check for opens
 4. Read winding output with voltmeter

- 9-18. When troubleshooting a chassis, you can safely assume the wire color coding has been adhered to.

Learning Objectives: Describe the construction of vacuum tubes and how they are used in an electronic circuit. Textbook pages 13-9 through 13-13.

- 9-19. What happens when the plate of a diode is negative with respect to the cathode?
1. Current flow will be from plate to cathode
 2. Tube temperature will increase
 3. Tube current will not flow
 4. Tube current will increase

- 9-20. Which of the following substances is/are commonly used in the construction of cathodes?
1. Tungsten
 2. Thoriated-tungsten
 3. Both 1 and 2 above
 4. Copper

- 9-21. How many ways may a cathode be heated?
1. One
 2. Two
 3. Three
 4. Four

- 9-22. When an electron strikes the plate and dislodges another electron from the plate, what is this reaction called?
1. Thermionic emission
 2. Primary emission
 3. Secondary emission
 4. Saturation

- 9-23. What type of vacuum tube is indicated by a tube symbol with a dot?
1. A gas-filled tube
 2. A high-vacuum tube
 3. A low-vacuum tube
 4. A diode

- 9-24. A tube that glows can generally be considered to be
1. gas filled
 2. shorted
 3. burned out
 4. a duodiode

- 9-25. A tube with two plates and one or two cathodes is called a
1. diode
 2. duodiode
 3. triode
 4. duotriode

- 9-26. What type of tube has eight pins on its base?
1. Duodiode
 2. Triode
 3. Duotriode
 4. A type which cannot be determined with the information given

- 9-27. How are tube sockets numbered?
1. Clockwise from the key when viewed from bottom
 2. Counterclockwise from the key when viewed from the bottom
 3. Various ways depending on the manufacturer
 4. Either 2 or 3 above

- 9-28. Plate dissipation is the limiting value of current which must NOT be exceeded in order to prevent damage to the tube.

Learning Objective: Recognize principles involved in semiconductor theory and how it applies to transistors. Textbook pages 13-13 through 13-18.

- 9-29. Which of the following substances would be considered the best conductor of electricity?
1. One whose orbiting electrons are loosely bound
 2. One whose orbiting electrons are tightly bound
 3. One whose electrical charge is zero
 4. One whose electrical charge is positive
- 9-30. Which of the following substances would be considered the best insulator of electricity?
1. One whose orbiting electrons are loosely bound
 2. One whose orbiting electrons are tightly bound
 3. One whose electrical charge is zero
 4. One whose electrical charge is positive
- 9-31. When referring to the "hole" in the atomic theory of electricity, we are actually speaking of the
1. degree of impurity
 2. chemical used in making the semiconductor
 3. charge of the nucleus
 4. vacancy left by an electron escaping
- 9-32. In speaking of atomic theory, holes are said to
1. be negative ions
 2. move from negative to positive
 3. move from positive to negative
 4. remain stationary
- 9-33. What is the effect of adding arsenic to a germanium crystal?
1. It increases the number of free electrons
 2. It decreases the number of free electrons
 3. It increases the number of holes
 4. It decreases the number of holes
- 9-34. In a P-N junction diode, the P-type material has an excess of holes and the N-type material has an excess of electrons.
- 9-35. In a P-N junction diode, the voltage is said to be in the "reverse" direction when
1. current flows freely from positive to negative
 2. current flows freely from negative to positive
 3. the negative lead is on the N material
 4. the positive lead is on the N material
- 9-36. In figure 13-21 of the text, where is reverse bias connected?
1. Between emitter and collector
 2. Between emitter and base
 3. Between base and collector
 4. Across the A battery
- 9-37. In figure 13-22 of the text, what is the result of connecting an alternating signal to the emitter-base junction?
1. The current through the emitter-base junction is alternately increased and decreased
 2. The current through the base-collector junction is alternately increased and decreased
 3. The signal to the load is alternately increased or decreased
 4. Each of the above is true
- 9-38. Which of the following conditions is NOT an advantage of a transistor?
1. It consumes relatively small power
 2. It can withstand rough handling
 3. It is not affected by heat
 4. It has a long life
- 9-39. In figure 13-24 of the text, what is the identification of the case connection in the lower right-hand symbol?
1. Emitter
 2. Base
 3. Collector
 4. Ground
-
- Learning Objective: Recognize methods of identifying transistors and how they are connected. Text-book page 13-18.
-
- 9-40. When replacing transistors, the repairman should always rely on the shape of the replacement to determine connections.
- 9-41. Which of the following connections is the basic way of connecting a transistor?
1. Common or grounded base
 2. Common or grounded emitter
 3. Common or grounded collector
 4. All of the above

Learning Objective: Identify construction and uses of a basic triode tube. Textbook pages 13-19 and 13-20.

- 9-42. What makes the triode useful as an amplifier?
1. The control grid
 2. The screen grid
 3. The suppressor grid
 4. The load resistor
- 9-43. What is the effect of placing a positive charge on the control grid of a triode?
1. It shuts off plate current
 2. It decreases the signal to the tube
 3. It increases plate current
 4. It increases cathode bias
- 9-44. What effect, if any, would varying the plate voltage have on the operation of a triode?
1. Cause variation in control grid voltage
 2. Cause variation in plate current
 3. Shut off plate current
 4. no effect
- 9-45. What effect would varying the control-grid voltage have on the operation of a triode?
1. It would shut off plate current
 2. It would shut off heater current
 3. It would cause large variations in plate current
 4. It would cause large variation in grid current
- 9-46. Which, if any, of the following elements is the most important in an oscillator?
1. Resistance of the input circuit
 2. Inductance of the input circuit
 3. Capacitance of the input circuit
 4. None of the above

Learning Objectives: Identify characteristics of multielement tubes. Textbook pages 13-21 through 13-22.

- 9-47. Which of the following is NOT considered a multielement tube?
1. Tetrode
 2. Pentode
 3. Triode
 4. All of the above

- 9-48. With regard to the screen grid in a tetrode tube, which of the following characteristics is true?
1. It increases capacitance of the tube
 2. It decreases capacitance of the tube
 3. It causes tube oscillations
 4. It suppresses plate current
- 9-49. With regard to the suppressor grid in a pentode tube, which of the following characteristics is true?
1. It prevents tube oscillations
 2. It is negative with respect to the cathode
 3. It is positive with respect to the cathode
 4. It is the same potential as cathode

Learning Objectives: Identify types of bias and amplifier coupling. Textbook pages 13-22 through 13-28.

- 9-50. When a battery or other constant power source is used to obtain bias, this is
1. fixed bias
 2. self bias
 3. cathode bias
 4. grid-leak bias
- 9-51. What is the function of a grid-leak capacitor?
1. To provide a resonant circuit
 2. To leak off excess grid current
 3. To apply input signal to the grid
 4. Each of the above
- 9-52. A cascaded amplifier is one where
1. amplifier stages are connected in parallel
 2. amplifier stages are connected in series
 3. amplifiers are self-biased
 4. amplifiers are fixed-bias
- 9-53. An RC-coupled amplifier would be used where
1. voltage amplification is desired with little or no power output
 2. voltage amplification is desired with a large power output
 3. power amplification is desired with little or no voltage amplification
 4. there is no need to cascade stages

- 9-54. The low gain of an RC-coupled amplifier makes it undesirable for use in RF amplifiers.
- 9-55. What is/are the advantage(s) of using an impedance-coupled amplifier over an RC-coupled amplifier?
1. Lower supply source required
 2. Smaller loss in power
 3. Better efficiency
 4. Each of the above
- 9-56. Where will impedance-coupled amplifiers generally be found?
1. Last stage power output
 2. First stage power input
 3. Intermediate frequency stage
 4. Power supply unit
- 9-57. Regarding a transformer-coupled amplifier, which of the following parameters is true?
1. Improved frequency
 2. Higher gain
 3. Higher output
 4. Bias voltages are separated between stages
- 9-58. When the plate of the driver stage is connected to the grid of the driven stage, this is generally known as a/an
1. single-source biasing
 2. inductance-coupled amplifier.
 3. RC-coupled amplifier
 4. directly coupled amplifier
- 9-59. Which of the following is NOT an advantage of a directly coupled amplifier?
1. There is no phase distortion
 2. It requires no voltage supply regulation
 3. There is no loss of frequency response
 4. Time delay between stages is negligible
- 9-60. Which of the following is a contributing factor in the amount of current flow in a transistor?
1. Size of load resistor
 2. Ohmic value of load
 3. Type of transistor
 4. Vigilance of the operator
- 9-61. Single-source biasing has little, if any, effect on direction of base lead current.
- 9-62. Single-source biasing has the advantage of
1. eliminating the need for a separate power supply
 2. providing a built-in heat-sink
 3. a higher output/input ratio
 4. a higher frequency response
- 9-63. In a PNP transistor connected as a common emitter with NO signal applied, what would happen if the base resistor were to open?
1. Decrease in the amount of forward bias with no signal applied
 2. Increase in the difference in potential between the base and emitter
 3. Decrease in base-emitter current flow
 4. All signals would be lost
-
- Learning Objective: Point out principles used in testing vacuum tubes and transistors. Textbook pages 13-29 through 13-37.
-
- 9-64. Prior to testing a tube in a tube tester, you should
1. allow for sufficient warmup of tester
 2. be assured tube under test is defective
 3. insert the tube in the correct test socket
 4. ensure controls are set to proper positions
- 9-65. To protect the TV-7/U tube tester from damage due to overloads, it is provided with a
1. fuse in series with the transformer primary
 2. circuit breaker in series with the transformer primary
 3. lamp in series with the transformer primary
 4. fuse in series with the transformer secondary
- 9-66. When a vacuum tube is being tested with the TV-7/U tube tester and both plates of the neon lamp glow, which, if any, of the following conditions is indicated?
1. Normal
 2. A short-circuited tube
 3. A gassy tube
 4. None of the above

- 9-67. You are performing a gas test on a vacuum tube. You shift switch S from position 1 to position 2 and NO change occurs in the meter reading. What, if anything, is indicated?
1. A gassy tube
 2. A normal condition
 3. A shorted tube
 4. Nothing
- 9-68. If a tube with an indirectly heated cathode under test develops noise, what can be safely assumed?
1. The grid has a positive bias
 2. The tube is gassy
 3. A short exists between cathode and heater
 4. An open exists between cathode and suppressor grid
- 9-69. In a rectifier test on a vacuum tube, you can test each rectifier of a duodiode separately.
- 9-70. To perform an I_{CO} test on a transistor using a TS-1100/U, which, if any, of the following steps must be taken?
1. Test with multimeter first
 2. Remove the transistor from the circuit
 3. Leave the transistor in the circuit
 4. None of the above
- 9-71. When a transistor is tested with a multimeter, which of the following precautions must be observed?
1. Ensure meter input resistance is at least 5 megohms
 2. Remove the transistor from the circuit
 3. Leave the transistor in the circuit
 4. Ensure meter sensitivity is at least 10,000 ohms per volt
- 9-72. When testing transistors with a multimeter, you should exercise care to ensure that internal voltage does NOT exceed what value?
1. 12 volts
 2. 6 volts
 3. 5 volts
 4. 4 volts
- 9-73. When testing a circuit containing transistors, which of the following precautions must you observe?
1. Use a multimeter with same impedance as circuit under test
 2. Always short circuit transistors
 3. Ensure test equipment is properly grounded on ship's hull
 4. Use an ohmmeter which passes one milliamp or less through the test circuit
- 9-74. When performing a leakage test, you should replace the transistor if the leakage current exceeds
1. 5 times allowable current
 2. 2 times allowable current
 3. 3 times allowable current
 4. 4 times allowable current
- 9-75. How does the transistor test set TS-1100/U eliminate interference from direct current in transistor circuits?
1. By utilizing an oscillator
 2. By shorting all transistors
 3. By shorting all capacitors
 4. By utilizing a.c.

Assignment 10

LOGIC SYSTEMS AND ELECTRICAL AUXILIARIES

Textbook Assignment: Pages 14-1 through 15-22.

Learning Objective: Identify logic symbols by function and determine input and output signals for basic logic elements. Textbook pages 14-1 through 14-9.

- 10-1. The study of number systems is essential for the study of all logic systems.
- 10-2. Figure 10A shows a piping system. This system could be represented by the AND symbol.
- 10-9. The main difference between the NAND and AND circuits is inversion of the input signals.
- 10-10. The inhibit circuit acts as an inverter in the input circuit of any logic device in which it is installed.
- 10-11. In flip flops, what is the purpose of the trigger?
1. Reverse the output signals
 2. Reverse the input signals
 3. Generate a 0 state
 4. Generate a 1 state

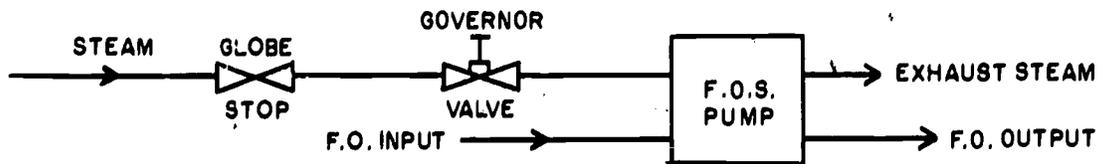


Figure 10A.

- 10-3. How are truth tables read?
1. Right to left and top to bottom
 2. Left to right and top to bottom
 3. Left to right and bottom to top
 4. Right to left and bottom to top
- 10-4. How many possible states does a logic circuit have?
1. One
 2. Two
 3. Three
 4. Four
- 10-5. We speak of logic circuits as sensing the presence or absence of
1. milliamps
 2. power
 3. current
 4. voltage
- 10-6. When reading a truth table, we do not care about the 0-state.
- 10-7. In figure 14-2B of the text, the input contacts are wired similar to start switches.
- 10-8. In figure 14-3B of the text, the input contacts are wired similar to stop switches.
- 10-12. What type of truth table is Table 10A?
1. OR
 2. AND
 3. NOR
 4. NAND

INPUT		OUTPUT
A	B	F
1	0	1
0	1	1
1	1	1
0	0	0

Table 10A

In items 10-13 through 10-15 match the identities in column A with the symbols in column B.

Column A

Column B

- 10-13. Signal Converter
- 10-14. NAND
- 10-15. AND

- 1.
- 2.
- 3.
- 4.

- 10-16. The length, or duration, of the output of the single-shot multivibrator is determined by
1. the length of the input signal
 2. the amplitude of the input signal
 3. the input signal shape
 4. the circuit characteristics of the multivibrator
- 10-17. What determines the length, or duration of the output signal of the Schmitt trigger?
1. The length of the input signal
 2. The amplitude of the input signal
 3. The circuit characteristics of the Schmitt trigger
 4. Both 1 and 2
- 10-18. The first set signal to the Memory circuit will cause the output signal to go to the 1 state.
- 10-19. The 1 state output signal of a memory continues after the input signal that caused it is turned off.
- 10-20. What causes all of the output signals of a five-bit stepper to return to the 0 state?
1. A pulse on ST
 2. A pulse on R
 3. A pulse on S
 4. A pulse on 5

Learning Objective: Trace a signal through a logic print. Textbook pages: 14-10 and 14-11.

Questions 10-21 through 10-28 refer to figure 14-18 of the text.

- 10-21. What are the sources of signals to OR gate A8B in figure 14-18 of the text?
1. A2B and similar switches which require a down movement
 2. A7B and similar switches which require a down movement
 3. A2B and low speed signal
 4. A8D and low speed signal
- 10-22. The elevator may be sent to the second deck from any station regardless of the elevator's location.

- 10-23. What is the characteristic of the logic that is used with the elevator described in chapter 14?

1. The 1 state is positive 10 volts.
2. The 1 state is negative 10 volts.
3. The 0 state is positive 10 volts.
4. The 0 state is negative 10 volts.

- 10-24. What voltage is available at the elevator push button?

1. +48 volts
2. -48 volts
3. -10 volts
4. +10 volts

- 10-25. Which direction do we take in tracing a signal from the AND, A2B to the set contact of the second deck memory, A10B?

1. Up and to the right
2. Down and to the right
3. Up and to the left
4. Down and to the left

- 10-26. What completes the circuit to cause AND, A19C to operate and set the Down Memory, B5A?

1. The OR gate, A8B
2. The Pulser, A16A
3. The stepper, A18
4. The OR gate, A15C

- 10-27. What circuit(s) is/are energized by OR, A12B in figure 14-18 of the text?

1. The circuit for disengaging the locking bars
2. The circuit for the warning bell
3. Both 1 and 2
4. OR, A12A

- 10-28. Where on figure 14-18 of the text do you find the sources of the signals to AND A12D?

1. Second deck memory, A10B and OR, A12A
2. Second deck memory, A10B and Sheet 2 of 2, figure 14-18
3. OR, A12A and Pulser, A16B
4. Pulser A16B and Second deck memory A10B

Learning Objective: Locate faulty modules on the logic print and in the control cabinet by state lights and position. Textbook pages: 14-11 and 14-12.

- 10-29. How many NOT inverters are on an inverter module board?
1. 5
 2. 2
 3. 3
 4. 4

10-30. The NOT inverter board is interchangeable with a memory board.

- 10-31. If the state light is lit on the third OR circuit of a module board, it is located
1. third from the left
 2. third from the right
 3. third from the top
 4. third from the bottom

- 10-32. What is the location of memory circuit B5A?
1. First row from top, fifth board to left, and first memory
 2. Second row from top, fifth board to right, and first memory
 3. First row from bottom, fifth board to right, and first memory
 4. Second row from bottom, fifth board to left, and first memory

- 10-33. In figure 14-18 of the text, if the B9D state light is lit and the A13D state light is dark, what is the source of the signal B9D?
1. B6A
 2. A13D
 3. B4C
 4. 2-18 signal from manual electric (JOG)

Learning Objective: Point out principles of operation and safe work practices for small boat engine starting systems, ignition systems, or battery charging systems. Textbook pages: 15-1 through 15-3.

- 10-34. The power source for the 24-volt engine starting circuits of small boats consists of
1. two 12-volt batteries connected in parallel
 2. two 12-volt batteries connected in series
 3. four 6-volt batteries connected in parallel
 4. four 6-volt batteries connected in series

- 10-35. The specific gravity of battery electrolyte is the ratio of
1. water temperature to acid temperature
 2. weight of a specific volume of water to weight of the same volume of acid
 3. weight of a specific volume of acid to the same volume of water
 4. weight of acid to temperature of water

- 10-36. Refer to textbook figure 15-1. How will the float of the center hydrometer react if the specific gravity is 1250?
1. Rise 4 marks to 1250
 2. Sink 2 marks to 1250
 3. Remain in its present position
 4. Sink 4 marks to 1250

- 10-37. What is the corrected specific gravity of a battery whose temperature is 90° F and the hydrometer reading is 1160?
1. 1161
 2. 1162
 3. 1163
 4. 1164

10-38. When mixing electrolyte, you pour the acid into the water.

- 10-39. What is the first step in treating yourself if battery acid gets on your hands?
1. Wash them thoroughly with fresh water.
 2. Spread a thin coating of petrolatum over them.
 3. Dust them with boric acid powder.
 4. Sprinkle baking soda over them.

Learning Objective: Recognize factors of battery testing and charging, and solve problems relevant thereto.
Textbook pages: 15-4 through 15-6.

- 10-40. To determine the number of ampere-hours expended during a test discharge using the specific gravity method, what information pertinent to specific gravity must be known?
1. The specific gravity when the battery is fully charged
 2. The specific gravity after the battery has been discharged
 3. The reduction in specific gravity per ampere-hour
 4. All of the above

- 10-41. During normal charging, the value of the charging current is changed from the starting to the finishing rate when the battery begins to
1. show signs of sulfation
 2. gas freely
 3. fall in temperature
 4. oxidize
- 10-42. An equalizing charge on a battery is continued until the
1. terminal voltage shows no change for a 4-hour period
 2. charging current shows no change for a 4-hour period
 3. specific gravity on all cells shows no change for a 4-hour period
 4. temperature of all cells exceeds 125°F
- 10-43. What is the maximum temperature for the electrolyte of a lead-acid cell?
1. 100°C
 2. 125°C
 3. 125°F
 4. 212°F
- 10-44. An excessive battery charging rate may cause
1. sulfation
 2. inverse electrolysis
 3. polarization
 4. excessive gassing

Learning Objective: Recognize the principles of operation and safe work. Practices for small boat engine starting systems, ignition systems, or battery charging systems. Textbook pages 15-6 through 15-17.

- 10-45. Overheating of the starting motor of a small boat engine can usually be prevented by
1. continuous operation of the starting motor after the drive pinion engages the flywheel
 2. operating the starting motor only for 30-second periods at 2-minute intervals
 3. intermittent operation of the starting motor for about 2 minutes, and, if the engine fails to start, allowing motor to cool before trying again
 4. operating the starting motor a maximum of 2 minutes at about 30-second intervals

- 10-46. What is the function of the drive mechanism in a starting motor for a boat engine?
1. To provide a suitable ratio between the speeds of the motor and the engine while the engine is being cranked
 2. During cranking, to engage the drive pinion with a ring gear on the engine flywheel
 3. After the engine starts, to disengage the drive pinion from the ring gear on the engine flywheel
 4. Each of the above
- 10-47. What is the function of the overrunning clutch mechanism in the starting motor for a boat engine?
1. To control speed of the engine after it starts
 2. To disengage the engine flywheel from its ring gear
 3. To protect the motor armature against overspeeding after the engine starts
 4. To transmit torque from the flywheel of the engine after it starts
- 10-48. What is the function of the holding coil in the solenoid switch for a starting motor equipped with overrunning drive?
1. To force the contact disk against the battery and starting motor terminals
 2. To hold open the circuit to the starting motor
 3. To help the pull-in coil complete the circuit between the battery and starting motor and to keep the circuit closed
 4. To open the circuit between the battery and the starting motor and to keep the circuit open
- 10-49. One function of the capacitor in a battery-ignition system is to
1. stop the flow of magnetic lines of flux when the points open
 2. act as a safety gap for the secondary coil
 3. cause a rapid collapse of the induced voltage in the primary
 4. regulate the flow of current through the primary circuit
- 10-50. Which parts of a battery ignition system usually carry between 4,000 and 18,000 volts?
1. Primary winding of ignition coil and capacitor ignition switch
 2. Secondary winding of ignition coil and spark plugs
 3. Capacitor and breaker points
 4. All of the above

- 10-51. In an ignition system, high voltage is delivered to the spark plugs in the correct firing order by the
1. battery
 2. ignition coil
 3. timer coil
 4. ignition distributor
- 10-52. What does the secondary circuit through the ignition distributor consist of?
1. Distributor contacts and rotor
 2. Distributor rotor, distributor cap, and spark plugs
 3. Capacitor and high tension terminals
 4. Capacitor, distributor cap, and spark plugs
- 10-53. Compared to hot spark plugs, cold spark plugs have
1. wider gaps
 2. narrower gaps
 3. shorter heat paths
 4. longer heat paths
- 10-54. What part in the contact-controlled transistor ignition system is interchangeable with a like part in the conventional ignition system?
1. Ignition coil
 2. Amplifier
 3. Distributor
 4. Current-limiting resistor
- 10-55. When the distributor points are open, what condition exists in a contact-controlled transistor ignition system?
1. The emitter base is negative, the emitter is positive, and electron flow is increasing
 2. The emitter base is positive, no electron flow, high voltage is fed to the proper spark plug
 3. The emitter is negative, current is flowing through the amplifier to the ground
 4. Transistor is forward biased, current flows through the amplifier and ignition switch to the ground
- 10-56. The contact points in a transistorized ignition system last longer than those in a conventional ignition system.
- 10-57. When low ambient temperature makes starting difficult, what is the main advantage of a flame primer for starting a diesel engine?
1. It burns the same kind of fuel oil as the engine does
 2. It does not depend on a coil to furnish the spark of ignition
 3. It does not add to the load on the starting battery
 4. It raises the ambient temperature of the engine
- 10-58. The voltage regulator reduces the output of a small boat generator by inserting a resistance in
1. parallel with the generator field
 2. series with the generator field
 3. series with the armature
 4. parallel with the armature
- When answering items 10-59 through 10-64 refer to figure 10B on page 68.
- 10-59. The regulator shown in figure 10B is designed for use with a grounded shunt generator.
- 10-60. Assume the generator is in operation, supplying power to the external load. Which component does the full generator output pass through?
1. ~~The shunt coil of the cutout relay~~
 2. Resistor R1
 3. The series coil of the cutout relay
 4. Resistor R2
- 10-61. When the generator is NOT in operation, what prevents the cutout relay contacts from closing?
1. Series coil
 2. Shunt coil
 3. Coil spring
 4. Magnetic field
- 10-62. The opening and closing of the circuit between the generator and battery in the heavy duty voltage regulator is controlled by
1. spring tension
 2. generated voltage
 3. spring tension and generated voltage
 4. a constantly varying magnetic field
- 10-63. Generator output increases when
1. the armature is held against the core
 2. the contacts are open
 3. resistors R3 and R4 are removed from the circuit
 4. resistors R4 and R5 are inserted in the circuit
- 10-64. When the magnetic field overcomes the current regulator spring tension, what happens?
1. Voltage regulator contacts open
 2. Current regulator contacts open
 3. Resistors R3, R4, and R5 are shorted out of the circuit
 4. Current regulator contacts close

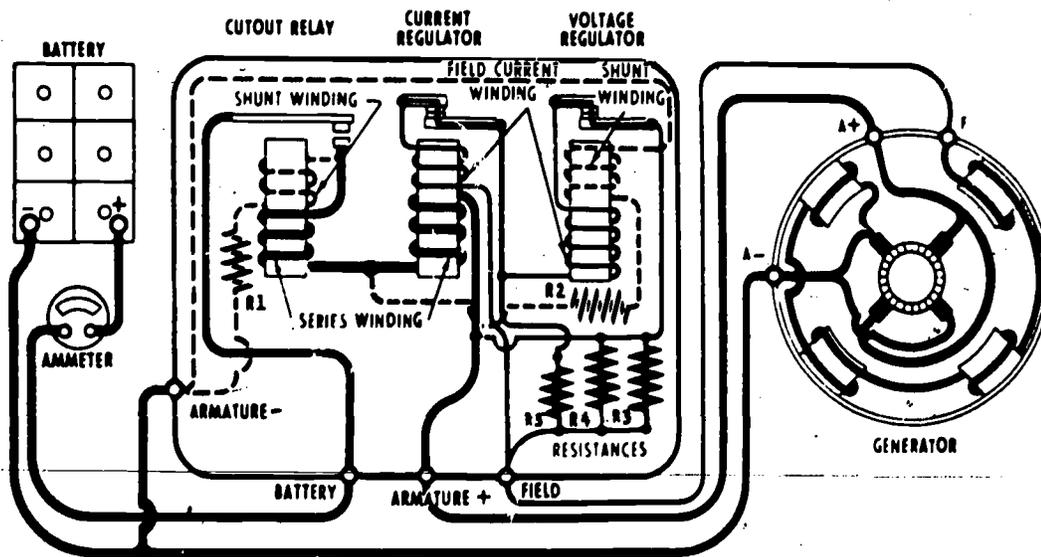


Figure 10B

Learning Objective: Point out the components and operating principles of an electrohydraulic steering system. Textbook pages 15-19 through 15-22.

● Items 10-65 through 10-70 pertain to the electrohydraulic steering gear of figure 10C, on page 70.

- 10-65. Which of the following groups of parts belong to the power unit of the steering system?
1. B, C, D, and F
 2. B, C, D, and E
 3. A, C, D, and G
 4. A, B, C, and H

- 10-66. The position of the rudders is indicated at the helm and rudder angle device mounted on part
1. D
 2. C
 3. B
 4. A

- 10-67. What unit operates the helm angle-indicator synchro receiver in the pilot house?
1. F
 2. E
 3. C
 4. A

- 10-68. When the steering gear is secured, the ram and rudders are locked hydraulically by

1. positioning the shift lever of A in neutral
2. setting H in its stop position
3. engaging G
4. disengaging G

- 10-69. Even though the overload relays have been tripped, part B can be run in an emergency by holding the

1. EM-RUN pushbutton closed
2. EM-RUN pushbutton open with the start button in operated (closed) position
3. EM-RUN pushbutton closed and the start button in operated (closed) position
4. emergency run pushbutton and the overload reset pushbutton closed

- 10-70. To place the steering gear in operation on the port power unit using the port steering cables, which of the following steps should you take first?

1. Move the shift lever for A to position P
2. Place switch on unit F in PORT position
3. Start B
4. Engage G

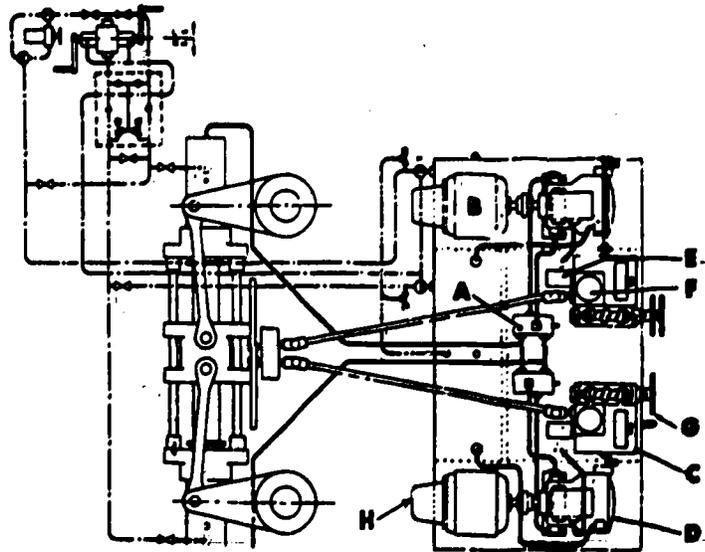


Figure 10C

599

Assignment 11

ELECTRICAL AUXILIARIES (continued) AND SOUND MOTION PICTURE SYSTEMS

Textbook Assignment: Pages 15-23 through 16-18

Learning Objective: Identify operating principles of shipboard windlasses and functions of their electrical components. Textbook pages 15-23 through 15-26.

- 11-1. If electrical power fails, what component holds the load on an anchor windlass powered by a 230-volt d-c motor?
1. Combination of hand and hydraulic brakes
 2. Hydraulic brake
 3. Hand brake
 4. Magnetic brake
- 11-2. The control for the 230-volt d-c windlass motor permits how many different speeds in each direction?
1. Five
 2. Two
 3. Three
 4. Four
- 11-3. What kind of braking is used in lowering the anchor by electric windlass?
1. Static
 2. Dynamic
 3. Friction
 4. Hydraulic

● Items 11-4 and 11-5 pertain to destroyer anchor windlasses.

- 11-4. What is the motor controller for the windlass designed to do?
1. To operate the motor by means of the master switch located on the weather-deck or in the windlass room
 2. To connect the motor for hoisting an anchor at slow or fast speed
 3. To protect the motor against overloading
 4. All of the above

- 11-5. Assume that current in the motor of a windlass is interrupted by one of the overload relays while the windlass is in operation. What must the operator do before restarting the windlass motor?
1. Depress the EM-RUN pushbuttons and turn the master switch to OFF
 2. Turn the master switch to OFF and depress the OVERLOAD RESET push-buttons
 3. Depress the EM-RUN pushbuttons
 4. Turn the master switch to OFF

Learning Objective: Point out control features of electric and electro-hydraulic elevators installed aboard ship. Textbook pages: 15-27 through 15-31.

- 11-6. Which of the following arrangements is/are designed for the high speed connection of 2-speed motors that drive electric elevators?
1. Decelerate the elevators as they approach their upper limits of travel
 2. Decelerate the elevators as they approach their lower limits of travel
 3. Both 1 and 2
 4. Start and run the elevators
- 11-7. Under what condition does the double-break feature of an elevator controller prevent an electric elevator from being operated?
1. Faulty contactor, relay, or switch
 2. Slack in an elevator cable
 3. Open elevator door
 4. Overloaded elevator

- 11-8. In case the platform overtravels in descent, which of the following devices will automatically prevent damage to an electric elevator?
1. Spring bumpers
 2. Electric brake
 3. Safety clamp
 4. All of the above

- 11-9. As the platform of a moving electro-hydraulic elevator approaches the selected level, the elevator is slowed down by
1. deenergizing of a solenoid to set the brake
 2. tripping of a switch to deenergize the pilot motor
 3. putting on stroke the variable delivery hydraulic pump to decelerate
 4. reversing the direction of rotation of the pilot motor to return to neutral the stroke of the hydraulic pump

Learning Objective: Recognize functions of components of electronic-controlled elevator systems. Textbook page 15-32.

- 11-10. The sensing heads mounted on the elevator trunk bulkhead are used to perform which of the following functions?
1. Slow and stop the elevator
 2. Prevent the elevator from overtraveling
 3. Keep the elevator from overspeeding
 4. All of the above

- 11-11. Elevator functions usually performed in electric-controlled elevator systems by limit switches, relays, and contractors are performed in electronic-controlled elevator systems by the
1. sensing heads
 2. static logic panel
 3. elevator cam targets
 4. motor controller

- 11-12. Proximity limit switches are used in electronic-controlled elevator systems to control the
1. speed of the drive motor
 2. elevator movement
 3. direction of drive motor rotation
 4. balance of phase voltage applied to the drive motor

Learning Objective: Identify characteristics of the power source of an under-way replenishment system. Textbook pages 15-37 through 15-43.

For items 11-13 through 11-16, select from column B characteristics of the a-c motor in column A.

	<u>A. Motors</u>	<u>B. Characteristics</u>
11-13.	Highline and ram tensioner motor	1. 5 hp; bidirectional; 1800 rpm
11-14.	Arma rotating control motor	2. 1 1/2 hp; bidirectional; 1800 rpm
11-15.	Elevator drive control motor	3. 200 hp; 180 amp at full load
11-16.	Hydraulic pump motor in meeting carriage control system	4. 1 1/2 hp; unidirectional; 3600 rpm

Learning Objective: Recognize operating principles of an electric fork lift truck. Textbook pages 15-43 through 15-47.

- 11-17. The speed of an electric forklift truck is regulated through control of the
1. peak power delivered to the drive motor
 2. effective power delivered to the hydraulic pump
 3. average power delivered to the drive motor
 4. peak power delivered to the hydraulic motor

- When answering items 11-18 through 11-22 refer to figure 11A.
- 11-18. Which relay coil is part of both the power and control circuits of the hydraulic lift pump motor?
1. F
 2. P
 3. R
 4. S
- 11-19. The static timer provides a fixed time delay between which speeds of a forklift truck?
1. First and second
 2. Second and third
 3. Third and fourth
 4. All of the above
- 11-20. Through the ARB connection of the static timer, which switch provides the power that enables a forklift truck to start moving upgrade?
1. Battery switch
 2. Direction switch
 3. Brake pedal switch
 4. Accelerator pedal switch
- 11-21. When forklift truck speed is being changed from first to second, the positive voltage required to operate TDR1 comes from
1. MS-3
 2. PLUG
 3. SS1
 4. MS-1
- 11-22. Which step(s) must occur to enable a forklift truck to operate in third speed?
1. MS-4 closes
 2. 2A interlock closes
 3. SS2 operates and 2A coil picks up
 4. Both 4A interlocks close

Learning Objective: Recognize fundamentals of maintaining and servicing electric galley equipment. Textbook page 15-51.

- 11-23. Circuits to the heating units of deep fat fryers are controlled by thermostatically operated contactors.

- 1-24. What will happen if the temperature of the fat in a deep fat fryer reaches 460°F, the upper temperature limit?
1. The thermostat automatically turns the fryer off
 2. A fuse in the control circuit blows
 3. The heating coil burns out
 4. The warning lamp lights up

Learning Objective: Point out principles of operation of the washer-extractor equipped with a card-o-matic programmer. Textbook pages: 15-51 through 15-56.

- 11-25. The programmed formula card starts to move through the card-o-matic programmer when the
1. start button is pressed
 2. water valves open
 3. water valves close
 4. run indicator lamp comes on
- 11-26. The ratio of the wash speed to the extraction speed is approximately
1. 1:10
 2. 1:18
 3. 1:25
 4. 1:28
- 11-27. Which function of the washer-extractor is associated with track numbers 1, 2, and 3?
1. Operation of the water valves
 2. Regulation of the water levels
 3. Control of the steam valves
 4. Regulation of the tub water temperatures
- 11-28. Track numbers 6, 7, and 8 are related to the control of
1. water levels
 2. tub water temperatures
 3. steam temperatures
 4. all washer-extractor operations

Learning Objective: Recognize theory and principles of motion picture projection. Textbook pages: 16-1 through 16-3.

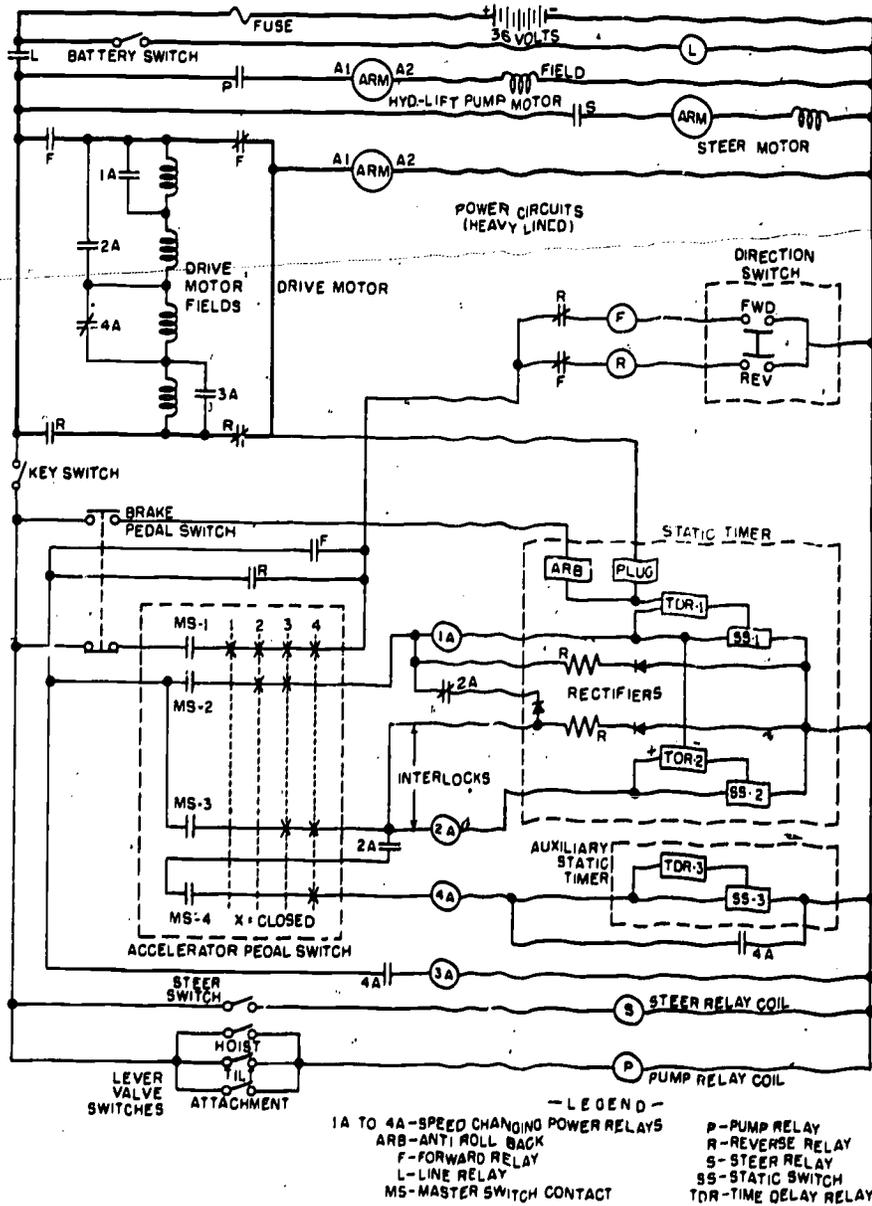


Figure 11A.-Wiring diagram of an electric forklift.

- A. APPLY CONSTANT PRESSURE ON FILM PASSING THE APERTURE
- B. ADVANCE FILM TO THE APERTURE
- C. ADVANCE FILM THROUGH THE PROJECTOR AT CONSTANT SPEED
- D. PREVENT FILM FROM MOVING SIDEWAYS
- E. FURNISHES LIGHT FOR THE SOUND OPTICAL SYSTEM
- F. CENTERS THE FRAME TO BE PROJECTED OVER THE APERTURE
- G. FURNISHES LIGHT FOR SCREEN IMAGE

Figure 11B

In answering items 11-29 through 11-33, select the function from figure 11B that is performed by the projector component listed in each item.

11-29. Exciter lamp

- 1. C
- 2. E
- 3. F
- 4. G

11-30. Aperture plate

- 1. A
- 2. B
- 3. D
- 4. F

11-31. Framing

- 1. A
- 2. B
- 3. D
- 4. F

11-32. Shuttle

- 1. A
- 2. B
- 3. C
- 4. D

11-33. Sprockets

- 1. B
- 2. C
- 3. D
- 4. F

11-34. What component enables only one frame at a time to be illuminated?

- 1. Aperture
- 2. Aperture plate
- 3. Pressure plate
- 4. Exciter lamp

11-35. The purpose of the condensing lenses in an optical system is to

- 1. focus the film image on the screen
- 2. recover light from the back of the projection lamp filament and concentrate it onto the screen
- 3. concentrate light from the front of the projection lamp filament onto the aperture
- 4. project the image of the projection lamp filament onto the screen

11-36. Persistence of vision is the

- 1. special property of a telescope that enables it to form an image
- 2. peculiar ability of the eye to retain an image after it is removed from view
- 3. formation of images by a convex lens
- 4. ability of a convex lens to invert an image

11-37. How many times does the motor driven shutter in a 16-mm projector interrupt the projection lamp beam?

- 1. 16 times per second
- 2. 2 times per second
- 3. 24 times per second
- 4. 48 times per second

11-38. The two methods of recording sound on film differ with respect to whether the sound

1. track is located on the perforated or nonperforated edge of the film
2. track varies in area or in density
3. waves are amplified before or after they are recorded
4. waves are amplified before or after they are reproduced

11-39. The protective leader should be replaced when its length is reduced to less than

1. 5 feet
2. 2 feet
3. 3 feet
4. 4 feet

11-40. How many frames make up the identification leader?

1. 15
2. 24
3. 39
4. 212

11-41. Where is the start mark located on the film leader?

1. In the middle of the projection leader
2. At the end of part A of the identification leader
3. On the 21st frame of the synchronizing leader
4. On the 212th frame of the synchronizing leader

11-42. Cue marks serve what purpose?

1. To help the projectionist time the change to another reel in a multi-projection continuous program
2. To inform the viewing audience when the projectionist is ready to change to another reel
3. To indicate the best place to make a splice if the film breaks
4. Each of the above

11-43. Cement splicing is the simplest way to splice motion picture film.

11-44. Which of the following methods of splicing can be used on all three types of splices?

1. Tape
2. Cement
3. Ultrasonic
4. Both 2 and 3 above are correct

Learning Objective: Recognize and understand usage of various motion pictures. Textbook page: 16-7.

11-45. What method(s) can be used to report condition of films before and after exhibition?

1. Motion picture inspection record
2. Inspection and exhibition book
3. Both 1 and 2 above
4. Motion picture exhibition transfer and inventory record

11-46. When motion pictures are exchanged between ships underway, one copy of the Notification of Motion Picture Transfer (NAVPERS form 1710/1) must be sent to the Navy Motion Picture Service, Brooklyn, N.Y.

Learning Objective: Recognize the principles of operation and minor repair of motion picture projectors. Textbook pages 16-11 through 16-17.

11-47. Projectors are divided into three subsystems, which are the

1. gear system, light system and sound system
2. projection system, lens system and sound system
3. transport system, lens system and sound system
4. transport system, light system and sound system

11-48. The purpose of the upper loop is to make it possible for

1. intermittent movement of film past the aperture
2. proper tension of film
3. proper sound of film
4. jerky movement of film to be absorbed

11-49. Which of the following items allows for proper spacing of 26 frames between the aperture and the sound drum?

1. Upper loop
2. Lower loop
3. Pressure plate
4. Aperture plate

- 11-50. The principal function of the lower drive sprocket is to
1. allow proper spacing of film
 2. synchronize the audio with the projected image
 3. smooth the flow of film around the sound drum
 4. restore lower loop

11-51. When a large portion of film is damaged, it should be removed from the projector and repaired.

- 11-52. When manually threading the projector and the loop is NOT the proper size, what, if anything, do you have to do?
1. Manually rethread the projector
 2. Turn motor/lamp switch to the forward position and press system restorer
 3. Manually reset loop
 4. Do nothing

- 11-53. What is the focal length of a standard projection lens?
1. 1 inch
 2. 2 inches
 3. 3 inches
 4. 4 inches

In items 11-54 and 11-55, select from column B the projector component that performs the function in column A.

	<u>A. Function</u>	<u>B. Components</u>
11-54.	Forms and focuses the scanning beam	1. Photocell 2. Light pipe
11-55.	Converts variations in light to variations in electrical current	3. Optical lens 4. Exciter lamp
11-56.	Which of the following items is/are the responsibility of a movie projector operator?	
	1. Inspect projector cord for properly grounded plug	
	2. Clean lens	
	3. Make sure air intake and exhaust passages are not blocked	
	4. All of the above	
11-57.	When the exciter lamp has a damaged filament, which of the following problems will appear?	
	1. No image on screen	
	2. Reduced volume	
	3. Garbled sound	
	4. Low picture brilliance	

COURSE DISENROLLMENT

All study materials must be returned. On disenrolling, fill out only the upper part of this page and attach it to the inside front cover of the textbook for this course. Mail your study materials to the Naval Education and Training Program Development Center.

PRINT CLEARLY

NAVEDTRA NUMBER
10546-E

COURSE TITLE
NRCC Electrician's Mate 3&2

Name	Last	First	Middle
Rank/Rate		Designator	Social Security Number

COURSE COMPLETION

Letters of satisfactory completion are issued only to personnel whose courses are administered by the Naval Education and Training Program Development Center. On completing the course, fill out the lower part of this page and enclose it with your last set of answer sheets. Be sure mailing addresses are complete. Mail to the Naval Education and Training Program Development Center.

PRINT CLEARLY

NAVEDTRA NUMBER
10546-E

COURSE TITLE
NRCC Electrician's Mate 3&2

Name

ZIP CODE

MY SERVICE RECORD IS HELD BY:

Activity

Address

ZIP CODE

Signature of enrollee

601

A FINAL QUESTION: What did you think of this course? Of the text material used with the course? Comments and recommendations received from enrollees have been a major source of course improvement. You and your command are urged to submit your constructive criticisms and your recommendations. This tear-out form letter is provided for your convenience. Typewrite if possible, but legible handwriting is acceptable.

Date _____

From: _____
(RANK, RATE, CIVILIAN)

ZIP CODE _____

To: Naval Education and Training Program Development Center (PD4)
Pensacola, Florida 32509

Subj: Electrician's Mate 3 & 2, NAVEDTRA 10546-E

1. The following comments are hereby submitted:

602

(Fold along dotted line and staple or tape)

(Fold along dotted line and staple or tape)

DEPARTMENT OF THE NAVY
NAVAL EDUCATION AND TRAINING PROGRAM
DEVELOPMENT CENTER (PD 4)
PENSACOLA, FLORIDA 32509

OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE, \$300

POSTAGE AND FEES PAID
NAVY DEPARTMENT
DoD-316



NAVAL EDUCATION AND TRAINING PROGRAM DEVELOPMENT CENTER
BUILDING 2435 (PD 4)
PENSACOLA, FLORIDA 32509

603

PRINT OR TYPE

NRCC Electrician's Mate 3 & 2
NAVEDTRA 10546-E

NAME _____ ADDRESS _____
Last First Middle Street/Ship/Unit/Division, etc.

City or FPO _____ State _____ Zip _____

RANK/RATE _____ SOC. SEC. NO. _____ DESIGNATOR _____ ASSIGNMENT NO. _____

USN USNR ACTIVE INACTIVE OTHER (Specify) _____ DATE MAILED _____

SCORE

	1	2	3	4	
	T	F			
1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
5	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
7	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
8	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
9	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
10	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
11	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
12	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
13	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
14	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
15	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
16	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
17	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
18	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
19	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
20	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
21	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
22	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
23	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
24	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
25	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----

	1	2	3	4	
	T	F			
26	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
27	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
28	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
29	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
30	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
31	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
32	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
33	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
34	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
35	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
36	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
37	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
38	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
39	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
40	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
41	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
42	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
43	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
44	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
45	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
46	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
47	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
48	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
49	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
50	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----

	1	2	3	4	
	T	F			
51	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
52	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
53	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
54	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
55	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
56	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
57	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
58	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
59	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
60	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
61	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
62	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
63	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
64	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
65	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
66	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
67	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
68	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
69	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
70	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
71	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
72	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
73	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
74	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
75	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----

604

2

PRINT OR TYPE

NFCC Electrician's Mate 3 & 2
NAVEDTRA 10546-E

NAME _____ ADDRESS _____
Last First Middle Street/Ship/Unit/Division, etc.

City or PFO State Zip

RANK/RATE _____ SOC. SEC. NO. _____ DESIGNATOR _____ ASSIGNMENT NO. _____

USN USNR ACTIVE INACTIVE OTHER (Specify) _____ DATE MAILED _____

SCORE

	1	2	3	4	
	T	F			
1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
5	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
7	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
8	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
9	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
10	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
11	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
12	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
13	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
14	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
15	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
16	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
17	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
18	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
19	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
20	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
21	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
22	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
23	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
24	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
25	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----

	1	2	3	4	
	T	F			
26	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
27	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
28	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
29	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
30	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
31	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
32	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
33	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
34	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
35	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
36	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
37	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
38	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
39	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
40	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
41	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
42	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
43	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
44	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
45	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
46	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
47	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
48	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
49	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
50	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----

	1	2	3	4	
	T	F			
51	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
52	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
53	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
54	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
55	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
56	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
57	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
58	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
59	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
60	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
61	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
62	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
63	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
64	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
65	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
66	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
67	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
68	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
69	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
70	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
71	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
72	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
73	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
74	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
75	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----



PRINT OR TYPE

NRCC Electrician's Mate 3 & 2
NAVEDTRA 10546-E

NAME _____ ADDRESS _____
Last First Middle Street/Ship/Unit/Division, etc.

RANK/RATE _____ SOC. SEC. NO. _____ DESIGNATOR _____ ASSIGNMENT NO. _____
City or PPO State Zip

USN USNR ACTIVE INACTIVE OTHER (Specify) _____ DATE MAILED _____

SCORE

	1	2	3	4
1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
5	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
7	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
8	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
10	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
11	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
12	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
13	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
14	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
15	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
16	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
17	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
18	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
19	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
20	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
21	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
22	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
23	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
24	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
25	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

	1	2	3	4
26	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
27	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
28	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
29	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
30	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
31	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
32	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
33	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
34	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
35	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
36	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
37	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
38	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
39	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
40	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
41	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
42	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
43	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
44	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
45	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
46	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
47	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
48	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
49	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
50	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

	1	2	3	4
51	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
52	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
53	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
54	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
55	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
56	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
57	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
58	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
59	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
60	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
61	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
62	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
63	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
64	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
65	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
66	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
67	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
68	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
69	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
70	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
71	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
72	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
73	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
74	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
75	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>



PRINT OR TYPE

NRCC Electrician's Mate 3 & 2
NAVEDTRA 10546-E

NAME _____ ADDRESS _____
Last First Middle Street/Ship/Unit/Division, etc.

RANK/RATE _____ SOC. SEC. NO. _____ DESIGNATOR _____ ASSIGNMENT NO. _____
City or FPO State Zip

USN USNR ACTIVE INACTIVE OTHER (Specify) _____ DATE MAILED _____

SCORE

	1	2	3	4
1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
5	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
7	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
8	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
10	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
11	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
12	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
13	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
14	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
15	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
16	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
17	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
18	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
19	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
20	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
21	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
22	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
23	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
24	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
25	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

	1	2	3	4
26	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
27	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
28	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
29	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
30	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
31	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
32	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
33	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
34	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
35	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
36	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
37	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
38	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
39	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
40	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
41	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
42	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
43	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
44	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
45	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
46	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
47	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
48	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
49	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
50	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

	1	2	3	4
51	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
52	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
53	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
54	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
55	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
56	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
57	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
58	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
59	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
60	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
61	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
62	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
63	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
64	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
65	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
66	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
67	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
68	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
69	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
70	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
71	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
72	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
73	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
74	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
75	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>



PRINT OR TYPE

NRCC Electrician's Mate 3 & 2
NAVEDTRA 10546-E

NAME _____ ADDRESS _____
Last First Middle Street/Ship/Unit/Division, etc.

RANK/RATE _____ SOC. SEC. NO. _____ DESIGNATOR _____ ASSIGNMENT NO. _____
City or PPO State Zip

USN USNR ACTIVE INACTIVE OTHER (Specify) _____ DATE MAILED _____

SCORE

	1	2	3	4	
	T	F			
1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
5	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
7	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
8	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
9	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
10	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
11	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
12	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
13	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
14	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
15	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
16	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
17	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
18	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
19	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
20	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
21	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
22	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
23	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
24	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
25	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----

	1	2	3	4	
	T	F			
26	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
27	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
28	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
29	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
30	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
31	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
32	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
33	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
34	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
35	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
36	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
37	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
38	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
39	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
40	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
41	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
42	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
43	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
44	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
45	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
46	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
47	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
48	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
49	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
50	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----

	1	2	3	4	
	T	F			
51	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
52	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
53	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
54	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
55	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
56	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
57	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
58	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
59	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
60	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
61	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
62	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
63	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
64	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
65	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
66	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
67	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
68	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
69	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
70	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
71	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
72	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
73	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
74	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
75	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----

608

PRINT OR TYPE

NRCC Electrician's Mate 3 & 2
NAVEDTRA 10546-E

NAME _____ ADDRESS _____
Last First Middle Street/Ship/Unit/Division, etc.

RANK/RATE _____ SOC. SEC. NO. _____ DESIGNATOR _____ ASSIGNMENT NO. _____
City or FPO State Zip

USN USNR ACTIVE INACTIVE OTHER (Specify) _____ DATE MAILED _____

SCORE

	1	2	3	4	
	T	F			
1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
5	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
7	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
8	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
9	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
10	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
11	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
12	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
13	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
14	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
15	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
16	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
17	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
18	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
19	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
20	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
21	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
22	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
23	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
24	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
25	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----

	1	2	3	4	
	T	F			
26	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
27	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
28	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
29	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
30	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
31	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
32	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
33	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
34	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
35	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
36	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
37	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
38	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
39	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
40	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
41	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
42	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
43	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
44	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
45	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
46	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
47	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
48	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
49	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
50	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----

	1	2	3	4	
	T	F			
51	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
52	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
53	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
54	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
55	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
56	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
57	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
58	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
59	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
60	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
61	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
62	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
63	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
64	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
65	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
66	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
67	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
68	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
69	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
70	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
71	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
72	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
73	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
74	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
75	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----



PRINT OR TYPE

NREG Electrician's Mate 3 & 2
NAVEDTRA 10546-E

NAME _____ ADDRESS _____
Last First Middle Street/Ship/Unit/Division, etc.

RANK/RATE _____ SOC. SEC. NO. _____ DESIGNATOR _____ STATE _____ ZIP _____

USN USNR ACTIVE INACTIVE OTHER (Specify) _____ DATE MAILED _____

SCORE

	1	2	3	4	
	T	F			
1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
5	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
7	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
8	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
9	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
10	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
11	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
12	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
13	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
14	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
15	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
15	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
17	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
18	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
19	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
20	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
21	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
22	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
23	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
24	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
25	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----

	1	2	3	4	
	T	F			
26	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
27	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
28	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
29	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
30	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
31	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
32	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
33	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
34	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
35	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
36	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
37	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
38	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
39	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
40	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
41	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
42	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
43	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
44	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
45	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
46	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
47	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
48	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
49	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
50	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----

	1	2	3	4	
	T	F			
51	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
52	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
53	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
54	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
55	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
56	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
57	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
58	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
59	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
60	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
61	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
62	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
63	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
64	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
65	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
66	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
67	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
68	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
69	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
70	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
71	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
72	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
73	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
74	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
75	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----



PRINT OR TYPE

NRCC Electrician's Mate 3 & 2
NAVEDTRA 10546-E

NAME _____ ADDRESS _____
Last First Middle Street/Ship/Unit/Division, etc.

RANK/RATE _____ SOC. SEC. NO. _____ DESIGNATOR _____ ASSIGNMENT NO. _____
City or PFO State Zip

USN USNR ACTIVE INACTIVE OTHER (Specify) _____ DATE MAILED _____

SCORE

	1	2	3	4	
	T	F			
1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
5	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
7	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
8	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
9	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
10	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
11	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
12	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
13	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
14	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
15	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
16	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
17	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
18	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
19	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
20	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
21	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
22	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
23	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
24	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
25	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----

	1	2	3	4	
	T	F			
26	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
27	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
28	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
29	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
30	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
31	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
32	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
33	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
34	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
35	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
36	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
37	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
38	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
39	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
40	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
41	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
42	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
43	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
44	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
45	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
46	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
47	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
48	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
49	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
50	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----

	1	2	3	4	
	T	F			
51	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
52	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
53	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
54	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
55	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
56	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
57	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
58	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
59	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
60	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
61	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
62	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
63	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
64	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
65	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
66	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
67	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
68	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
69	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
70	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
71	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
72	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
73	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
74	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
75	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----



PRINT OR TYPE

NRCC Electrician's Mate 3 & 2
NAVEDTRA 10546-E

NAME _____ ADDRESS _____
Last First Middle Street/Ship/Unit/Division, etc.

RANK/RATE _____ SOC. SEC. NO. _____ DESIGNATOR _____ ASSIGNMENT NO. _____
City or FPO State Zip

USN USNR ACTIVE INACTIVE OTHER (Specify) _____ DATE MAILED _____

SCORE

	1	2	3	4
	T	F		
1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
5	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
7	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
8	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
10	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
11	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
12	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
13	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
14	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
15	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
16	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
17	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
18	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
19	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
20	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
21	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
22	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
23	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
24	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
25	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

	1	2	3	4
	T	F		
26	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
27	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
28	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
29	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
30	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
31	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
32	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
33	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
34	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
35	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
36	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
37	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
38	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
39	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
40	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
41	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
42	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
43	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
44	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
45	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
46	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
47	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
48	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
49	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
50	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

	1	2	3	4
	T	F		
51	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
52	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
53	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
54	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
55	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
56	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
57	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
58	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
59	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
60	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
61	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
62	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
63	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
64	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
65	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
66	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
67	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
68	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
69	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
70	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
71	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
72	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
73	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
74	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
75	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>



PRINT OR TYPE

NRCC Electrician's Mate 3 & 2.
NAVEDTRA 10546-E

NAME _____ ADDRESS _____
Last First Middle Street/Ship/Unit/Division, etc.

RANK/RATE _____ SOC. SEC. NO. _____
City or PPO State Zip

DESIGNATOR _____ ASSIGNMENT NO. _____
 USN USNR ACTIVE INACTIVE OTHER (Specify) _____ DATE MAILED _____

SCORE

	1	2	3	4	
	T	F			
1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
5	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
7	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
8	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
9	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
10	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
11	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
12	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
13	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
14	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
15	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
16	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
17	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
18	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
19	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
20	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
21	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
22	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
23	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
24	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
25	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----

	1	2	3	4	
	T	F			
26	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
27	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
28	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
29	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
30	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
31	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
32	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
33	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
34	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
35	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
36	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
37	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
38	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
39	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
40	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
41	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
42	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
43	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
44	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
45	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
46	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
47	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
48	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
49	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
50	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----

	1	2	3	4	
	T	F			
51	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
52	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
53	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
54	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
55	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
56	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
57	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
58	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
59	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
60	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
61	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
62	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
63	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
64	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
65	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
66	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
67	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
68	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
69	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
70	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
71	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
72	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
73	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
74	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----
75	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-----



PRINT OR TYPE

NRCC Electrician's Mate 3 & 2
NAVEDTRA 10546-E

NAME _____ ADDRESS _____
Last First Middle Street/Ship/Unit/Division, etc.

RANK/RATE _____ SOC. SEC. NO. _____ City or FPO State Zip
DESIGNATOR _____ ASSIGNMENT NO. _____

USN USNR ACTIVE INACTIVE OTHER (Specify) _____ DATE MAILED _____

SCORE

	1	2	3	4	
	T	F			
1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
5	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
7	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
8	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
9	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
10	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
11	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
12	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
13	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
14	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
15	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
16	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
17	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
18	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
19	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
20	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
21	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
22	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
23	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
24	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
25	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---

	1	2	3	4	
	T	F			
26	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
27	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
28	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
29	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
30	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
31	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
32	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
33	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
34	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
35	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
36	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
37	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
38	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
39	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
40	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
41	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
42	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
43	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
44	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
45	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
46	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
47	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
48	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
49	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
50	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---

	1	2	3	4	
	T	F			
51	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
52	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
53	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
54	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
55	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
56	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
57	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
58	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
59	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
60	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
61	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
62	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
63	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
64	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
65	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
66	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
67	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
68	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
69	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
70	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
71	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
72	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
73	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
74	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---
75	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	---

